

# High Voltage (Cathode)

First you need to switch on the crate.  
The main switch is behind the crate.  
After switching on you will see this



**Power on** button


Then **Power on** button has to be pressed for 1 sec. Then you will see this




# High Voltage (Cathode) contd.

- Then you can login in, such window will open.

- IP address is: 140.181.72.114
- Username: admin
- Password: password

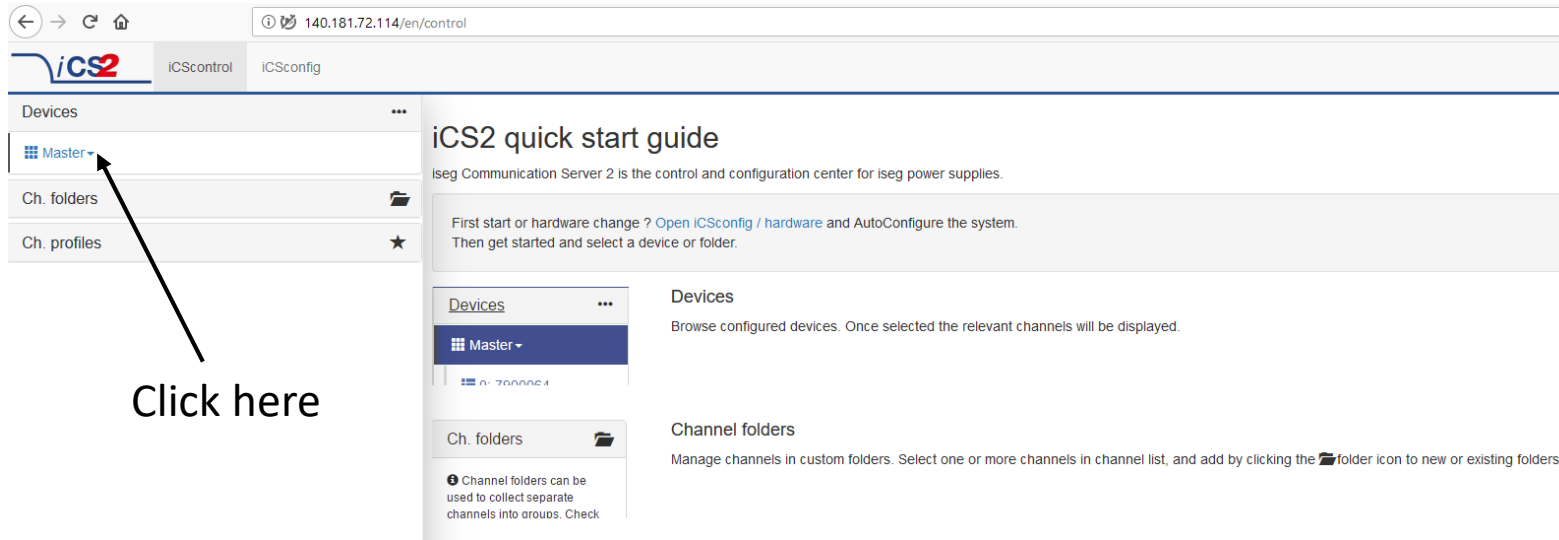


Such window will open now.

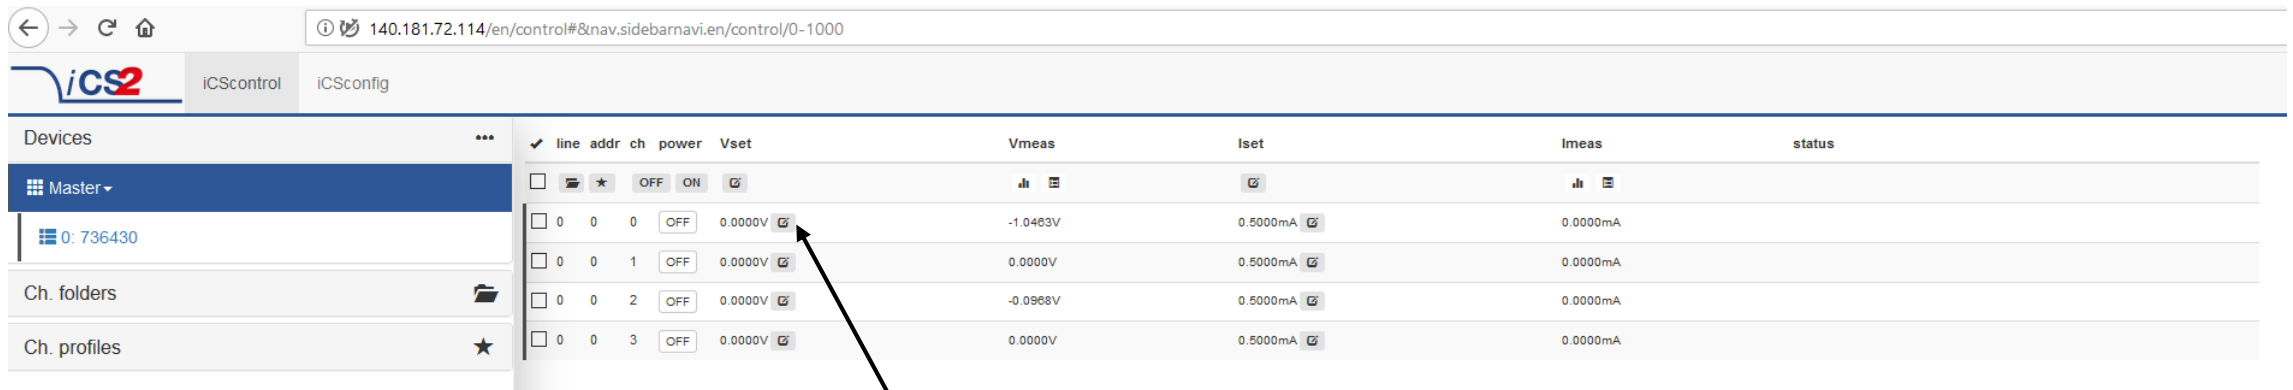

Click here to set up the voltage


# High Voltage (Cathode) contd.

Such window will open now.

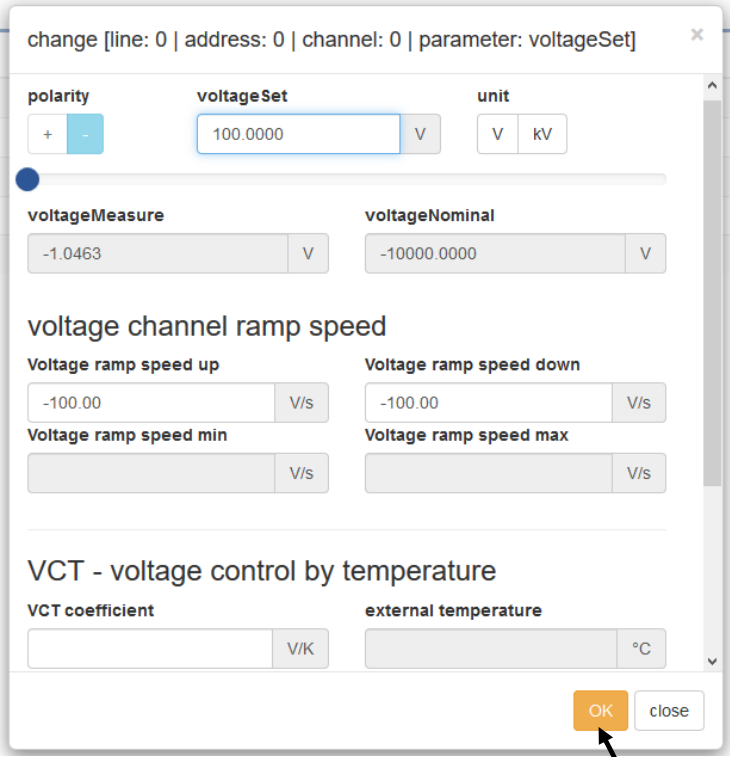

After setting the voltage press OK. You can also set up the ramp up and ramp down voltages

Then Press the button “OFF”, it will be turned “ON”. It takes 3 or 4 seconds to turn on.

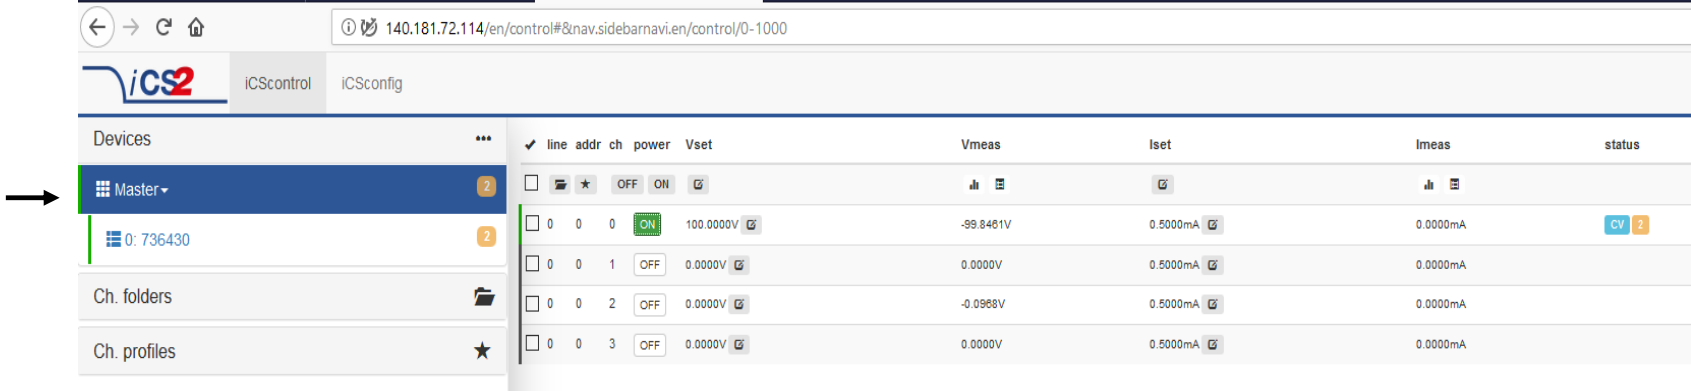

**While switching the High Voltage off:**  
Simply press “ON” button to turn it “OFF”.  
You can close the window for voltage control.  
From the crate, first switch off the “Power On” button in the front panel and then the main switch behind the crate.