

# Contents

## **Chapter 1 About this Manual**

Intended Audience 1-1

Purpose 1-1

Contents of this Manual 1-2

Other NCD Manuals 1-4

Conventions Used in this Manual 1-5

Comments on the Manual 1-6

## **Chapter 2 Booting Defaults**

Summary of Booting Alternatives 2-1

## **Chapter 3 Booting—Address Discovery**

Summary of Address Discovery Protocols 3-1

Changing the Order of Network Information Requests 3-2

Using BOOTP/DHCP for Address Discovery 3-3

    Making Sure that BOOTP Is Enabled 3-4

    Adding Options for NCD Terminals to the bootptab File 3-5


        bootptab Format and Options 3-5

        Adding Terminal Entries to the bootptab File 3-7


        Configuring the Gateway Device and Terminal for  
        Booting through a Gateway 3-8

Using RARP for Address Discovery 3-10

Storing Addresses in NVRAM 3-11

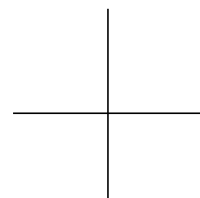

Setting the Broadcast Address	3-12
Configuring Subnet Mask Discovery	3-13
Using ICMP to Discover the Subnet Mask	3-14
Setting the Subnet Mask in NVRAM	3-14
Communicating with Multi-Homed Hosts	3-15
Using a Reverse Name Request	3-15
<b>Chapter 4 Booting—X Server Loading</b>	
Configuring the Default X Server Loading Sequence	4-1
Disabling Automatic Booting	4-4
Disabling Broadcast Requests for an X Server	4-4
Disabling the MOP Request for an X Server	4-5
Disabling Selected TFTP or NFS Requests for an X Server	4-5
Specifying a Non-Standard X Server Filename	4-7
Specifying a Non-Standard X Server Directory	4-7
Keeping the Terminal from Entering the Boot Monitor at Boot Time	4-7
Configuring the Sequence of X Server Loading Methods	4-8
Configuring X Server Module Loading	4-10
Changing X Server Module Load Policy	4-10
Changing the X Server Module Location	4-11
Using TFTP for X Server Downloading	4-12
Making Sure TFTP is Enabled	4-12
Specifying a Custom X Server Directory	4-12
Using NFS for X Server Downloading	4-13
Making Sure NFS is Available	4-13
Specifying the Directory to Search for an X Server	4-13
Linking X Server Files	4-14

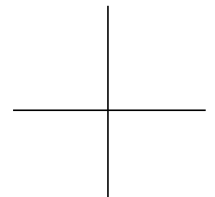

Specifying Boot Hosts 4-16

Specifying the Initial Boot Host 4-16

Specifying Backup Boot Hosts 4-16

Booting Manually from the Boot Monitor 4-17

Manual Boot from a PCMCIA Card 4-18

Manual Boot Using TFTP or NFS 4-18

**Chapter 5 Configuring Network Services**

Which Network Services Are Used by NCD Terminals 5-1

Summary of Network Service Defaults and Alternatives 5-3

Configuring the ARP Cache (Resolved Addresses) 5-5

Using a Name Service 5-7

Making Sure a Name Service is Running on the Local Network 5-7

Making Sure the Terminal Uses the Name Service 5-7

Selecting the Name Service Protocol 5-8

Specifying Name Server Hosts 5-8

Specifying the Default Domain Suffix for DNS 5-9

Configuring the Name Translation Table (Local Name Cache) 5-10

Setting the Name Cache Entry Lifetime 5-10

Setting the Name Cache Size 5-11

Setting Name Service Timeouts 5-11


Discovering the Terminal's Hostname when Booting (Reverse Name Request) 5-12

Configuring How a Terminal Accesses Files 5-13


Configuring the Initial File Servers 5-13

Configuring the File Service Table 5-15


Configuring the Matching Method 5-18

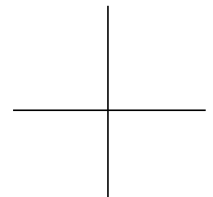


Configuring File Access through TFTP	5-20
Secure versus Non-Secure TFTP	5-20
Make Sure TFTP Is Enabled on the Host	5-21
Configuring File Access through NFS	5-22
Configuring the Host for NFS File Access	5-22
Setting User and Group IDs for NFS File Access	5-22
Setting the Unmount Timer for NFS File Access	5-23
Changing the Timeout for Failed File Servers	5-24
Issuing Extended File Service Diagnostic Messages	5-24
Configuring Routing (Accessing Remote Networks)	5-25
Specifying Default Gateways	5-25
The IP Routing Table	5-26
Finding Routes to Hosts through Proxy ARP	5-29
Discovering Neighboring Gateways through Router Discovery	5-30
Setting TCP Performance Parameters	5-31
Adjusting the TCP Send and Receive Buffers	5-31
Specifying the TCP Timeout	5-32
Specifying TCP Maximum Retransmissions	5-33
Specifying the TCP Linger Time	5-33
Allowing Larger Segment Sizes	5-33
<b>Chapter 6 Terminal Configuration Methods</b>	
Configuration Methods Overview	6-2
Configuration Daemons	6-2
Configuration Parameters	6-2
Configuration Language	6-2
Default Configuration Values	6-2
Configuration Methods	6-3

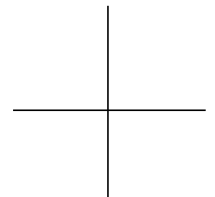

Access Control for Terminal Configuration Data	6-5
Parameter Types and Groups	6-5
Read/write, Read-only, and Write-only Parameters	6-5
Parameter Groups	6-6
The Configuration Language	6-8
Configuration Language Summary	6-8
Assigning Values to Configuration Parameters	6-11
Simple Assignment Statements	6-11
Tables and Rows	6-11
Types of Values	6-12
Syntax Rules	6-13
Comments	6-14
Assigning Parameters More than Once	6-14
Listing Commands in Order	6-14
Saving Parameters in NVRAM	6-15
Creating Remote Configuration Files	6-16
Using the Sample Configuration File	6-17
Configuration File Size	6-18
Creating a File from the Setup Clients	6-18
Nesting Configuration Files	6-19
Including the User's Settings in Remote Configuration Files	6-20
Specifying Hosts for Loading Configuration Files	6-21
Enabling Persistent Loading of the Configuration File	6-22
Using Optional Names for Configuration Files	6-23
Suggested Uses for Configuration Filenames	6-25
Disabling Specific Configuration File Download Attempts	6-25
Specifying a Different Configuration File Directory	6-26

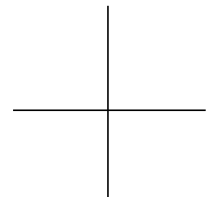

Disabling All Remote Configuration File Downloads	6-27
Specifying the File for Loading Configuration Defaults	6-27
Changing the Ports for Accessing Configuration Daemons	6-28
Changing Ports for Access to All Configuration Data	6-28
Changing Ports for Access to User Preferences Data Only	6-29
Setting Up Host-Based Access Control for Configuration Data	6-30
Allowing Access from Specified Hosts	6-30
Preventing All Remote Access to the Terminal's Configuration Data	6-31
Protecting Configuration Parameters	6-32
Using the protect Command	6-32
Using the get-protect Command	6-33
Using the set-protect Command	6-33
Removing Parameter Protection	6-33
Disabling the Configuration Utilities or the Console	6-34
Configuring the Apply Command	6-34
Protocols for Auto-Save	6-35
Configuring Auto-Save to NVRAM	6-35
Configuring Auto-Save to a File	6-36
Disabling Auto-Save	6-36
Changing the Name of the Auto-Save File	6-36
Specifying the Data to Save	6-37

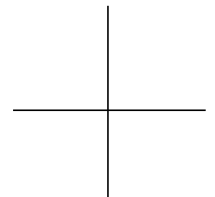

## **Chapter 7 Bitmap Fonts and the Font Server**

Font Use Overview 7-1

Font Access Sequence 7-2

Font Names 7-2

Wildcards in Font Names 7-4

Bitmap and Outline Font Naming 7-4

Specifying Fonts for Clients 7-4

Obtaining Fonts 7-5

Font Download Methods 7-6

Considerations in Using Downloaded Fonts 7-6

Problems with Client Font Requests 7-6

The Font Path 7-6

Font Formats 7-7

Font Directories and Files 7-8

Font Directories 7-8

Font Files 7-8

Font Management Files 7-9

NCD Font Management Utilities 7-10

Built-In Fonts Summary 7-11

Alternative Methods of Changing the Current Font Path 7-11

Changing the Current Font Path—Using TELNET 7-11

Changing the Current Font Path—Using the xset Client 7-13


Setting the Default Font 7-13

Changing the Size of the Font Cache 7-14


Renaming the Font Management Files 7-15

Specifying Font Path Aliases 7-16

Displaying and Logging Font Diagnostic Messages 7-17

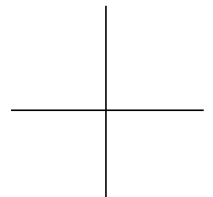


Getting Font Information	7-17
Viewing the Font Path—xset	7-18
Listing the Available Fonts—xlsfonts	7-18
Displaying the Characters in a Font—xfd	7-18
Displaying Samples of a Font and XLFD Names—xfontsel	7-19
Font Server Issues	7-19
How the Font Server Accesses Fonts	7-19
Usable Font Formats with a Font Server	7-20
Font Server Configuration Issues	7-21
Network Considerations	7-21
Host Considerations	7-21
Default Font Specifications	7-23
Error Logging	7-23
Example NCD Font Server Configuration File	7-23
Configuring Font Server Timeouts	7-25
Getting Information about the Font Server	7-26
Getting Information about Fonts from the Font Server	7-27
Displaying Font Server Fonts	7-27
<b>Chapter 8 Login and X Session Management</b>	
XDM Default Actions	8-2
XDM Overview	8-3
Components of XDM	8-4
XDMCP Queries and Host Responses	8-4
XDM and the DISPLAY Variable	8-5
The NCD Login Chooser	8-5
The NCD Display Manager	8-5

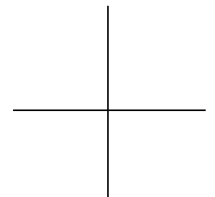



Configuring XDM Hosts	8-5
Installing the XDM Binary File	8-6
Installing XDM Configuration Files	8-6
Configuring the System-Wide XDM Session Management File	8-7
The Default Xsession File	8-8
Example Xsession File for the Local NCD Window Manager	8-9
Sample Xsession File for OpenWindows	8-10
Individual XDM Session Management Files	8-11
Configuring the XDM Xaccess File	8-11
Contents of an Xaccess File Entry	8-11
Types of Xaccess File Entries	8-12
Direct and Broadcast Entries in the Xaccess File	8-12
Indirect Entries in the Xaccess File	8-13
Configuring the xdm-config File	8-13
Configuring the Polling Interval	8-14
Configuring the Version of xrdp to Use	8-14
Configuring the XDM Xresources File	8-14
The XDM Error Logging File	8-14
Starting XDM Manually	8-15
XDM Access Control	8-15
If XDM Cannot Write to a User's Home Directory	8-16
Configuring Terminals for XDM	8-17
Configuring the Login Chooser Redisplay	8-17
Configuring the Terminal's Action when XDM Terminates	8-17
Configuring XDM Keepalives	8-18
Using XDM—X11R3 Version	8-19

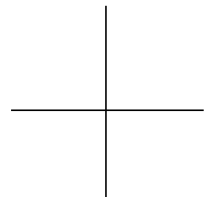

## **Chapter 9 Using Configuration Menus**

### **Using Change Quick Setup 9-1**

Components of the Change Quick Setup Window 9-1

Contents of the Change Quick Setup Hide Boxes 9-3

Booting Parameters 9-3

Files Parameters 9-3

Fonts Parameters 9-4

Licenses Parameters 9-5

Network Parameters 9-5

Session Parameters 9-6

### **Using Change Setup Parameters 9-7**

Components of the Change Setup Parameters Window 9-7

Contents of the Change Setup Parameters Hide Boxes 9-8

Access Control Parameters 9-9

ARP Parameters 9-13

Booting Parameters 9-13

Browser Parameters 9-16

Commands and Startup Parameters 9-18

Configuration Parameters 9-18

Diagnostics Parameters 9-20

Display PostScript Parameters 9-21

File Manager Parameters 9-21

File Service Parameters 9-22

Fonts Parameters 9-23

Input Devices Parameters 9-24


IP Parameters 9-25

Java Parameters 9-27


LAT Parameters 9-27

Licenses Parameters 9-28

Loadable Modules Parameters 9-29

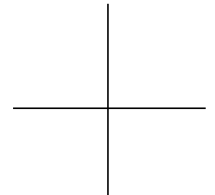


Login Parameters	9-29
NCDnet Parameters	9-31
NCDnet Name Service Parameters	9-32
Network Interfaces Parameters	9-32
Parallel Parameters	9-33
PEX Parameters	9-33
PEX Color Parameters	9-34
PPP and SLIP Parameters	9-35
Serial Parameters	9-35
TCP Parameters	9-36
TCP/IP Name Service Parameters	9-37
Time Parameters	9-38
Unit Parameters	9-38
Video Parameters	9-39
VT320 Terminal Emulation Parameters	9-39
WinCenter Parameters	9-40
X and Graphics Parameters	9-40
XRemote Parameters	9-41
3270 Terminal Emulation Parameters	9-42
Using Change User Preferences	9-43
Components of the Change User Preferences Window	9-43
Components of the Change User Preferences Hide Boxes	9-44
Audio Preferences	9-44
Bell Preferences	9-45
Compatibility Preferences	9-45
Console and Utilities Preferences	9-46
Environment Variables Preferences	9-47
Font Preferences	9-47
Keyboard Preferences	9-47
OpenGL Preferences	9-48
PEX Preferences	9-50

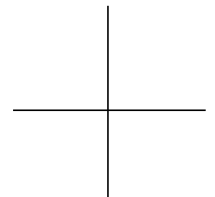

- Pointing Devices Preferences 9-51
- Power Management Preferences 9-52
- Screen Background Preferences 9-52
- Screen Saver Preferences 9-53
- X, SIE, and Graphics Preferences 9-54

### **Chapter 10 Statistics Menus**

- Accessing Statistical Parameters 10-1
- Components of the Show Statistics Window 10-1
- Contents of the Statistics Hide Boxes 10-2
  - Ethernet Statistics 10-2
  - Font Usage Statistics 10-3
  - ICMP Statistics 10-3
  - IP Statistics 10-6
  - Loadable Modules Statistics 10-8
  - NCDnet Statistics 10-9
  - NCDnet Name Service Statistics 10-10
  - Network Buffers Statistics 10-11
  - Network Interfaces Statistics 10-13
  - NFS Statistics 10-13
  - Parallel Daemon Statistics 10-16
  - Serial Statistics 10-17
  - Serial Daemons Statistics 10-17
  - SNMP Statistics 10-18
  - TCP Statistics 10-21
  - TCP/IP Name Service Statistics 10-24
  - TFTP Statistics 10-25
  - Token-Ring Statistics 10-26
  - UDP Statistics 10-26
  - Unit Statistics 10-27
  - Wireless LAN Statistics 10-28

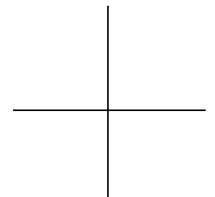

XRemote Statistics 10-30

## **Chapter 11 Boot Monitor and NVRAM**

Boot Monitor Versions 11-1

Boot Monitor Functions 11-2

Automatic Boot Monitor Functions 11-2

Self Tests and Commands for Testing 11-2

Keyboard Controller and Supported Keyboards 11-3

Address Discovery 11-3

X Server Downloading 11-4

Display Blanking 11-5

Interactive Boot Monitor Functions 11-5

Using Boot Monitor Commands 11-6

Starting the Boot Monitor Utility 11-6

Issuing Commands to the Boot Monitor 11-7

Updating the Boot Monitor on Explora Terminals 11-11

Using Boot Monitor Setup Menus to Configure Terminals 11-12

Starting Boot Monitor Setup 11-12

Navigating in Boot Monitor Setup 11-13

Setting the Keyboard Type 11-13

Setting Monitor Resolution and Dots Per Inch 11-13

The Monitor Resolution Window 11-14


The Dots Per Inch Window 11-14

Setting Network Parameters 11-14

Setting Booting Parameters 11-16

Finishing the Boot Monitor Setup Session 11-17


Programming Navigation Keys for Boot Monitor Setup  
Menus 11-18

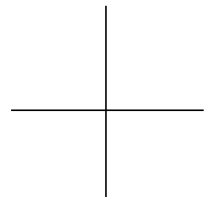


Using the NVRAM Utility to Configure Terminals	11-20
Starting the NVRAM Utility	11-20
NVRAM Utility Commands	11-20
Sample NVRAM Utility Sessions	11-21
Changing Contents Byte by Byte	11-21
Changing Individual Bits in a Byte	11-23
NVRAM Contents	11-24
Keyboard Type Settings	11-32
Parameters Saved in the Tagged Strings Area	11-37
Remote Configuration Parameters Saved in NVRAM	11-38

## **Chapter 12 Configuring the NCD Terminal Emulator**


Other Sources of Information on the Terminal Emulator	12-1
Configuring Local Services in the Terminal Host Chooser	12-2
Configuring a Terminal for Serial Terminal Emulation	12-3
Configuring Key Translations	12-4
Configuring the Terminal Emulator Window and Menus	12-5
Terminal Emulator Fonts	12-5
Terminal Emulator Scroll Bars	12-6
Terminal Emulator Menus	12-6
The File Menu	12-6
The Options Menu	12-8
The Fonts Menu	12-10
The Cursors Menu	12-11
The Keys Menu	12-11
Selecting in the Window	12-12
Configuring the Window Disconnect Delay	12-12
Configuring the Answer-Back Message	12-12

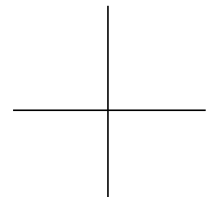

Using VT320 Terminal Emulator Escape Sequences	12-13
Configuring the Status Line	12-27
Programming Function Keys on N-108LK Keyboards	12-28
Configuring Window and Icon Titles	12-30
Configuring Color Text	12-30
Using Keyboard Escape Sequences	12-34
N-101/N-102 Keyboard Escape Sequences	12-35
N-108LK (VT220-Style) Keyboard Escape Sequences	12-38
N-97/N-Kana Keyboard Escape Sequences	12-42
Using Compose Key Sequences	12-44
Support for Dead Keys	12-44
Typing Compose Sequences	12-44
Compose Sequence Table	12-45
VT320 Character Coding Conventions	12-51
Character Sets	12-51
Character Code Tables	12-52
<b>Chapter 13 Configuring Display PostScript</b>	
DPS Overview	13-1
DPS Requirements	13-2
Using DPS Support Files	13-3
The PostScript Resource File	13-3
Sections in the PostScript Resource File	13-3
Creating or Updating the PostScript Resource File	13-5
The Virtual Memory File	13-7
The Color-Rendering File	13-7
The Context Initialization File	13-7
Adobe Fonts for DPS	13-8

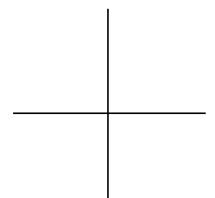

Configuring the DPS Resource Path	13-10
Configuring DPS Font Access by X Clients	13-11
Freeing the DPS Cache	13-12
Troubleshooting DPS	13-12
If the DPS Extension Fails to Start	13-12
File Service Problems	13-12
DPS Applications on Solaris Systems	13-13
Running AnswerBook	13-13
Running ImageTool	13-14
Running PageView	13-15
<b>Chapter 14 Configuring PEX</b>	
PEX Overview	14-1
The PEX X Server Module	14-2
PEX Fonts	14-2
PEX Requirements	14-3
Setting PEX Configuration Parameters	14-3
Setting the Parameters Listed in Change Setup Parameters	14-3
PEX Color Parameters	14-5
Setting the Parameters Listed in Change User Preferences	14-9
Specifying the Nominal Line Width	14-9
Specifying the Nominal Edge Width	14-9
Specifying the Nominal Marker Size	14-10
Specifying Surface Dithering	14-10
Specifying Surface Interior Style, Shading, and Lighting	14-11
Specifying the Color Clipping Method	14-12
Specifying the Input Device for PEX	14-13

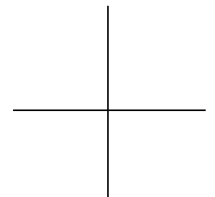



Troubleshooting PEX 14-14

If the PEX Client Does Not Run 14-14

If the PEX Client Looks Different 14-14

**Chapter 15 Configuring Serial and Parallel Ports**

Ports Overview 15-1

Serial Ports 15-1

Parallel Port 15-2

Configuring Port Operating Characteristics 15-2

Identifying Serial Port Numbers 15-2

Specifying Physical Serial Port Attributes 15-2

Specifying Serial Port Software Characteristics 15-6

Configuring the Parallel Port 15-8

Configuring a Terminal for Use as a System Console 15-9

Controlling Access to Serial and Parallel Ports 15-10

**Chapter 16 Using SNMP for Terminal Management**

SNMP Overview 16-1

SNMP Components 16-1

How SNMP Works 16-2

MIB Contents 16-2


SNMP Host Requirements 16-3

Controlling Access to Terminals through SNMP 16-3

Configuring Read/Write Access 16-4

Configuring Read-Only Access 16-5


Configuring Terminals to Allow Trap Monitoring 16-6

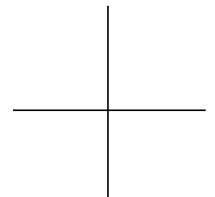

Using SNMP to Read and Write Variables	16-7
Reading a Terminal's SNMP Variables	16-7
Using SNMP Management Software	16-7
Using the ncdquery Utility	16-7
Writing SNMP Variables—Configuring Terminals	16-9
Using SNMP Remote Reset/Reboot	16-10
Configuring a Host for SNMP Remote Reset	16-10
Configuring a Terminal for SNMP Remote Reset	16-11
Resetting Session and Rebooting Terminals	16-11
Using the ncdreset Utility for Remote Reset	16-11
Using unit-administrative-status for SNMP Remote Reset	16-12


## **Chapter 17 Keyboards and Downloadable Keyboard Definitions**

Specifying the Keyboard Type	17-2
N-97 Keyboard Details	17-4
N-101 Keyboard Details	17-13
VT220-Compatible and N-108 Keyboard Details	17-21
VT220-Compatible Keyboard	17-21
N-108 Keyboard	17-21
N-107 Sun Type 4-Compatible Keyboard Details	17-36
N-123 Sun Type 5-Compatible Keyboard Details	17-44
Using Downloadable Keyboard Description Files	17-54
Creating a Keyboard Definition File	17-54
Specifying Dead-Key Processing	17-60

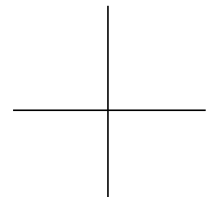


## **Chapter 18 X Server Messages**

Messages and Modules Overview	18-1
The Format of Messages	18-2
Displaying Messages	18-4
Viewing Messages in the Console Window	18-4
Viewing Messages through TELNET	18-4
Logging Messages to a File	18-5
Configuring Message Logging	18-5
Configuring Message Time Stamps	18-5
Changing the Message Buffer Size	18-6
Enabling Extended Diagnostics	18-6
Messages Common to All Modules	18-7
CALIBLIGHTPEN Messages	18-15
CALIBTOUCH Messages	18-16
CONFIGD Messages	18-17
CONFUI Messages	18-30
CONSOLE Messages	18-33
DESKTOP Messages	18-36
DHCP Messages	18-37
DIAGD Messages	18-38
DOS Messages	18-38
DTR Messages	18-40
EXECD Messages	18-40
FILED Messages	18-44
FONT Messages	18-48
IPROUTE Messages	18-55
JAVA Messages	18-57

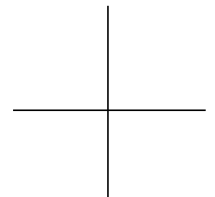

KBM Messages	18-58
KEYMAPPER Messages	18-67
LICENSE Messages	18-67
LOADB Messages	18-74
LOCALDEV Messages	18-77
LOGIN Messages	18-78
MIRROR Messages	18-81
MPEGPLAY Messages	18-82
MWM Messages	18-83
NCD Mosaic Browser Messages	18-84
NCDDM Messages	18-86
NETD Messages	18-87
NETFILE Messages	18-87
NETSRV Messages	18-93
OPENGL Messages	18-94
PPPD Messages	18-96
PRINTAPIS Messages	18-99
RTLD Messages	18-103
SERIALD Messages	18-106
SIE Messages	18-108
SNMPD Messages	18-108
TERM Messages	18-109
TOKENRING Messages	18-122
UI Messages	18-125
VIDEO, VIDEODECODER, and VIDEOPLAYER Messages	18-127
WINCEN Messages	18-127
WIRELESS Messages	18-128

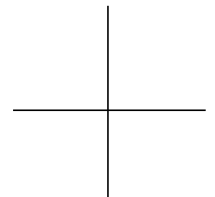

WM Messages	18-133
XREMOTE Messages	18-136
XRPRINTD Messages	18-138
XSERVER Messages	18-139
XT Messages	18-141
<b>Index</b>	

