

ULTRIX SCSI/CAM Architecture

Guide to Writing Device Drivers for the ULTRIX SCSI/CAM Architecture Interfaces

Order Number: AA-PN5HA-TE

January 1992

Product Version: SCSI/CAM for ULTRIX RISC Version 4.2, Version 1.0,
SCSI/CAM for ULTRIX RISC Version 4.2A, Version
1.0

Operating System and Version: ULTRIX Version 4.2 (RISC), ULTRIX Version 4.2A
(RISC)

This manual describes the SCSI/CAM Architecture interfaces. It also describes how to write device drivers for the SCSI/CAM implementation..

digital equipment corporation
Maynard, Massachusetts

Restricted Rights: Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

© Digital Equipment Corporation 1991
All rights reserved.

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation. Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.

The software described in this document is furnished under a license and may be used or copied only in accordance with the terms of such license.

No responsibility is assumed for the use or reliability of software on equipment that is not supplied by Digital or its affiliated companies.

The following are trademarks of Digital Equipment Corporation:

ALL-IN-1, Bookreader, CDA, DDIF, DDIS, DEC, DECnet, DECstation, DECsystem, DECUS, DECwindows, DTIF, MASSBUS, MicroVAX, Q-bus, ULTRIX, ULTRIX Mail Connection, ULTRIX Worksystem Software, UNIBUS, VAX, VAXstation, VMS, VT, XUI, and the DIGITAL logo.

UNIX is a registered trademark of UNIX System Laboratories, Inc.

Contents

About This Manual

Audience	xvii
Organization	xvii
Related Documentation	xviii
Conventions	xix

1 ULTRIX SCSI/CAM Software Architecture

1.1 Overview	1-1
1.2 CAM User Agent Device Driver	1-3
1.3 SCSI/CAM Peripheral Device Drivers	1-4
1.3.1 USCA Common Device Driver Modules	1-4
1.3.2 USCA Generic Device Driver Modules	1-5
1.3.3 CAM SCSI Disk Device Driver Modules	1-5
1.3.4 CAM SCSI Tape Device Driver Modules	1-5
1.3.5 CAM SCSI CDROM/AUDIO Device Driver Modules	1-5
1.4 SCSI/CAM Special I/O Interface	1-5
1.5 The SCSI/CAM Configuration Driver	1-5
1.6 CAM Transport Layer (XPT)	1-6
1.7 SCSI Interface Module Layers (SIM)	1-6

2 CAM User Agent Modules

2.1 User Agent Introduction	2-1
2.2 User Agent Error Handling	2-1
2.3 User Agent Data Structures	2-2
2.3.1 The UAGT_CAM_CCB Data Structure	2-2
2.3.1.1 The uagt_ccb Member	2-3
2.3.1.2 The uagt_ccblen Member	2-3

2.3.1.3	The uagt_buffer Member	2-3
2.3.1.4	The uagt_bufilen Member	2-3
2.3.1.5	The uagt_snsbuf Member	2-3
2.3.1.6	The uagt_snslen Member	2-3
2.3.1.7	The uagt_cdb Member	2-3
2.3.1.8	The uagt_cdblen Member	2-3
2.3.1.9	The uagt_flags Member	2-4
2.3.2	The UAGT_CAM_SCAN Data Structure	2-4
2.4	User Agent Routines	2-4
2.4.1	The uagt_open Routine	2-4
2.4.2	The uagt_close Routine	2-4
2.4.3	The uagt_ioctl Routine	2-5
2.5	Sample User Agent Drivers	2-5
2.5.1	Sample User Agent Driver Inquiry Program	2-5
2.5.1.1	The Include Files and Definitions Section	2-5
2.5.1.2	The Main Program Section	2-6
2.5.1.3	The User Agent Open Section	2-7
2.5.1.4	Filling in XPT SCSI IO Request CCB_HEADER Fields	2-7
2.5.1.5	Filling in INQUIRY Command CCB_HEADER Fields	2-8
2.5.1.6	Filling in the UAGT_CAM_CCB Fields	2-9
2.5.1.7	Sending the CCB to the CAM Subsystem	2-9
2.5.1.8	Print INQUIRY Data Routine	2-10
2.5.1.9	Print CAM Status Routine	2-12
2.5.1.10	Sample Output for a Valid Nexus	2-14
2.5.1.11	Sample Output for an Invalid Nexus	2-14
2.5.2	Sample User Agent Scanner Driver Program	2-15
2.5.2.1	Scanner Program Header File	2-15
2.5.2.2	The Include Files Section	2-16
2.5.2.3	The CDB Setup Section	2-16
2.5.2.4	The Definitions Section	2-17
2.5.2.5	The Main Program Section	2-17
2.5.2.6	The Nexus Conversion Section	2-19
2.5.2.7	The Parameter Assignment Section	2-20
2.5.2.8	The Data Structure Setup Section	2-21
2.5.2.9	The Window Parameters Setup Section	2-23
2.5.2.10	CCB Setup for the DEFINE WINDOW Command	2-24
2.5.2.11	The Error Checking Section	2-26
2.5.2.12	CCB Setup for the READ Command	2-29
2.5.2.13	The Read and Write Loop Section	2-30
2.5.2.14	The Local Function Definition Section	2-32

3 USCA Common Modules

3.1	Common SCSI Device Driver Data Structures	3-1
3.1.1	Peripheral Device Unit Table	3-1
3.1.2	Peripheral Device Structure	3-2
3.1.2.1	The pd_dev Member	3-2
3.1.2.2	The pd_spec_size Member	3-3
3.1.3	Device Descriptor Structure	3-3
3.1.4	Mode Select Table Structure	3-3
3.1.5	Density Table Structure	3-4
3.1.5.1	The den_blocking Member	3-4
3.1.6	SCSI/CAM Peripheral Device Driver Working Set Structure	3-4
3.1.6.1	The pws_flink Member	3-4
3.1.6.2	The pws_blink Member	3-4
3.1.6.3	The pws_ccb Member	3-5
3.2	Common SCSI Device Driver Macros	3-5
3.3	Common SCSI Device Driver Routines	3-6
3.3.1	Common I/O Routines	3-8
3.3.1.1	The ccmn_init Routine	3-8
3.3.1.2	The ccmn_open_unit Routine	3-8
3.3.1.3	The ccmn_close_unit Routine	3-8
3.3.2	Common Queue Manipulation Routines	3-8
3.3.2.1	The ccmn_send_ccb Routine	3-9
3.3.2.2	The ccmn_rem_ccb Routine	3-9
3.3.2.3	The ccmn_abort_que Routine	3-9
3.3.2.4	The ccmn_term_que Routine	3-9
3.3.3	Common CCB Management Routines	3-10
3.3.3.1	The ccmn_get_ccb Routine	3-10
3.3.3.2	The ccmn_rel_ccb Routine	3-10
3.3.3.3	The ccmn_io_ccb_bld Routine	3-11
3.3.3.4	The ccmn_gdev_ccb_bld Routine	3-11
3.3.3.5	The ccmn_sdev_ccb_bld Routine	3-11
3.3.3.6	The ccmn_sasy_ccb_bld Routine	3-11
3.3.3.7	The ccmn_rsq_ccb_bld Routine	3-11
3.3.3.8	The ccmn_pinq_ccb_bld Routine	3-11
3.3.3.9	The ccmn_abort_ccb_bld Routine	3-12
3.3.3.10	The ccmn_term_ccb_bld Routine	3-12
3.3.3.11	The ccmn_bdr_ccb_bld Routine	3-12
3.3.3.12	The ccmn_br_ccb_bld Routine	3-12
3.3.4	Common SCSI I/O Command Building Routines	3-12
3.3.4.1	The ccmn_tur Routine	3-13

3.3.4.2	The ccmn_start_unit Routine	3-13
3.3.4.3	The ccmn_mode_select Routine	3-13
3.3.5	Common CCB Status Routine	3-13
3.3.6	Common Buf Structure Pool Management Routines	3-14
3.3.6.1	The ccmn_get_bp Routine	3-14
3.3.6.2	The ccmn_rel_bp Routine	3-14
3.3.7	Common Data Buffer Pool Management Routines	3-14
3.3.7.1	The ccmn_get_dbuf Routine	3-14
3.3.7.2	The ccmn_rel_dbuf Routine	3-14
3.3.8	Miscellaneous Common Routines	3-14
3.3.8.1	The ccmn_ccbwait Routine	3-15
3.3.8.2	The ccmn_DoSpecialCmd Routine	3-15
3.3.8.3	The ccmn_SysSpecialCmd Routine	3-15
3.3.8.4	The ccmn_errlog Routine	3-15

4 USCA Generic Modules

4.1	Prerequisites for Using the CAM Generic Routines	4-1
4.1.1	Ioctl Commands	4-1
4.1.2	Error Handling	4-2
4.1.3	Kernel Interface	4-2
4.2	Data Structures Used by Generic Routines	4-2
4.2.1	The Generic-Specific Structure	4-2
4.2.1.1	The gen_flags Member	4-2
4.2.1.2	The gen_state_flags Member	4-3
4.2.1.3	The gen_resid Member	4-3
4.2.2	The Generic Action Structure	4-3
4.2.2.1	The act_ccb Member	4-3
4.2.2.2	The act_ret_error Member	4-4
4.2.2.3	The act_fatal Member	4-4
4.2.2.4	The act_ccb_status Member	4-4
4.2.2.5	The act_scsi_status Member	4-4
4.2.2.6	The act_chkcond_error Member	4-4
4.3	Generic I/O Routines	4-4
4.3.1	The cgen_open Routine	4-5
4.3.2	The cgen_close Routine	4-5
4.3.3	The cgen_read Routine	4-5
4.3.4	The cgen_write Routine	4-6
4.3.5	The cgen_strategy Routine	4-6
4.3.6	The cgen_ioctl Routine	4-6

4.4	Generic Internal Routines	4-6
4.4.1	The cgen_ccb_chkcond Routine	4-7
4.4.2	The cgen_done Routine	4-7
4.4.3	The cgen_iodone Routine	4-7
4.4.4	The cgen_async Routine	4-7
4.4.5	The cgen_minphys Routine	4-8
4.4.6	The cgen_slave Routine	4-8
4.4.7	The cgen_attach Routine	4-8
4.5	Generic Command Support Routines	4-8
4.5.1	The cgen_ready Routine	4-8
4.5.2	The cgen_open_sel Routine	4-9
4.5.3	The cgen_mode_sns Routine	4-9
5	CAM Data Structures	
5.1	CAM Control Blocks	5-1
5.1.1	The CCB_HEADER Structure	5-2
5.1.1.1	The my_addr and cam_ccb_len Members	5-2
5.1.1.2	The cam_func_code Member	5-2
5.1.1.3	The cam_status Member	5-3
5.2	I/O Data Structure	5-4
5.2.1	The CCB_SCSIIO Structure	5-4
5.2.2	The CDB_UN Structure	5-5
5.3	Control CCB Structures	5-5
5.3.1	The CCB_RELSIM Structure	5-5
5.3.2	The CCB_SETASYNC Structure	5-5
5.3.3	The CCB_ABORT Structure	5-6
5.3.4	The CCB_RESETBUS Structure	5-6
5.3.5	The CCB_RESETDEV Structure	5-6
5.3.6	The CCB_TERMIO Structure	5-6
5.4	Configuration CCB Structures	5-7
5.4.1	The CCB_GETDEV Structure	5-7
5.4.2	The CCB_SETDEV Structure	5-7
5.4.3	The CCB_PATHINQ Structure	5-7
6	SCSI/CAM Configuration Driver Modules	
6.1	Configuration Driver Introduction	6-1
6.2	Configuration Driver XPT Interface	6-1

6.3	Configuration Driver Data Structures	6-1
6.3.1	The Configuration driver control structure	6-2
6.3.1.1	The <code>ccfg_flags</code> Member	6-2
6.3.1.2	The <code>inq_buf</code> Member	6-2
6.3.2	The CAM Equipment Device Table	6-2
6.3.2.1	The <code>edt</code> Member	6-2
6.3.2.2	The <code>edt_scan_count</code> Member	6-3
6.3.2.3	The <code>edt_flags</code> Member	6-3
6.3.3	The SCSI/CAM Peripheral Driver Configuration Structure	6-3
6.3.3.1	The <code>cpd_name</code> Member	6-3
6.3.3.2	The <code>cpd_slave</code> Member	6-3
6.3.3.3	The <code>cpd_attach</code> Member	6-3
6.3.3.4	The <code>cpd_unload</code> Member	6-3
6.4	The <code>cam_config.c</code> File	6-3
6.5	Configuration Driver Entry Point Routines	6-4
6.5.1	The <code>ccfg_slave</code> Routine	6-5
6.5.2	The <code>ccfg_attach</code> Routine	6-5
6.5.3	The <code>ccfg_action</code> Routine	6-5
6.5.4	The <code>ccfg_edtscan</code> Routine	6-5
7	CAM XPT I/O Support Routines	
7.1	The <code>xpt_action</code> Routine	7-1
7.2	The <code>xpt_ccb_alloc</code> Routine	7-1
7.3	The <code>xpt_ccb_free</code> Routine	7-1
7.4	The <code>xpt_init</code> Routine	7-2
8	CAM SIM Modules	
8.1	SIM Asynchronous Callback Handling	8-1
8.2	SIM Routines Used by Device Driver Writers	8-2
8.2.1	The <code>sim_action</code> Routine	8-2
8.2.2	The <code>sim_init</code> Routine	8-2
9	USCA Error Handling	
9.1	CAM Error Handling Macro	9-1
9.2	CAM Error Logging Structures	9-2

9.2.1	The Error Entry Structure	9-2
9.2.1.1	The ent_type Member	9-2
9.2.1.2	The ent_size Member	9-2
9.2.1.3	The ent_total_size Member	9-2
9.2.1.4	The ent_vers Member	9-3
9.2.1.5	The ent_data Member	9-3
9.2.1.6	The ent_pri Member	9-3
9.2.2	The Error Header Structure	9-3
9.2.2.1	The hdr_type Member	9-3
9.2.2.2	The hdr_size Member	9-3
9.2.2.3	The hdr_class Member	9-4
9.2.2.4	The hdr_subsystem Member	9-4
9.2.2.5	The hdr_entries Member	9-4
9.2.2.6	The hdr_list Member	9-4
9.2.2.7	The hdr_pri Member	9-4
9.3	The cam_logger Routine	9-4

10 USCA Debugging Facilities

10.1	CAM Debugging Variables	10-1
10.1.1	The camdbg_flag Variable	10-1
10.1.2	The camdbg_id Variable	10-2
10.2	CAM Debugging Macros	10-2
10.3	CAM Debugging Routines	10-3
10.3.1	CAM Debugging Status Routines	10-4
10.3.1.1	The cdbg_CamFunction Routine	10-4
10.3.1.2	The cdbg_CamStatus Routine	10-4
10.3.1.3	The cdbg_ScsiStatus Routine	10-5
10.3.1.4	The cdbg_SystemStatus Routine	10-5
10.3.2	CAM Dump Routines	10-5
10.3.2.1	The cdbg_DumpCCBHeader Routine	10-5
10.3.2.2	The cdbg_DumpCCBHeaderFlags Routine	10-5
10.3.2.3	The cdbg_DumpSCSIIO Routine	10-6
10.3.2.4	The cdbg_DumpPDRVws Routine	10-6
10.3.2.5	The cdbg_DumpABORT Routine	10-6
10.3.2.6	The cdbg_DumpTERMIO Routine	10-6
10.3.2.7	The cdbg_DumpBuffer Routine	10-6
10.3.2.8	The cdbg_GetDeviceName Routine	10-6
10.3.2.9	The cdbg_DumpInquiryData Routine	10-6

11 Programmer-Defined SCSI/CAM Device Drivers

11.1	Programmer-Defined SCSI/CAM Data Structures	11-1
11.1.1	Programmer-Defined Peripheral Device Unit Table	11-1
11.1.1.1	The pu_device Member	11-1
11.1.1.2	The pu_opens Member	11-2
11.1.1.3	The pu_config Member	11-2
11.1.1.4	The pu_type Member	11-2
11.1.2	Programmer-Defined Peripheral Device Structure	11-2
11.1.2.1	The pd_active_list Member	11-3
11.1.2.2	The pd_active_ccb Member	11-3
11.1.2.3	The pd_que_depth Member	11-3
11.1.2.4	The pd_pend_list Member	11-3
11.1.2.5	The pd_pend_ccb Member	11-3
11.1.2.6	The pd_dev Member	11-3
11.1.2.7	The pd_bus Member	11-3
11.1.2.8	The pd_target Member	11-3
11.1.2.9	The pd_lun Member	11-3
11.1.2.10	The pd_unit Member	11-3
11.1.2.11	The pd_flags and pd_state Members	11-4
11.1.2.12	The pd_abort_cnt Member	11-4
11.1.2.13	The pd_cam_flags Member	11-4
11.1.2.14	The pd_tag_action Member	11-4
11.1.2.15	The pd_dev_inq Member	11-4
11.1.2.16	The pd_ms_index Member	11-4
11.1.2.17	The pd_dev_desc Member	11-4
11.1.2.18	The pd_specific Member	11-4
11.1.2.19	The pd_spec_size Member	11-4
11.1.2.20	The pd_sense_ptr Member	11-4
11.1.2.21	The pd_sense_len Member	11-4
11.1.2.22	The pd_recov_hand Member	11-4
11.1.2.23	The pd_read_count Member	11-5
11.1.2.24	The pd_write_count Member	11-5
11.1.2.25	The pd_read_bytes Member	11-5
11.1.2.26	The pd_write_bytes Member	11-5
11.1.2.27	The pd_lk_device Member	11-5
11.1.3	Programmer-Defined Device Descriptor Structure	11-5
11.1.3.1	The dd_pv_name Member	11-6
11.1.3.2	The dd_length Member	11-6
11.1.3.3	The dd_dev_name Member	11-6
11.1.3.4	The dd_device_type Member	11-6
11.1.3.5	The dd_def_partition Member	11-6
11.1.3.6	The dd_block_size Member	11-6
11.1.3.7	The dd_max_record Member	11-6
11.1.3.8	The dd_density_tbl Member	11-6
11.1.3.9	The dd_modesel_tbl Member	11-7
11.1.3.10	The dd_flags Member	11-7

11.1.3.11	The dd_scsi_optcmds Member	11-7
11.1.3.12	The dd_ready_time Member	11-7
11.1.3.13	The dd_que_depth Member	11-7
11.1.3.14	The dd_valid Member	11-7
11.1.3.15	The dd_inq_len Member	11-7
11.1.3.16	The dd_req_sense_len Member	11-7
11.1.4	Programmer-Defined Density Table Structure	11-8
11.1.4.1	The den_flags Member	11-8
11.1.4.2	The den_density_code Member	11-8
11.1.4.3	The den_compress_code Member	11-8
11.1.4.4	The den_speed_setting Member	11-8
11.1.4.5	The den_buffered_setting Member	11-8
11.1.4.6	The den_blocking Member	11-8
11.1.4.7	Sample Density Table Structure Entry	11-9
11.1.5	Programmer-Defined Mode Select Table Structure	11-9
11.1.5.1	The ms_page Member	11-10
11.1.5.2	The ms_data Member	11-10
11.1.5.3	The ms_data_len Member	11-10
11.1.5.4	The ms_ent_sp_pf Member	11-11
11.1.5.5	Sample Mode Select Table Structure Entry	11-11
11.2	Sample SCSI/CAM Device-Specific Data Structures	11-11
11.2.1	Programmer-Defined Tape-Specific Structure	11-11
11.2.1.1	The ts_flags Member	11-12
11.2.1.2	The ts_state_flags Member	11-12
11.2.1.3	The ts_resid Member	11-13
11.2.1.4	The ts_block_size Member	11-13
11.2.1.5	The ts_density Member	11-13
11.2.1.6	The ts_records Member	11-13
11.2.1.7	The ts_num_filemarks Member	11-13
11.2.1.8	The ts_softcnt Member	11-13
11.2.1.9	The ts_hardcnt Member	11-13
11.2.2	Programmer-Defined Disk- and CDROM-Specific Structure	11-14
11.2.2.1	The ds_bufhd Member	11-14
11.2.2.2	The ds_dkn Member	11-14
11.2.2.3	The ds_bbr_state Member	11-14
11.2.2.4	The ds_bbr_retry Member	11-14
11.2.2.5	The ds_bbr_rwccb Member	11-14
11.2.2.6	The ds_bbr_reasccb Member	11-15
11.2.2.7	The ds_tur_ccb Member	11-15
11.2.2.8	The ds_start_ccb Member	11-15
11.2.2.9	The ds_mdsl_ccb Member	11-15
11.2.2.10	The ds_rdcpl_ccb Member	11-15
11.2.2.11	The ds_read_ccb Member	11-15
11.2.2.12	The ds_prev_ccb Member	11-15
11.2.2.13	The ds_block_size Member	11-15

11.2.2.14	The ds_tot_size Member	11-15
11.2.2.15	The ds_media_changes Member	11-15
11.2.2.16	The ds_pt Structure	11-15
11.2.2.17	The ds_openpart Member	11-15
11.2.3	SCSI/CAM CDROM/AUDIO I/O Control Commands	11-15
11.2.3.1	Structures Used by SCSI/CAM CDROM/AUDIO I/O Control Commands	11-16
11.2.3.1.1	Structure Used by All SCSI/CAM CDROM/AUDIO I/O Control Commands	11-17
11.2.3.1.2	Structure Used by the CDROM_PLAY_AUDIO and CDROM_PLAY_VAUDIO Commands	11-18
11.2.3.1.3	Structure Used by the CDROM_PLAY_AUDIO_MSF and CDROM_PLAY_MSF Commands	11-18
11.2.3.1.4	Structure Used by the CDROM_PLAY_AUDIO_TI Command	11-19
11.2.3.1.5	Structure Used by the CDROM_PLAY_AUDIO_TR Command	11-20
11.2.3.1.6	Structure Used by the CDROM_TOC_HEADER Command	11-20
11.2.3.1.7	Structures Used by the CDROM_TOC_ENTRYS Command	11-21
11.2.3.1.8	Structures Used by the CDROM_READ_SUBCHANNEL Command	11-22
11.2.3.1.9	Structures Used by the CDROM_READ_HEADER Command	11-26
11.2.3.1.10	Structure Used by the CDROM_PLAY_TRACK Command	11-27
11.2.3.1.11	Structure Used by the CDROM_PLAYBACK_CONTROL and CDROM_PLAYBACK_STATUS Commands	11-27
11.2.3.1.12	Structure Used by the CDROM_PLAYBACK_CONTROL Command	11-28
11.2.3.1.13	Structure Used by the CDROM_PLAYBACK_STATUS Command	11-28
11.3	Adding a Programmer-Defined SCSI/CAM Device	11-30

12 SCSI/CAM Special I/O Interface

12.1	Application Program Access	12-1
12.2	Device Driver Access	12-2
12.3	SCSI/CAM Special Command Tables	12-3
12.3.1	The sph_flink and sph_blink Members	12-4
12.3.2	The sph_cmd_table Member	12-4
12.3.3	The sph_device_type Member	12-4

12.3.4	The sph_table_flags Member	12-4
12.3.5	The sph_table_name Member	12-4
12.4	SCSI/CAM Special Command Table Entries	12-5
12.4.1	The spc_ioctl_cmd and spc_sub_command Members	12-5
12.4.2	The spc_cmd_flags Member	12-5
12.4.3	The spc_command_code Member	12-6
12.4.4	The spc_device_type Member	12-6
12.4.5	The spc_cmd_parameter Member	12-6
12.4.6	The spc_cam_flags Member	12-6
12.4.7	The spc_file_flags Member	12-6
12.4.8	The spc_data_length Member	12-6
12.4.9	The spc_timeout Member	12-6
12.4.10	The spc_docmd Member	12-6
12.4.11	The spc_mkcdb Member	12-7
12.4.12	The spc_setup Member	12-7
12.4.13	The spc_cdbp Member	12-7
12.4.14	The spc_cmdp Member	12-7
12.4.15	Sample SCSI/CAM Special Command Table	12-7
12.5	SCSI/CAM Special I/O Argument Structure	12-8
12.5.1	The sa_flags Member	12-10
12.5.2	The sa_dev Member	12-10
12.5.3	The sa_unit, sa_bus, sa_target, and sa_lun Members	12-11
12.5.4	The sa_ioctl_cmd Member	12-11
12.5.5	The sa_ioctl_scmd Member	12-11
12.5.6	The sa_ioctl_data Member	12-11
12.5.7	The sa_device_name Member	12-11
12.5.8	The sa_device_type Member	12-11
12.5.9	The sa_iop_length and sa_iop_buffer Members	12-11
12.5.10	The sa_file_flags Member	12-11
12.5.11	The sa_sense_length and sa_sense_buffer Members	12-12
12.5.12	The sa_user_length and sa_user_buffer Members	12-12
12.5.13	The sa_bp Member	12-12
12.5.14	The sa_ccb Member	12-12
12.5.15	The special_cmd Member	12-12
12.5.16	The special_header Member	12-12
12.5.17	The sa_cmd_parameter Member	12-12
12.5.18	The sa_error Member	12-13
12.5.19	The sa_start Member	12-13
12.5.20	The sa_data_length and sa_data_buffer Members	12-13
12.5.21	The sa_cdb_pointer Member	12-13
12.5.22	The sa_cdb_length Member	12-13
12.5.23	The sa_cmd_flags Member	12-13
12.5.24	The sa_retry_count Member	12-14
12.5.25	The sa_retry_limit Member	12-14
12.5.26	The sa_timeout Member	12-14
12.5.27	The sa_xfer_resid Member	12-14

12.5.28	The sa_specific Member	12-14
12.5.29	Sample Function to Create a CDB	12-14
12.5.30	Sample Function to Set Up Parameters	12-15
12.6	SCSI/CAM Special I/O Control Command	12-16
12.6.1	The sp_flags Member	12-17
12.6.2	The sp_dev, sp_unit, sp_bus, sp_target, and sp_lun Members	12-18
12.6.3	The sp_sub_command Member	12-18
12.6.4	The sp_cmd_parameter Member	12-18
12.6.5	The sp_iop_length and sp_iop_buffer Members	12-18
12.6.6	The sp_sense_length, sp_sense_resid, and sp_sense_buffer Members ..	12-18
12.6.7	The sp_user_length and sp_user_buffer Members	12-18
12.6.8	The sp_timeout Member	12-19
12.6.9	The sp_retry_count Member	12-19
12.6.10	The sp_retry_limit Member	12-19
12.6.11	The sp_xfer_resid Member	12-19
12.6.12	Sample Function to Create an I/O Control Command	12-19
12.7	Other Sample Code	12-20
12.7.1	Sample Code to Open a Device	12-20
12.7.2	Sample Code to Create a Driver Entry Point	12-22

A Header Files Used by Device Drivers

B Summary of Device Driver Routines

C SCSI/CAM Routines in ULTRIX Reference Page Format

Index

Figures

1-1:	CAM Environment Model	1-2
1-2:	ULTRIX SCSI/CAM Architecture Implementation Model	1-3
12-1:	Application Program Flow Through SCSI/CAM Special I/O Interface	12-2
12-2:	Device Driver Flow Through SCSI/CAM Special I/O Interface	12-3

Tables

2-1:	User Agent Routines	2-4
3-1:	Members of the PDRV_DEVICE Structure	3-2
3-2:	Common Identification Macros	3-5

3-3: Common Lock Macros	3-6
3-4: Common I/O Routines	3-8
3-5: Common Queue Manipulation Routines	3-9
3-6: Common CCB Management Routines	3-10
3-7: Common SCSI I/O Command Building Routines	3-12
3-8: Miscellaneous Common Routines	3-15
4-1: Generic I/O Routines	4-4
4-2: Generic Internal Routines	4-6
4-3: Generic Command Support Routines	4-8
5-1: CAM Control Blocks	5-1
5-2: CAM Function Codes	5-2
5-3: CAM Status Codes	5-3
6-1: Configuration Driver Entry Point Routines	6-4
7-1: XPT I/O Support Routines	7-1
10-1: CAM Debugging Status Routines	10-4
10-2: CAM Dump Routines	10-5
11-1: SCSI/CAM CDROM/AUDIO I/O Control Commands	11-16
11-2: Structures Used by SCSI/CAM CDROM/AUDIO I/O Control Commands	11-16
12-1: SCSI/CAM Special I/O Argument Structure	12-8
A-1: Header Files Used by Device Drivers	A-1
A-2: Header Files Used by SCSI/CAM Drivers	A-3
B-1: Summary of Device Driver Routines	B-1

About This Manual

This manual contains information needed by systems engineers who write device drivers for the ULTRIX SCSI/CAM Architecture interfaces.

Audience

This manual is intended for systems engineers who:

- Develop programs in the C language using standard library routines
- Know one or more UNIX shells, other than `csh`
- Understand basic ULTRIX components such as the kernel, shells, processes, configuration, autoconfiguration, and so forth
- Understand how to use the ULTRIX programming tools, compilers, and debuggers
- Develop programs in an environment that includes dynamic memory allocation, linked list data structures, multitasking and symmetric multiprocessing (SMP)
- Understand the hardware device for which the driver is being written

Organization

This manual is organized as follows:

Chapter 1	ULTRIX SCSI/CAM Software Architecture Presents an overview of the ULTRIX SCSI CAM Architecture (USCA).
Chapter 2	CAM User Agent Modules Describes the User Agent routines provided by Digital for SCSI/CAM peripheral device driver writers
Chapter 3	USCA Common Modules Describes the common data structures, routines, and macros provided by Digital for SCSI/CAM peripheral device driver writers
Chapter 4	USCA Generic Modules Describes the generic routines provided by Digital for SCSI/CAM peripheral device driver writers
Chapter 5	CAM Data Structures Describes members of the CAM data structures used by SCSI device drivers.
Chapter 6	SCSI/CAM Configuration Driver Modules Describes the CAM Configuration driver data structures and routines that call the initialization routines in all the CAM subsystem modules.
Chapter 7	CAM XPT I/O Support Routines

	Discusses the Transport (XPT) layer routines used with SCSI device drivers.
Chapter 8	CAM SIM Modules Discusses the data structures and routines used with the SCSI Interface Module (SIM) layers that interface with the CAM subsystem.
Chapter 9	USCA Error Handling Discusses the macro, data structures, and routines supplied by Digital for error handling in SCSI/CAM device drivers.
Chapter 10	USCA Debugging Facilities Describes the debugging routines supplied by Digital for SCSI/CAM peripheral device driver writers.
Chapter 11	Programmer-Defined SCSI/CAM Device Drivers Describes how programmers can define SCSI/CAM device drivers, with examples.
Chapter 12	SCSI/CAM Special I/O Interface Describes the SCSI/CAM special I/O interface supplied by Digital to process special SCSI I/O commands, with examples.
Appendix A	Header Files Used by SCSI/CAM Device Drivers Summarizes the header files used by SCSI/CAM device drivers.
Appendix B	Summary of Device Driver Routines Summarizes the general device driver routines used by SCSI/CAM device drivers.
Appendix C	SCSI/CAM Routines in ULTRIX Reference Page Format Provides more detailed descriptions of the USCA routines in ULTRIX reference page format.

Related Documentation

Readers of this guide are assumed to be familiar with the following documents:

- American National Standard for Information Systems, *SCSI-2 Common Access Method: Transport and SCSI Interface Module*, working draft, X3T9.2/90-186
Terms used in this guide, such as CAM Control Block (CCB), are defined in that document. Copies may be purchased from Global Engineering, 2805 McGaw St, Irvine, CA 92714, telephone 800-854-7179.
- American National Standard for Information Systems, *Small Computer Systems Interface - 2 (SCSI - 2)*, X3T9/89-042

The following documents contain information that pertains to writing device drivers:

- *Guide to Writing and Porting VMEbus and TURBOchannel Device Drivers*
This guide contains information needed by systems engineers who write and port device drivers for the VMEbus and the TURBOchannel. Systems engineers who write drivers that operate on other buses can find information on driver concepts, interfaces to device driver routines, kernel structures, kernel routines used by device drivers, installation of device drivers, and header files related to device drivers.
- *Guide to Configuration File Maintenance*
This guide contains information on how to maintain the system configuration file and how to build a new kernel, either automatically or manually. The configuration file provides you with the ability to configure your system to meet

your needs. You should read this manual if you are responsible for maintaining an ULTRIX system. You should also read parts of this manual if you are planning to modify or write device drivers.

- *Guide to the Error Logger*
This guide contains information about the error logger and how it records and reports errors and other events that occur on your ULTRIX system. The guide gives an overview of the error logger, describes how to control error logger functions, and describes using the Error Report Formatter, `uerf`. You should read this manual if you manage error information on an ULTRIX system.

Conventions

<code>%</code>	The default user prompt is your system name followed by a right angle bracket. In this manual, a percent sign (<code>%</code>) is used to represent this prompt.
<code>% cat</code>	A regular constant-width typeface is used for code examples, system prompts in interactive examples, and names of commands and other literal strings in text. A bold constant-width typeface is used for typed user input in interactive examples and for routines in function definitions.
<i>filename</i>	In examples, syntax descriptions, and function definitions, this typeface indicates variable values.
cat <i>file</i>	In syntax definitions, a bold sans serif typeface is used for literal strings and a sloping sans serif typeface is used for variable values.
<code>cat(1)</code>	A cross-reference to a reference page include the appropriate section number in parentheses. For example, a reference to <code>cat(1)</code> indicates that you can find the material on the <code>cat</code> command in Section 1 of the reference pages.

This chapter provides an overview of the ULTRIX Small Computer System Interface (SCSI) Common Access Method (CAM) Architecture (USCA), which is a reliable, maintainable, and high performance SCSI subsystem based on the industry-standard CAM architecture. Readers of this guide should be familiar with the following documents:

- American National Standard for Information Systems, *SCSI-2 Common Access Method: Transport and SCSI Interface Module*, working draft, X3T9.2/90-186

Terms used in this guide, such as CAM Control Block (CCB), are defined in that document. Copies may be purchased from Global Engineering, 2805 McGaw St, Irvine, CA 92714, telephone 800-854-7179.

- American National Standard for Information Systems, *Small Computer Systems Interface - 2 (SCSI - 2)*, X3T9/89-042

This chapter describes the following:


- The CAM and USCA environment models
- The User Agent driver
- The SCSI/CAM peripheral device driver routines
 - The CAM common routines supplied by Digital
 - The generic routines supplied by Digital
 - The SCSI disk device routines
 - The SCSI tape device routines
 - The SCSI CDROM/AUDIO device commands
 - The SCSI/CAM Special I/O interface
- The CAM Configuration driver
- The CAM Transport layer
- The SCSI Interface Module (SIM)

1.1 Overview

The CAM architecture defines a software model that is layered, providing hardware independence for SCSI device drivers and SCSI system software. In the CAM model, which is illustrated in Figure 1-1, a single SCSI/CAM peripheral driver controls SCSI devices of the same type, for example, direct access devices. This driver communicates with a device on the bus through a defined interface. Using this interface makes a SCSI/CAM peripheral device driver independent of the underlying SCSI Host Bus Adapter (HBA).

This hardware independence is achieved by using the Transport (XPT) and SCSI Interface Module (SIM) components of CAM. Because the XPT/SIM interface is defined and standardized, users and third parties can write SCSI/CAM peripheral device drivers for a variety of devices and use existing operating system support for SCSI. The drivers do not contain SCSI HBA dependencies; therefore, they can run on any hardware platform that has an XPT/SIM interface present.


Figure 1-1: CAM Environment Model

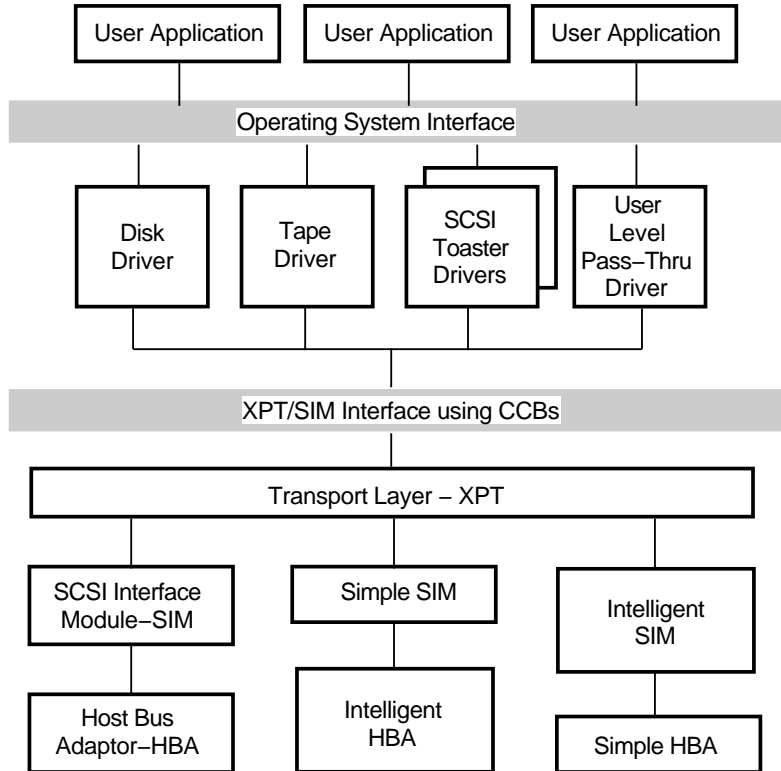

ZK-0359U-R

Figure 1-2 illustrates the ULTRIX SCSI/CAM implementation of that model.

Figure 1-2: ULTRIX SCSI/CAM Architecture Implementation Model

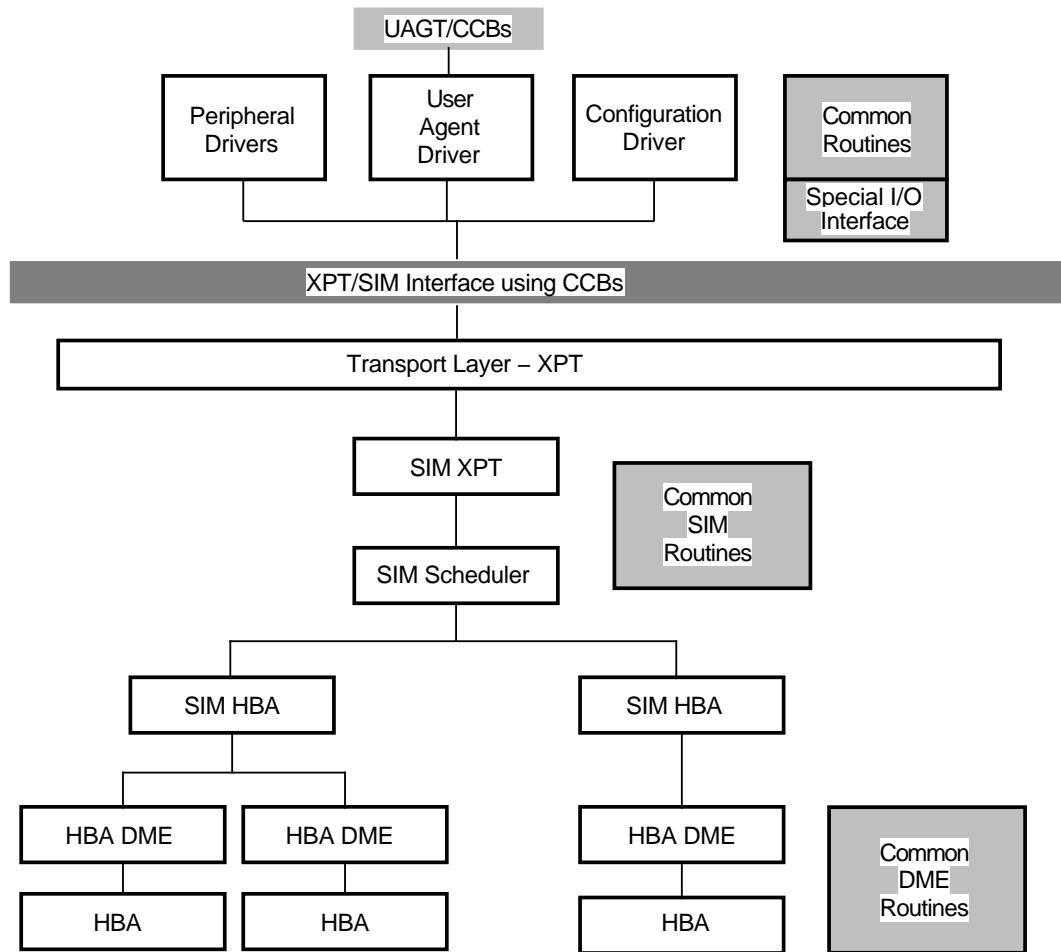

ZK-0252U-R

1.2 CAM User Agent Device Driver

The User Agent driver lets user process CAM Control Block (CCB) requests to the XPT pass through for processing. The CCB contains all information required to fulfill the request. The user process calls the User Agent indirectly, using the `ioctl(2)` system call. A new User Agent CCB is allocated by a call to the XPT layer, and the user-process CCB information is copied into kernel space. The new CCB is filled in with the CCB values from the user process. If necessary, the user data areas are locked in memory. The CCB is then sent to the CAM subsystem for processing.

Once the request has completed, the User Agent driver's completion routine is called. That routine performs all necessary cleanup operations and notifies the user process that the request is complete.

The User Agent allows multiple processes to issue CCBs, so there may be multiple processes sleeping on the User Agent. All CCBs are queued at the SIM layer.

1.3 SCSI/CAM Peripheral Device Drivers

SCSI/CAM peripheral device drivers convert operating system requests, such as user process reads or writes, into CAM requests that the SCSI/CAM subsystem can process. Each type of SCSI/CAM peripheral driver is responsible for a specific class of SCSI device, such as SCSI tape devices. The SCSI/CAM peripheral driver handles error codes and conditions for its SCSI device class.

SCSI/CAM peripheral drivers convert input/output (I/O) requests into CAM Control Blocks (CCBs) that contain SCSI Command Descriptor Blocks (CDBs). CCBs are presented to the underlying transport layer, XPT, to initiate I/O requests. SCSI/CAM peripheral drivers implement SCSI device error recovery, for example, dynamic bad block replacement (DBBR). The SCSI device driver has no access to SCSI device control and status registers (CSRs) and receives no SCSI device interrupts.

The major/minor device-number pair, which is 16 bits wide, is used as an argument when creating the device special file associated with a specific SCSI device and is contained in the `buf` structure when accessing the device in raw or blocked mode. The 16 bits are allocated as follows:



ZK-0403U-R

The major number range goes from HEX 60 to HEX 6f and the minor number range goes from HEX 00 to HEX f0. For example, a device that starts with a major number of 0x60 and a minor number of 0x00 represents Bus 0, Target 0, and Logical Unit 0. The last SCSI device that this sample device driver would control has major number 0x6f and minor number 0xf0. This represents Bus 4, Target 7, and Logical Unit 7.

This section provides overviews of the following:

- Common SCSI device driver modules
- Generic SCSI device driver modules
- SCSI disk device driver modules
- SCSI tape device driver modules
- SCSI CDROM/AUDIO device driver modules

Chapters 3, 4, and 11 describe the data structures and the routines associated with each module.

1.3.1 USCA Common Device Driver Modules

The common SCSI device driver structures and routines can be shared among all the SCSI/CAM peripheral drivers written by device driver writers for ULTRIX. Using these common routines can speed the process of writing a SCSI device driver by providing routines that any SCSI device driver can use to perform operations.

1.3.2 USCA Generic Device Driver Modules

Digital supplies predefined data structures and formats that SCSI device driver writers can use to write generic SCSI/CAM peripheral device drivers. These data structures and formats can be used in conjunction with the common routines. Chapter 4 includes a sample generic SCSI device driver using the common routines.

1.3.3 CAM SCSI Disk Device Driver Modules

The SCSI/CAM peripheral disk driver supports removable (floppy) and nonremovable direct access SCSI disk devices and CDROM devices. The user interface consists of the major/minor device number pair and the `ioctl` commands supported by the SCSI disk device driver. The SCSI disk device driver also uses the common routines.

1.3.4 CAM SCSI Tape Device Driver Modules

The SCSI tape device structures and routines are exclusive to the SCSI/CAM peripheral tape driver. The user interface consists of the major/minor device number pair and the `ioctl` commands supported by the SCSI tape device driver. The SCSI tape device driver also uses the common routines.

1.3.5 CAM SCSI CDROM/AUDIO Device Driver Modules

The SCSI CDROM/AUDIO device commands, which are described in Chapter 11, use the SCSI CDROM/AUDIO device structures. The SCSI CDROM/AUDIO device driver also uses the common routines.

1.4 SCSI/CAM Special I/O Interface

The USCA software includes an interface developed to process special SCSI I/O control commands used by the existing Digital SCSI subsystem and to aid in porting new or existing SCSI device drivers from other vendors to the USCA. With the SCSI/CAM special I/O interface, SCSI/CAM peripheral driver writers do not need detailed knowledge of either the system-specific or the CAM-specific structures and routines used to issue a SCSI command to the CAM I/O subsystem.

1.5 The SCSI/CAM Configuration Driver

The Configuration driver is responsible for configuring and initializing the CAM subsystem. This driver is also responsible for maintaining the `cam_edt []` information structure.

When the system powers up, the Configuration driver initializes the local and global CAM subsystem data structures. The Configuration driver also calls the XPT and SIM initialization routines. Once the subsystems are initialized, the Configuration driver performs a SCSI-bus scan by sending the SCSI Device Inquiry command. The `cam_edt []` structure contains the returned SCSI inquiry data for the SCSI/CAM peripheral drivers to access. The drivers, using the `XPT_GDEV_TYPE` and `XPT_SDEV_TYPE` get and set device information CCBs, can access the data contained in `cam_edt []`.

1.6 CAM Transport Layer (XPT)

The CAM transport layer, XPT, handles the CAM requests from the SCSI/CAM peripheral drivers and routes them to the appropriate SIM module. The XPT provides routines which are called by the SCSI/CAM peripheral driver to allocate and deallocate CAM control blocks (CCBs). In addition, the XPT provides routines that are used to initiate requests to the SIM and to issue asynchronous callbacks.

1.7 SCSI Interface Module Layers (SIM)

The SCSI Interface Module, SIM, has the most interaction with the SCSI bus protocol, timings, and other hardware-specific operations. Although this is a single component in the CAM model, it is divided into four logical sublayers in ULTRIX:

- SIM XPT – The SIM layer that interfaces to the XPT to initiate I/O on behalf of the SCSI/CAM peripheral drivers.
- SIM SCHEDULER – The SIM layer that schedules requests to the SIM HBAs.
- SIM HBA – The SIM layer that contains the HBA device-specific information.
- SIM DME – A low level layer that contains the architecture-specific data-movement code.

This chapter describes the functions of the ULTRIX User Agent SCSI device driver. It also describes the User Agent data structures and routines used by the User Agent SCSI device driver.

2.1 User Agent Introduction

The ULTRIX User Agent SCSI device driver lets device driver writers write an application program to build a CAM Control Block (CCB) request. The User Agent driver lets the user-process request pass through to the XPT layer for processing. This gives user processes access to the SCSI/CAM subsystem and to all types of SCSI/CAM peripheral devices attached to the system.

This is a simple method for passing the CCB's SCSI request to the devices using the SIMs. The kernel does not have to be rebuilt if the device driver writer wants to change values within the CCBs.

The CCB contains all the information required to perform the request. The user process calls the User Agent SCSI device driver using the `ioctl` system call. See `ioctl(2)` for more information. The User Agent `ioctl` routine, `uagt_ioctl`, is called through the device switch table, which is indexed by the major device number of the User Agent driver specified in the `ioctl` call. The `ioctl` commands supported by the User Agent SCSI device driver are: `DEVIOCGET`, which returns the SCSI device driver status; `UAGT_CAM_IO`, which sends the specified CCB to the XPT layer for processing; `UAGT_CAM_SINGLE_SCAN`, which causes the scan of a bus, target, and LUN; and `UAGT_CAM_FULL_SCAN`, which causes the scan of a bus.

A CCB is allocated in the kernel and the user process's CCB is copied to the kernel CCB. The User Agent SCSI device driver sleeps waiting for the request to complete; then, all necessary cleanup is performed, and the user process is notified of the completion of the request. If a signal is caught, an `ABORT` CCB is issued to try to terminate the outstanding CCB for the user process.

The User Agent SCSI device driver allows multiple processes access to the XPT layer; therefore, there may be multiple processes sleeping on the User Agent. All CCBs passed through by the User Agent are queued at the SIM layer.

2.2 User Agent Error Handling

The User Agent SCSI device driver performs limited error checking on the CCB pointed to in the `UAGT_CAM_CCB` structure passed from the user process. The User Agent driver verifies that the `uagt_ccblen` is not greater than the maximum length for a CCB, checks that the XPT function code is valid, and checks that the Target ID and LUN specified are within the range allowed. The User Agent does not issue a `REQUEST SENSE` command in response to a `CHECK CONDITION` status. Autosensing is assumed to be enabled. The application program is responsible for

issuing a RELEASE SIM QUEUE CCB.

The following error codes are returned by the User Agent:

- EFAULT – An error occurred in copying to or from user space.
- EBUSY – Out of resources (the User Agent request table is full).
- EINVAL – An invalid target or LUN was passed to the User Agent driver, or the CCB copied from the user process contained an invalid parameter.

2.3 User Agent Data Structures

This section describes the data structures the User Agent uses.

2.3.1 The UAGT_CAM_CCB Data Structure

The User Agent SCSI device driver uses the UAGT_CAM_CCB data structure to communicate with the user processes requesting access to the SCSI/CAM subsystem.

The user process fills in the pointers in the UAGT_CAM_CCB data structure. The structure is copied into kernel space. The user process's CCB is copied into kernel space by the User Agent.

If necessary, the user data area and the sense data area are locked in memory. If the pointers are not needed with the requested CCB, the pointers must be set to NULL.

The CCB contains all the information necessary to execute the requested XPT function. The addresses in the CCB are used by the SIM and must be valid. The User Agent will not modify the corresponding pointers in the CCB.

The CCB definition is different for each of the following XPT functions supported by the User Agent SCSI device driver:

- XPT_NOOP – Execute nothing.
- XPT_SCSI_IO – Execute the requested SCSI IO.
- XPT_GDEV_TYPE – Get the device type information.
- XPT_PATH_INQ – Path inquiry.
- XPT_REL_SIMQ – Release the SIM queue that was frozen by a previous CHECK CONDITION status.
- XPT_SASYNC_CB – Set async callback parameters.
- XPT_SDEV_TYPE – Set the device type information.
- XPT_ABORT – Abort the selected CCB.
- XPT_RESET_BUS – Reset the SCSI bus.
- XPT_RESET_DEV – Reset the SCSI device, BDR.
- XPT_TERM_IO – Terminate the selected CCB.

If a signal is generated by the user process, the User Agent creates an XPT_ABORT CCB to abort the outstanding I/O and then waits for the completion of the I/O and notifies the user process when the aborted CCB is returned to the User Agent.

The UAGT_CAM_CCB structure is defined as follows:

```
typedef struct uagt_cam_ccb
{
    CCB_HEADER *uagt_ccb;          /* pointer to the users CCB */
    u_long uagt_ccblen;           /* length of the users CCB */
    u_char *uagt_buffer;          /* pointer for the data buffer */
    u_long uagt_bufllen;          /* length of user request */
    u_char *uagt_snsbuf;          /* pointer for the sense buffer */
    u_long uagt_snslen;           /* length of user's sense buffer */
    CDB_UN *uagt_cdb;             /* ptr for a CDB if not in CCB */
    u_long uagt_cdbllen;          /* CDB length if appropriate */
    u_long uagt_flags;            /* See below */
} UAGT_CAM_CCB;
```

2.3.1.1 The uagt_ccb Member

The `uagt_ccb` member contains a pointer to the user process's CCB that will be copied into kernel space.

2.3.1.2 The uagt_ccblen Member

The `uagt_ccblen` member contains the length of the user process's CCB.

2.3.1.3 The uagt_buffer Member

The `uagt_buffer` member contains a pointer to the user process's data buffer. This member is used only by the User Agent.

2.3.1.4 The uagt_bufllen Member

The `uagt_bufllen` member contains the length of the user process's data buffer. This member is used only by the User Agent.

2.3.1.5 The uagt_snsbuf Member

The `uagt_snsbuf` member contains a pointer to the user process's autosense data buffer. This member is used only by the User Agent.

2.3.1.6 The uagt_snslen Member

The `uagt_snslen` member contains the length of the user process's autosense data buffer. This member is used only by the User Agent.

2.3.1.7 The uagt_cdb Member

If the user process's CCB contains a pointer to a CDB, then the `uagt_cdb` also contains a pointer to a Command Descriptor Block (CDB) that is to be locked in memory. This member and the `uagt_cdbllen` member are used only by the User Agent driver. The CCB must also contain valid pointers and counts.

2.3.1.8 The uagt_cdbllen Member

The `uagt_cdbllen` contains the length of the Command Descriptor Block, if appropriate.

2.3.1.9 The `uagt_flags` Member

The `uagt_flags` contains the `UAGT_NO_INT_SLEEP` bit, which, if set, indicates that the User Agent should not sleep at an interruptible priority.

2.3.2 The `UAGT_CAM_SCAN` Data Structure

The User Agent SCSI device driver uses the `UAGT_CAM_SCAN` data structure to communicate with user level programs that need to have access to the CAM subsystem. The structure is copied into kernel space as part of the `ioctl` system call from user space for the `UAGT_CAM_SINGLE_SCAN` and `UAGT_CAM_FULL_SCAN` commands. The user program fills in the pointers in this structure and the User Agent SCSI device driver correctly fills in the corresponding pointers in the CCB.

The `UAGT_CAM_SCAN` structure is defined as follows:

```
typedef struct uagt_cam_scan {
    u_char  ucs_bus;           /* Bus id for scan */
    u_char  ucs_target;       /* Target id for scan */
    u_char  ucs_lun;          /* LUN for scan */
} UAGT_CAM_SCAN;
```

2.4 User Agent Routines

This section describes the User Agent routines supplied by Digital. Table 2-1 lists the name of each routine and gives a summary description of its function. The sections that follow contain a more detailed description of each User Agent routine. Descriptions of the routines with syntax information, in ULTRIX reference page format, are included in alphabetical order in Appendix C.

Table 2-1: User Agent Routines

Routine	Summary Description
<code>uagt_open</code>	handles the open of the User Agent driver
<code>uagt_close</code>	handles the close of the User Agent driver
<code>uagt_ioctl</code>	handles the <code>ioctl</code> system call for the User Agent driver

2.4.1 The `uagt_open` Routine

The `uagt_open` routine handles the open of the User Agent driver.

The character device special file name used for the open is `/dev/cam`.

2.4.2 The `uagt_close` Routine

The `uagt_close` routine handles the close of the User Agent driver. For the last close operation for the driver, if any queues are frozen, a `RELEASE SIM QUEUE` CCB is sent to the XPT layer for each frozen queue detected by the User Agent.

2.4.3 The `uagt_ioctl` Routine

The `uagt_ioctl` routine handles the `ioctl` system call for the User Agent driver. The `ioctl` commands supported are: `DEVIOCGET`, to obtain the User Agent driver's SCSI device status; `UAGT_CAM_IO`, the `ioctl` define for calls to the User Agent driver; `UAGT_CAM_SINGLE_SCAN`, to scan a bus, target, and LUN; and `UAGT_CAM_FULL_SCAN`, to scan a bus.

For SCSI I/O CCB requests, the user data area is locked before passing the CCB to the XPT. The User Agent sleeps waiting for the I/O to complete and issues a `ABORT CCB` if a signal is caught while sleeping.

2.5 Sample User Agent Drivers

Two sample User Agent driver programs follow. The first sample program uses the User Agent driver to perform a SCSI `INQUIRY` command to a device on a selected nexus.

The second sample program is a scanner control program that sets up a scanner, reads scan line data from the device, and writes the data to a file, using the User Agent driver.

Both programs are included with the USCA software and reside in the `/usr/examples` directory.

2.5.1 Sample User Agent Driver Inquiry Program

This section contains the User Agent sample inquiry application program, `caminq.c`, with annotations to the code. The user enters the string `inq` followed by the numbers identifying the bus, target, and LUN nexus to be checked for a valid device. If the device is valid, the `INQUIRY` data is displayed at the console. If the device is invalid, an error message appears.

2.5.1.1 The Include Files and Definitions Section

This section describes the portion of the User Agent sample inquiry application program that lists the `include` files, local definitions, and data initialization for the program.

```
/* ----- */
/* Include files needed for this program. */

#include <stdio.h>
#include <sys/file.h>
#include <sys/types.h>
#include <sys/ioctl.h>
#include <strings.h>
#include <ctype.h>
#include <sys/cam.h>          /* CAM defines from the CAM document */
#include <sys/dec_cam.h>     /* CAM defines for Digital CAM source files */
#include <sys/uagt.h>        /* CAM defines for the UAgt driver */
#include <sys/scsi_all.h>    /* CAM defines for ALL SCSI devices */
```

```

/* ----- */
/* Local defines */

#define INQUIRY_LEN    36    /* general inquiry length */ ❶

/* ----- */
/* Initialized and uninitialized data. */

u_char buf[ INQUIRY_LEN ]; ❷

```

- ❶ This line defines a constant of 36 bytes for the length of the inquiry expected by the user from the SCSI device.
- ❷ This line declares a global character array, buf, with a size of 36 bytes as defined by the INQUIRY_LEN constant.

2.5.1.2 The Main Program Section

This section describes the main program portion of the User Agent sample inquiry application program.

```

/* ----- */
/* The main code path. The CCB/CDB and UAGT_CAM_CCB are set up for
an INQUIRY command to the Bus/Target/Lun selected by the command
line arguments. The returned INQUIRY data is displayed to the
user if the status is valid. If the returned status indicates
an error, the error is reported instead of the INQUIRY data. */

main(argc, argv)
int argc;
char *argv[];
{

    extern void print_inq_data(); ❶
    extern void print_ccb_status();

    u_char id, targid, lun;    /* from the command line */
    int fd;                    /* unit number from the open */ ❷

    UAGT_CAM_CCB ua_ccb;      /* local uagt structure */ ❸
    CCB_SCSIIIO ccb;         /* local CCB */ ❹
    ALL_INQ_CDB *inq;        /* pointer for the CDB */ ❺

    /* Make sure that all the arguments are there. */ ❻

    if (argc != 4) {
        printf("SCSI INQ bus target lun\n");
        exit();
    }

    /* Convert the nexus information from the command line. */ ❼

    id    = atoi(argv[1]);
    targid = atoi(argv[2]);
    lun   = atoi(argv[3]);

```

- ❶ These two forward references define routines that are used later in the program to print out the INQUIRY data or to print out the CAM status if there was an error.
- ❷ The file descriptor for the User Agent driver returned by the open system call, which executes in Section 2.5.1.3.

- 3 This line declares an uninitialized local data structure, `ua_ccb`, of the type `UAGT_CAM_CCB`, which is defined in the file `/usr/sys/h/uagt.h`. This structure is copied from user space into kernel space as part of the `ioctl` system call. Section 2.5.1.7 describes this procedure.
- 4 This line declares an uninitialized local data structure, `ccb`, of the type `CCB SCSIIO`, which is defined in the file `/usr/sys/h/cam.h`. The members of this structure needed for the `XPT SCSI IO` request are filled in Section 2.5.1.4. The members of this structure needed for the `INQUIRY` command are filled in Section 2.5.1.5.
- 5 This line declares a pointer, `inq`, to a data structure, `ALL_INQ_CDB`, which is defined in the file `/usr/sys/h/scsi_all.h`. This structure is filled in Section 2.5.1.5.
- 6 This section of code makes sure the user entered the correct number of arguments. The user should have entered the string `inq`, followed by three numeric characters representing the bus, target, and LUN to be checked for a valid status.
- 7 This section of code converts the numeric characters entered and assigns them, in order, to bus, target, and LUN.

2.5.1.3 The User Agent Open Section

This section describes the portion of the User Agent sample inquiry application program where the User Agent is opened.

```

/* Open the User Agent driver and report any errors. */

if ((fd = open("/dev/cam", O_RDWR, 0)) < 0 ) 1
{
    perror("Error on CAM UAgt Open:");
    exit(1);
}

```

- 1 The program attempts to open the User Agent device special file, `/dev/cam`, with the `O_RDWR` flag, which allows reading and writing. If the file descriptor returned by the `open` system call indicates that the open failed by returning a negative value, `< 0`, the program reports an error and exits. Otherwise, the program opens the device.

2.5.1.4 Filling in XPT SCSI IO Request CCB_HEADER Fields

This section describes the portion of the User Agent sample inquiry application program where the members of the `CCB_HEADER` needed for an `XPT SCSI IO` request are filled in.

```

/* Set up the CCB for an XPT SCSI IO request. The INQUIRY command
   will be sent to the device, instead of sending an XPT_GDEV_TYPE. */

/* Set up the CAM header for the XPT SCSI IO function. */

ccb.cam_ch.my_addr = (struct ccb_header *)&ccb; /* "Its" address */ 1
ccb.cam_ch.cam_ccb_len = sizeof(CCB SCSIIO); /* a SCSI I/O CCB */
ccb.cam_ch.cam_func_code = XPT SCSI IO; /* the opcode */
ccb.cam_ch.cam_path_id = id; /* selected bus */ 2

```

```

ccb.cam_ch.cam_target_id = targid;          /* selected target */
ccb.cam_ch.cam_target_lun = lun;           /* selected lun */

/* The needed CAM flags are : CAM_DIR_IN - The data will come from
the target, CAM_DIS_AUTOSENSE - Do not issue a REQUEST SENSE packet
if there is an error. */

ccb.cam_ch.cam_flags = CAM_DIR_IN | CAM_DIS_AUTOSENSE; ③

```

- ① This section of code fills in some of the CCB_HEADER fields of the SCSI I/O CCB structure defined as `ccb`, for processing by the XPT layer. The structure was declared in Section 2.5.1.2.
- ② These three lines assign the bus, target, and LUN to the corresponding fields in the CCB_HEADER structure.
- ③ This line sets the necessary CAM flags for the INQUIRY: `CAM_DIR_IN`, which specifies that the direction of the data is incoming; and `CAM_DIS_AUTOSENSE`, which disables the autosense feature. These flags are defined in `/usr/sys/h/cam.h`.

2.5.1.5 Filling in INQUIRY Command CCB_HEADER Fields

This section describes the portion of the User Agent sample inquiry application program where the members of the CCB_HEADER needed for the INQUIRY command are filled in. This is the structure that is passed to the XPT layer by the User Agent driver.

```

/* Set up the rest of the CCB for the INQUIRY command. */

ccb.cam_data_ptr = &buf[0];                /* where the data goes */ ①
ccb.cam_dxfer_len = INQUIRY_LEN;           /* how much data */
ccb.cam_timeout = CAM_TIME_DEFAULT; /* use the default timeout */ ②
ccb.cam_cdb_len = sizeof( ALL_INQ_CDB ); /* how many bytes for inquiry */ ③

/* Use a local pointer to access the particular fields in the INQUIRY
CDB. */

inq = (ALL_INQ_CDB *)&ccb.cam_cdb_io.cam_cdb_bytes[0]; ④

inq->opcode = ALL_INQ_OP;                  /* inquiry command */ ⑤
inq->evpd = 0;                             /* no product data */
inq->lun = 0;                               /* not used in SCSI-2 */
inq->page = 0;                             /* no product pages */
inq->alloc_len = INQUIRY_LEN;              /* for the buffer space */
inq->control = 0;                          /* no control flags */

```

- ① This line sets the `cam_data_ptr` member of the SCSI I/O CCB structure to the address of the first element in the `buf` array, which is defined as 36 bytes in Section 2.5.1.1.
- ② This line specifies using the default timeout, which is the value assigned to the `CAM_TIME_DEFAULT` constant. This constant is set in the `/usr/sys/h/cam.h` file to indicate that the SIM layer's default timeout is to be used. The current value of the SIM layer's default timeout is five seconds.
- ③ This line sets the length of the Command Descriptor Block in the CCB to the length of an inquiry CDB.. The inquiry CDB, `ALL_INQ_CDB`, which is defined in the `/usr/sys/h/scsi_all.h` file, is six bytes.

- ④ This line assigns the `inq` pointer, which is type `ALL_INQ_CDB`, to the address of the `cam_cdb_bytes` member of the `CDB_UN` union. This union is defined in `/usr/sys/h/cam.h` as the `cam_cdb_io` member of the SCSI I/O CCB structure.
- ⑤ These lines use the `inq` pointer to access the fields of the `cam_cdb_bytes` array within the `ccb` structure as though it is an `ALL_INQ_CDB` structure. The `ALL_INQ_CDB` structure is defined in the `/usr/sys/h/scsi_all.h` file.

2.5.1.6 Filling in the UAGT_CAM_CCB Fields

This section describes the portion of the User Agent sample inquiry application program where the members of the `UAGT_CAM_CCB` structure are filled in for the `ioctl` call. This is the structure that is passed to the User Agent driver.

```

/* Set up the fields for the User Agent ioctl call. */

ua_ccb.uagt_ccb = (CCB_HEADER *)&ccb;      /* where the CCB is */ ①
ua_ccb.uagt_ccblen = sizeof(CCB_SCSIIO); /* how many bytes to pull in */ ②
ua_ccb.uagt_buffer = &buf[0];             /* where the data goes */ ③
ua_ccb.uagt_buflen = INQUIRY_LEN;         /* how much data */ ④

ua_ccb.uagt_snsbuf = (u_char *)NULL;      /* no Autosense data */ ⑤
ua_ccb.uagt_snslen = 0;                   /* no Autosense data */
ua_ccb.uagt_cdb = (CDB_UN *)NULL;        /* CDB is in the CCB */ ⑥
ua_ccb.uagt_cdblen = 0;                   /* CDB is in the CCB */

```

- ① This line initializes the `uagt_ccb` member of the `ua_ccb` structure with the address of the local `CCB_HEADER` structure, `ccb`.
- ② This line sets the length of the `uagt_ccblen` member to the length of the SCSI I/O CCB structure that will be used for this call.
- ③ This line initializes the `uagt_buffer` member with the user space address of the array `buf`, which was allocated 36 bytes in Section 2.5.1.1.
- ④ This line initializes the `uagt_buflen` member with the value of the constant `INQUIRY_LEN`, which is the number of bytes of inquiry data that will be returned.
- ⑤ These two lines reflect that the autosense features are turned off in the CAM flags.
- ⑥ These two lines reflect that the Command Descriptor Block information is in the SCSI I/O CCB structure filled in Section 2.5.1.4.

2.5.1.7 Sending the CCB to the CAM Subsystem

This section describes the portion of the User Agent sample inquiry application program where the `ccb` is sent to the CAM subsystem.

```

/* Send the CCB to the CAM subsystem using the User Agent driver,
and report any errors. */

if( ioctl(fd, UAGT_CAM_IO, (caddr_t)&ua_ccb) < 0 ) ①
{
    perror("Error on CAM UAGT ioctl:");
    close(fd); /* close the CAM file */ ②
    exit(1);
}

```

```

}

/* If the CCB completed successfully, then print out the INQUIRY
information; if not, report the error. */

if (ccb.cam_ch.cam_status != CAM_REQ_CMP)
{
    print_ccb_status( &(ccb.cam_ch) ); /* report the error values */ ③
}
else
{
    print_inq_data( &buf[0] ); /* report the INQUIRY info */ ④
}
}

```

- ① This line passes the local UAGT_CAM_CCB structure, `ua_ccb`, to the User Agent driver, using the `ioctl` system call. The arguments passed are the file descriptor returned by the `open` system call; the User Agent `ioctl` command, `UAGT_CAM_IO`, which is defined in the `/usr/sys/h/uagt.h` file; and the contents of the `ua_ccb` structure. The User Agent driver copies in the SCSI I/O CCB and sends it to the XPT layer. When the I/O completes, the User Agent returns to the application program, returning status within the `ua_ccb` structure.
- ② If the `ioctl` call fails, this code displays an error message, closes the device special file, `/dev/cam`, and exits.
- ③ If the CAM status is anything other than `CAM_REQ_CMP`, indicating the request completed, an error message is printed indicating the CAM status returned.
- ④ If the request completes, the `print_inq_data` routine is called to display the INQUIRY data.

2.5.1.8 Print INQUIRY Data Routine

This section of the User Agent sample inquiry application program converts the rest of the fields of inquiry data to a human-readable form and sends it to the user's screen.

```

/* Define the type and qualifier string arrays as globals to allow for
compile-time initialization of the information. */

caddr_t periph_type[] = { /* Peripheral Device Type */
    "Direct-access", /* 00h */
    "Sequential-access", /* 01h */
    "Printer", /* 02h */
    "Processor", /* 03h */
    "Write-once", /* 04h */
    "CD-ROM", /* 05h */
    "Scanner", /* 06h */
    "Optical memory", /* 07h */
    "Medium changer", /* 08h */
    "Communications", /* 09h */
    "Graphics Arts" /* 0Ah */
}; /* Same as 0A */ /* 0Bh */
/* Reserved */ /* 0Ch - 1Eh */
/* Unknown */ /* 1Fh */

caddr_t periph_qual[] = { /* Peripheral Qualifier */
    "Device supported, is (may be) connected", /* 000b */
    "Device supported, is not connected", /* 001b */

```

```

        "<Reserved qualifier>",                /* 010b */
        "No device supported for this Lun"     /* 011b */
    };    /* Vendor specific */                /* 1xxb */

/* ----- */
/* Local routine to print out the INQUIRY data to the user. */

void
print_inq_data( ip ) ①
    ALL_INQ_DATA *ip;
{
    char vendor_id[9]; ②
    char prod_id[17];
    char prod_rev_lvl[5];
    caddr_t periph_type_ptr, periph_qual_ptr;
    int ptype;

    /* Make local copies of the ASCII text, so that it can be NULL
       terminated for the printf() routine. */

    strncpy(vendor_id, (caddr_t)ip->vid, 8); ③
    vendor_id[8] = '\0';
    strncpy(prod_id, (caddr_t)ip->pid, 16);
    prod_id[16] = '\0';
    strncpy(prod_rev_lvl, (caddr_t)ip->revlevel, 4);
    prod_rev_lvl[4] = '\0';

    /* Convert sparse device type and qualifier values into strings */

    ptype = ip->dtype; ④
    periph_type_ptr = "Reserved";
    if (ptype == 0x1F) periph_type_ptr = "Unknown";
    if (ptype == 0x0B) ptype = 0x0A;
    if (ptype <= 0x0A) periph_type_ptr = periph_type[ptype];

    periph_qual_ptr = "<Vendor Specific qualifier>";
    if (ip->pqual <= 3) periph_qual_ptr = periph_qual[ip->pqual];

    printf("Periph Device Type    = 0x%X = %s Device\n", ⑤
           ip->dtype, periph_type_ptr);
    printf("Periph Qualifier      = 0x%X = %s\n", ip->pqual,
           periph_qual_ptr);
    printf("Device Type Modifier = 0x%X\tRMB = 0x%X = Medium %s\n",
           ip->dmodify, ip->rmb, (ip->rmb?"is removable":
           "is not removable"));
    printf("ANSI Version = 0x%X\tECMA Version = 0x%X\n",
           ip->ansi, ip->ecma);
    printf("ISO Version = 0x%X\tAENC = 0x%X\tTrmIOP = 0x%X\n",
           ip->iso, ip->aenc, ip->trmiop);
    printf("Response Data Format    = 0x%X\tAddit Length = 0x%d\n",
           ip->rdf, ip->addlen);
    printf("SftRe = 0x%XCmdQue = 0x%X\tLinked = 0x%X\tSync = 0x%X\n",
           ip->sftre, ip->cmdque, ip->linked, ip->sync);
    printf("Wbus16 = 0x%X\tWbus32 = 0x%X\tRelAdr = 0x%X\n",
           ip->wbus16, ip->wbus32, ip->reladdr);
    printf("Vendor Identification = %s\nProduct Identification = %s\n",
           vendor_id, prod_id );
    printf("Product Revision Level = %s\n\n",
           prod_rev_lvl);
    fflush(stdout); ⑥
}

```

- 1 This line declares the `print_inq_data` function that prints out the INQUIRY data for a valid nexus. The function's argument, `ip`, is a pointer to the `ALL_INQ_DATA` structure defined in the `/usr/sys/h/scsi_all.h` file.
- 2 These three lines declare three character arrays to contain the Vendor ID, the Product ID, and the Product revision level to be displayed. Each array is declared with one extra byte to hold the NULL string terminator.
- 3 This section copies the `ALL_INQ_DATA` member, `vid`, into the local array `vendor_id`; the `ALL_INQ_DATA` member, `pid`, into the local array `prod_id`; and the `ALL_INQ_DATA` member, `revlevel`, into the local array, `prod_rev_lvl`. The arrays are passed to the standard C library function, `strncpy`, which copies the data and then terminates each string copy with a NULL, so that it can be output to the `printf` function in the format desired.
- 4 This section converts the device type and qualifier values into human-readable words. The conversions are performed on defined and undefined numeric combinations.
- 5 This section decodes and displays the inquiry data as hexadecimal numbers and strings.
- 6 This line calls the standard C I/O function, `fflush`, to write out the data from the internal buffers.

2.5.1.9 Print CAM Status Routine

This section describes the portion of the User Agent sample inquiry application program that defines the routine to print out the CAM status for an invalid nexus.

```

/* ----- */
/* Local routines and data structure to report in text and Hex
form the returned CAM status. */

struct cam_statustable { 1
    u_char    cam_status;
    caddr_t   status_msg;
} cam_statustable[] = { 2
    { CAM_REQ_INPROG,      "CCB request is in progress"      },
    { CAM_REQ_CMP ,       "CCB request completed w/out error"  },
    { CAM_REQ_ABORTED,    "CCB request aborted by the host"  },
    { CAM_UA_ABORT,       "Unable to Abort CCB request"      },
    { CAM_REQ_CMP_ERR,    "CCB request completed with an err"  },
    { CAM_BUSY,           "CAM subsystem is busy"                    },
    { CAM_REQ_INVALID,    "CCB request is invalid"          },
    { CAM_PATH_INVALID,   "Bus ID supplied is invalid"      },
    { CAM_DEV_NOT_THERE,  "Device not installed/there"      },
    { CAM_UA_TERMIO,      "Unable to Terminate I/O CCB req"  },
    { CAM_SEL_TIMEOUT,    "Target selection timeout"        },
    { CAM_CMD_TIMEOUT,    "Command timeout"                },
    { CAM_MSG_REJECT_REC, "Reject received"                          },
    { CAM_SCSI_BUS_RESET, "Bus reset sent/received"        },
    { CAM_UNCOR_PARITY,   "Parity error occured"          },
    { CAM_AUTOSENSE_FAIL, "Request sense cmd fail"          },
    { CAM_NO_HBA,         "No HBA detected Error"            },
    { CAM_DATA_RUN_ERR,   "Overrun/underrun error"          },
    { CAM_UNEXP_BUSFREE,  "BUS free"                          },
    { CAM_SEQUENCE_FAIL,  "Bus phase sequence failure"      },
    { CAM_CCB_LEN_ERR,    "CCB length supplied is inadquate"  },
    { CAM_PROVIDE_FAIL,   "To provide requ. capability"      },
    { CAM_BDR_SENT,       "A SCSI BDR msg was sent to target"    },
    { CAM_REQ_TERMIO,     "CCB request terminated by the host"  },

```

```

        { CAM_LUN_INVALID,          "LUN supplied is invalid"          },
        { CAM_TID_INVALID,         "Target ID supplied is invalid"    },
        { CAM_FUNC_NOTAVAIL,       "Requested function is not available" },
        { CAM_NO_NEXUS,            "Nexus is not established"         },
        { CAM_IID_INVALID,         "The initiator ID is invalid"      },
        { CAM_CDB_RECVD,           "The SCSI CDB has been received"   },
        { CAM_SCSI_BUSY,           "SCSI bus busy"                    },
        { CAM_SIM_QFRZN,           "The SIM queue is frozen"          },
        { CAM_AUTOSNS_VALID,       "Autosense data valid for target"  }
};
int cam_statusentrys = sizeof(cam_statustable) / \
                      sizeof(cam_statustable[0]); ③

char *
camstatus( cam_status ) ④
{
    register u_char cam_status;

    {
        register struct cam_statustable *cst = cam_statustable; ⑤
        register entrys;

        for( entrys = 0; entrys < cam_statusentrys; cst++ ) { ⑥
            if( cst->cam_status == cam_status ) {
                return( cst->status_msg );
            }
        }
        return( "Unknown CAM Status" );
    }
}

void
print_ccb_status(cp) ⑦
CCB_HEADER *cp;
{
    printf( "cam_status = 0x%X\t (%s%s%s)\n", cp->cam_status,
           ((cp->cam_status & CAM_AUTOSNS_VALID) ? "AutoSns Valid-" : " " ),
           ((cp->cam_status & CAM_SIM_QFRZN) ? "SIM Q Frozen-" : " " ),
           camstatus( cp->cam_status & CAM_STATUS_MASK ));
    fflush(stdout); ⑧
}

```

- ① This line defines an array of structures. It is declared as a global array to allow compile-time initialization. Each structure element of the array contains two members, `cam_status`, the CAM status code, and `status_msg`, a brief description of the meaning of the status code. The CAM status codes and messages are defined in the `/usr/sys/h/cam.h` file.
- ② These lines initialize the CAM status array with the status values and their text equivalents.
- ③ This line declares an integer variable whose contents equal the size of the total CAM status array divided by the size of an individual array element. This integer is the number of the element in the array.
- ④ The next two lines define a function that returns a pointer to a text string with the `cam_status` field of the `CCB_HEADER` as an argument. The `cam_status` member is declared as a register variable so that its values are stored in a machine register for efficiency.
- ⑤ This line declares a register structure pointer to point to each element of the CAM status array and initializes it to point to the beginning of the CAM status array. A local register variable, `entrys`, will be used to traverse the CAM status array.
- ⑥ This section of code examines each element in the array, incrementing `cst` until a match between the status from the CCB and a status value in the array is found,

in which case the address of the CAM status description string, `status_msg`, is returned. If all the elements are examined without a match, the "Unknown CAM Status" message address is returned.

- 7 The next two lines define a routine that uses a pointer to the `CCB_HEADER` structure of the `INQUIRY` CCB and calls the C library routine, `printf`, to print out the hexadecimal value and the appropriate description of the CAM status returned.
- 8 This line calls the standard C I/O function, `fflush`, to write out the data from the internal buffers.

2.5.1.10 Sample Output for a Valid Nexus

This section contains an example of the output of the User Agent sample inquiry application program when the user enters a valid nexus.

```
#inq 0 0 0
```

```
Periph Device Type = 0x0          Periph Qualifier = 0x0 1
Device Type Modifier = 0x0        RMB = 0x0
ANSI Version = 0x1                ECMA Version = 0x0
ISO Version = 0x0                 AENC = 0x0          TrmIOP = 0x0
Response Data Format = 0x1         Addit Length = 0x31
SftRe = 0x0      CmdQue = 0x0     Linked = 0x0       Sync = 0x1
Wbus16 = 0x0     Wbus32 = 0x0     RelAdr = 0x0
Vendor ID = DEC 2
Product ID = RZ56      (C) DEC 3
Product Rev Level = 0300 4
```

- 1 See the American National Standard for Information Systems, *Small Computer Systems Interface - 2 (SCSI - 2)*, X3T9/89-042 for a description of each of the fields of the inquiry data returned.
- 2 This line shows the value of the `vendor_id` variable declared in the `print_inq_data` routine in Section 2.5.1.8 as a local copy of the text string.
- 3 This line shows the value of the `prod_id` variable declared in the `print_inq_data` routine in Section 2.5.1.8 as a local copy of the text string.
- 4 This line shows the value of the `prod_rev_lvl` variable declared in the `print_inq_data` routine in Section 2.5.1.8 as a local copy of the text string.

2.5.1.11 Sample Output for an Invalid Nexus

This section contains an example of the output of the User Agent sample inquiry application program when the user enters an invalid nexus.

```
#inq 0 2 0
```

```
cam_status = 0x4A          (SIM Q Frozen-Target selection timeout) 1
```

- 1 This line shows that the contents of the `cam_status` member of the `CCB_HEADER` structure returned was `CAM_SIM_QFRZN`, which indicates a lack of response from the specified nexus. See the `cam_statustable` in Section 2.5.1.9.

2.5.2 Sample User Agent Scanner Driver Program

This section contains the User Agent sample scanner program, `cscan.c`, with annotations to the code. It also contains the `cscan.h` file, which defines the `WINDOW_PARAM_BLOCK` structure used in the program.

2.5.2.1 Scanner Program Header File

This section describes the header file, `cscan.h`, that contains definitions of structures for the program to use.

```
/* cscan.h Header file for cscan.c (CAM Scanner driver) 28-Oct-1991 */

/* Scanner Window Parameter Block definition; all multi-byte quantities
   are defined as unsigned bytes due to the need to store the values in
   swapped order. */

typedef struct {
    u_char rsvd1[6]; /* Reserved bytes in Header: Must Be Zero */
    u_char WDBLen[2]; /* Number of Window Parameter bytes following */
    u_char WID; /* Window ID: Must Be Zero */
    u_char rsvd2; /* Reserved bytes in Header: Must Be Zero */
    u_char XRes[2]; /* X-axis resolution: MUST be same as YRes */
    u_char YRes[2]; /* Y-axis resolution: MUST be same as XRes */
    u_char UpLeftX[4]; /* Upper left X positon of scan window */
    u_char UpLeftY[4]; /* Upper left Y positon of scan window */
    u_char Width[4]; /* Scan width (Y-axis length) */
    u_char Length[4]; /* Scan length (X-axis length) */
    u_char Bright; /* Brightness: Must Be Zero */
    u_char Thresh; /* Threshold: Must Be Zero */
    u_char Contrast; /* Contrast: Must Be Zero */
    u_char ImgTyp; /* Image type: 0 = bi-level mono; 2 = multi-level
                   mono; 3 = bi-level full color; 5 = multi-
                   level full color; others reserved */
    u_char PixBits; /* Bits per pixel: 1 = bi-level; 4 = 16 shades;
                   8 = 256 shades; others reserved */
    u_char HalfTone[2]; /* Halftone Pattern: Must Be Zero */
    u_char PadTyp; /* Padding type for non-byte pixels: MUST BE 1 */
    u_char rsvd3[4]; /* Reserved bits: Must Be Zero */
    u_char RevImg; /* 0 = normal image; 1 = reverse image */
    u_char BitOrder[2]; /* Bit ordering: Must Be Zero */
    u_char CompTyp; /* Compression type: Must Be Zero */
    u_char CompArg; /* Compression argument: Must Be Zero */
    u_char rsvd4[6]; /* Reserved: Must Be Zero */
    u_char HdrSel; /* Header select (return with data): 0 = no header;
                   1 = return header with data; others reserved */
    u_char ColorSel; /* Color select (selects color to use when doing a
                     mono-color scan): 0 = default to Green; 1 =
                     scan using Red; 2 = scan using Green; 3 =
                     scan using Blue; others reserved */
    u_char ImgCorr; /* Image data correction method: 0 = default to
                     normal; 1 = soft image; 2 = enhance (low);
                     3 = enhance (high); others reserved */
    u_char ThreshR; /* Threshold level, Red: 0 = default level */
    u_char ThreshG; /* Threshold level, Green: 0 = default level */
    u_char ThreshB; /* Threshold level, Blue: 0 = default level */
    u_char ShtTyp; /* Sheet type: 0 = reflection; 1 = transparency */
    u_char rsvd5[3]; /* Reserved bits: Must Be Zero */
    u_char ShtDen; /* Sheet density (transparency): 0 = normal; 1 =
                   light; 2 = dark; others reserved */
}WINDOW_PARAM_BLOCK;
```

- 1 The length in bytes of a single scan window descriptor. The first 48 bytes are defined in the American National Standard for Information Systems, *Small Computer Systems Interface - 2* (SCSI - 2), X3T9/89-042 and the remaining bytes are vendor-specific. The specific structure members used may depend on the scanner device.

2.5.2.2 The Include Files Section

This section, which is the beginning of the `cscan` program, describes the portion of the User Agent sample scanner program that lists the `include` files for the program.

```
/* ----- */
/* Include files needed for this program. */

#include <stdio.h>
#include <unistd.h>
#include <sys/file.h>
#include <sys/types.h>
#include <sys/ioctl.h>
#include <sys/uio.h>
#include <strings.h>
#include <ctype.h>
#include <math.h>
#include <sys/cam.h>          /* CAM defines from the CAM document */
#include <sys/dec_cam.h>     /* CAM defines for Digital CAM source files */
#include <sys/uagt.h>        /* CAM defines for the UAgt driver */
#include <sys/scsi_all.h>    /* CAM defines for ALL SCSI devices */
#include "cscan.h"          /* Scanner structure definitions */
```

2.5.2.3 The CDB Setup Section

This section describes the portion of the User Agent sample scanner program that defines the CDBs for the program.

```
/* The Define Window Parameters CDB (10 bytes). */

typedef struct {
    u_char opcode;          /* 24 hex */
    u_char      : 5,        /* 5 bits reserved */
    u_char      lun      : 3; /* logical unit number */
    u_char      : 8;        /* Reserved byte */
    u_char      : 8;        /* Reserved byte */
    u_char      : 8;        /* Reserved byte */
    u_char      : 8;        /* Reserved byte */
    u_char param_len2;      /* MSB parameter list length */
    u_char param_len1;      /* parameter list length */
    u_char param_len0;      /* LSB parameter list length */
    u_char control;        /* The control byte */
}SCAN_DEF_WIN_CDB;

/* The Define Window Parameters op code */

#define SCAN_DEF_WIN_OP          0x24

/* The Read (data or gamma table) CDB (10 bytes). */

typedef struct {
    u_char opcode;          /* 28 hex */
    u_char      : 5,        /* 5 bits reserved */
    u_char      lun      : 3; /* logical unit number */
    u_char      tran_type; /* transfer data type: */
}
```

```

                                /* 0=data, 3=gamma          */ ②
    u_char          : 8;      /* Reserved byte          */
    u_char tran_id1; /* MSB transfer identification */ ③
    u_char tran_id2; /* LSB trans id:          */
                                /* 0 =data, 1/2/3= gamma   */
    u_char param_len2; /* MSB parameter list length */
    u_char param_len1; /* parameter list length    */
    u_char param_len0; /* LSB parameter list length */
    u_char control;  /* The control byte         */
}SCAN_READ_CDB;

/* The Read (data or gamma table) op code */

#define SCAN_READ_OP          0x28

```

- ① The parameter list length members specify the number of bytes sent during the DATAOUT phase. The parameters are usually mode parameters, diagnostic parameters, and log parameters that are sent to a target. If set to 0 (zero), no data is to be transferred.
- ② The types of data that are to be read. The choices are: image data scan lines or gamma correction table data.
- ③ These two bytes are used with the transfer type byte to indicate that the data to be read is image scan lines, 0 (zero), or one of the following types of gamma correction table data: red, 1; green, 2; or blue, 3.

2.5.2.4 The Definitions Section

This section describes the portion of the User Agent sample scanner program that specifies the local definitions and initializes data.

```

/* ----- */
/* Local defines */
#define SENSE_LEN18 /* max sense length from scanner */ ①

/* ----- */
/* Initialized and uninitialized data. */

u_char sense[ SENSE_LEN ]; ②

```

- ① This line defines a constant of 18 bytes for the length of the sense data from the scanner.
- ② This line declares a character array, `sense`, with a size of 18 bytes as defined by the `SENSE_LEN` constant.

2.5.2.5 The Main Program Section

This section describes the main program portion of the User Agent sample scanner program.

```

/* ----- */
/* The main code path. The CCB/CDB and UAGT_CAM_CCB are set up for the
   DEFINE WINDOW PARAMETERS and READ commands to the Bus/Target/LUN. */

main(argc, argv, envp)
int argc;
char *argv[];

```

```

char *envp[];
{

/* ----- */
/* Local variables and structures */

extern void clear_mem(); 1
extern void swap_short_store();
extern void swap_long_store();

u_char id, targid, lun;          /* from envir variable SCAN-NEXUS */ 2
char *cp;
int nexus;

int fd;                          /* unit number for the CAM open */ 3
int od;                          /* unit number for the file open */ 4
char FileHead[200];             /* buffer for file header info */
int i, n;
u_char *bp;                     /* general usage byte pointer */
int retry_cnt;                  /* error retry counter */
int reset_flag;                 /* flag to indicate reset tried */

double Xwid, Ylen;              /* scan area in inches */ 5
u_short WXYRes;                 /* variables for window calculations */
u_long WWidth, WLength, WinPix, LineBytes, TotalBytes; 6
u_char WHdrSel; 7

UAGT_CAM_CCB ua_ccb_sim_rel; /* local uagt structure */ 8
CCB_RELSIM ccb_sim_rel;       /* local CCB */ 9
UAGT_CAM_CCB ua_ccb_reset_dev; /* local uagt structure */ 10
CCB_RESETDEV ccb_reset_dev;   /* local CCB */ 11

UAGT_CAM_CCB ua_ccb;          /* local uagt structure */ 12
CCB_SCSSIO ccb;              /* local CCB */ 13
SCAN_DEF_WIN_CDB *win;       /* pointer for window def CDB */ 14
SCAN_READ_CDB *read;        /* pointer for read CDB */ 15

WINDOW_PARAM_BLOCK Window;    /* parameter block, window def */ 16

u_char ReadData[ 400*12*3 ]; /* Max bytes/line */ 17
u_char *RDRp, *RDGp, *RDBp; /* Red, Green, Blue pointers */
u_char WriteData[ 400*12*3 ]; /* Max bytes/line */ 18
u_char *WDP;                 /* WriteData pointer */

```

- 1 These forward references declare routines that are used later in the program. The routines are defined in Section 2.5.2.14.
- 2 The bus, target, and LUN are specified in octal digits in the SCAN-NEXUS environment variable. The value for the LUN should be 0 (zero).
- 3 The file descriptor for the User Agent driver returned by the open system call, which executes in Section 2.5.2.7.
- 4 The file descriptor for the output file returned by the open system call, which executes in Section 2.5.2.7.
- 5 Real values to contain the X and Y dimensions of the scan window.
- 6 Variables to hold calculated information about the scan window.
- 7 Variable to hold the flag byte indicating whether a window header is to be returned with the data. The value of the variable is stored in the HdrSel member of the WINDOW_PARAM_BLOCK structure is set to 1. The WINDOW_PARAM_BLOCK is defined in Section 2.5.2.1.

- 8 This line declares an uninitialized local data structure, `ua_ccb_sim_rel`, to be used for the RELEASE SIM QUEUE CCB command.
- 9 This line declares an uninitialized local data structure, `ccb_sim_rel`, of the type `CCB_RELSIM`, which is defined in the file `/usr/sys/h/cam.h`.
- 10 This line declares an uninitialized local data structure, `ua_ccb_reset_dev`, to be used for the BUS DEVICE RESET CCB command.
- 11 This line declares an uninitialized local data structure, `ccb_reset_dev`, of the type `CCB_RESETDEV`, which is defined in the file `/usr/sys/h/cam.h`.
- 12 This line declares an uninitialized local data structure, `ua_ccb`, of the type `UAGT_CAM_CCB`, which is defined in the file `/usr/sys/h/uagt.h`. This structure is copied from user space into kernel space as part of the `ioctl` system call.
- 13 This line declares an uninitialized local data structure, `ccb`, of the type `CCB_SCSIIO`, which is defined in the file `/usr/sys/h/cam.h`.
- 14 This line declares a pointer to the data structure `SCAN_DEF_WIN_CDB`, which is defined in Section 2.5.2.3.
- 15 This line declares a pointer to the data structure `SCAN_READ_CDB`, which is defined in Section 2.5.2.3.
- 16 This line declares an uninitialized local data structure, `Window`, of the type `WINDOW_PARAM_BLOCK`, which is defined in Section 2.5.2.1.
- 17 This line declares an array to contain a scan line of the maximum size that can be read, which is 14,400 bytes. This array is used to read a scan line from the scanner.
- 18 This line declares an array large enough to contain the maximum-size scan line, which is 14,400 bytes. This array is used to write the scan line, converted to 3-byte pixels, to the output file.

2.5.2.6 The Nexus Conversion Section

This section describes the portion of the User Agent sample scanner program where the nexus information contained in the SCAN-NEXUS environment variable is converted to the values for bus, target, and LUN.

```

/* Find the environment variable SCAN-NEXUS. If not found, return
error message. If found, convert the nexus information from the
variable to bus, target ID and LUN values. Return an error
message if any of the values are not octal digits. */

nexus = 0; /* Reset valid data flag */
for (i=0; envp[i] != NULL; i++)
{
    cp = envp[i]; 1
    if (strncmp(cp,"SCAN-NEXUS=",11) == 0)/* Find environment variable */
    {
        nexus = -1; /* Set tentative flag */
        cp += 11; /* Advance to data */
        if (*cp < '0' || *cp > '7') break; 2
        id = (u_char)(*cp++) - (u_char)('0');
        if (*cp++ != ' ') break;
        if (*cp < '0' || *cp > '7') break;
        targid = (u_char)(*cp++) - (u_char)('0');
        if (*cp++ != ' ') break;
    }
}

```

```

        if (*cp < '0' || *cp > '7') break;
        lun = (u_char)(*cp) - (u_char)('0');
        nexus = 1;                /* Set good data flag */
    }
}
if (nexus == -1) ❸
{
    printf("Invalid SCAN-NEXUS; set to octal digits 'bus target lun'\n");
    exit(1);
}
if (nexus == 0) ❹
{
    printf("Set environment variable SCAN-NEXUS to 'bus target lun' (octal\
        digits)\n\n");
    exit(1);
}
printf("Scanner nexus set to: bus %d, target %d, LUN %d\n\n", id, \
        targid, lun); ❺

```

- ❶ This section scans through all of the environment variables passed to the program by the system, looking for the variable SCAN-NEXUS.
- ❷ This section checks to make sure SCAN-NEXUS contains octal digits for bus, target, and LUN.
- ❸ This error message appears if the digits are not octal.
- ❹ This error message appears if SCAN-NEXUS is not set.
- ❺ This message displays the values for bus, target, and LUN.

2.5.2.7 The Parameter Assignment Section

This section describes the portion of the User Agent sample scanner program that assigns the parameters entered by the user on the command line to the appropriate variables and opens the necessary files.

```

/* Make sure that the correct number of arguments are present.
   If not, return an error message with usage information. */

if (argc != 5) { ❶
    printf("Usage is: cscan XYres Xwid Ylen out_file\n");
    printf(" XYres is integer pix/inch; Xwid & Ylen are real \
        inches\n\n");
    exit();
}

/* Convert the parameter information from the command line. */

WXYRes = atoi(argv[1]);        /* X & Y resolution */
Xwid   = atof(argv[2]);        /* X width in inches */
Ylen   = atof(argv[3]);        /* Y length in inches */

/* Verify that the X & Y resolution is one of the legal values */

switch (WXYRes) ❷
{
    case 25:
    case 150:
    case 200:
    case 300:
    case 400:
        break;

```

```

        default:
            printf("Illegal X & Y resolution; must be 25, 150, 200, \
                    300, 400\n");
        exit(1);
    }

/* Verify that the X width is positive and less than 11.69 inches */ ❸

    if (Xwid < 0 || Xwid > 11.69)
    {
        printf("X width must be positive and less than 11.69 inches\n");
        exit(1);
    }

/* Verify that the Y length is positive and less than 17.00 inches */

    if (Ylen < 0 || Ylen > 17.00)
    {
        printf("Y length must be positive and less than 17.00 inches\n");
        exit(1);
    }

/* Open the output file ("truncating" it if it exists) and report */
/* any errors. */ ❹

    if ((od = open(argv[4], O_WRONLY|O_CREAT|O_TRUNC, 0666)) < 0 )
    {
        perror("Error on Output File Open");
        exit(1);
    }

/* Open the User Agent driver and report any errors. */

    if ((fd = open("/dev/cam", O_RDWR, 0)) < 0 )
    {
        perror("Error on CAM UAgt Open");
        exit(1);
    }

```

- ❶ The user enters the X and Y scan resolutions in pixels per inch, the width (X) and length (Y) of the scan area in inches, and the name of the output file on the command line.
- ❷ This section checks for the legal scan resolutions the user can enter.
- ❸ These two sections check that the user entered legal values for X and Y.
- ❹ These two sections open the User Agent driver and the output file.

2.5.2.8 The Data Structure Setup Section

This section describes the portion of the User Agent sample scanner program that sets up the data structures for the XPT_REL_SIMQ and XPT_RESET_DEV commands.

```

/* -- Begin static setups of SIMQ Release and Device Reset structures -- */

/* Set up the CCB for an XPT_REL_SIMQ request. */

/* Set up the CAM header for the XPT_REL_SIMQ function. */

    ccb_sim_rel.cam_ch.my_addr = (struct ccb_header *)&ccb_sim_rel;
                                /* "Its" address */ ❶
    ccb_sim_rel.cam_ch.cam_ccb_len = sizeof(CCB_RELSIM); /* a SIMQ release */

```

```

    ccb_sim_rel.cam_ch.cam_func_code = XPT_REL_SIMQ; /* the opcode */
    ccb_sim_rel.cam_ch.cam_path_id   = id;          /* selected bus */
    ccb_sim_rel.cam_ch.cam_target_id = targid;     /* selected target */
    ccb_sim_rel.cam_ch.cam_target_lun = lun;       /* selected lun */

/* The needed CAM flags are: CAM_DIR_NONE - No data will be transferred. */

    ccb_sim_rel.cam_ch.cam_flags = CAM_DIR_NONE;

/* Set up the fields for the User Agent Ioctl call. */

    ua_ccb_sim_rel.uagt_ccb = (CCB_HEADER *)&ccb_sim_rel;
                                /* where the CCB is */ ②
    ua_ccb_sim_rel.uagt_ccblen = sizeof(CCB_RELSIM); /* bytes in CCB */
    ua_ccb_sim_rel.uagt_buffer = (u_char *)NULL;    /* no data */
    ua_ccb_sim_rel.uagt_bufllen = 0;               /* no data */
    ua_ccb_sim_rel.uagt_snsbuf = (u_char *)NULL;   /* no Autosense data */
    ua_ccb_sim_rel.uagt_snslen = 0;               /* no Autosense data */
    ua_ccb_sim_rel.uagt_cdb     = (CDB_UN *)NULL;  /* CDB is in the CCB */
    ua_ccb_sim_rel.uagt_cdbllen = 0;               /* CDB is in the CCB */

/* Set up the CCB for an XPT_RESET_DEV request. */

/* Set up the CAM header for the XPT_RESET_DEV function. */

    ccb_reset_dev.cam_ch.my_addr = (struct ccb_header *)&ccb_reset_dev;
                                /* "Its" address */ ③
    ccb_reset_dev.cam_ch.cam_ccb_len = sizeof(CCB_RESETDEV); /* a SCSI I/O CCB */
    ccb_reset_dev.cam_ch.cam_func_code = XPT_RESET_DEV;     /* the opcode */
    ccb_reset_dev.cam_ch.cam_path_id   = id;               /* selected bus */
    ccb_reset_dev.cam_ch.cam_target_id = targid;          /* selected target */
    ccb_reset_dev.cam_ch.cam_target_lun = lun;            /* selected lun */

/* The needed CAM flags are: CAM_DIR_NONE - No data will be transferred. */

    ccb_reset_dev.cam_ch.cam_flags = CAM_DIR_NONE;

/* Set up the fields for the User Agent Ioctl call. */

    ua_ccb_reset_dev.uagt_ccb = (CCB_HEADER *)&ccb_reset_dev;
                                /* where the CCB is */ ④
    ua_ccb_reset_dev.uagt_ccblen = sizeof(CCB_RESETDEV); /* bytes in CCB */
    ua_ccb_reset_dev.uagt_buffer = (u_char *)NULL;    /* no data */
    ua_ccb_reset_dev.uagt_bufllen = 0;               /* no data */
    ua_ccb_reset_dev.uagt_snsbuf = (u_char *)NULL;   /* no Autosense data */
    ua_ccb_reset_dev.uagt_snslen = 0;               /* no Autosense data */
    ua_ccb_reset_dev.uagt_cdb     = (CDB_UN *)NULL;  /* CDB is in the CCB */
    ua_ccb_reset_dev.uagt_cdbllen = 0;               /* CDB is in the CCB */

/* -- End of static setups of SIMQ Release and Device Reset structures -- */

```

- ① This section of code fills in some of the CCB_HEADER fields of the RELEASE SIM QUEUE CCB structure defined as `ccb_sim_rel`, for the XPT_REL_SIMQ command. The structure was declared in Section 2.5.2.5
- ② This section of code fills in some of the CCB_HEADER fields of the CCB_RELSIM structure defined as `ua_ccb_sim_rel`, for the RELEASE SIM QUEUE CCB command. The structure was declared in Section 2.5.2.5
- ③ This section of code fills in some of the CCB_HEADER fields of the CCB_RESETDEV structure defined as `ccb_reset_dev`, for the XPT_RESET_DEV command. The structure was declared in Section 2.5.2.5

- 4 This section of code fills in some of the CCB_HEADER fields of the CCB_RESETDEV structure defined as ua_ccb_reset_dev, for the BUS DEVICE RESET CCB command. The structure was declared in Section 2.5.2.5

2.5.2.9 The Window Parameters Setup Section

This section describes the portion of the User Agent sample inquiry application program that fills in the scan window parameters and sends a SCSI SET WINDOW PARAMETERS command to the scanner.

```

/* Fill in window parameters for scanner and send DEFINE WINDOW */
/* PARAMETERS command to the scanner. Note that the X&Y resolution */
/* and the X width and Y length are specified on the command line. */

    WWidth = Xwid*(double)WXYRes;          /* X width inches to pixels */ 1
    WLength = Ylen*(double)WXYRes;        /* Y length inches to lines */
    WHdrSel = 0;                          /* Don't return header */
#ifdef NO_HEADER_FOR_NOW
    WHdrSel = 1;                          /* Return header w. data */
#endif

    WinPix = WWidth*WLength;              /* Pixels in window */ 2
    LineBytes = WWidth*3;                 /* Full color, 8-bit pixels */
    TotalBytes = WHdrSel*256 + WinPix*3;  /* Full color, 8-bit pixels */

    printf("Window parameters:\n"); 3
    printf(" Width = %6d pixels/line, Length = %6d lines; Total = %10d pixels\n",
           WWidth, WLength, WinPix);
    printf(" Bytes/line = %6d; Total bytes/image = %10d\n", LineBytes,
           TotalBytes);

/* Fill in window parameters for scanner and send DEFINE WINDOW PARAMETERS */
/* command to the scanner. */

    clear_mem(&Window, sizeof(Window));  /* Clear whole DWP block */ 4
    swap_short_store(&Window.WDBLen[0], 0x2F); /* REQUIRED length */ 5
    swap_short_store(&Window.XRes[0], WXYRes); /* X and Y MUST BE THE SAME */
    swap_short_store(&Window.YRes[0], WXYRes); /* X and Y MUST BE THE SAME */
    /* Upper Left X & Y left at zero */
    swap_long_store(&Window.Width[0], WWidth);
    swap_long_store(&Window.Length[0], WLength);
    Window.ImgTyp = 5;                   /* Multi-level full color */ 6
    Window.PixBits = 8;                  /* 8-bit pixels */ 7
    Window.PadTyp = 1;                   /* REQUIRED value */ 8
    Window.RevImg = 1;                   /* Reverse == 0,0,0 = black */ 9
    Window.HdrSel = WHdrSel;              /* Set return header control */ 10
    /* All other values left at zero */

/* Display current contents of bytes in window parameter block */ 11

    printf("Window Parameter block (in hex):\n");
    for( i=0, bp=(u_char *)&Window; i < sizeof(Window); i++, bp++) {
        printf("%.2x ", *bp);
        if (i == 7) printf("\n");
        if (i == 8+21) printf("\n");
    }
    printf("\n\n");

```

- 1 This section converts the X and Y values entered from the command line in inches into pixels. The value of WXYRes is an int; however, the values of Xwid and Ylen are floating point values. To perform the calculations to

determine the values of `WWidth`, the number of pixels per line, and `WLength`, the number of scan lines, the value of `WXYRes` must be converted to a real number. For example, if the value entered for `X` were 4.5 and the resolution selected were 300, `WWidth` would equal 1,350 pixels per line. If the value entered for `Y` were 3.5, the result would be 1,050 scan lines.

- 2 This section of the program calculates the number of bytes in the scan window based on the total number of pixels. For example, the calculation using the previous figures would yield 1,417,500 pixels as the value of `WinPix`. To calculate the number of bytes per line, `WWidth` is multiplied by 3, which is the number of bytes per pixel. The total number of bytes in the scan window, using the figures in the example, would be 4,252,500 bytes.
- 3 These lines display the results of the calculations.
- 4 This line calls the `clear_mem` function to set the local `WINDOW_PARAM_BLOCK` structure, `Window`, to 0's (zeroes) in preparation for storing the byte values in swapped order. The `WINDOW_PARAM_BLOCK` structure was defined in Section 2.5.2.1. The `clear_mem` function is defined in Section 2.5.2.14.
- 5 This section of code calls the functions that put the bytes of short and long integer values into big-endian storage. The functions are defined in Section 2.5.2.14.
- 6 This line sets the image type for the scanner. The setting of 5 means multilevel, full color.
- 7 This line sets the number of bits per pixel. The setting of 8 means 256 shades.
- 8 This line sets the padding type for nonbyte pixels. The setting of 1 means pad with 0 (zero).
- 9 This line sets the reverse image. The setting of 1 means white pixels are indicated by 1 (one) and black pixels are indicated by 0 (zero).
- 10 This line sets the selection for returning a header with the data. The setting of `WHdrSel` was set to 0 (do not include the header).
- 11 This section displays the contents of the bytes in the window parameter block.

2.5.2.10 CCB Setup for the DEFINE WINDOW Command

This section describes the portion of the User Agent sample scanner program where the fields of the `CCB_HEADER` needed for an `XPT_SCSI_IO` request are filled in.

```

/* Set up the CCB for an XPT_SCSI_IO request. The DEFINE WINDOW
PARAMETERS command will be sent to the device. */

/* Set up the CAM header for the XPT_SCSI_IO function. */

ccb.cam_ch.my_addr = (struct ccb_header *)&ccb; /* "Its" address */ 1
ccb.cam_ch.cam_ccb_len = sizeof(CCB_SCSIIO); /* a SCSI I/O CCB */
ccb.cam_ch.cam_func_code = XPT_SCSI_IO; /* the opcode */
ccb.cam_ch.cam_path_id = id; /* selected bus */
ccb.cam_ch.cam_target_id = targid; /* selected target */
ccb.cam_ch.cam_target_lun = lun; /* selected lun */

/* The needed CAM flags are: CAM_DIR_OUT - The data will go to the target. */

ccb.cam_ch.cam_flags = CAM_DIR_OUT;

```

```

/* Set up the rest of the CCB for the DEFINE WINDOW PARAMETERS command. */

ccb.cam_data_ptr = (u_char *)&Window; /* where the parameters are */ ②
ccb.cam_dxfer_len = sizeof(Window); /* how much data */ ③
ccb.cam_timeout = CAM_TIME_DEFAULT; /* use the default timeout */ ④
ccb.cam_cdb_len = sizeof(SCAN_DEF_WIN_CDB); /* how many bytes for cdb */ ⑤
ccb.cam_sense_ptr = &sense[0]; /* Autosense data area */
ccb.cam_sense_len = SENSE_LEN; /* Autosense data length */

/* Use a local pointer to access the fields in the DEFINE WINDOW PARAMETERS
CDB. */

win = (SCAN_DEF_WIN_CDB *)&ccb.cam_cdb_io.cam_cdb_bytes[0]; ⑥

clear_mem(win, sizeof(SCAN_DEF_WIN_CDB)); /* clear all bits in CDB */ ⑦
win->opcode = SCAN_DEF_WIN_OP; /* define window command */ ⑧
win->lun = lun; /* lun on target */
win->param_len0 = sizeof(Window); /* for the buffer space */
win->param_len1 = 0;
win->param_len2 = 0;
win->control = 0; /* no control flags */

/* Set up the fields for the User Agent Ioctl call. */ ⑨

ua_ccb.uagt_ccb = (CCB_HEADER *)&ccb; /* where the CCB is */ ⑩
ua_ccb.uagt_ccblen = sizeof(CCB_SCSIIO); /* how many bytes to gather */ ⑪
ua_ccb.uagt_buffer = (u_char *)&Window; /* where the parameters are */ ⑫
ua_ccb.uagt_buflen = sizeof(Window); /* how much data */ ⑬

ua_ccb.uagt_snsbuf = &sense[0]; /* Autosense data area */ ⑭
ua_ccb.uagt_snslen = SENSE_LEN; /* Autosense data length */
ua_ccb.uagt_cdb = (CDB_UN *)NULL; /* CDB is in the CCB */ ⑮
ua_ccb.uagt_cdblen = 0; /* CDB is in the CCB */

```

- ① This section of code fills in some of the CCB_HEADER fields of the SCSI I/O CCB structure defined as `ccb`, for processing by the XPT layer. The structure was declared in Section 2.5.2.5.
- ② This line assigns the `cam_data_ptr` member of the local CCB_SCSIIO data structure, `ccb`, to the address of the Window parameter block. The Window parameter block structure was filled in Section 2.5.2.9.
- ③ This line sets the data transfer length to the length of the Window structure.
- ④ This line specifies using the default timeout, which is the value assigned to the `CAM_TIME_DEFAULT` constant. This constant is set in the `/usr/sys/h/cam.h` file to indicate that the SIM layer's default timeout is to be used. The current value of the SIM layer's default timeout is five seconds.
- ⑤ This line sets the length of the `cam_cdblen` member to the length of the `SCAN_DEF_WIN_CDB` structure.
- ⑥ This line assigns the `win` pointer, which is type `SCAN_DEF_WIN_CDB`, to the address of the `cam_cdb_bytes` member of the `CDB_UN` union. This union is defined in `/usr/sys/h/cam.h` as the `cam_cdb_io` member of the SCSI I/O CCB structure.
- ⑦ This line calls the `clear_mem` function to clear the local `SCAN_DEF_WIN_CDB` structure in preparation for storing the values needed for the DEFINE WINDOW operation. The `SCAN_DEF_WIN_CDB` structure was defined in Section 2.5.2.3. The `clear_mem` function is defined in Section 2.5.2.14.

- 8 These lines use the `win` pointer to access the bytes of the `cam_cdb_bytes` array as though it is a `SCAN_DEF_WIN_CDB` structure. The `SCAN_DEF_WIN_CDB` structure is defined in Section 2.5.2.3
- 9 This section of the code assigns the program address of the CCB into the CCB pointer member and the program address of the Window parameter block into the data pointer member of the `ua_ccb` structure of type `UAGT_CAM_CCB`, as defined in the `/usr/sys/h/uagt.h` file. This structure is copied from user space into kernel space as part of the `ioctl` system call that is executed in Section 2.5.2.11 This structure was declared in Section 2.5.2.3.
- 10 This line initializes the `uagt_ccb` member of the `ua_ccb` structure with the address of the local `CCB_HEADER` structure, `ccb`.
- 11 This line sets the length of the `uagt_ccblen` member to the length of the SCSI I/O CCB structure that will be used for this call.
- 12 This line initializes the `uagt_buffer` member with the user space address of the Window parameter block.
- 13 This line initializes the `uagt_bufllen` member with the number of bytes in the Window parameter block.
- 14 These two lines reflect that the autosense features are turned on in the CAM flags.
- 15 These two lines reflect that the Command Descriptor Block information is in the SCSI I/O CCB structure filled in Section 2.5.2.5.

2.5.2.11 The Error Checking Section

This section describes the portion of the User Agent sample scanner program that attempts to set the window parameters and recover from possible scanner errors.

```

/* Send the CCB to the CAM subsystem using the User Agent driver.
   If an error occurs, report it and attempt corrective action. */

    retry_cnt = 10;                /* initialize retry counter */
    reset_flag = 0;                /* initialize reset flag */

retry_SWP:
    printf("Attempt to Set Window Parameters\n");
    if( ioctl(fd, UAGT_CAM_IO, (caddr_t)&ua_ccb) < 0 ) 1
    {
        perror("Error on CAM UAgt Ioctl to Define Window Parameters");
        close(fd);                /* close the CAM file */
        exit(1);
    }

/* If the CCB did not complete successfully then report the error. */

    if (ccb.cam_ch.cam_status != CAM_REQ_CMP)
    {
        print_ccb_status("CAM UAgt Define Window Ioctl",
            &(ccb.cam_ch) );        /* report the error values */
        printf(" cam_scsi_status = 0x%.2X\n", ccb.cam_scsi_status); 2

/* 1st check if the SIM Queue is frozen. If it is, release it. */

        if (ccb.cam_ch.cam_status & CAM_SIM_QFRZN) {
            printf("Attempt to release SIM Queue\n");
            if( ioctl(fd, UAGT_CAM_IO, (caddr_t)&ua_ccb_sim_rel) < 0 ) { 3
                perror("Error on CAM UAgt Release Sim Queue Ioctl");
                close(fd);        /* close the CAM file */
            }
        }
    }

```

```

        exit(1);
    }

/* If the Release Sim Q CCB did not complete successfully then
report the error and exit. */

    print_ccb_status("CAM UAgt Release SIM Queue Ioctl",
        &(ccb_sim_rel.cam_ch) ); /* report the error values */

    if (ccb_sim_rel.cam_ch.cam_status != CAM_REQ_CMP) {
        print_ccb_status("CAM UAgt Release SIM Queue Ioctl",
            &(ccb_sim_rel.cam_ch) ); /* report the error values */ ④
        close(fd);          /* close the CAM file */
        exit(1);
    }
}

/* Next, if we haven't done one yet, attempt a device reset to clear any
device error. */

    if (reset_flag++ == 0)
    {
        printf("Attempt to Reset the scanner\n");
        if( ioctl(fd, UAGT_CAM_IO, (caddr_t)&ua_ccb_reset_dev) < 0 ) { ⑤
            perror("Error on CAM UAgt Device Reset Ioctl");
            close(fd);          /* close the CAM file */
            exit(1);
        }
    }

/* If the Reset Device CCB did not complete successfully then
report the error and exit. */

    print_ccb_status("CAM UAgt Device Reset Ioctl",
        &(ccb_reset_dev.cam_ch) ); /* report the error values */

    if (ccb_reset_dev.cam_ch.cam_status != CAM_REQ_CMP) { ⑥
        print_ccb_status("CAM UAgt Device Reset Ioctl",
            &(ccb_reset_dev.cam_ch) ); /* report the error values */
        close(fd);          /* close the CAM file */
        exit(1);
    }

/* Wait the 28 seconds that the scanner takes to come back to life
after a reset; no use to do anything else. */

    printf("Scanner was reset, wait 28 Seconds for it to recover...\n");
    sleep(28);
}

/* Last, count if all retries are used up.  If not, try the SWP again.  If so,
give up and exit. */

    printf("Retry counter value = %d\n",retry_cnt);
    if (retry_cnt-- > 0) goto retry_SWP;

    close(fd);          /* close the CAM file */
    exit(1);
}
else
{

/* Output status information on success for debugging. */

    print_ccb_status("CAM UAgt SET WINDOW PARAMETERS Ioctl",
        &(ccb.cam_ch) );          /* report the error values */

```

```

printf(" cam_scsi_status = 0x%.2X\n", ccb.cam_scsi_status);
printf("\nWindow parameter set up successful\n");
}

/* Output header information (magic number, informational comment, X and Y
dimensions and maximum pixel values) to the data file and display it for
the user. */

sprintf(FileHead,"P6\n#\ X&Y resolution = %d dpi, %d pixels/line, \
                                         %d lines", 7
        WXYRes,WWidth,WLength);
sprintf(strchr(FileHead,NULL),"\n%d %d 255\n",WWidth,WLength);
write(od,FileHead,strlen(FileHead));
printf("File header data --\n%s\n",FileHead);

```

- 1 This section of code attempts to set the window parameters. This line passes the local UAGT_CAM_CCB structure, `ua_ccb`, to the User Agent driver, using the `ioctl` system call. The arguments passed are the file descriptor returned by the `open` system call; the User Agent `ioctl` command, `UAGT_CAM_IO`, which is defined in the `/usr/sys/h/uagt.h` file; and the contents of the `ua_ccb` structure. The User Agent driver copies in the SCSI I/O CCB and sends it to the XPT layer. When the I/O completes, the User Agent returns to the application program, returning status within the `ua_ccb` structure.
- 2 If the CAM status is anything other than `CAM_REQ_CMP`, indicating the request completed, an error message is printed indicating the CAM status returned.
- 3 This section of code attempts to clear the SIM queue if it is frozen. This line passes the local UAGT_CAM_CCB structure, `ua_ccb_sim_rel`, to the User Agent driver, using the `ioctl` system call. The arguments passed are the file descriptor returned by the `open` system call; the User Agent `ioctl` command, `UAGT_CAM_IO`, which is defined in the `/usr/sys/h/uagt.h` file; and the contents of the `ua_ccb_sim_rel` structure. The User Agent driver copies in the SCSI I/O CCB and sends it to the XPT layer. When the operation completes, the User Agent returns to the application program, returning status within the `ua_ccb` structure.
- 4 If the CAM status is anything other than `CAM_REQ_CMP`, indicating the request completed, an error message is printed indicating the CAM status returned. An error message is displayed and the program exits.
- 5 This section of code attempts a device reset. This line passes the local UAGT_CAM_CCB structure, `ua_ccb_reset_dev`, to the User Agent driver, using the `ioctl` system call. The arguments passed are: the file descriptor returned by the `open` system call; the User Agent `ioctl` command, `UAGT_CAM_IO`, which is defined in the `/usr/sys/h/uagt.h` file; and the contents of the `ua_ccb_reset_dev` structure. The User Agent driver copies in the SCSI I/O CCB and sends it to the XPT layer. When the operation completes, the User Agent returns to the application program, returning status within the `ua_ccb` structure.
- 6 If the CAM status is anything other than `CAM_REQ_CMP`, indicating the request completed, an error message is printed indicating the CAM status returned. An error message is displayed and the program exits.
- 7 If the scan window parameters were set up successfully, a portable pixmap P6 file is created. This section displays the X and Y resolutions in dots per inch, pixels per line, and number of lines, taking the values that were generated from the code

in Section 2.5.2.9.

2.5.2.12 CCB Setup for the READ Command

This section describes the portion of the User Agent sample inquiry application program that sets up the CCBs for a READ command.

```
/* Set up the CCB for an XPT SCSI IO request. The READ (data) command will be
   sent to the device. */

/* Set up the CAM header for the XPT SCSI IO function. */

ccb.cam_ch.my_addr = (struct ccb_header *)&ccb; /* "Its" address */ 1
ccb.cam_ch.cam_ccb_len = sizeof(CCB SCSI IO); /* a SCSI I/O CCB */
ccb.cam_ch.cam_func_code = XPT SCSI IO; /* the opcode */
ccb.cam_ch.cam_path_id = id; /* selected bus */
ccb.cam_ch.cam_target_id = targid; /* selected target */
ccb.cam_ch.cam_target_lun = lun; /* selected lun */

/* The needed CAM flags are: CAM DIR IN - The data will come from the target. */

ccb.cam_ch.cam_flags = CAM DIR IN;

/* Set up the rest of the CCB for the READ command. */

ccb.cam_data_ptr = (u_char *)ReadData; /* where the data goes */ 2
ccb.cam_dxfer_len = LineBytes; /* how much data */
ccb.cam_timeout = 100; /* use timeout of 100Sec */
ccb.cam_cdb_len = sizeof(SCAN_READ_CDB); /* how many bytes for read */ 3
ccb.cam_sense_ptr = &sense[0]; /* Autosense data area */
ccb.cam_sense_len = SENSE_LEN; /* Autosense data length */

/* Use a local pointer to access the fields in the DEFINE WINDOW PARAMETERS
   CDB. */

read = (SCAN_READ_CDB *)&ccb.cam_cdb_io.cam_cdb_bytes[0]; 4

clear_mem(read, sizeof(SCAN_READ_CDB)); /* clear all bits in CDB */ 5
read->opcode = SCAN_READ_OP; /* define window command */
read->lun = lun; /* lun on target */
read->param_len0 = LineBytes&255; /* for the buffer space */
read->param_len1 = (LineBytes>>8)&255;
read->param_len2 = (LineBytes>>16)&255;
read->control = 0; /* no control flags */

/* Set up the fields for the User Agent Ioctl call. */

ua_ccb.uagt_ccb = (CCB_HEADER *)&ccb; /* where the CCB is */ 6
ua_ccb.uagt_ccblen = sizeof(CCB SCSI IO); /* how many bytes to pull in */ 7
ua_ccb.uagt_buffer = ReadData; /* where the data goes */ 8
ua_ccb.uagt_buflen = LineBytes; /* how much data */ 9

ua_ccb.uagt_snsbuf = &sense[0]; /* Autosense data area */ 10
ua_ccb.uagt_snslen = SENSE_LEN; /* Autosense data length */
ua_ccb.uagt_cdb = (CDB_UN *)NULL; /* CDB is in the CCB */ 11
ua_ccb.uagt_cdblenn = 0; /* CDB is in the CCB */

n = TotalBytes + strlen(FileHead);
printf("Total bytes in file = %12d.\n", n);

printf("\nRead data from scanner and write to file\n");
```

- 1 This section of code fills in some of the CCB_HEADER fields of the SCSI I/O CCB structure defined as `ccb`, for processing by the XPT layer. The structure was declared in Section 2.5.2.5.
- 2 This line sets the `cam_data_ptr` to the address of the `ReadData` array defined in Section 2.5.2.5.
- 3 This line sets the data transfer length to the length of the `SCAN_READ_CDB` structure.
- 4 This line sets the `read` pointer, which is type `SCAN_READ_CDB`, to the address of the `cam_cdb_len` member of the `CDB_UN` union. This union is defined in `/usr/sys/h/cam.h` as the `cam_cdb_io` member of the SCSI I/O CCB structure.
- 5 This line calls the `clear_mem` function to clear the local `SCAN_READ_CDB` structure, `read`, in preparation for storing the values needed for the `READ` operation. The `SCAN_READ_CDB` structure was defined in Section 2.5.2.3. The `clear_mem` function is defined in Section 2.5.2.14.
- 6 These lines use the `read` pointer to access the bytes of the `cam_cdb_bytes` array as though they are in a `SCAN_DEF_WIN_CDB` structure. The `SCAN_READ_CDB` structure is defined in Section 2.5.2.3.
- 7 This line sets the length of the `uagt_ccblen` member to the length of the SCSI I/O CCB structure that will be used for this call.
- 8 This line sets the `uagt_buffer` member of the `ua_ccb` structure.
- 9 This line sets the size of the data buffer to the number of bytes contained in the buffer pointed to by the `cam_data_ptr` member of the `ccb` structure.
- 10 These two lines reflect that the autosense features are turned on in the CAM flags.
- 11 These two lines reflect that the Command Descriptor Block information is in the SCSI I/O CCB structure filled in Section 2.5.2.5.

2.5.2.13 The Read and Write Loop Section

This section describes the portion of the program where the data is read, reformatted, and placed in the output buffer.

```

/* ***** Beginning of read/write loop ***** */

for (i=0; i<WLength; i++) {

    printf(" Read scanner line number %8d\r",i);
    fflush(stdout); 1

/* Send the CCB to the CAM subsystem via the User Agent driver,
and report any errors. */

    if( ioctl(fd, UAGT_CAM_IO, (caddr_t)&ua_ccb) < 0 ) 2
    {
        perror("\nError on CAM UAgt Ioctl to Read data line");
        close(fd);          /* close the CAM file */
        exit(1);
    }

/* If the CCB completed successfully then print out the data read,
if not report the error. */

    if (ccb.cam_ch.cam_status != CAM_REQ_CMP)

```



```

    {
        printf("\n");
        print_ccb_status("CAM UAgt Read data line ioctl",
            &(ccb.cam_ch) ); /* report the error values */
        printf(" cam_scsi_status = 0x%.2X\n", ccb.cam_scsi_status);
        close(fd); /* close the CAM file */
        exit(1);
    }
    else
    {
#ifdef CUT_FOR_NOW
        printf(" Data line read successfully\n");
#endif

/* Re-format the data from blocks of R, G and B data to tuples
of (R,G,B) data for the data file. Set up pointers to the
beginning of each of the blocks of the Red, the Green and the
Blue data bytes and another pointer to the output buffer.
Then loop, collecting one each of Red, Green and Blue,
putting each into the output data buffer. */ ③

        RDRp = ReadData; /* Red bytes are first */
        RDGp = RDRp + WWidth; /* Green bytes are next */
        RDBp = RDGp + WWidth; /* Blue bytes are last */
        WDP = WriteData;

        for (n = 0 ; n < WWidth; n++)
        {
            *WDP++ = *RDRp++;
            *WDP++ = *RDGp++;
            *WDP++ = *RDBp++;
        }

/* Now write the re-formatted data to the output file. */

        write(od,WriteData,LineBytes); /* write data to file */
    }
} /* ***** End of read/write loop ***** */
printf("\nSuccessful read and write to file\n");
close(fd); /* close the CAM file */
close(od); /* close the output file */
}

```

- ① This line calls the standard C I/O function, `fflush`, to force the scan line number to the user's display.
- ② This section of code attempts to read a scan line. This line passes the local `UAGT_CAM_CCB` structure, `ua_ccb`, to the User Agent driver, using the `ioctl` system call. The arguments passed are the file descriptor returned by the `open` system call; the User Agent `ioctl` command, `UAGT_CAM_IO`, which is defined in the `/usr/sys/h/uagt.h` file; and the contents of the `ua_ccb` structure. The User Agent driver copies in the SCSI I/O CCB and sends it to the XPT layer. When the I/O completes, the User Agent returns to the application program, returning status within the `ua_ccb` structure.
- ③ The scan line read in contains all the red bytes, then all the green bytes, then all the blue bytes, in sequence. This section of code reformats the bytes into pixels for the output file by placing a red byte, then a green byte, then a blue byte together on the output file scan line.

2.5.2.14 The Local Function Definition Section

This section describes the portion of the User Agent sample scanner program that defines functions used within the program.

```
/* Local routines and data structure to report in text and Hex form the
returned CAM status. */
struct cam_statustable { ①
    u_char  cam_status;
    caddr_t status_msg;
} cam_statustable[] = {
    { CAM_REQ_INPROG,          "CCB request is in progress"          },
    { CAM_REQ_CMP ,          "CCB request completed w/out error" },
    { CAM_REQ_ABORTED,       "CCB request aborted by the host"    },
    { CAM_UA_ABORT,         "Unable to Abort CCB request"        },
    { CAM_REQ_CMP_ERR,       "CCB request completed with an err" },
    { CAM_BUSY,             "CAM subsystem is busy"              },
    { CAM_REQ_INVALID,       "CCB request is invalid"             },
    { CAM_PATH_INVALID,      "Bus ID supplied is invalid"         },
    { CAM_DEV_NOT_THERE,     "Device not installed/there"         },
    { CAM_UA_TERMIO,        "Unable to Terminate I/O CCB req"    },
    { CAM_SEL_TIMEOUT,       "Target selection timeout"           },
    { CAM_CMD_TIMEOUT,       "Command timeout"                   },
    { CAM_MSG_REJECT_REC,    "Reject received"                   },
    { CAM_SCSI_BUS_RESET,    "Bus reset sent/received"           },
    { CAM_UNCOR_PARITY,      "Parity error occurred"             },
    { CAM_AUTOSENSE_FAIL,    "Request sense cmd fail"            },
    { CAM_NO_HBA,           "No HBA detected Error"             },
    { CAM_DATA_RUN_ERR,      "Overrun/underrun error"            },
    { CAM_UNEXP_BUSFREE,     "BUS free"                           },
    { CAM_SEQUENCE_FAIL,     "Bus phase sequence failure"         },
    { CAM_CCB_LEN_ERR,       "CCB length supplied is inadequate" },
    { CAM_PROVIDE_FAIL,      "To provide requ. capability"        },
    { CAM_BDR_SENT,          "A SCSI BDR msg was sent to target" },
    { CAM_REQ_TERMIO,        "CCB request terminated by the host" },
    { CAM_LUN_INVALID,       "LUN supplied is invalid"           },
    { CAM_TID_INVALID,       "Target ID supplied is invalid"     },
    { CAM_FUNC_NOTAVAIL,     "Requested function is not available"},
    { CAM_NO_NEXUS,          "Nexus is not established"          },
    { CAM_IID_INVALID,       "The initiator ID is invalid"       },
    { CAM_CDB_RECVD,         "The SCSI CDB has been received"    },
    { CAM_SCSI_BUSY,         "SCSI bus busy"                     }
};

int cam_statusentrys = sizeof(cam_statustable) /
sizeof(cam_statustable[0]);
char * camstatus( cam_status )
register u_char cam_status;
{
    register struct cam_statustable *cst = cam_statustable;
    register entrys;
    for( entrys = 0; entrys < cam_statusentrys; cst++ ) {
        if( cst->cam_status == cam_status ) {
            return( cst->status_msg );
        }
    }
    return( "Unknown CAM Status" );
}

void print_ccb_status(id_string,cp) ②
char *id_string;
CCB_HEADER *cp;
{
    register i;

    printf("Status from %s0,id_string);

```

```

printf(" cam_status = 0x%.2X  (%s%s)s0, cp->cam_status,
((cp->cam_status & CAM_AUTOSNS_VALID) ? "AutoSns Valid-" : " " ),
((cp->cam_status & CAM_SIM_QFRZN) ? "SIM Q Frozen-" : " " ),
camstatus( cp->cam_status & CAM_STATUS_MASK ));

if (cp->cam_status & CAM_AUTOSNS_VALID) {
    printf("AutoSense Data (in hex):0);
    for( i=0; i < SENSE_LEN; i++)
        printf("%.2X ", sense[i]);
    printf("0 ");
}

fflush(stdout);
}

void clear_mem(bp,n)          /* Clear n bytes of memory beginning at bp */ ③
u_char *bp;
int  n;
{
    register i;
    register u_char *ptr;
    for(i=0, ptr=bp; i<n; i++, ptr++) *ptr = 0;
}

void swap_short_store(bp,val) /* Store short into byte-reversed storage */ ④
u_char *bp;
u_short val;
{
    u_short temp;
    register u_char *ptr;
    ptr = bp;
    *(bp++) = (u_char)(val>>8); /* Copy pointer */
    /* Store high byte first */
    *bp      = (u_char)val;     /* Then store low byte */
}

void swap_long_store(bp,val) /* Store long into byte-reversed storage */ ⑤
u_char *bp;
u_long val;
{
    *(bp++) = (u_char)(val>>24); /* Store high byte first */
    *(bp++) = (u_char)(val>>16);
    *(bp++) = (u_char)(val>>8);
    *bp      = (u_char)val;     /* Store low byte last */
}

```

- ① This function is described in Section 2.5.1.9.
- ② This function prints out the CCB status.
- ③ This function clears out all the bits in an area of memory, such as a structure or an array, to be sure all are set to 0 (zero) and that there is no extraneous data before executing a SCSI/CAM command.
- ④ This function puts the bytes of a short (16-bit) integer value into big-endian storage to conform with SCSI byte ordering.
- ⑤ This function puts the bytes of a long (32-bit) integer value into byte-reversed storage to conform with SCSI byte ordering.

This chapter describes the common data structures, macros, and routines provided by Digital for SCSI/CAM peripheral device driver writers. These data structures, macros, and routines are used by the generic SCSI/CAM peripheral device driver routines described in Chapter 4.

Using the common and generic routines helps ensure that your SCSI/CAM peripheral device drivers are consistent with the ULTRIX SCSI/CAM Architecture. See Chapter 11 if you plan to define your own SCSI/CAM peripheral device drivers. See Chapter 12 for information about the SCSI/CAM special I/O interface to process special SCSI I/O commands.

If a SCSI/CAM device driver writer needs to understand all members of a structure, the complete structure is shown and each member described. If a SCSI/CAM device driver writer needs to understand only specific members of a structure, those members are listed in a table, and only those members are described.

3.1 Common SCSI Device Driver Data Structures

This section describes the SCSI/CAM peripheral common data structures. The following data structures are described:

- PDRV_UNIT_ELEM, the Peripheral Device Unit Table
- PDRV_DEVICE, the Peripheral Device Structure
- DEV_DESC, the Device Descriptor Structure
- MODESEL_TBL, the Mode Select Table Structure
- DENSITY_TBL, the Density Table Structure
- PDRV_WS, the SCSI/CAM Peripheral Device Driver Working Set Structure

3.1.1 Peripheral Device Unit Table

The Peripheral Device Unit Table is an array of SCSI/CAM peripheral device unit elements. The size of the array is the maximum number of possible devices, which is determined by the maximum number of SCSI controllers allowed for the system. The structure is allocated statically and is defined as follows:

```
typedef struct pdrv_unit_elem {
    PDRV_DEVICE *pu_device; /* Pointer to peripheral device structure */
    u_short pu_opens;      /* Total number of opens against unit */
    u_short pu_config;     /* Indicates whether the device type */
                          /* configured at this address */
    u_char pu_type;        /* Device type - byte 0 from inquiry data */
} PDRV_UNIT_ELEM;
```

The `pu_device` field is filled in with a pointer to a CAM-allocated peripheral SCSI device (`PDRV_DEVICE`) structure when the first call to the `ccmn_open_unit` routine is issued for a SCSI device that exists.

3.1.2 Peripheral Device Structure

A SCSI/CAM peripheral device structure, `PDRV_DEVICE`, is allocated for each SCSI device that exists in the system. This structure contains the queue header structure for the SCSI/CAM peripheral device driver CCB request queue. It also contains the Inquiry data obtained from a GET DEVICE TYPE CCB. Table 3-1 lists the members of the `PDRV_DEVICE` structure that a SCSI/CAM peripheral device driver writer using the common routines provided by Digital may use. Chapter 11 shows the complete structure for those driver writers who are not using the common routines.

Table 3-1: Members of the `PDRV_DEVICE` Structure

Member Name	Data Type	Description
<code>pd_dev</code>	<code>dev_t</code>	The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device. Passed to the common open routine.
<code>pd_bus</code>	<code>u_char</code>	SCSI target's bus controller number.
<code>pd_target</code>	<code>u_char</code>	SCSI target's ID number.
<code>pd_lun</code>	<code>u_char</code>	SCSI target's logical unit number.
<code>pd_flags</code>	<code>u_long</code>	May be used to indicate the state of a SCSI device driver.
<code>pd_state</code>	<code>u_char</code>	May be used for recovery.
<code>pd_abort_cnt</code>	<code>u_char</code>	May be used for recovery.
<code>pd_dev_inq[INQLEN]</code>	<code>u_char</code>	Inquiry data obtained from issuing a GET DEVICE TYPE CCB.
<code>*pd_dev_desc</code>	<code>DEV_DESC</code>	Pointer to the SCSI device descriptor.
<code>pd_specific</code>	<code>caddr_t</code>	Pointer to device-specific information.
<code>pd_spec_size</code>	<code>u_long</code>	Size of device-specific information structure.
<code>*(pd_recov_hand)()</code>	<code>void</code>	Recovery handler.
<code>pd_lk_device</code>	<code>lock_t</code>	SMP lock for the device.

The `pd_specific` field is filled in with a pointer to an allocated structure that contains device-specific information.

3.1.2.1 The `pd_dev` Member

The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

3.1.2.2 The `pd_spec_size` Member

The size, in bytes, of the device-specific information structure passed from the SCSI device driver to the common open routine.

3.1.3 Device Descriptor Structure

There is a read-only SCSI device descriptor structure, `DEV_DESC`, defined for each device supported by Digital. A user may supply a new `DEV_DESC` structure by adding it to `/usr/sys/data/cam_data.c` and relinking the kernel. The `DEV_DESC` structure follows:

```
typedef struct dev_desc {
    u_char  dd_pv_name[IDSTRING_SIZE];
                                /* Product ID and vendor string from */
                                /* Inquiry data */
    u_char  dd_length;          /* Length of dd_pv_name string */
    u_char  dd_dev_name[DEV_NAME_SIZE];
                                /* Device name string - see defines */
                                /* in devio.h */
    u_long  dd_device_type;     /* Bits 0 - 23 contain the device */
                                /* class, bits 24-31 contain the */
                                /* SCSI device type */
    struct  pt_info *dd_def_partition;
                                /* Default partition sizes - disks */
    u_long  dd_block_size;     /* Block/sector size */
    u_long  dd_max_record;     /* Maximun transfer size in bytes */
                                /* allowed for the device */
    DENSITY_TBL *dd_density_tbl;
                                /* Pointer to density table - tapes */
    MODESEL_TBL *dd_modesel_tbl;
                                /* Mode select table pointer - used */
                                /* on open and recovery */
    u_long  dd_flags;          /* Option flags (bbr, etc) */
    u_long  dd_scsi_optcmds;   /* Optional commands supported */
    u_long  dd_ready_time;     /* Time in seconds for powerup dev ready */
    u_short dd_que_depth;      /* Device queue depth for devices */
                                /* which support command queueing */
    u_char  dd_valid;          /* Indicates which data length */
                                /* fields are valid */
    u_char  dd_inq_len;        /* Inquiry data length for device */
    u_char  dd_req_sense_len; /* Request sense data length for */
                                /* this device */
}DEV_DESC;
```

3.1.4 Mode Select Table Structure

The Mode Select Table Structure is read and sent to the SCSI device when the first call to the SCSI/CAM peripheral open routine is issued on a SCSI device. There can be a maximum of eight entries in the Mode Select Table Structure. Chapter 11 contains a description of each structure member. The definition for the Mode Select Table Structure, `MODESEL_TBL`, follows:

```
typedef struct modesel_tbl {
    struct ms_entry{
        u_char  ms_page;        /* Page number */
        u_char  *ms_data;       /* Pointer to Mode Select data */
        u_char  ms_data_len;    /* Mode Select data length */
        u_char  ms_ent_sp_pf;   /* Save Page and Page format bits */
                                /* BIT 0 1=Save Page, */
                                /*      0=Don't Save Page */
    }
};
```

```

/* BIT 1 1=SCSI-2, 0=SCSI-1 */
}ms_entry[MAX_OPEN_SEL5];
}MODESEL_TBL;

```

3.1.5 Density Table Structure

The Density Table Structure allows for the definition of eight densities for each type of SCSI tape device unit. Chapter 11 contains a description of each structure member. The definition for the Density Table Structure, DENSITY_TBL, follows:

```

typedef struct density_tbl {
    struct density{
        u_char    den_flags;           /* VALID, ONE_FM etc */
        u_char    den_density_code;
        u_char    den_compress_code; /* Compression code if supported */
        u_char    den_speed_setting; /* for this density */
        u_char    den_buffered_setting;
                                           /* Buffer control setting */
        u_long    den_blocking;       /* 0 variable etc. */
    }density[MAX_TAPE_DENSITY];
}DENSITY_TBL;

```

3.1.5.1 The den_blocking Member

The `den_blocking` member contains the blocking factor for this SCSI tape device. A NULL (0) setting specifies that the blocking factor is variable. A positive value represents the number of bytes in a block, for example, 512 or 1024.

3.1.6 SCSI/CAM Peripheral Device Driver Working Set Structure

The SCSI I/O CCB contains `cam_pdrv_ptr`, a pointer to the SCSI/CAM peripheral device driver working set area for the CCB. This structure is also allocated by the XPT when the `xpt_ccb_alloc` routine is called to allocate a CCB. The PDRV_WS structure follows:

```

typedef struct pdrv_ws {
    struct pdrv_ws *pws_flink; /* Linkage of working set CCBs */
    struct pdrv_ws *pws_blink; /* that we have queued */
    CCB_SCSIIO *pws_ccb; /* Pointer to this CCB. */
    u_long pws_flags; /* Generic to driver */
    u_long pws_retry_cnt; /* Retry count for this request */
    u_char *pws_pdrv; /* Pointer to peripheral device */
                                           /* structure */
    u_char pws_sense_buf[DEC_AUTO_SENSE_SIZE];
} PDRV_WS;

```

3.1.6.1 The pws_flink Member

The `pws_flink` member of the `pdrv_ws` structure is a pointer to the forward link of the working set CCBs that have been queued.

3.1.6.2 The pws_blink Member

The `pws_blink` member of the `pdrv_ws` structure is a pointer to the backward link of the working set CCBs that have been queued.

3.1.6.3 The `pws_ccb` Member

The `pws_ccb` member is a pointer to this CCB. The CCB header is filled in by the common routines.

3.2 Common SCSI Device Driver Macros

The SCSI/CAM peripheral device driver common macros are supplied by Digital for SCSI device driver writers to use. These macros are defined in the `/usr/sys/h/pdrv.h` file. There are two categories of macros:

- Macros to obtain identification information about each SCSI device
- Locking macros

Table 3-2 lists each identification macro name, its call syntax, and a brief description of its purpose.

Table 3-2: Common Identification Macros

Name	Syntax	Description
<code>DEV_BUS_ID</code>	<code>DEV_BUS_ID(dev)</code>	Returns the bus ID of the device that is identified in the major/minor device number pair.
<code>DEV_TARGET</code>	<code>DEV_TARGET(dev)</code>	Returns the target ID of the device that is identified in the major/minor device number pair.
<code>DEV_LUN</code>	<code>DEV_LUN(dev)</code>	Returns the target LUN of the device that is identified in the major/minor device number pair.
<code>GET_PDRV_UNIT_ELEM</code>	<code>GET_PDRV_UNIT_ELEM(dev)</code>	Returns the Peripheral Device Unit Table entry for the device that is identified in the major/minor device number pair.
<code>GET_PDRV_PTR</code>	<code>GET_PDRV_PTR(dev)</code>	Returns the pointer to the Peripheral Device Structure for the device that is identified in the major/minor device number pair.

Table 3-3 lists each locking macro name, its call syntax, and a brief description of its purpose.

Note

Symmetric Multiprocessing (SMP) is not enabled in this release.

Table 3-3: Common Lock Macros

Name	Syntax	Description
PDRV_INIT_LOCK	PDRV_INIT_LOCK(pd)	Initializes the Peripheral Device Structure lock.
PDRV_IPLSMP_LOCK	PDRV_IPLSMP_LOCK(pd, lk_type, saveipl)	Raises the IPL and locks the Peripheral Device Structure.
PDRV_IPLSMP_UNLOCK	PDRV_IPLSMP_UNLOCK(pd, saveipl)	Unlocks the Peripheral Device Structure and lowers the IPL.
PDRV_SMP_LOCK	PDRV_SMP_LOCK(pd)	Locks the Peripheral Device Structure.
PDRV_SMP_SLEEPUNLOCK	PDRV_SMP_SLEEPUNLOCK(chan, pri, pd)	Unlocks the Peripheral Device Structure.

3.3 Common SCSI Device Driver Routines

The SCSI/CAM peripheral common device driver routines can be allocated into categories as follows:

- Initialization, open, and close routines, which handle the initialization of SCSI/CAM peripheral device drivers and the common open and close of the drivers. The following routines are in this category:
 - ccmn_init
 - ccmn_open_unit
 - ccmn_close_unit
- CCB queue manipulation routines, which manage placing and removing CCBs from the appropriate queues as well as aborting and terminating I/O for SCSI I/O CCBs on the queue's active list. The following routines are in this category:
 - ccmn_send_ccb
 - ccmn_rem_ccb
 - ccmn_abort_que
 - ccmn_term_que
- CCB allocation, build, and deallocation routines, which allocate CCBs, fill in the common portion of the CCB_HEADER, as well as create and send specific types of CCB requests to the XPT. The following routines are in this category:
 - ccmn_get_ccb
 - ccmn_rel_ccb
 - ccmn_io_ccb_bld

- ccmn_gdev_ccb_bld
- ccmn_sdev_ccb_bld
- ccmn_sasy_ccb_bld
- ccmn_rsqr_ccb_bld
- ccmn_pinq_ccb_bld
- ccmn_abort_ccb_bld
- ccmn_term_ccb_bld
- ccmn_bdr_ccb_bld
- ccmn_br_ccb_bld
- Common routines to build and send SCSI I/O commands, which are called during the open or recovery sequence of a device. The calling routine must sleep while the command completes, if necessary. The following routines are in this category:
 - ccmn_tur
 - ccmn_start_unit
 - ccmn_mode_select
- CCB status routine, which assigns CAM status values to a few general classifications. The following routine is in this category:
 - ccmn_ccb_status
- Buf structure pool allocation and deallocation routines, which allocate and deallocate buf structures from the buffer pool. The following routines are in this category:
 - ccmn_get_bp
 - ccmn_rel_bp
- Data buffer pool allocation and deallocation routines, which allocate and deallocate data buffer areas from the pool. The following routines are in this category:
 - ccmn_get_dbuf
 - ccmn_rel_dbuf
- Routines to perform miscellaneous operations. The following routines are in this category:
 - ccmn_ccbwait
 - ccmn_SysSpecialCmd
 - ccmn_DoSpecialCmd
 - ccmn_errlog

Descriptions of the routines with syntax information, in ULTRIX reference page format, are included in alphabetical order in Appendix C.

3.3.1 Common I/O Routines

This section describes the common SCSI/CAM peripheral device driver initialization and I/O routines. Table 3-4 lists the name of each routine and gives a summary description of its function. The sections that follow contain a more detailed description of each routine.

Table 3-4: Common I/O Routines

Routine	Summary Description
<code>ccmn_init</code>	initializes the XPT and the unit table lock structure
<code>ccmn_open_unit</code>	handles the common open for all SCSI/CAM peripheral device drivers
<code>ccmn_close_unit</code>	handles the common close for all SCSI/CAM peripheral device drivers

3.3.1.1 The `ccmn_init` Routine

The `ccmn_init` routine initializes the XPT and the unit table lock structure. The first time the `ccmn_init` routine is called, it calls the `xpt_init` routine to request the XPT to initialize the CAM subsystem.

3.3.1.2 The `ccmn_open_unit` Routine

The `ccmn_open_unit` routine handles the common open for all SCSI/CAM peripheral device drivers. It must be called for each open before any SCSI device-specific open code is executed.

On the first call to the `ccmn_open_unit` routine for a device, the `ccmn_gdev_ccb_bld` routine is called to issue a GET DEVICE TYPE CCB to obtain the Inquiry data. The `ccmn_open_unit` routine allocates the Peripheral Device Structure, `PDRV_DEVICE`, and a device-specific structure, either `TAPE_SPECIFIC` or `DISK_SPECIFIC`, based on the device size argument passed. The routine also searches the `cam_devdesc_tab` to obtain a pointer to the Device Descriptor Structure for the SCSI device and increments the open count. The statically allocated `pdrv_unit_table` structure contains a pointer to the `PDRV_DEVICE` structure. The `PDRV_DEVICE` structure contains pointers to the `DEV_DESC` structure and to the device-specific structure.

3.3.1.3 The `ccmn_close_unit` Routine

The `ccmn_close_unit` routine handles the common close for all SCSI/CAM peripheral device drivers. It sets the open count to zero.

3.3.2 Common Queue Manipulation Routines

This section describes the common SCSI/CAM peripheral device driver queue manipulation routines. Table 3-5 lists the name of each routine and gives a summary description of its function. The sections that follow contain a more detailed description of each routine.

Table 3-5: Common Queue Manipulation Routines

Routine	Summary Description
<code>ccmn_send_ccb</code>	sends CCBs to the XPT layer by calling the <code>xpt_action</code> routine
<code>ccmn_rem_ccb</code>	removes a SCSI I/O CCB request from the SCSI/CAM peripheral driver active queue and starts a tagged request if a tagged CCB is pending
<code>ccmn_abort_que</code>	sends an ABORT CCB request for each SCSI I/O CCB on the active queue
<code>ccmn_term_que</code>	sends a TERMINATE I/O CCB request for each SCSI I/O CCB on the active queue

3.3.2.1 The `ccmn_send_ccb` Routine

The `ccmn_send_ccb` routine sends CCBs to the XPT layer by calling the `xpt_action` routine. This routine must be called with the Peripheral Device Structure locked.

For SCSI I/O CCBs that are not retries, the request is placed on the active queue. If the CCB is a tagged request and the tag queue size for the device has been reached, the request is placed on the tagged pending queue so that the request can be sent to the XPT at a later time. A high-water mark of half the queue depth for the SCSI device is used for tagged requests so that other initiators on the SCSI bus will not be blocked from using the device.

3.3.2.2 The `ccmn_rem_ccb` Routine

The `ccmn_rem_ccb` routine removes a SCSI I/O CCB request from the SCSI/CAM peripheral driver active queue and starts a tagged request if a tagged CCB is pending. If a tagged CCB is pending, the `ccmn_rem_ccb` routine places the request on the active queue and calls the `xpt_action` routine to start the tagged request.

3.3.2.3 The `ccmn_abort_que` Routine

The `ccmn_abort_que` routine sends an ABORT CCB request for each SCSI I/O CCB on the active queue. This routine must be called with the Peripheral Device Structure locked.

The `ccmn_abort_que` routine calls the `ccmn_abort_ccb_bld` routine to create an ABORT CCB for the first active CCB on the active queue and send it to the XPT. It calls the `ccmn_send_ccb` routine to send the ABORT CCB for each of the other CCBs on the active queue that are marked as active to the XPT. The `ccmn_abort_que` routine then calls the `ccmn_rel_ccb` routine to return the ABORT CCB to the XPT.

3.3.2.4 The `ccmn_term_que` Routine

The `ccmn_term_que` routine sends a TERMINATE I/O CCB request for each SCSI I/O CCB on the active queue. This routine must be called with the Peripheral Device Structure locked.

The `ccmn_term_que` routine calls the `ccmn_term_ccb_bld` routine to create a TERMINATE I/O CCB for the first active CCB on the active queue and send it to the XPT. It calls the `ccmn_send_ccb` routine to send the TERMINATE I/O CCB for each of the other CCBs on the active queue that are marked as active to the XPT. The `ccmn_term_que` routine then calls the `ccmn_rel_ccb` routine to return the TERMINATE I/O CCB to the XPT.

3.3.3 Common CCB Management Routines

This section describes the common SCSI/CAM peripheral device driver CCB allocation, build, and deallocation routines. Table 3-6 lists the name of each routine and gives a summary description of its function. The sections that follow contain a more detailed description of each routine.

Table 3-6: Common CCB Management Routines

Routine	Summary Description
<code>ccmn_get_ccb</code>	allocates a CCB and fills in the common portion of the CCB header
<code>ccmn_rel_ccb</code>	releases a CCB and returns the sense data buffer for SCSI I/O CCBs, if allocated
<code>ccmn_io_ccb_bld</code>	allocates a SCSI I/O CCB and fills it in
<code>ccmn_gdev_ccb_bld</code>	creates a GET DEVICE TYPE CCB and sends it to the XPT
<code>ccmn_sdev_ccb_bld</code>	creates a SET DEVICE TYPE CCB and sends it to the XPT
<code>ccmn_sasy_ccb_bld</code>	creates a SET ASYNCHRONOUS CALLBACK CCB and sends it to the XPT
<code>ccmn_rsqr_ccb_bld</code>	creates a RELEASE SIM QUEUE CCB and sends it to the XPT
<code>ccmn_pinq_ccb_bld</code>	creates a PATH INQUIRY CCB and sends it to the XPT
<code>ccmn_abort_ccb_bld</code>	creates an ABORT CCB and sends it to the XPT
<code>ccmn_term_ccb_bld</code>	creates a TERMINATE I/O CCB and sends it to the XPT
<code>ccmn_bdr_ccb_bld</code>	creates a BUS DEVICE RESET CCB and sends it to the XPT
<code>ccmn_br_ccb_bld</code>	creates a BUS RESET CCB and sends it to the XPT

3.3.3.1 The `ccmn_get_ccb` Routine

The `ccmn_get_ccb` routine allocates a CCB and fills in the common portion of the CCB header. The routine calls the `xpt_ccb_alloc` routine to allocate a CCB structure. The `ccmn_get_ccb` routine fills in the common portion of the CCB header and returns a pointer to that `CCB_HEADER`.

3.3.3.2 The `ccmn_rel_ccb` Routine

The `ccmn_rel_ccb` routine releases a CCB and returns the sense data buffer for SCSI I/O CCBs, if allocated. The routine calls the `xpt_ccb_free` routine to release a CCB structure. For SCSI I/O CCBs, if the sense data length is greater than the default sense data length, the `ccmn_rel_ccb` routine calls the `ccmn_rel_dbuf` routine to return the sense data buffer to the data buffer pool.

3.3.3.3 The ccmn_io_ccb_bld Routine

The `ccmn_io_ccb_bld` routine allocates a SCSI I/O CCB and fills it in. The routine calls the `ccmn_get_ccb` routine to obtain a CCB structure with the header portion filled in. The `ccmn_io_ccb_bld` routine fills in the SCSI I/O-specific fields from the parameters passed and checks the length of the sense data to see if it exceeds the length of the reserved sense buffer. If it does, a sense buffer is allocated using the `ccmn_get_dbuf` routine.

3.3.3.4 The ccmn_gdev_ccb_bld Routine

The `ccmn_gdev_ccb_bld` routine creates a GET DEVICE TYPE CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The `ccmn_gdev_ccb_bld` routine calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

3.3.3.5 The ccmn_sdev_ccb_bld Routine

The `ccmn_sdev_ccb_bld` routine creates a SET DEVICE TYPE CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine fills in the device type field of the CCB and calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

3.3.3.6 The ccmn_sasy_ccb_bld Routine

The `ccmn_sasy_ccb_bld` routine creates a SET ASYNCHRONOUS CALLBACK CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine fills in the asynchronous fields of the CCB and calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

3.3.3.7 The ccmn_rsq_ccb_bld Routine

The `ccmn_rsq_ccb_bld` routine creates a RELEASE SIM QUEUE CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

3.3.3.8 The ccmn_pinq_ccb_bld Routine

The `ccmn_pinq_ccb_bld` routine creates a PATH INQUIRY CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

3.3.3.9 The `ccmn_abort_ccb_bld` Routine

The `ccmn_abort_ccb_bld` routine creates an ABORT CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine fills in the address of the CCB to be aborted and calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

3.3.3.10 The `ccmn_term_ccb_bld` Routine

The `ccmn_term_ccb_bld` routine creates a TERMINATE I/O CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine fills in the CCB to be terminated and calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

3.3.3.11 The `ccmn_bdr_ccb_bld` Routine

The `ccmn_bdr_ccb_bld` routine creates a BUS DEVICE RESET CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

3.3.3.12 The `ccmn_br_ccb_bld` Routine

The `ccmn_br_ccb_bld` routine creates a BUS RESET CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

3.3.4 Common SCSI I/O Command Building Routines

This section describes the common SCSI/CAM peripheral device driver SCSI I/O command build and send routines. Table 3-7 lists the name of the routine and gives a summary description of its function. The sections that follow contain a more detailed description of each routine.

Table 3-7: Common SCSI I/O Command Building Routines

Routine	Summary Description
<code>ccmn_tur</code>	creates a SCSI I/O CCB for the TEST UNIT READY command and sends it to the XPT for processing
<code>ccmn_start_unit</code>	creates a SCSI I/O CCB for the START UNIT command and sends it to the XPT for processing
<code>ccmn_mode_select</code>	creates a SCSI I/O CCB for the MODE SELECT command and sends it to the XPT for processing

3.3.4.1 The `ccmn_tur` Routine

The `ccmn_tur` routine creates a SCSI I/O CCB for the TEST UNIT READY command and sends it to the XPT for processing. This routine may be called from interrupt context since it will not wait (sleep) for the command to complete.

The `ccmn_tur` routine calls the `ccmn_io_ccb_bld` routine to obtain a SCSI I/O CCB structure. The `ccmn_tur` routine calls the `ccmn_send_ccb` routine to send the SCSI I/O CCB to the XPT.

3.3.4.2 The `ccmn_start_unit` Routine

The `ccmn_start_unit` routine creates a SCSI I/O CCB for the START UNIT command and sends it to the XPT for processing. This routine may be called from interrupt context since it will not wait (sleep) for the command to complete.

The `ccmn_start_unit` routine calls the `ccmn_io_ccb_bld` routine to obtain a SCSI I/O CCB structure. The `ccmn_start_unit` routine calls the `ccmn_send_ccb` routine to send the SCSI I/O CCB to the XPT.

3.3.4.3 The `ccmn_mode_select` Routine

The `ccmn_mode_select` routine creates a SCSI I/O CCB for the MODE SELECT command and sends it to the XPT for processing. This routine may be called from interrupt context since it will not wait (sleep) for the command to complete. The routine calls the `ccmn_io_ccb_bld` routine to obtain a SCSI I/O CCB structure. It uses the `ms_index` parameter to index into the Mode Select Table pointed to by the `dd_modsel_tbl` member of the Device Descriptor Structure for the SCSI device. The `ccmn_mode_select` routine calls the `ccmn_send_ccb` routine to send the SCSI I/O CCB to the XPT.

3.3.5 Common CCB Status Routine

This section describes the common SCSI/CAM peripheral device driver CCB status routine. The `ccmn_ccb_status` routine assigns individual CAM status values to generic categories. The following table shows the returned category for each CAM status value:

CAM Status	Assigned Category
<code>CAM_REQ_INPROG</code>	<code>CAT_INPROG</code>
<code>CAM_REQ_CMP</code>	<code>CAT_CMP</code>
<code>CAM_REQ_ABORTED</code>	<code>CAT_ABORT</code>
<code>CAM_UA_ABORT</code>	<code>CAT_ABORT</code>
<code>CAM_REQ_CMP_ERR</code>	<code>CAT_CMP_ERR</code>
<code>CAM_BUSY</code>	<code>CAT_BUSY</code>
<code>CAM_REQ_INVALID</code>	<code>CAT_CCB_ERR</code>
<code>CAM_PATH_INVALID</code>	<code>CAT_NO_DEVICE</code>
<code>CAM_DEV_NOT_THERE</code>	<code>CAT_NO_DEVICE</code>
<code>CAM_UA_TERMIO</code>	<code>CAT_ABORT</code>
<code>CAM_SEL_TIMEOUT</code>	<code>CAT_DEVICE_ERR</code>
<code>CAM_CMD_TIMEOUT</code>	<code>CAT_DEVICE_ERR</code>
<code>CAM_MSG_REJECT_REC</code>	<code>CAT_DEVICE_ERR</code>
<code>CAM_SCSI_BUS_RESET</code>	<code>CAT_RESET</code>
<code>CAM_UNCOR_PARITY</code>	<code>CAT_DEVICE_ERR</code>
<code>CAM_AUTOSENSE_FAIL</code>	<code>CAT_BAD_AUTO</code>
<code>CAM_NO_HBA</code>	<code>CAT_NO_DEVICE</code>

CAM Status	Assigned Category
CAM_DATA_RUN_ERR	CAT_DEVICE_ERR
CAM_UNEXP_BUSFREE	CAT_DEVICE_ERR
CAM_SEQUENCE_FAIL	CAT_DEVICE_ERR
CAM_CCB_LEN_ERR	CAT_CCB_ERR
CAM_PROVIDE_FAIL	CAT_CCB_ERR
CAM_BDR_SENT	CAT_RESET
CAM_REQ_TERMIO	CAT_ABORT
CAM_LUN_INVALID	CAT_NO_DEVICE
CAM_TID_INVALID	CAT_NO_DEVICE
CAM_FUNC_NOTAVAIL	CAT_CCB_ERR
CAM_NO_NEXUS	CAT_NO_DEVICE
CAM_IID_INVALID	CAT_NO_DEVICE
CAM_SCSI_BUSY	CAT_SCSI_BUSY
Other	CAT_UNKNOWN

3.3.6 Common Buf Structure Pool Management Routines

This section describes the common SCSI/CAM peripheral device driver buf structure pool allocation and deallocation routines.

3.3.6.1 The `ccmn_get_bp` Routine

The `ccmn_get_bp` routine allocates a buf structure. This function must not be called at interrupt context. The function may sleep waiting for resources.

3.3.6.2 The `ccmn_rel_bp` Routine

The `ccmn_rel_bp` routine deallocates a buf structure.

3.3.7 Common Data Buffer Pool Management Routines

This section describes the common SCSI/CAM peripheral device driver data buffer pool allocation and deallocation routines.

3.3.7.1 The `ccmn_get_dbuf` Routine

The `ccmn_get_dbuf` routine allocates a data buffer area of the size specified by calling the kernel memory allocation routines .

3.3.7.2 The `ccmn_rel_dbuf` Routine

The `ccmn_rel_dbuf` routine deallocates a data buffer.

3.3.8 Miscellaneous Common Routines

This section describes the common SCSI/CAM peripheral device driver routines that perform miscellaneous operations. Table 3-8 lists the name of each routine and gives a summary description of its function.

Table 3-8: Miscellaneous Common Routines

Routine	Summary Description
<code>ccmn_ccbwait</code>	sleeps waiting for a SCSI I/O CCB request to complete
<code>ccmn_DoSpecialCmd</code>	provides a simplified interface to the special command routine
<code>ccmn_SysSpecialCmd</code>	lets a system request issue SCSI I/O commands to the SCSI/CAM special I/O interface
<code>ccmn_errlog</code>	reports error conditions for the SCSI/CAM peripheral device driver

3.3.8.1 The `ccmn_ccbwait` Routine

The `ccmn_ccbwait` routine sleeps waiting for a SCSI I/O CCB request to complete. If the priority is greater than PZERO, the `ccmn_ccbwait` routine sleeps at an interruptible priority in order to catch signals.

3.3.8.2 The `ccmn_DoSpecialCmd` Routine

The `ccmn_DoSpecialCmd` routine provides a simplified interface to the special command routine. The routine prepares for and issues special commands.

3.3.8.3 The `ccmn_SysSpecialCmd` Routine

The `ccmn_SysSpecialCmd` routine lets a system request issue SCSI I/O commands to the SCSI/CAM special I/O interface. This permits existing SCSI commands to be issued from within kernel code.

3.3.8.4 The `ccmn_errlog` Routine

The `ccmn_errlog` routine reports error conditions for the SCSI/CAM peripheral device driver. The routine is passed a pointer to the name of the function in which the error was detected. The routine builds informational strings based on the error condition.

This chapter describes the generic data structures and routines provided by Digital for SCSI/CAM peripheral device driver writers. The generic data structures and routines can be used as templates for SCSI/CAM peripheral device drivers to interface with the CAM subsystem to perform standard I/O operations. See Chapter 12 for a description of the SCSI/CAM special I/O interface, which processes special I/O control commands that are not issued to the device through the standard driver entry points.

The generic routines use the common SCSI/CAM peripheral device driver routines described in Chapter 3. Using the common and generic routines helps ensure that SCSI/CAM peripheral device drivers are consistent with the ULTRIX SCSI/CAM Architecture. See Chapter 11 if you plan to define your own SCSI/CAM peripheral device drivers.

4.1 Prerequisites for Using the CAM Generic Routines

The generic device driver routines use the common routines and data structures supplied by Digital. See Chapter 3 for information about how to use the common data structures and routines.

The following routines must be called with the Peripheral Device Structure locked:

- `ccmn_send_ccb`
- `ccmn_abort_que`
- `ccmn_term_que`

4.1.1 ioctl Commands

The writer of a generic SCSI/CAM peripheral device driver has two options for implementing `ioctl` commands within the driver:

- Use the `ioctl` commands that are already defined in `/usr/sys/h/ioctl.h` and implement those that are appropriate for the type of device.
- Create new `ioctl` definitions by modifying the `/usr/sys/h/ioctl.h` file to reflect the new `ioctl` definitions and to implement the new `ioctl` commands within the driver. See the *Guide to Writing and Porting VMEbus and TURBOchannel Device Drivers* for more information.

It is possible that conflicts with future releases of the operating system may result when new `ioctl` commands are implemented.

See Chapter 12 for information about the SCSI/CAM special I/O interface to handle SCSI special I/O commands.

4.1.2 Error Handling

The writer of the device driver is responsible for all error handling within the driver and for notifying the user process of the error.

4.1.3 Kernel Interface

The kernel entry points for any device driver are defined for both character and block devices in the structures `cdevsw` and `bdevsw` defined in the `/usr/sys/h/conf.h` file. The kernel entry points are implemented in the `cdevsw` and `bdevsw` switch tables in the `/usr/sys/machine/common/conf.c` file. If the device driver does not implement a specific kernel entry point, then the corresponding entries in the `cdevsw` and `bdevsw` switch tables must be null. See the *Guide to Writing and Porting VMEbus and TURBOchannel Device Drivers* for more information.

4.2 Data Structures Used by Generic Routines

This section describes the generic data structures programmers adapt when they write their own SCSI/CAM peripheral device drivers. The following data structures are described:

- `CGEN_SPECIFIC`, the Generic-Specific Structure
- `CGEN_ACTION`, the Generic Action Structure

4.2.1 The Generic-Specific Structure

A SCSI/CAM peripheral device structure, `CGEN_SPECIFIC`, is defined for the device controlled by the driver. The `CGEN_SPECIFIC` structure is defined as follows:

```
typedef generic_specific struct {
    u_long  gen_flags;      /* flags - EOM, write locked */
    u_long  gen_state_flags; /* STATE - UNIT_ATTEN, RESET etc. */
    u_long  gen_resid;     /* Last operation residual count */
}CGEN_SPECIFIC;
```

4.2.1.1 The `gen_flags` Member

The `gen_flags` member is used to indicate certain conditions of the SCSI unit. The possible flags are:

Flag Name	Description
<code>CGEN_EOM</code>	The unit is positioned at the end of media.
<code>CGEN_OFFLINE</code>	The device is returning <code>DEVICE NOT READY</code> in response to a command. The media is either not loaded or is being loaded.
<code>CGEN_WRT_PROT</code>	The unit is either write protected or is opened read only.
<code>CGEN_SOFTERR</code>	A soft error has been reported by the SCSI unit.

Flag Name	Description
CGEN_HARDERR	A hard error has been reported by the SCSI unit. It can be reported either through an <code>ioctl</code> or by marking the <code>buf</code> structure as EIO.

4.2.1.2 The `gen_state_flags` Member

The `gen_state_flags` member is used to indicate certain states of the driver and of the SCSI unit. The possible flags are:

Flag Name	Description
CGEN_NOT_READY_STATE	The unit was opened with the <code>FNDELAY</code> flag and the unit had a failure during the open, but was seen.
CGEN_UNIT_ATTEN_STATE	A check condition occurred and the sense key was <code>UNIT ATTENTION</code> . This usually indicates that a media change has occurred, but it could indicate power up or reset. Either way, current settings are lost.
CGEN_RESET_STATE	Indicates notification of a reset condition on the device or bus.
CGEN_RESET_PENDING_STATE	A reset is pending.
CGEN_OPENED_STATE	The unit is opened.

4.2.1.3 The `gen_resid` Member

The `gen_resid` member contains the residual byte count from the last operation.

4.2.2 The Generic Action Structure

The SCSI/CAM peripheral device structure, `CGEN_ACTION`, is passed to the generic driver's action routines to be filled in according to the success or failure of the command. The `CGEN_ACTION` structure is defined as follows:

```
typedef struct generic_action {
    CCB_SCSIIO    *act_ccb;          /* The CCB that is returned to caller */
    long          act_ret_error;     /* Error code if any */
    u_long        act_fatal;        /* Is this considered fatal? */
    u_long        act_ccb_status;    /* The CCB status code */
    u_long        act_scsi_status;   /* The SCSI error code */
    u_long        act_chkcond_error; /* The check condition error */
}CGEN_ACTION;
```

4.2.2.1 The `act_ccb` Member

The `act_ccb` member is a pointer to the SCSI I/O CCB returned to the calling routine.

4.2.2.2 The `act_ret_error` Member

The `act_ret_error` contains the error code, if any, returned from the operation.

4.2.2.3 The `act_fatal` Member

The `act_fatal` indicates whether an error returned was fatal. The possible flags are:

Flag Name	Description
<code>ACT_FAILED</code>	The action has failed.
<code>ACT_RESOURCE</code>	Memory availability problem.
<code>ACT_PARAMETER</code>	An invalid parameter was passed.
<code>ACT_RETRY_EXCEEDED</code>	The maximum retry count for the operation has been exceeded.

4.2.2.4 The `act_ccb_status` Member

The `act_ccb_status` member indicates the CAM generic category code for the CCB that was returned from the `ccmn_ccb_status` routine.

4.2.2.5 The `act_scsi_status` Member

The `act_scsi_status` member indicates the SCSI status code if the CCB completed with an error status. The SCSI status codes are defined in the `/usr/sys/h/scsi_status.h` file.

4.2.2.6 The `act_chkcond_error` Member

The `act_chkcond_error` member contains the check condition code returned from the `cgen_ccb_chkcond` routine, if the `cam_scsi_status` member of the SCSI I/O CCB is equal to `SCSI_STAT_CHECK_CONDITION`. The Check Condition codes are defined in the `/usr/sys/h/cam_generic.h` file.

4.3 Generic I/O Routines

The generic routines described in this section handle open, close, read, write, and other I/O requests from user processes. Table 4-1 lists the name of each routine and gives a short description of its function. Descriptions of the routines with syntax information, in ULTRIX reference page format, are included in alphabetical order in Appendix C.

Table 4-1: Generic I/O Routines

Routine	Summary Description
<code>cgen_open</code>	called by the kernel when a user process requests an open of the device
<code>cgen_close</code>	closes the device

Table 4-1: (continued)

Routine	Summary Description
<code>cgen_read</code>	handles synchronous read requests for user processes
<code>cgen_write</code>	handles synchronous write requests for user processes
<code>cgen_strategy</code>	handles all I/O requests for user processes
<code>cgen_ioctl</code>	handles user process requests for specific actions other than read, write, open, or close for SCSI tape devices

4.3.1 The `cgen_open` Routine

The `cgen_open` routine is called by the kernel when a user process requests an open of the device. The `cgen_open` routine calls the `ccmn_open_unit` routine, which manages the `SMP_LOCKS` and, if passed the exclusive use flag for SCSI devices, makes sure that no other process has opened the device. If the `ccmn_open_unit` routine returns success, the necessary data structures are allocated.

The `cgen_open` routine calls the `ccmn_sasy_ccb_bld` routine to register for asynchronous event notification for the device. The `cgen_open` routine then enters a `for` loop based on the power-up time specified in the Device Descriptor Structure for the device. Within the loop, calls are made to the `cgen_ready` routine, which calls the `ccmn_tur` routine to issue a TEST UNIT READY command to the device.

The `cgen_open` routine calls the `ccmn_rel_ccb` routine to release the CCB. The `cgen_open` routine checks certain state flags for the device to decide whether to send the initial SCSI mode select pages to the device. Depending on the setting of the state flags `CGEN_UNIT_ATTEN_STATE` and `CGEN_RESET_STATE`, the `cgen_open` routine calls the `cgen_open_sel` routine for each mode select page to be sent to the device. The `cgen_open_sel` routine fills out the Generic Action Structure based on the completion status of the CCB for each mode select page it sends.

4.3.2 The `cgen_close` Routine

The `cgen_close` routine closes the device. The routine checks any device flags that are defined to see if action is required, such as rewind on close or release the unit. The `cgen_close` closes the device by calling the `ccmn_close_unit` routine.

4.3.3 The `cgen_read` Routine

The `cgen_read` routine handles synchronous read requests for user processes. It passes the user process requests to the `cgen_strategy` routine. The `cgen_read` routine calls the `ccmn_get_bp` routine to allocate a `buf` structure for the user process read request. When the I/O is complete, the `cgen_read` routine calls the `ccmn_rel_bp` routine to deallocate the `buf` structure.

4.3.4 The `cgen_write` Routine

The `cgen_write` routine handles synchronous write requests for user processes. The routine passes the user process requests to the `cgen_strategy` routine. The `cgen_write` routine calls the `ccmn_get_bp` routine to allocate a `buf` structure for the user process write request. When the I/O is complete, the `cgen_write` routine calls the `ccmn_rel_bp` routine to deallocate the `buf` structure.

4.3.5 The `cgen_strategy` Routine

The `cgen_strategy` routine handles all I/O requests for user processes. It performs specific checks, depending on whether the request is synchronous or asynchronous and on the SCSI device type. The `cgen_strategy` routine calls the `ccmn_io_ccb_bld` routine to obtain an initialized SCSI I/O CCB and build either a read or a write command based on the information contained in the `buf` structure. The `cgen_strategy` routine then calls the `ccmn_send_ccb` to place the CCB on the active queue and send it to the XPT layer.

4.3.6 The `cgen_ioctl` Routine

The `cgen_ioctl` routine handles user process requests for specific actions other than read, write, open, or close for SCSI tape devices. The routine currently issues a `DE_IOCTLGET ioctl` command for the device, which fills out the `devget` structure passed in, and then calls the `cgen_mode_sns` routine which issues a `SCSI_MODE_SENSE` to the device to determine the device's state. The routine then calls the `ccmn_rel_ccb` routine to release the CCB. When the call to `cgen_mode_sns` completes, the `cgen_ioctl` routine fills out the rest of the `devget` structure based on information contained in the mode sense data.

4.4 Generic Internal Routines

The generic routines described in this section are examples that show one method of handling errors, events, and conditions. SCSI/CAM peripheral device driver writers must implement routines for handling errors, events, and conditions that are compatible with the design and the functionality of the specific device. Table 4-2 lists the name of each routine and gives a short description of its function. Descriptions of the routines with syntax information, in ULTRIX reference page format, are included in alphabetical order in Appendix C.

Table 4-2: Generic Internal Routines

Routine	Summary Description
<code>cgen_ccb_chkcond</code>	decodes the autosense data for a device driver
<code>cgen_done</code>	the entry point for all nonread and nonwrite I/O callbacks
<code>cgen_iodone</code>	the entry point for all read and write I/O callbacks
<code>cgen_async</code>	handles notification of asynchronous events
<code>cgen_minphys</code>	compares the <code>b_bcount</code> with the maximum transfer limit for the device
<code>cgen_slave</code>	called at system boot to initialize the lower levels
<code>cgen_attach</code>	called for each bus, target, and LUN after the <code>cgen_slave</code> routine returns SUCCESS

4.4.1 The `cgen_ccb_chkcond` Routine

The `cgen_ccb_chkcond` routine decodes the autosense data for a device driver and returns the appropriate status to the calling routine. The routine is called when a SCSI I/O CCB is returned with a CAM status of `CAM_REQ_CMP_ERR` (request completed with error) and a SCSI status of `SCSI_STAT_CHECK_CONDITION`. The routine also sets the appropriate flags in the Generic-Specific Structure.

4.4.2 The `cgen_done` Routine

The `cgen_done` routine is the the entry point for all nonread and nonwrite I/O callbacks. The generic device driver uses two callback entry points, one for all nonuser I/O requests and one for all user I/O requests. The SCSI/CAM peripheral device driver writer can declare multiple callback routines for each type of command and can fill the CCB with the address of the appropriate callback routine.

This is a generic routine for all nonread and nonwrite SCSI I/O CCBs. The SCSI I/O CCB should not contain a pointer to a `buf` structure in the `cam_req_map` member of the structure. If it does, then a wake-up call is issued on the address of the CCB and the error is reported. If the SCSI I/O CCB does not contain a pointer to a `buf` structure in the `cam_req_map` member, then a wake-up call is issued on the address of the CCB and the CCB is removed from the active queues. No CCB completion status is checked because that is the responsibility of the routine that created the CCB and is waiting for completion status. When this routine is entered, context is on the interrupt stack and the driver cannot sleep waiting for an event.

4.4.3 The `cgen_iodone` Routine

The `cgen_iodone` routine is the entry point for all read and write I/O callbacks. This is a generic routine for all read and write SCSI I/O CCBs. The SCSI I/O CCB should contain a pointer to a `buf` structure in the `cam_req_map` member of the structure. If it does not, then a wake-up call is issued on the address of the CCB and the error is reported. If the SCSI I/O CCB does contain a pointer to a `buf` structure in the `cam_req_map` member, as it should, then the completion status is decoded. Depending on the CCB's completion status, the correct fields within the `buf` structure are filled out.

The device's active queues may need to be aborted because of errors or because the device is a sequential access device and the transaction was an asynchronous request.

The CCB is removed from the active queues by a call to the `ccmn_rem_ccb` routine and is released back to the free CCB pool by a call to the `ccmn_rel_ccb` routine. When the `cgen_iodone` routine is entered, context is on the interrupt stack and the driver cannot sleep waiting for an event.

4.4.4 The `cgen_async` Routine

The `cgen_async` routine handles notification of asynchronous events. The routine is called when an Asynchronous Event Notification(AEN), Bus Device Reset (BDR), or Bus Reset (BR) occurs. The routine sets the `CGEN_RESET_STATE` flag and clears the `CGEN_RESET_PEND_STATE` flag for BDRs and bus resets. The routine sets the `CGEN_UNIT_ATTEN_STATE` flag for AENs.

4.4.5 The `cgen_minphys` Routine

The `cgen_minphys` routine compares the `b_bcount` with the maximum transfer limit for the device. The routine compares the `b_bcount` field in the `buf` structure with the maximum transfer limit for the device in the Device Descriptor Structure. The count is adjusted if it is greater than the limit.

4.4.6 The `cgen_slave` Routine

The `cgen_slave` routine is called at system boot to initialize the lower levels. The routine also checks the bounds for the unit number to ensure it is within the allowed range and sets the device-configured bit for the device at the specified bus, target, and LUN.

4.4.7 The `cgen_attach` Routine

The `cgen_attach` routine is called for each bus, target, and LUN after the `cgen_slave` routine returns SUCCESS. The routine calls the `ccmn_open_unit` routine, passing the bus, target, and LUN information.

The `cgen_attach` routine calls the `ccmn_close_unit` routine to close the device. If a device of the specified type is found, the device identification string is printed. See the *Guide to Writing and Porting VMEbus and TURBOchannel Device Drivers* for more information.

4.5 Generic Command Support Routines

The generic routines described in this section are SCSI/CAM command support routines. Table 4-3 lists the name of each routine and gives a short description of its function. Descriptions of the routines with syntax information, in ULTRIX reference page format, are included in alphabetical order in Appendix C.

Table 4-3: Generic Command Support Routines

Routine	Summary Description
<code>cgen_ready</code>	issues a TEST UNIT READY command to the unit defined
<code>cgen_open_sel</code>	issues a SCSI_MODE_SELECT command to the SCSI device
<code>cgen_mode_sns</code>	issues a SCSI_MODE_SENSE command to the unit defined

4.5.1 The `cgen_ready` Routine

The `cgen_ready` routine issues a TEST UNIT READY command to the unit defined. The routine calls the `ccmn_tur` routine to issue the TEST UNIT READY command and sleeps waiting for command status.

4.5.2 The `cgen_open_sel` Routine

The `cgen_open_sel` routine issues a `SCSI_MODE_SELECT` command to the SCSI device. The mode select data sent to the device is based on the data contained in the Mode Select Table Structure for the device, if one is defined. The `CGEN_ACTION` structure is filled in for the calling routine based on the completion status of the CCB.

The `cgen_open_sel` routine calls the `ccmn_mode_select` routine to create a SCSI I/O CCB and send it to the XPT for processing.

4.5.3 The `cgen_mode_sns` Routine

The `cgen_mode_sns` routine issues a `SCSI_MODE_SENSE` command to the unit defined. The `CGEN_ACTION` structure is filled in for the calling routine based on the completion status of the CCB.

Data structures are the mechanism used to pass information between peripheral device drivers and the CAM subsystem. This chapter describes the CAM data structures used by peripheral device drivers.

Specifically, the chapter discusses the following:

- CAM Control Blocks (CCB)
- Input/Output (I/O) data structures
- Control CCB structures
- Configuration data structures

Other chapters reference these structures. You can read this chapter now to become familiar with the structures, or you can refer to it when you encounter references to the structures in other chapters.

5.1 CAM Control Blocks

The CAM Control Block (CCB) data structures let the device driver writer specify the action to be performed by the XPT and SIM. The CCBs are allocated by calling the `xpt_ccb_alloc` routine.

Table 5-1 contains the name of each CCB data structure and a brief description of its purpose.

Table 5-1: CAM Control Blocks

CCB Name	Description
CCB_SCSIIO	Requests SCSI I/O
CCB_GETDEV	Gets device type
CCB_PATHINQ	Sends a path inquiry
CCB_RELSIM	Releases SIM queue
CCB_SETASYNC	Sets asynchronous callback
CCB_SETDEV	Sets device type
CCB_ABORT	Aborts XPT request
CCB_RESETBUS	Resets SCSI bus
CCB_RESETDEV	Resets SCSI device
CCB_TERMIO	Terminates I/O process request

All CCBs contain a `CCB_HEADER` structure. Peripheral device driver writers need to understand the `CCB_HEADER` data structure, which is discussed in the section that follows.

5.1.1 The CCB_HEADER Structure

SCSI/CAM peripheral device driver writers allocate a CCB structure by calling the `xpt_ccb_alloc` routine. The `CCB_HEADER` structure is common to all CCBs and is the first structure filled in. It contains the following members:

```
typedef struct ccb_header
{
    struct ccb_header *my_addr; /* The address of this CCB */
    u_short cam_ccb_len;      /* Length of the entire CCB */
    u_char cam_func_code;     /* XPT function code */
    u_char cam_status;       /* Returned CAM subsystem */
                             /* status */
    u_char cam_path_id;      /* Path ID for the request */
    u_char cam_target_id;    /* Target device ID */
    u_char cam_target_lun;   /* Target LUN number */
    u_long cam_flags;        /* Flags for operation of */
                             /* the subsystem */
} CCB_HEADER;
```

5.1.1.1 The my_addr and cam_ccb_len Members

The `my_addr` member is set to a pointer to the virtual address of the starting address of the CAM Control Block (CCB). It is automatically filled in by the `xpt_ccb_alloc` routine.

The `cam_ccb_len` member is set to the length in bytes of this specific CCB type. This field is filled in by the `ccmn_get_ccb` routine. The length includes the `my_addr` and `cam_ccb_len` members.

5.1.1.2 The cam_func_code Member

The `cam_func_code` member lets device-driver writers specify the CCB type XPT/SIM functions. Device-driver writers can set this member to one of the function codes listed in Table 5-2.

Table 5-2: CAM Function Codes

Function Code	Meaning
XPT_NOOP	Do not execute anything in the XPT/SIM.
XPT_SCSI_IO	Execute the requested SCSI I/O. Specify the details of the SCSI I/O by setting the appropriate members of the <code>CCB_SCSIIO</code> structure.
XPT_GDEV_TYPE	Get the device type information. Obtain this information by referencing the <code>CCB_GETDEV</code> structure.
XPT_PATH_INQ	Get the path inquiry information. Obtain this information by referencing the <code>CCB_PATHINQ</code> structure.
XPT_REL_SIMQ	Release the SIM queue that is frozen.
XPT_ASYNC_CB	Set the asynchronous callback parameters. Obtain asynchronous callback information from the <code>CCB_SETASYNC</code> structure.
XPT_SDEV_TYPE	Set the device type information. Obtain the device type information from the <code>CCB_SETDEV</code> structure.

Table 5-2: (continued)

Function Code	Meaning
XPT_ABORT	Abort the specified CCB. Specify the abort to the CCB by setting the appropriate member of the CCB_ABORT structure.
XPT_RESET_BUS	Reset the SCSI bus.
XPT_RESET_DEV	Reset the SCSI device.
XPT_TERM_IO	Terminate the I/O process. Specify the CCB process to terminate by setting the appropriate member of the CCB_TERMIO structure.

5.1.1.3 The cam_status Member

The `cam_status` member is the action or event that occurred during this CAM Control Block (CCB) request. The `cam_status` member is set by the XPT/SIM after the specified function completes. A `CAM_REQ_INPROG` status indicates that either the function is still executing or is still in the queue. The XPT/SIM can set this member to one of the CAM status codes listed in Table 5-3

Table 5-3: CAM Status Codes

CAM Status Code	Meaning
CAM_REQ_INPROG	A CCB request is in progress.
CAM_REQ_CMP	A CCB request completed without errors.
CAM_REQ_ABORTED	A CCB request was aborted by the host processor.
CAM_REQ_UA_ABORT	The SIM was not able to abort the specified CCB.
CAM_REQ_CMP_ERR	The specified CCB request completed with an error.
CAM_BUSY	The CAM subsystem is busy. The CCB returns to the caller; the request must be resubmitted.
CAM_REQ_INVALID	The specified CCB request is not valid.
CAM_PATH_INVALID	The path ID specified in the <code>cam_path_id</code> member of the <code>CCB_HEADER</code> structure is not valid.
CAM_DEV_NOT_THERE	The specified SCSI device is not installed at this location.
CAM_UA_TERMIO	The CAM subsystem was unable to terminate the specified CCB I/O request.
CAM_SEL_TIMEOUT	A target-selection timeout occurred.
CAM_CMD_TIMEOUT	A command timeout occurred.
CAM_MSG_REJECT_REC	A message rejection was received by the SIM.
CAM_SCSI_BUS_RESET	The SCSI bus-reset was issued by the SIM or was seen on the bus by the SIM.
CAM_UNCOR_PARITY	An uncorrectable parity error occurred.
CAM_AUTOSENSE_FAIL	The autosense request-sense command failed.
CAM_NO_HBA	No HBA was detected.

Table 5-3: (continued)

CAM Status Code	Meaning
CAM_DATA_RUN_ERR	A data overflow or underflow error occurred.
CAM_UNEXP_BUSFREE	An unexpected bus free was detected.
CAM_SEQUENCE_FAIL	A target bus phase-sequence failure occurred.
CAM_CCB_LEN_ERR	The CCB length specified in the <code>cam_ccb_len</code> member of the <code>CCB_HEADER</code> structure is incorrect.
CAM_PROVIDE_FAIL	The requested capability could not be provided.
CAM_BDR_SENT	A SCSI BDR message was sent to the target.
CAM_REQ_TERMIO	The CCB request was terminated by the host.
CAM_SIM_QFRZN	The SIM queue is frozen.
CAM_AUTOSNS_VALID	Autosense data is valid for target.

5.2 I/O Data Structure

Peripheral device drivers make SCSI device action requests through the following data structures:

- The `CCB_SCSIIO` structure
- The `CDB_UN` structure

5.2.1 The `CCB_SCSIIO` Structure

A peripheral driver indicates to the XPT/SIM that it wants to make a SCSI device action request by setting the `cam_func_code` member of the `CCB_HEADER` structure to the constant `XPT_SCSI_IO`. The peripheral-driver writer then uses the `CCB_SCSIIO` structure to specify the requests.

The `CCB_SCSIIO` structure contains the following members:

```
typedef struct
{
    CCB_HEADER cam_ch; /* Header information fields */
    u_char *cam_pdrv_ptr; /* Ptr to the Peripheral driver */
                        /* working set */
    CCB_HEADER *cam_next_ccb; /* Ptr to the next CCB for action */
    u_char *cam_req_map; /* Ptr for mapping info on the Req. */
    void (*cam_cbfcnp)(); /* Callback on completion function */
    u_char *cam_data_ptr; /* Pointer to the data buf/SG list */
    u_long cam_dxfer_len; /* Data xfer length */
    u_char *cam_sense_ptr; /* Pointer to the sense data buffer */
    u_char cam_sense_len; /* Num of bytes in the Autosense buf */
    u_char cam_cdb_len; /* Number of bytes for the CDB */
    u_short cam_sglist_cnt; /* Num of scatter/gather list entries */
    u_long cam_osd_rsvd0; /* OSD Reserved field, for alignment */
    long cam_resid; /* Transfer residual length: 2's comp */
    CDB_UN cam_cdb_io; /* Union for CDB bytes/pointer */
    u_long cam_timeout; /* Timeout value */
    u_char *cam_msg_ptr; /* Pointer to the message buffer */
    u_short cam_msgb_len; /* Num of bytes in the message buf */
    u_short cam_vu_flags; /* Vendor unique flags */
    u_char cam_tag_action; /* What to do for tag queuing */

```

```

    u_char cam_iorsvd0[3];      /* Reserved field, for alignment */
    u_char cam_sim_priv[ SIM_PRIV ]; /* SIM private data area */
} CCB_SCSIIIO;

```

5.2.2 The CDB_UN Structure

The CDB_UN structure contains:

```

typedef union
{
    u_char *cam_cdb_ptr;          /* Pointer to the CDB bytes to send */
    u_char cam_cdb_bytes[ IOCDBLEN ]; /* Area for the inline CDB to send */
} CDB_UN;

```

5.3 Control CCB Structures

The control CCB structures allow the driver writer to specify such tasks as resetting the SCSI bus, terminating an I/O process request, and so forth. This section discusses the following control structures:

- CCB_RELSIM
- CCB_SETASYNC
- CCB_ABORT
- CCB_RESETBUS
- CCB_RESETDEV
- CCB_TERMIO

These structures are discussed in the sections that follow.

5.3.1 The CCB_RELSIM Structure

Device-driver writers use the CCB_RELSIM structure to release the SIM's internal CCB queue. The CCB_RELSIM structure contains:

```

typedef struct
{
    CCB_HEADER cam_ch;          /* Header information fields */
} CCB_RELSIM;

```

5.3.2 The CCB_SETASYNC Structure

SCSI/CAM peripheral device driver writers use the CCB_SETASYNC structure to set the asynchronous callback for notification of the following events when they occur:

- Unsolicited SCSI BUS DEVICE RESET (BDR)
- Unsolicited RESELECTION
- SCSI AEN (asynchronous event notification enabled)
- Sent BDR to target
- SIM module loaded

- SIM module unloaded
- New devices found

The `CCB_SETASYNC` structure is defined as follows:

```
typedef struct
{
    CCB_HEADER cam_ch;           /* Header information fields */
    u_long cam_async_flags;     /* Event enables for Callback response */
    void (*cam_async_func)();   /* Async Callback function address */
    u_char *pdrv_buf;          /* Buffer set aside by the */
                               /* peripheral driver */
    u_char pdrv_buf_len;       /* The size of the buffer */
} CCB_SETASYNC;
```

5.3.3 The CCB_ABORT Structure

Device-driver writers use the `CCB_ABORT` structure to abort a CCB that is on the SIM queue. The `CCB_ABORT` structure contains:

```
typedef struct
{
    CCB_HEADER cam_ch;           /* Header information fields */
    CCB_HEADER *cam_abort_ch;   /* Pointer to the CCB to abort */
} CCB_ABORT;
```

5.3.4 The CCB_RESETBUS Structure

Device-driver writers use the `CCB_RESETBUS` structure to reset the SCSI bus. The `CCB_RESETBUS` structure is defined as follows:

```
typedef struct
{
    CCB_HEADER cam_ch;           /* Header information fields */
} CCB_RESETBUS;
```

5.3.5 The CCB_RESETDEV Structure

Device-driver writers use the `CCB_RESETDEV` structure to reset a single SCSI device. The `CCB_RESETDEV` structure is defined as follows:

```
typedef struct
{
    CCB_HEADER cam_ch;           /* Header information fields */
} CCB_RESETDEV;
```

5.3.6 The CCB_TERMIO Structure

Device-driver writers use the `CCB_TERMIO` structure to terminate an I/O process request. The `CCB_TERMIO` structure is defined as follows:

```
typedef struct
{
    CCB_HEADER cam_ch;           /* Header information fields */
    CCB_HEADER *cam_termio_ch;  /* Pointer to the CCB to terminate */
} CCB_TERMIO;
```

5.4 Configuration CCB Structures

The configuration CCB structures let the driver writer obtain information such as the device type, version number for the SIM/HBA, and vendor IDs. The following configuration CCBs are described in this section:

- The CCB_GETDEV structure
- The CCB_SETDEV structure
- The CCB_PATHINQ structure

These structures are discussed in the following sections.

5.4.1 The CCB_GETDEV Structure

Device-driver writers use the CCB_GETDEV structure to obtain a device type and inquiry information. The CCB_GETDEV structure is defined as follows:

```
typedef struct
{
    CCB_HEADER cam_ch;           /* Header information fields */
    u_char cam_pd_type;         /* Peripheral device type from the TLUN */
    char *cam_inq_data;         /* Ptr to the inquiry data space */
} CCB_GETDEV;
```

5.4.2 The CCB_SETDEV Structure

Device-driver writers use the CCB_SETDEV structure to set the device type. The CCB_SETDEV structure is defined as follows:

```
typedef struct
{
    CCB_HEADER cam_ch;           /* Header information fields */
    u_char cam_dev_type;         /* Value for the dev type field in EDT */
} CCB_SETDEV;
```

5.4.3 The CCB_PATHINQ Structure

Device-driver writers use the CCB_PATHINQ structure to obtain SIM information such as supported features and version numbers. The CCB_PATHINQ structure is defined as follows:

```
typedef struct
{
    CCB_HEADER cam_ch;           /* Header information fields */
    u_char cam_version_num;       /* Version number for the SIM/HBA */
    u_char cam_hba_inquiry;       /* Mimic of INQ byte 7 for the HBA */
    u_char cam_target_sprt;       /* Flags for target mode support */
    u_char cam_hba_misc;          /* Misc HBA feature flags */
    u_char cam_vuhba_flags[ VUHBA ]; /* Vendor unique capabilities */
    u_long cam_sim_priv;          /* Size of SIM private data area */
    u_long cam_async_flags;       /* Event cap. for Async Callback */
    u_char cam_hpath_id;          /* Highest path ID in the subsystem */
    u_char cam_initiator_id;       /* ID of the HBA on the SCSI bus */
    char cam_sim_vid[ SIM_ID ];   /* Vendor ID of the SIM */
    char cam_hba_vid[ HBA_ID ];   /* Vendor ID of the HBA */
    u_char *cam_osd_usage;        /* Ptr for the OSD specific area */
} CCB_PATHINQ;
```


This chapter describes the data structures and routines used by the Configuration driver to interface with the CAM subsystem. It also describes the `/usr/sys/io/cam/cam_config.c` file, which contains SCSI/CAM peripheral device driver configuration information. SCSI/CAM peripheral device driver writers add to this file external declarations and entries to the SCSI/CAM peripheral driver configuration table for their peripheral device drivers.

6.1 Configuration Driver Introduction

The Configuration driver dynamically initializes the XPT and SIM layers of the CAM subsystem, at run time. This enables support for a generic kernel that is configured for all processors and all CAM subsystem software, for example, all HBA drivers. After initialization is complete, the Configuration driver scans the SCSI bus and stores INQUIRY information about each SCSI device detected.

Once the CAM subsystem is initialized and the scanning information stored, the SCSI/CAM peripheral device drivers can use the subsystem. They can determine what devices have been detected and allocate memory appropriately. They can also request resources from the XPT layer using the `XPT_GDEV_TYPE` and `XPT_SDEV_TYPE` get and set device information CCBs.

The Configuration driver module logically exists in the SCSI/CAM peripheral device driver layer above the XPT.

6.2 Configuration Driver XPT Interface

The Configuration driver is responsible for supporting the following XPT routines:

- GET DEVICE TYPE CCB
- SET DEVICE TYPE CCB
- SET ASYNCHRONOUS CALLBACK CCB

The Configuration driver also supports the configuration and bus scanning for loaded SIM modules.

6.3 Configuration Driver Data Structures

This section describes the following Configuration driver data structures:

- `CCFG_CTRL` – The Configuration driver control structure
- `EDT` – The CAM equipment device table
- `CAM_PERIPHERAL_DRIVER` – The SCSI/CAM peripheral driver configuration structure

6.3.1 The Configuration driver control structure

The Configuration driver control structure, `CCFG_CTRL`, contains flags used by the Configuration driver for the scanning process. It also sets aside an area to contain the data returned from the INQUIRY CCBs during the initial scanning process. The structure is defined as follows:

```
typedef struct ccfg_ctrl
{
    u_long ccfg_flags;           /* controlling flags */
    ALL_INQ_DATA inq_buf;       /* scratch area for the INQUIRY data */
    struct lock_t c_lk_ctrl;     /* for locking on the control struct */
} CCFG_CTRL;
```

6.3.1.1 The `ccfg_flags` Member

The `ccfg_flags` member contains the flags used by the Configuration driver to control operations. The possible settings are as follows:

- `EDT_INSCAN` – Which signals that an EDT scan is in progress
- `INQ_INPROG` – Which indicates that an INQUIRY CCB is in progress

6.3.1.2 The `inq_buf` Member

The `inq_buf` member sets aside a working or temporary area to hold the returned data described in the standard INQUIRY structure, `ALL_INQ_DATA`, which is defined in the file `/usr/sys/h/scsi_all.h`.

6.3.2 The CAM Equipment Device Table

The Configuration driver works with the XPT to allocate, initialize, and maintain the CAM equipment device table structure, EDT. An EDT structure is allocated for each SCSI bus. The structure is an 8x8-element array that contains device inquiry information, asynchronous callback flags, and a signal flag if a device was found, based on the number of targets and the number of LUNs on the SCSI bus. The structure is defined as follows:

```
typedef struct edt
{
    CAM_EDT_ENTRY edt[ NDPS ][ NLPT ];           /* a layer for targets/LUNs */
    u_long edt_flags;                             /* flags for EDT access */
    u_long edt_scan_count;                         /* # of XPT ASYNC CB readers */
    struct lock_t c_lk_edt;                       /* for locking per bus */
} EDT;
```

6.3.2.1 The `edt` Member

The `edt` member is a structure of the type `CAM_EDT_ENTRY`, which is defined in the `/usr/sys/h/cam.h` file. Each `CAM_EDT_ENTRY` structure is an entry in the CAM equipment device table containing the SCSI ID and LUN for each device on the SCSI bus. The array dimensions are the number of devices per SCSI bus (NDPS) and the number of LUNs per target (NLPT). The structure and constants are defined in the `/usr/sys/h/dec_cam.h` file.

6.3.2.2 The `edt_scan_count` Member

The `edt_scan_count` member contains the number of processes reading the EDT structure.

6.3.2.3 The `edt_flags` Member

The `edt_flags` member sets the flags for controlling access to the CAM equipment device table.

6.3 The SCSI/CAM Peripheral Driver Configuration Structure

`CAM_PERIPHERAL_DRIVER`, the SCSI/CAM peripheral driver configuration structure, contains the name of the device and defines the routines that are accessed as part of the system configuration process. The structure is defined as follows:

```
typedef struct cam_peripheral_driver
{
    char          *cpd_name;
    int           (*cpd_slave)();
    int           (*cpd_attach)();
    int           (*cpd_unload)();
} CAM_PERIPHERAL_DRIVER;
```

6.3.3.1 The `cpd_name` Member

The `cpd_name` member is a pointer to the device name contained in the `ui_devname` member of the kernel data structure, `uba_device`. See the *Guide to Writing and Porting VMEbus and TURBOchannel Device Drivers* for more information.

6.3.3.2 The `cpd_slave` Member

The `cpd_slave` member is a function pointer to the SCSI/CAM peripheral device driver slave routine, which finds the device attached to the SCSI bus controller.

6.3.3.3 The `cpd_attach` Member

The `cpd_attach` member is a function pointer to the SCSI/CAM peripheral device driver attach routine, which attaches the device to the controller and initializes the driver fields for the device.

6.3.3.4 The `cpd_unload` Member

Not implemented.

6.4 The `cam_config.c` File

The Configuration driver file, `/usr/sys/io/cam/cam_config.c`, contains SCSI/CAM peripheral device driver configuration information. SCSI/CAM peripheral device driver writers edit the file, as the superuser, to add `extern` declarations for their hardware devices and to add entries for the devices to the SCSI/CAM peripheral driver configuration table.

The section of the file where the `extern` declarations are added looks like the

following:

```
extern int crzslave(), crzattach();      /* Disk Driver */
extern int ctzslave(), ctzattach();      /* Tape Driver */
extern int cczslave(), cczattach();      /* CD-ROM Driver */

/* VENDOR: Add the extern declarations for your hardware following this
   comment line. */
```

A sample declaration for third-party SCSI/CAM peripheral device driver might be as follows:

```
extern int toastslave(), toastattach();  /* Non-tape or -disk Driver */
```

The section of the file where the SCSI/CAM peripheral driver configuration table entries are added looks like the following:

```
/*
 * CAM Peripheral Driver Configuration Table.
 */
struct cam_peripheral_driver cam_peripheral_drivers[] = {
    { "crz", crzslave, crzattach },
    { "ctz", ctzslave, ctzattach },
    { "ccz", cczslave, cczattach }

/* VENDOR: Add your hardware entries following this comment line. */
};
```

When you add your entry, be sure to place a comma (,) after the last member in the structure supplied by Digital. A sample entry for third-party hardware might be as follows:

```
    { "ccz", cczslave, cczattach },

/* VENDOR: Add your hardware entries following this comment line. */
    { "wheat", toastslave, toastattach}, /* Non-tape or -disk Driver */
};
```

6.5 Configuration Driver Entry Point Routines

The following Configuration driver routines are entry point routines that are accessible to the XPT and SIM modules as part of the Configuration driver interface. Table 6-1 lists the name of each routine and gives a short description of its function. The sections that follow contain a more detailed description of each routine. Descriptions of the routines with syntax information, in ULTRIX reference page format, are included in alphabetical order in Appendix C.

Table 6-1: Configuration Driver Entry Point Routines

Routine	Summary Description
ccfg_slave	calls a SCSI/CAM peripheral driver's slave routine after a match on the cpd_name member of the CAM_PERIPHERAL_DRIVER structure is found
ccfg_attach	calls a SCSI/CAM peripheral driver's attach routine after a match on the cpd_name member of the CAM_PERIPHERAL_DRIVER structure is found

Table 6-1: (continued)

Routine	Summary Description
<code>ccfg_action</code>	calls the internal routines that handle any CCB that accesses the CAM equipment device table structure
<code>ccfg_edtscan</code>	issues SCSI INQUIRY commands to all possible SCSI targets and LUNs attached to the buses

6.5.1 The `ccfg_slave` Routine

The `ccfg_slave` routine calls a SCSI/CAM peripheral driver's slave routine after a match on the `cpd_name` member of the `CAM_PERIPHERAL_DRIVER` structure is found. The routine is called during autoconfiguration. The `ccfg_slave` routine locates the configured driver in the SCSI/CAM peripheral driver configuration table. If the driver is located successfully, the SCSI/CAM peripheral driver's slave routine is called with a pointer to the unit information structure for the device from the kernel `uba_device` structure and the virtual address of its control and status register (CSR). The SCSI/CAM peripheral driver's slave routine performs its own slave initialization.

6.5.2 The `ccfg_attach` Routine

The `ccfg_attach` routine calls a SCSI/CAM peripheral driver's attach routine after a match on the `cpd_name` member of the `CAM_PERIPHERAL_DRIVER` structure is found. The routine is called during autoconfiguration. The `ccfg_attach` routine locates the configured driver in the SCSI/CAM peripheral driver configuration table. If the driver is located successfully, the SCSI/CAM peripheral driver's attach routine is called with a pointer to the unit information structure for the device from the kernel `uba_device` structure. The SCSI/CAM peripheral driver's attach routine performs its own attach initialization.

6.5.3 The `ccfg_action` Routine

The `ccfg_action` routine calls the internal routines that handle any CCB that accesses the CAM equipment device table structure. The CAM function codes supported are `XPT_GDEV_TYPE`, `XPT_SASYNC_CB`, and `XPT_SDEV_TYPE`.

6.5.4 The `ccfg_edtscan` Routine

The `ccfg_edtscan` routine issues SCSI INQUIRY commands to all possible SCSI targets and LUNs attached to the buses. The routine uses the CAM subsystem in the normal manner by sending SCSI I/O CCBs to the SIMs. The INQUIRY data returned is stored in the EDT structures and the `cam_tlun_found` flag is set. This routine can be called by the SCSI/CAM peripheral device drivers to reissue a full, partial, or single bus scan command.

This chapter contains descriptions of the Transport (XPT) layer routines used by SCSI/CAM device driver writers. Table 7-1 contains a list of the routines with a short description of each. Following the table is a description of each routine. Descriptions of the routines with syntax information, in ULTRIX reference page format, are included in alphabetical order in Appendix C.

Table 7-1: XPT I/O Support Routines

Routine	Summary Description
<code>xpt_action</code>	calls the appropriate XPT/SIM routine
<code>xpt_ccb_alloc</code>	allocates a CAM Control Block (CCB)
<code>xpt_ccb_free</code>	frees a previously allocated CCB
<code>xpt_init</code>	validates the initialized state of the CAM subsystem

7.1 The `xpt_action` Routine

The `xpt_action` routine calls the appropriate XPT/SIM routine. The routine routes the specified CCB to the appropriate SIM module or to the Configuration driver, depending on the CCB type and on the path ID specified in the CCB. Vendor-unique CCBs are also supported. Those CCBs are passed to the appropriate SIM module according to the path ID specified in the CCB.

7.2 The `xpt_ccb_alloc` Routine

The `xpt_ccb_alloc` routine allocates a CAM Control Block (CCB) for use by a SCSI/CAM peripheral device driver. The `xpt_ccb_alloc` routine returns a pointer to a preallocated data buffer large enough to contain any CCB structure. The peripheral device driver uses this structure for its XPT/SIM requests. The routine also ensures that the SIM private data space and peripheral device driver pointer, `cam_pdrv_ptr`, are set up.

7.3 The `xpt_ccb_free` Routine

The `xpt_ccb_free` routine frees a previously allocated CCB. The routine returns a CCB, previously allocated by a peripheral device driver, to the CCB pool.

7.4 The `xpt_init` Routine

The `xpt_init` routine validates the initialized state of the CAM subsystem. The routine initializes all global and internal variables used by the CAM subsystem through a call to the Configuration driver. Peripheral device drivers must call this routine either during or prior to their own initialization. The `xpt_init` routine simply returns to the calling SCSI/CAM peripheral device driver if the CAM subsystem was previously initialized.

This chapter describes how the SIM layers handle asynchronous callbacks. It also describes the following SIM routines:

- `sim_action`
- `sim_init`

Descriptions of the routines with syntax information, in ULTRIX reference page format, are included in alphabetical order in Appendix C.

8.1 SIM Asynchronous Callback Handling

This section describes how the SIM layers handle asynchronous callbacks from the XPT to SCSI/CAM peripheral device drivers when an event such as a SCSI Bus Device Reset (BDR) or an Asynchronous Event Notification (AEN) occurs.

Each SCSI/CAM peripheral device driver registers an asynchronous callback function for each active SCSI device during driver initialization. The SCSI/CAM peripheral device drivers use the `ccmn_sasy_ccb_bld` routine to create a SET ASYNCHRONOUS CALLBACK CCB and send it to the XPT.

The `async_flags` field of the CCB are set to 1 for those events of which the SCSI/CAM peripheral device driver wants to be notified using the asynchronous callback function. The possible `async_flags` settings are:

Flag Name	Description
<code>AC_FOUND_DEVICES</code>	A new device was found during a rescan.
<code>AC_SIM_DEREGISTER</code>	A previously loaded SIM driver has deregistered.
<code>AC_SIM_REGISTER</code>	A loaded SIM driver has registered.
<code>AC_SENT_BDR</code>	A bus device reset (BDR) message was sent to the target.
<code>AC SCSI_AEN</code>	A SCSI Asynchronous Event Notification has been received.
<code>AC_UNSOL_RESEL</code>	An unsolicited reselection of the system by a device on the bus has occurred.
<code>AC_BUS_RESET</code>	A SCSI bus RESET occurred.

8.2 SIM Routines Used by Device Driver Writers

This section describes the SIM routines device driver writers need to understand.

8.2.1 The `sim_action` Routine

The `sim_action` routine initiates an I/O request from a SCSI/CAM peripheral device driver. The routine is used by the XPT for immediate as well as for queued operations. When the operation completes, the SIM calls back directly to the peripheral driver using the CCB callback address, if callbacks are enabled and the operation is not to be carried out immediately.

The SIM determines whether an operation is to be carried out immediately or to be queued according to the function code of the CCB structure. All queued operations, such as “Execute SCSI I/O” (reads or writes), are placed by the SIM on a nexus-specific queue and return with a CAM status of `CAM_INPROG`.

Some immediate operations, as described in the American National Standard for Information Systems, *SCSI-2 Common Access Method: Transport and SCSI Interface Module*, working draft, X3T9.2/90-186, may not be executed immediately. However, all CCBs to be carried out immediately return to the XPT layer immediately. For example, the `ABORT` CCB command does not always complete synchronously with its call; however, the `CCB_ABORT` is returned to the XPT immediately. An `XPT_RESET_BUS` CCB returns to the XPT following the reset of the bus.

8.2.2 The `sim_init` Routine

The `sim_init` routine initializes the SIM. The SIM clears all its queues and releases all allocated resources in response to this call. This routine is called using the function address contained in the `CAM_SIM_ENTRY` structure. This routine can be called at any time; the SIM layer must ensure that data integrity is maintained.

This chapter describes the error-logging macros, data structures, and routines provided by Digital for SCSI/CAM peripheral device driver writers.

9.1 CAM Error Handling Macro

Digital supplies an error-logging macro, `CAM_ERROR`, with the USCA software. SCSI device driver writers can activate the macro by defining the constant `CAMERRLOG`. Errors are reported using the same error-logging interface to each of the modules within the CAM subsystem.

The macro is defined in the `/usr/sys/io/cam/cam_errlog.h` file as follows:

```
#if defined(CAMERRLOG) && !defined(lint)
#   define CAM_ERROR( FUNC, MSGSTR, EFLAGS, ARG4, ARG5, ARG6 ) \
    { \
        /* VARARGS */ \
        (void)(*local_errlog)( FUNC, MSGSTR, EFLAGS, ARG4, ARG5, ARG6 ); \
    }
#else /* CAMERRLOG and not lint */
#   define CAM_ERROR( FUNC, MSGSTR, EFLAGS, ARG4, ARG5, ARG6 ) \
    { \
        /* VARARGS */ \
        printf( "%s: %s\n", \
            (((FUNC) != (char *)NULL) ? (FUNC) : "CAM Subsystem" ), \
            (((MSGSTR) != (char *)NULL) ? (MSGSTR) : "Unknown Error" )); \
    }
#endif /* CAMERRLOG and not lint */
#endif /* _CAM_ERRLOG_ */
```

The arguments to the macro contain different types of information. The first two arguments to the macro are strings containing the function name and the message string that is sent to the error logger from the function. If the `CAMERRLOG` macro is undefined, the message string is reported to the console. The third argument contains error flags for the local error handler. The remaining arguments are local parameters defined by the writer of the error-logging routine.

The `CAM_ERROR` macro presents a consistent error-logging interface to the modules within the CAM subsystem. Using the macro lets all the routines within each module that need to report and log error information use the same macro call and arguments. Using this macro also keeps each reported error string with the code within the module that originally reported the error.

Individual modules contain their own module-specific error-logging routines. Each source file contains a declaration of the pointer to the local error-logging routine as

follows:

```
static void (*local_errorlog)();
```

The macro calls the local error-logging routine through the local pointer. The pointer is loaded with the local error-handler address, either within the initialization code for that module or as part of the initialized data. The following example shows the address of the `sx_errorlog` function being loaded to the local error-logging variable, `local_errlog`:

```
extern void sx_errorlog();
static void (*local_errlog)() = sx_errorlog;
```

SCSI/CAM peripheral common modules can declare the local pointer to contain the error handler from another SCSI/CAM peripheral common module.

9.2 CAM Error Logging Structures

This section describes the following CAM error-logging data structures:

- `CAM_ERR_ENTRY`, the Error Entry Structure
- `CAM_ERR_HDR`, the Error Header Structure

The structures are defined in the `/usr/sys/h/cam_logger.h` file.

9.2.1 The Error Entry Structure

The Error Entry Structure, `CAM_ERR_ENTRY`, describes an entry in the error log packet. There can be multiple entries in an error log packet. The structure is defined as follows:

```
typedef struct cam_err_entry {
    u_longent_type;      /* String, TAPE_SPECIFIC, CCB, etc */
    u_longent_size;      /* Size of the data (CCB, TAPE_SPEC)*/
    u_longent_total_size; /* To preserve alignment (uerf) */
    u_longent_vers;      /* Version number of type */
    u_char*ent_data;     /* Pointer to whatever string, etc */
    u_longent_pri;       /* FULL or Brief uerf output */
}CAM_ERR_ENTRY;
```

9.2.1.1 The `ent_type` Member

The `ent_type` member contains the type of data in the entry, which can be a string, a structure, or a CCB. Numerous types of strings are defined in the `/usr/sys/h/cam_logger.h` file. CCBs are assigned to one of the XPT function codes listed in the `/usr/sys/h/cam.h` file.

9.2.1.2 The `ent_size` Member

The `ent_size` member contains the size, in bytes, of the data in the entry.

9.2.1.3 The `ent_total_size` Member

The `ent_total_size` member preserves long-word alignment for compatibility with the `uerf` error-reporting utility. The `cam_logger` routine fills in this member. See the *Guide to the Error Logger* for information about the `uerf` utility.

9.2.1.4 The ent_vers Member

The `ent_vers` member is the version number of the contents of the `ent_type` member. See the `#define PDRV_DEVICE_VERS` line in the `/usr/sys/h/pdrv.h` file for an example of associating a version number with a structure.

9.2.1.5 The ent_data Member

The `ent_data` member contains a pointer to the contents of the `ent_type` member.

9.2.1.6 The ent_pri Member

The `ent_pri` member contains the output from the `uerf` utility, which can be in brief or full report format. See the *Guide to the Error Logger* for information about the `uerf` utility.

9.2.2 The Error Header Structure

The Error Header Structure, `CAM_ERR_HDR`, contains all the data needed by the `uerf` utility to determine that the packet is a CAM error log packet. See the *Guide to the Error Logger* for information about the `uerf` utility. The structure is defined as follows:

```
typedef struct cam_err_hdr {
    u_short hdr_type;      /* Packet type - CAM_ERR_PKT */
    u_long  hdr_size;      /* Filled in by cam_logger */
    u_char  hdr_class;     /* Sub system class Tape, disk,
                          * sii_dme , etc..
                          */
    u_long  hdr_subsystem; /*
                          * Mostly for controller type
                          * But the current errlogger uses
                          * disk tape etc if no controller
                          * is known.. So what we will do
                          * is dup the disk and tape types
                          * in the lower number 0 - 1f and
                          * the controllers asc sii 5380
                          * etc can use the uppers.
                          */
    u_long  hdr_entries;   /* Number of error entries in list*/
    CAM_ERR_ENTRY *hdr_list; /* Pointer to list of error entries*/
    u_long  hdr_pri;      /* Error logger priority. */
}CAM_ERR_HDR;
```

9.2.2.1 The hdr_type Member

The `hdr_type` member contains the error-packet type, which must be `CAM_ERR_PKT`.

9.2.2.2 The hdr_size Member

The `hdr_size` member is filled in by the `cam_logger` routine.

9.2.2.3 The `hdr_class` Member

The `hdr_class` member identifies the CAM module that detected the error and assigns it to one of the Defined Device Types listed in the `/usr/sys/h/scsi_all.h` file. The device classes are defined in the `/usr/sys/h/cam_logger.h` file.

9.2.2.4 The `hdr_subsystem` Member

The `hdr_subsystem` member identifies the CAM subsystem controller that detected the error and assigns it to one of the Defined Device Types listed in the `/usr/sys/h/scsi_all.h` file. The device classes are defined in the `/usr/sys/h/cam_logger.h` file.

9.2.2.5 The `hdr_entries` Member

The `hdr_entries` member contains the number of entries in the header list.

9.2.2.6 The `hdr_list` Member

The `hdr_list` member contains a pointer to a list of error entries.

9.2.2.7 The `hdr_pri` Member

The `hdr_pri` member identifies the priority of the error and assigns it to one of the priorities listed in the `/usr/sys/io/cam/errlog.h` file.

9.3 The `cam_logger` Routine

The `cam_logger` routine allocates a system error log buffer and fills in a `uerf` error log packet. The routine fills in the bus, target, and LUN information from the Error Header Structure passed to it and copies the Error Header Structure and the Error Entry Structures and data to the error log buffer.

This chapter describes the debugging macros and routines provided by Digital for SCSI/CAM peripheral device driver writers.

10.1 CAM Debugging Variables

There are two levels of debugging within the CAM modules: debugging independent of a bus, target, or LUN, and debugging that tracks a specific bus, target, or LUN. USCA debugging is turned on by defining the program constant `CAMDEBUG` in the `/usr/sys/io/cam/cam_debug.h` file and recompiling the source files.

This section describes the variables that contain the information for each level of debugging the CAM subsystem. The variables are:

- `camdbg_flag` – Which turns on specific `cprintf` calls within the kernel, depending on its setting, to capture information independent of a particular SCSI ID.
- `camdbg_id` – Which contains the specific bus, target, and LUN information for tracking.

The macros, `PRINTD` and `CALLD`, use the variables for tracking target-specific messages and for allowing specific subsets of the `DEBUG` statements to be printed. The macros are defined in the `/usr/sys/io/cam/cam_debug.h` file.

10.1.1 The `camdbg_flag` Variable

The most significant bit, bit 31, of the `camdbg_flag` variable is the bit that indicates whether the target information is valid. If set, it indicates that the `camdbg_id` variable contains valid bus, target, and LUN information for the device to be tracked. Bits 30 to 0 define the debug flag setting. The possible settings, in ascending hexadecimal order, with a brief description of each, follow:

Flag Name	Description
<code>CAMD_INOUT</code>	Routine entry and exit
<code>CAMD_FLOW</code>	Code flow through the modules
<code>CAMD_PHASE</code>	SCSI phase values
<code>CAMD_SM</code>	State machine settings
<code>CAMD_ERRORS</code>	Error handling
<code>CAMD_CMD_EXP</code>	Expansion of commands and responses
<code>CAMD_IO_MAPPING</code>	DME I/O mapping for user space
<code>CAMD_DMA_FLOW</code>	DME Dynamic Memory Allocation flow
<code>CAMD_DISCONNECT</code>	Signal disconnect handling

Flag Name	Description
CAMD_TAGS	Tag queuing code
CAMD_POOL	XPT tracking in the DEC CAM packet pool
CAMD_AUTOS	Autosense handling
CAMD_CCBALLOC	CCB allocation and free flow
CAMD_MSGOUT	Messages going out
CAMD_MSGIN	Messages coming in
CAMD_STATUS	SCSI status bytes
CAMD_CONFIG	CAM configuration paths
CAMD_SCHED	SIM scheduler points
CAMD_SIMQ	SIM queue manipulation
CAMD_TAPE	SCSI/CAM peripheral tape flow
CAMD_COMMON	SCSI/CAM peripheral common flow
CAMD_DISK	SCSI/CAM peripheral disk flow
CAMD_DISK_REC	SCSI/CAM peripheral disk recovery flow
CAMD_DBBR	SCSI/CAM peripheral disk Dynamic Bad Block Recovery flow
CAMD_CDROM	SCSI/CAM peripheral CDROM functions
CAMD_INTERRUPT	SIM trace Interrupts
TVALID	The bus, target, and LUN bits are valid in the camdbg_id variable

10.1.2 The camdbg_id Variable

The camdbg_id variable contains the bus, target, and LUN (B/T/L) information for a specific target to track for debugging information. In the current implementation, the bits are divided into three parts, with the remainder reserved. The bits are allocated as follows: bits 31 to 16, Reserved; bits 15 to 8, Bus number; bits 7 to 4, Target number; and bits 3 to 0, LUN number. Multiples of four bits are used to assign hexadecimal values into the camdbg_id variable.

10.2 CAM Debugging Macros

The PRINTD and CALLD macros track target-specific messages and allow specific subsets of the debugging statements to be printed.

This PRINTD macro, which prints debugging information if CAMDEBUG is defined, follows.

```

/*
 * Conditionally Print Debug Information.
 */
#if defined(CAMDEBUG) && !defined(lint)
#  define PRINTD(B, T, L, F, X)
    { \ 1
        /* NOSTRICK */
        if( camdbg_flag & (int)F ) \ 2
        { \

```

```

        if( ((camdbg_flag & TVALID) == 0) || \ ❸
            (((camdbg_flag & TVALID) != 0) && \ ❹
            (((camdbg_id & BMASK) >> BSHIFT) == B) || (B == NOBTL)) && \ ❺
            (((camdbg_id & TMASK) >> TSHIFT) == T) || (T == NOBTL)) && \
            (((camdbg_id & LMASK) >> LSHIFT) == L) || (L == NOBTL)) ) \
        { \
            /* VARARGS */ \
            (void)(*cdbg_printf) X ; \
        } \
    } \
#endif /* !defined(lint)

```

- ❶ The B, T, and L arguments are for target-specific tracking. The F argument is a flag for tracking specific subsets of the `printf` statements. The F flag argument is compared with the `camdbg_flag` variable to determine if the user wants to see the message. The X argument must be a complete `printf` argument set enclosed within parentheses, (), to allow the preprocessor to include it in the final `printf` statement.
- ❷ This statement checks to see if any of the flags for the `PRINTD` macro are turned on. It does not look for an exact match so that the same `PRINTD` macro can be used for different settings of the flags in `camdbg_flag`.
- ❸ This section of code checks for any target information available for tracing a target. The first condition checks to see if the target valid bit is not set. If it is not, the OR condition is met and the call to the `printf` utility is made.
- ❹ If the TVALID bit is set, the bus, target, and LUN fields in the `camdbg_id` variable must be compared to the B, T, and L arguments. If TVALID is true and bus equals B, target equals T, and LUN equals L, then also print.
- ❺ This construct checks the B, T, and L fields. For example, the following statement checks the B field:

```

((((camdbg_id & BMASK) >> BSHIFT) == B) || (B == NOBTL))

```

The statement masks out the other fields and shifts the bus value down to allow comparison with the B argument. The arguments can also have a “wildcard” value, NOBTL. When the wildcard value is used, the B or T or L comparison is always true.

The `CALLD` macro uses the same `if` statement constructs to conditionally call a debugging function using the following `define` statement:

```

#   define CALLD(B, T, L, F, X)

```

10.3 CAM Debugging Routines

The SCSI/CAM peripheral device debugging routines can be allocated into categories as follows:

- Routines that generate reports on CAM functions and status in either a brief form listing the name as it is defined in the applicable header file, or in the form of a sentence. The following routines are in this category:

- `cdbg_CamFunction`
- `cdbg_CamStatus`

- `cdbg_ScsiStatus`
- `cdbg_SystemStatus`
- Routines that dump the contents of CCBs, SCSI/CAM Peripheral Device Driver Working Set Structures, and other SCSI/CAM commands for examination. The following routines are in this category:
 - `cdbg_DumpCCBHeader`
 - `cdbg_DumpCCBHeaderFlags`
 - `cdbg_DumpSCSIIO`
 - `cdbg_DumpPDRVws`
 - `cdbg_DumpABORT`
 - `cdbg_DumpTERMIO`
 - `cdbg_DumpBuffer`
 - `cdbg_GetDeviceName`
 - `cdbg_DumpInquiryData`

Descriptions of the routines with syntax information, in ULTRIX reference page format, are included in alphabetical order in Appendix C.

10.3.1 CAM Debugging Status Routines

This section describes the SCSI/CAM peripheral device debugging routines that report status. Table 10-1 lists the name of each routine and gives a summary description of its function. The sections that follow contain a more detailed description of each routine.

Table 10-1: CAM Debugging Status Routines

Routine	Summary Description
<code>cdbg_CamFunction</code>	reports CAM XPT function codes
<code>cdbg_CamStatus</code>	decodes CAM CCB status codes
<code>cdbg_ScsiStatus</code>	reports SCSI status codes
<code>cdbg_SystemStatus</code>	reports system error codes

10.3.1.1 The `cdbg_CamFunction` Routine

The `cdbg_CamFunction` routine reports CAM XPT function codes. Program constants are defined to allow either the function code name only or a brief explanation to be printed. The XPT function codes are defined in the `/usr/sys/h/cam.h` file.

10.3.1.2 The `cdbg_CamStatus` Routine

The `cdbg_CamStatus` routine decodes CAM CCB status codes. Program constants are defined to allow either the status code name only or a brief explanation to be printed. The CAM status codes are defined in the `/usr/sys/h/cam.h` file.

10.3.1.3 The `cdbg_ScsiStatus` Routine

The `cdbg_ScsiStatus` routine reports SCSI status codes. Program constants are defined to allow either the status code name only or a brief explanation to be printed. The SCSI status codes are defined in the `/usr/sys/h/scsi_status.h` file.

10.3.1.4 The `cdbg_SystemStatus` Routine

The `cdbg_SystemStatus` routine reports system error codes. The system error codes are defined in the `/usr/sys/h/errno.h` file.

10.3.2 CAM Dump Routines

This section describes the SCSI/CAM peripheral device debugging routines that dump contents for examination. Table 10-2 lists the name of each routine and gives a summary description of its function. The sections that follow contain a more detailed description of each routine.

Table 10-2: CAM Dump Routines

Routine	Summary Description
<code>cdbg_DumpCCBHeader</code>	dumps the contents of a CAM Control Block (CCB) header structure
<code>cdbg_DumpCCBHeaderFlags</code>	dumps the contents of the <code>cam_flags</code> member of a CAM Control Block (CCB) header structure
<code>cdbg_DumpSCSIIO</code>	dumps the contents of a SCSI I/O CCB
<code>cdbg_DumpPDRVws</code>	dumps the contents of a SCSI/CAM Peripheral Device Driver Working Set Structure
<code>cdbg_DumpABORT</code>	dumps the contents of an ABORT CCB
<code>cdbg_DumpTERMIO</code>	dumps the contents of a TERMINATE I/O CCB
<code>cdbg_DumpBuffer</code>	dumps the contents of a data buffer in hexadecimal bytes
<code>cdbg_GetDeviceName</code>	returns a pointer to a character string describing the <code>dtype</code> member of an <code>ALL_INQ_DATA</code> structure
<code>cdbg_DumpInquiryData</code>	dumps the contents of an <code>ALL_INQ_DATA</code> structure

10.3.2.1 The `cdbg_DumpCCBHeader` Routine

The `cdbg_DumpCCBHeader` routine dumps the contents of a CAM Control Block (CCB) header structure. The CAM Control Block (CCB) header structure is defined in the `/usr/sys/h/cam.h` file.

10.3.2.2 The `cdbg_DumpCCBHeaderFlags` Routine

The `cdbg_DumpCCBHeaderFlags` routine dumps the contents of the `cam_flags` member of a CAM Control Block (CCB) header structure. The CAM Control Block (CCB) header structure is defined in the `/usr/sys/h/cam.h` file.

10.3.2.3 The `cdbg_DumpSCSIIO` Routine

The `cdbg_DumpSCSIIO` routine dumps the contents of a SCSI I/O CCB. The SCSI I/O CCB is defined in the `/usr/sys/h/cam.h` file.

10.3.2.4 The `cdbg_DumpPDRVws` Routine

The `cdbg_DumpPDRVws` routine dumps the contents of a SCSI/CAM Peripheral Device Driver Working Set Structure. The SCSI/CAM Peripheral Device Driver Working Set Structure is defined in the `/usr/sys/h/pdrv.h` file.

10.3.2.5 The `cdbg_DumpABORT` Routine

The `cdbg_DumpABORT` routine dumps the contents of an ABORT CCB. The ABORT CCB is defined in the `/usr/sys/h/cam.h` file.

10.3.2.6 The `cdbg_DumpTERMIO` Routine

The `cdbg_DumpTERMIO` routine dumps the contents of a TERMINATE I/O CCB. The TERMINATE I/O CCB is defined in the `/usr/sys/h/cam.h` file.

10.3.2.7 The `cdbg_DumpBuffer` Routine

The `cdbg_DumpBuffer` routine dumps the contents of a data buffer in hexadecimal bytes. The calling routine must display a header line. The format of the dump is 16 bytes per line.

10.3.2.8 The `cdbg_GetDeviceName` Routine

The `cdbg_GetDeviceName` routine returns a pointer to a character string describing the `dtype` member of an `ALL_INQ_DATA` structure. The `ALL_INQ_DATA` structure is defined in the `/usr/sys/h/scsi_all.h` file.

10.3.2.9 The `cdbg_DumpInquiryData` Routine

The `cdbg_DumpInquiryData` routine dumps the contents of an `ALL_INQ_DATA` structure. The `ALL_INQ_DATA` structure is defined in the `/usr/sys/h/scsi_all.h` file.

This chapter describes how programmers can write their own device drivers for SCSI/CAM peripheral devices using a combination of common data structures and routines provided by Digital and programmer-defined routines and data structures. This chapter describes only the programmer-defined data structures and routines. See Chapter 3 for a description of the common data structures and routines.

The chapter also describes how to add a programmer-defined device driver to the USCA system.

11.1 Programmer-Defined SCSI/CAM Data Structures

This section describes the SCSI/CAM peripheral data structures programmers must use if they write their own device drivers. The following data structures are described:

- PDRV_UNIT_ELEM – The Peripheral Device Unit Table
- PDRV_DEVICE – The Peripheral Device Structure
- DEV_DESC – The Device Descriptor Structure
- DENSITY_TBL – The Density Table Structure
- MODESEL_TBL – The Mode Select Table Structure

11.1.1 Programmer-Defined Peripheral Device Unit Table

The Peripheral Device Unit Table is an array of SCSI/CAM peripheral device unit elements. The size of the array is the maximum number of possible devices, which is determined by the maximum number of SCSI controllers allowed for the system. The structure is allocated statically and is defined as follows:

```
typedef struct pdrv_unit_elem {
    PDRV_DEVICE *pu_device; /* Pointer to peripheral device structure */
    u_short pu_opens;      /* Total number of opens against unit */
    u_short pu_config;    /* Indicates whether the device type */
                        /* configured at this address */
    u_char pu_type;       /* Device type - byte 0 from inquiry data */
} PDRV_UNIT_ELEM;
```

11.1.1.1 The pu_device Member

The `pu_device` field is filled in with a pointer to a CAM-allocated peripheral SCSI device (`PDRV_DEVICE`) structure when the first call to the `ccmn_open_unit` routine is issued for a SCSI device that exists.

11.1.1.2 The pu_opens Member

The total number of opens against the unit.

11.1.1.3 The pu_config Member

Indicates whether a device of the specified type is configured at this bus/target/LUN.

11.1.1.4 The pu_type Member

The device type from byte 0 (zero) of the Inquiry data.

11.1.2 Programmer-Defined Peripheral Device Structure

A SCSI/CAM peripheral device structure, PDRV_DEVICE, is allocated for each SCSI device that exists in the system. The PDRV_DEVICE structure is defined as follows:

```
typedef struct pdrv_device {
    PD_LIST pd_active_list; /* Forward active pointer of CCBs */
                          /* which have been sent to the XPT */
    u_long pd_active_ccb; /* Number of active CCBs on queue */
    u_long pd_que_depth; /* Tagged queue depth - indicates the */
                          /* maximum number of commands the unit */
                          /* can store internally */
    PD_LIST pd_pend_list; /* Forward active pointer of pending CCBs */
                          /* which have not been sent to the XPT due */
                          /* to a full queue for tagged requests */
    u_long pd_pend_ccb; /* Number of pending CCBs */
    dev_t pd_dev; /* CAM major/minor number */
    u_char pd_bus; /* SCSI controller number */
    u_char pd_target; /* SCSI target id */
    u_char pd_lun; /* SCSI target lun */
    u_char pd_unit; /* Unit number */
    u_long pd_soft_err; /* Number of soft errors */
    u_long pd_hard_err; /* Number of hard errors */
    u_short pd_soft_err_limit; /* Max no. of soft errors to report */
    u_short pd_hard_err_limit; /* Max no. of hard errors to report */
    u_long pd_flags; /* Specific to peripheral drivers */
    u_char pd_state; /* Specific to peripheral drivers - can */
                    /* be used for recovery */
    u_char pd_abort_cnt; /* Specific to peripheral drivers - can */
                        /* be used for recovery */
    u_long pd_cam_flags; /* Used to hold the default settings */
                        /* for the cam_flags field in CCBs */
    u_char pd_tag_action; /* Used to hold the default settings for */
                         /* the cam_tag_action field of the SCSI */
                         /* I/O CCB */
    u_char pd_dev_inq[INQLEN];
                          /* Inquiry data obtained from GET */
                          /* DEVICE TYPE CCB */
    u_long pd_ms_index; /* Contains the current index into the */
                       /* Mode Select Table when sending Mode */
                       /* Select data on first open */
    DEV_DESC *pd_dev_desc; /* Pointer to our device descriptor */
    caddr_t pd_specific; /* Pointer to device specific info */
    u_short pd_spec_size; /* Size of device specific info */
    caddr_t pd_sense_ptr; /* Pointer to the last sense data */
                          /* bytes retrieved from device */
    u_short pd_sense_len; /* Length of last sense data */
    void (*pd_recov_hand)(); /* Specific to peripheral drivers - can */
}
```

```

/* be used to point to the recovery */
/* handler for the device */
u_long pd_read_count; /* Number of reads to device */
u_long pd_write_count; /* Number of writes to device */
u_long pd_read_bytes; /* Number of bytes read from device */
u_long pd_write_bytes; /* Number of bytes written to device */
struct lock_t pd_lk_device;
/* SMP lock for the device */
} PDRV_DEVICE

```

11.1.2.1 The `pd_active_list` Member

A pointer to the first CCB on the active queue.

11.1.2.2 The `pd_active_ccb` Member

The number of CCBs on the active queue.

11.1.2.3 The `pd_que_depth` Member

The depth of the tagged queue, which is the maximum number of commands that the peripheral driver will send to the SCSI device.

11.1.2.4 The `pd_pend_list` Member

A pointer to the first CCB on the pending queue.

11.1.2.5 The `pd_pend_ccb` Member

The number of CCBs on the pending queue.

11.1.2.6 The `pd_dev` Member

The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

11.1.2.7 The `pd_bus` Member

SCSI target's bus controller number.

11.1.2.8 The `pd_target` Member

SCSI target's ID number.

11.1.2.9 The `pd_lun` Member

SCSI target's logical unit number.

11.1.2.10 The `pd_unit` Member

SCSI device's unit number.

11.1.2.11 The `pd_flags` and `pd_state` Members

These are specific to SCSI/CAM peripheral device drivers. They can be used for recovery.

11.1.2.12 The `pd_abort_cnt` Member

This is specific to SCSI/CAM peripheral device drivers. It can be used for recovery.

11.1.2.13 The `pd_cam_flags` Member

This contains the default settings for the `cam_flags` field in the CAM Control Block (CCB) header structure. The flags are defined in the `/usr/sys/h/cam.h` file.

11.1.2.14 The `pd_tag_action` Member

This contains the default settings for the HBA/SIM queue actions field, `cam_tag_action`, in the SCSI I/O CCB structure. The queue actions are defined in the `/usr/sys/h/cam.h` file.

11.1.2.15 The `pd_dev_inq` Member

This is inquiry data.

11.1.2.16 The `pd_ms_index` Member

The current index into the Mode Select Table that is pointed to in the Device Descriptor Structure.

11.1.2.17 The `pd_dev_desc` Member

A pointer to the `DEV_DESC` structure for the SCSI device.

11.1.2.18 The `pd_specific` Member

A pointer to a device-specific structure filled in by the `ccmn_open_unit` routine.

11.1.2.19 The `pd_spec_size` Member

The size of the device-specific information.

11.1.2.20 The `pd_sense_ptr` Member

A pointer to the last sense data bytes retrieved from the device.

11.1.2.21 The `pd_sense_len` Member

The length, in bytes, of the last sense data retrieved from the device.

11.1.2.22 The `pd_recov_hand` Member

This is specific to SCSI/CAM peripheral device drivers. It can be used to point to the recovery handler for the device.

11.1.2.23 The `pd_read_count` Member

Number of read operations from device. Used for performance statistics.

11.1.2.24 The `pd_write_count` Member

Number of write operations to device. Used for performance statistics.

11.1.2.25 The `pd_read_bytes` Member

Total number of bytes read from device. Used for performance statistics.

11.1.2.26 The `pd_write_bytes` Member

Total number of bytes written to device. Used for performance statistics.

11.1.2.27 The `pd_lk_device` Member

The lock structure.

11.1.3 Programmer-Defined Device Descriptor Structure

A Device Descriptor Structure entry, `DEV_DESC`, must be added to the `cam_devdesc_tab` for each programmer-defined SCSI device that exists in the system. The file `/usr/sys/data/cam_data.c` contains examples of entries supplied by Digital. The `DEV_DESC` structure is defined as follows:

```
typedef struct dev_desc {
    u_char    dd_pv_name[IDSTRING_SIZE];
                /* Product ID and vendor string from */
                /* Inquiry data */
    u_char    dd_length; /* Length of dd_pv_name string */
    u_char    dd_dev_name[DEV_NAME_SIZE];
                /* Device name string - see defines */
                /* in devio.h */
    u_long    dd_device_type; /* Bits 0 - 23 contain the device */
                /* class, bits 24-31 contain the */
                /* SCSI device type */
    struct    pt_info *dd_def_partition;
                /* Default partition sizes - disks */
    u_long    dd_block_size; /* Block/sector size */
    u_long    dd_max_record; /* Maximun transfer size in bytes */
                /* allowed for the device */
    DENSITY_TBL *dd_density_tbl;
                /* Pointer to density table - tapes */
    MODESEL_TBL *dd_modesel_tbl;
                /* Mode select table pointer - used */
                /* on open and recovery */
    u_long    dd_flags; /* Option flags (bbr, etc) */
    u_long    dd_scsi_optcmds; /* Optional commands supported */
    u_long    dd_ready_time; /* Time in seconds for powerup dev ready */
    u_short   dd_que_depth; /* Device queue depth for devices */
                /* which support command queueing */
    u_char    dd_valid; /* Indicates which data length */
                /* fields are valid */
    u_char    dd_inq_len; /* Inquiry data length for device */
    u_char    dd_req_sense_len;
                /* Request sense data length for */
                /* this device */
}DEV_DESC;
```

11.1.3.1 The `dd_pv_name` Member

The product ID and vendor returned string identifying the drive obtained from the Inquiry data. The product ID makes up the first eight characters of the string. The `IDSTRING_SIZE` constant is defined in the `/usr/sys/h/pdrv.h` file.

11.1.3.2 The `dd_length` Member

This specifies the length of the `dd_pv_name` string. The match is made on the total string returned by the unit.

11.1.3.3 The `dd_dev_name` Member

The ULTRIX device name string, which is defined in the `/usr/sys/h/devio.h` file. A generic name of `DEV_RZxx` should be used for non-Digital disk devices. The following generic names are provided for tapes: `DEV_TZQIC`, for 1/4-inch cartridge tape units; `DEV_TZ9TK` for 9-track tape units; `DEV_TZ8MM`, for 8-millimeter tape units; `DEV_TZRDAT`, for RDAT tape units; `DEV_TZ3480`, for IBM 3480-compatible tape units; and `DEV_TZxx`, for tape units that do not fit into any of the predefined generic categories.

11.1.3.4 The `dd_device_type` Member

Bits 24-31 contain the SCSI device class, for example, `ALL_DTYPE_DIRECT`, which is defined in the `/usr/sys/h/scsi_all.h` file. The bits 0-23 contain the device subclass, for example, `SZ_HARD_DISK`, which is defined in the `/usr/sys/h/pdrv.h` file.

11.1.3.5 The `dd_def_partition` Member

A pointer to the default partition sizes for disks, which are defined in the `/usr/sys/data/cam_data.c` file. Tape devices should define this as `sz_null_sizes`. Disk devices may use `sz_rzxx_sizes`, which assumes that the disk has at least 48 Mbytes. The `sz_rzxx_sizes` should not be modified. If you want to create your own partition table, make an entry for your device in the device descriptor table in the `/usr/sys/data/cam_data.c` file.

11.1.3.6 The `dd_block_size` Member

The block or sector size of the unit, in bytes, for disks and CDROMs. You can obtain the correct number of bytes from the documentation for your device.

11.1.3.7 The `dd_max_record` Member

The maximum number of bytes that can be transferred in one request for raw I/O. Errors result if your system does not have enough physical memory or if the unit cannot handle the size of transfer specified.

11.1.3.8 The `dd_density_tbl` Member

A pointer to the Density Table Structure entry for a tape device.

11.1.3.9 The `dd_modesel_tbl` Member

A pointer to the Mode Select Table Structure entry for the devices. The Mode Select Table Structure is read and sent to the SCSI device when the first open call is issued and during recovery. This field is optional and should be used only for advanced SCSI device customization.

11.1.3.10 The `dd_flags` Member

The option flags, which can be `SZ_NOSYNC`, indicating that the device cannot handle synchronous transfers; `SZ_BBR`, indicating that the device allows bad block recovery; `SZ_NO_DISC`, indicating that the device cannot handle disconnects; and `SZ_NO_TAG`, indicating tagged queuing is not allowed. `SZ_NO_TAG` overrides inquiry data. The flags are defined in the `/usr/sys/h/pdrv.h` file.

11.1.3.11 The `dd_scsi_optcmds` Member

The optional SCSI commands that are supported, as defined in the `/usr/sys/h/pdrv.h` file. The possible commands are `NO_OPT_CMDS`; `SZ_RW10`, which enables reading and writing 10-byte CDBs; `SZ_PREV_ALLOW`, which prevents or allows media removal; and `SZ_EXT_RESRV`, which enables reserving or releasing file extents.

11.1.3.12 The `dd_ready_time` Member

The maximum time, in seconds, allowed for the device to power up. For disks, this represents power up and spin up time. For tapes, it represents power up, load, and rewind to Beginning of Tape.

11.1.3.13 The `dd_que_depth` Member

The maximum number of queued requests for devices that support queuing. Refer to the documentation for your device to determine if your device supports tag queuing and, if so, the depth of the queue.

11.1.3.14 The `dd_valid` Member

This indicates which data length fields are valid. The data length bits, `DD_REQSNS_VAL` and `DD_INQ_VAL`, are defined in the `/usr/sys/h/pdrv.h` file.

11.1.3.15 The `dd_inq_len` Member

The inquiry data length for the device. This field must be used in conjunction with the `DD_INQ_VAL` flag.

11.1.3.16 The `dd_req_sense_len` Member

The request Sense data length for the device. This field must be used in conjunction with the `DD_REQSNS_VAL` flag.

11.1.4 Programmer-Defined Density Table Structure

The Density Table Structure allows for the definition of eight densities for each type of SCSI tape device unit. A density is defined using the lower three bits of the unit's minor number. Refer to the SCSI tape device unit documentation for the density code, compression code, and blocking factor for each density.

The `/usr/sys/data/cam_data.c` file contains Density Table Structure entries for all devices known to Digital. Programmers can add entries for other SCSI tape devices at the end of the Digital entries. The definition for the Density Table Structure, `DENSITY_TBL`, follows:

```
typedef struct density_tbl {
    struct density{
        u_char    den_flags;           /* VALID, ONE_FM etc */
        u_char    den_density_code;
        u_char    den_compress_code; /* Compression code if supported */
        u_char    den_speed_setting; /* for this density */
        u_char    den_buffered_setting;
                                   /* Buffer control setting */
        u_long    den_blocking;       /* 0 variable etc. */
    }density[MAX_TAPE_DENSITY];
}DENSITY_TBL;
```

11.1.4.1 The `den_flags` Member

The `den_flags` specified indicate which fields in the `DENSITY_TBL` structure are valid for this density. The flags are: `DENS_VALID`, to indicate whether the structure is valid; `ONE_FM`, to write one file mark on closing for QIC tape units; `DENS_SPEED_VALID`, to indicate the speed setting is valid for multispeed tapes; `DENS_BUF_VALID`, to run in buffered mode; and `DENS_COMPRESS_VALID`, to indicate compression code, if supported.

11.1.4.2 The `den_density_code` Member

The `den_density_code` member contains the SCSI density code for this density.

11.1.4.3 The `den_compress_code` Member

The `den_compress_code` member contains the SCSI compression code for this density, if the unit supports compression.

11.1.4.4 The `den_speed_setting` Member

The `den_speed_setting` member contains the speed setting for this density. Some units support variable speed for certain densities.

11.1.4.5 The `den_buffered_setting` Member

The `den_buffered_setting` member contains the buffer control setting for this density.

11.1.4.6 The `den_blocking` Member

The `den_blocking` member contains the blocking factor for this SCSI tape device. A NULL (0) setting specifies that the blocking factor is variable. A positive value represents the number of bytes in a block, for example, 512 or 1024.

11.1.4.7 Sample Density Table Structure Entry

This section contains a sample portion of a Density Table Structure entry for the TZK10 SCSI tape device, which supports both fixed and variable length records:

```
DENSITY_TBL
tzk10_dens = {
  { Minor 00

  Flags
  DENS_VALID | DENS_BUF_VALID | ONE_FM ,

  Density code   Compression code   Speed setting
  SEQ_8000R_BPI,      NULL,                          NULL,

  Buffered setting      Blocking
  1,                    512
  },
  .
  .
  { Minor 06

  Flags
  DENS_VALID | DENS_BUF_VALID | ONE_FM ,

  Density code   Compression code   Speed setting
  SEQ_QIC320,      NULL,                          NULL,

  Buffered setting      Blocking
  1,                    1024
  },
  { Minor 07

  Flags
  DENS_VALID | DENS_BUF_VALID | ONE_FM ,

  Density code   Compression code   Speed setting
  SEQ_QIC320,      NULL,                          NULL,

  Buffered setting      Blocking
  1,                    NULL
  }
}; end of tzk10_dens
```

11.1.5 Programmer-Defined Mode Select Table Structure

The Mode Select Table Structure is read and sent to the SCSI device when the first call to the SCSI/CAM peripheral open routine is issued on a SCSI device. There can be a maximum of eight entries in the Mode Select Table Structure. The definition for the Mode Select Table Structure, MODESEL_TBL, follows:

```
typedef struct modesel_tbl {
  struct ms_entry{
    u_char  ms_page;      /* Page number */
    u_char  *ms_data;    /* Pointer to Mode Select data */
    u_char  ms_data_len; /* Mode Select data length */
    u_char  ms_ent_sp_pf; /* Save Page and Page format bits */
                                /* BIT 0  1=Save Page, */
                                /*        0=Don't Save Page */
                                /* BIT 1  1=SCSI-2, 0=SCSI-1 */
  }ms_entry[MAX_OPEN_SEL];
}MODESEL_TBL;
```

11.1.5.1 The `ms_page` Member

The `ms_page` member contains the SCSI page number for the device type. For example, the page number would be 0x10 for the device configuration page for a SCSI tape device.

11.1.5.2 The `ms_data` Member

The `ms_data` member contains a pointer to the mode select data for the device. Set up the page data and place the address of the page structure in this field. A sample page definition for page 0x10 for the TZK10 follows:

```
SEQ_MODE_DATA6
tzk10_page10 = {

    { Parameter header

mode_len          medium type      speed
NULL,            NULL,            NULL,

Buf_mode          wp                blk_desc_len
0x01,           NULL,            sizeof(SEQ_MODE_DESC)
    },
    { Mode descriptor

Density num_blks2      num_blks1
NULL,      NULL,      NULL,

num_blks0      reserved      blk_len2
NULL,          NULL,          NULL,

blk_len1      blk_len0
NULL,          NULL,
    },
    {
    Page data for page 0x2

PAGE header
byte0  byte1
0x10,  0x0e,

byte2  byte3  byte4  byte5  byte6
0x00,  0x00,  40,   40,   NULL,

byte7  byte8  byte9  byte10  byte11
NULL,  0xe0,  NULL,  0x38,  NULL,

byte12  byte13  byte14  byte15
NULL,  NULL,  NULL,  NULL
    }
    };
```

11.1.5.3 The `ms_data_len` Member

The `ms_data_len` member contains length of a page, which is the number of bytes to be sent to the device.

11.1.5.4 The ms_ent_sp_pf Member

The `ms_ent_sp_pf` member contains flags for the MODE SELECT CDB that the device driver formats.

11.1.5.5 Sample Mode Select Table Structure Entry

This section contains a sample portion of a Mode Select Table Structure entry for the TZK10 SCSI tape device:

```
MODESEL_TBL
tzk10_mod = {
{ MODE PAGE ENTRY 1

Page number          The data pointer
0x02,                (u_char *)&tzk10_page2,

Data len             SCSI2??
28,                  0x2
},
.
:
.
{ MODE PAGE ENTRY 8

Page number          The data pointer
NULL,                (u_char *)NULL,

Data len             SCSI2??
NULL,                NULL
},
};
```

11.2 Sample SCSI/CAM Device-Specific Data Structures

This section provides samples of the SCSI/CAM peripheral data structures programmers must define if they write their own device drivers. The following data structures are described:

- TAPE_SPECIFIC – The Tape-Specific Structure
- DISK_SPECIFIC – The Disk- and CDROM-Specific Structure

11.2.1 Programmer-Defined Tape-Specific Structure

SCSI/CAM peripheral device driver writers can create their own tape-specific data structures. A sample TAPE_SPECIFIC structure for a SCSI tape device, as defined in the `/usr/sys/io/cam/cam_tape.h` file, follows:

```
typedef struct {
    u_long  ts_flags;          /* Tape flags - BOM,EOT */
    u_long  ts_state_flags;    /* STATE - UNIT_ATTEN, RESET etc. */
    u_long  ts_resid;         /* Last operation residual count */
    u_long  ts_block_size;    /* See below for a complete desc. */
    u_long  ts_density;       /* What density are we running at */
    u_long  ts_records;       /* How many records in since last tpmark */
    u_long  ts_num_filemarks; /* number of file marks into tape */
    u_long  ts_softcnt;       /* Number of soft errors */
    u_long  ts_hardcnt;       /* Number of hard errors */
}TAPE_SPECIFIC;
```

11.2.1.1 The `ts_flags` Member

Flags used to indicate tape condition. The possible flags are:

Flag Name	Description
<code>CTAPE_BOM</code>	The tape is positioned at the beginning.
<code>CTAPE_EOM</code>	The unit is positioned at the end of media.
<code>CTAPE_OFFLINE</code>	The device is returning <code>DEVICE NOT READY</code> in response to a command. The media is either not loaded or is being loaded.
<code>CTAPE_WRT_PROT</code>	The unit is either write protected or is opened read only.
<code>CTAPE_BLANK</code>	The tape is blank.
<code>CTAPE_WRITTEN</code>	The tape has been written during this procedure.
<code>CTAPE_CSE</code>	Clear serious exception.
<code>CTAPE_SOFTERR</code>	A soft error has been reported by the SCSI unit.
<code>CTAPE_HARDERR</code>	A hard error has been reported by the SCSI unit. It can be reported either through an <code>ioctl</code> or by marking the <code>buf</code> structure as <code>EIO</code> .
<code>CTAPE_DONE</code>	The tape procedure is finished.
<code>CTAPE_RETRY</code>	Indicates a retry can be attempted.
<code>CTAPE_ERASED</code>	The tape has been erased.
<code>CTAPE_TPMARK</code>	A tape mark has been detected during a read operation. This cannot occur during a write operation.
<code>CTAPE_SHRTREC</code>	The size of the record retrieved is less than the size requested. Reported using an <code>ioctl</code> .
<code>CTAPE_RDOPP</code>	Reading in the reverse direction. This is not implemented.
<code>CTAPE_REWINDING</code>	The tape is rewinding.
<code>CTAPE_TPMARK_PENDING</code>	The tape mark is to be reported on the next I/O operation.

11.2.1.2 The `ts_state_flags` Member

Flags used to indicate tape state. The possible flags are:

Flag Name	Description
<code>CTAPE_NOT_READY_STATE</code>	The unit was opened with the <code>FNDELAY</code> flag. The unit was detected, but the open failed.
<code>CTAPE_UNIT_ATTEN_STATE</code>	A check condition occurred and the sense key was <code>UNIT ATTENTION</code> . This usually indicates that the media was changed. Current tape position is lost.

Flag Name	Description
CTAPE_RESET_STATE	Indicates a reset condition on the device or on the bus.
CTAPE_RESET_PENDING_STATE	A reset is pending.
CTAPE_OPENED_STATE	The unit is opened.
CTAPE_DISEOT_STATE	No notification of end of media is required.
CTAPE_ABORT_TTPEND_STATE	Indicates that a tape mark was detected for a fixed block operation with nonbuffered I/O. The queue is aborted.
CTAPE_AUTO_DENSITY_VALID_STATE	Directs the open routine to call the <code>ctz_auto_density</code> routine when a unit attention is noticed, because tape density has been determined and all reads are to occur at that density.
CTAPE_ORPHAN_CMD_STATE	This flag is set when a command is orphaned. The process does not wait for completion, such as a rewind operation.
CTAPE_POSITION_LOST_STATE	Tape position is lost due to command failure.

11.2.1.3 The `ts_resid` Member

Residual count from the last tape command.

11.2.1.4 The `ts_block_size` Member

Used to distinguish between blocks and bytes for fixed-block tapes. Commands for devices like 9-track tape, which have variable length records, assume bytes.

11.2.1.5 The `ts_density` Member

The current density at which the SCSI tape device is operating.

11.2.1.6 The `ts_records` Member

The number of records read since the last tape mark.

11.2.1.7 The `ts_num_filemarks` Member

The number of file marks encountered since starting to read the tape.

11.2.1.8 The `ts_softcnt` Member

Number of soft errors reported by each SCSI unit.

11.2.1.9 The `ts_hardcnt` Member

Number of hard errors reported by each SCSI unit.

11.2.2 Programmer-Defined Disk- and CDROM-Specific Structure

SCSI/CAM peripheral device driver writers can create their own disk- and CDROM-specific data structures. A sample DISK_SPECIFIC structure for a SCSI disk device, as defined in the /usr/sys/io/cam/cam_disk.h file, follows:

```
typedef struct disk_specific {
    struct buf *ds_bufhd;           /* Anchor for requests which come */
                                    /* into strategy that cannot be */
                                    /* started due to error recovery */
                                    /* in progress. */
    int ds_dkn;                     /* Used for system statistics */
    u_long ds_bbr_state;           /* Used indicate the current */
                                    /* BBR state if active */
    u_long ds_bbr_retry;           /* BBR retries for reassignment */
    CCB_SCSIIO *ds_bbr_rwccb;      /* R/W ccb used for BBR */
    CCB_SCSIIO *ds_bbr_reascb;     /* Reassign ccb used for BBR */
    CCB_SCSIIO *ds_tur_ccb;        /* SCSI I/O CCB for tur cmd */
                                    /* during recovery */
    CCB_SCSIIO *ds_start_ccb;      /* SCSI I/O CCB for start unit */
    CCB_SCSIIO *ds_mdscel_ccb;    /* SCSI I/O CCB for mode select */
                                    /* cmd during recovery */
    CCB_SCSIIO *ds_rdcpc_ccb;      /* SCSI I/O CCB for read capacity */
                                    /* cmd during recovery */
    CCB_SCSIIO *ds_read_ccb;       /* SCSI I/O CCB for Read cmd */
                                    /* during recovery */
    CCB_SCSIIO *ds_prev_ccb;       /* SCSI I/O CCB for Prevent */
                                    /* Media Removal cmd during recovery */
    u_long ds_block_size;          /* This units block size */
    u_long ds_tot_size;            /* Total disk size in blocks */
    u_long ds_media_changes;       /* Number of times media was */
                                    /* changed - removables */
    struct pt ds_pt;               /* Partition structure */
    u_long ds_openpart;            /* Bit mask of open parts */
}DISK_SPECIFIC;
```

11.2.2.1 The ds_bufhd Member

Pointer to a buffer header structure to contain requests that come to the driver but cannot be started due to error recovery in progress. The requests are issued when error recovery is complete.

11.2.2.2 The ds_dkn Member

Used for system statistics.

11.2.2.3 The ds_bbr_state Member

Used to indicate the current state if bad block recovery (BBR) is active.

11.2.2.4 The ds_bbr_retry Member

Number of retries to attempt for reassignment of bad blocks.

11.2.2.5 The ds_bbr_rwccb Member

Pointer for the SCSI I/O CCB for the Read/Write command used for recovery.

11.2.2.6 The ds_bbr_reasccb Member

Pointer for the SCSI I/O CCB for the Reassign command used for recovery.

11.2.2.7 The ds_tur_ccb Member

Pointer for the SCSI I/O CCB for the TEST UNIT READY command used for recovery.

11.2.2.8 The ds_start_ccb Member

Pointer for the SCSI I/O CCB for the START UNIT command used for recovery.

11.2.2.9 The ds_mdscel_ccb Member

Pointer for the SCSI I/O CCB for the MODE SELECT command used for recovery.

11.2.2.10 The ds_rdcpcb Member

Pointer for the SCSI I/O CCB for the Read Capacity command used for recovery.

11.2.2.11 The ds_read_ccb Member

Pointer for the SCSI I/O CCB for the Read command used for recovery.

11.2.2.12 The ds_prev_ccb Member

Pointer for the SCSI I/O CCB for the Prevent Removal command during recovery.

11.2.2.13 The ds_block_size Member

This SCSI disk device's block size in bytes.

11.2.2.14 The ds_tot_size Member

Total SCSI disk device size in blocks.

11.2.2.15 The ds_media_changes Member

For removable media, the number of times the media was changed.

11.2.2.16 The ds_pt Structure

Structure defining the current disk partition layout.

11.2.2.17 The ds_openpart Member

Bit mask of open partitions.

11.2.3 SCSI/CAM CDROM/AUDIO I/O Control Commands

This section describes the standard and vendor-unique I/O control commands to use for SCSI CDROM/AUDIO devices. The commands are defined in the `/usr/sys/io/cam/cam_disk.h` file. See Chapter 13 of American National Standard for Information Systems, *Small Computer Systems Interface - 2* (SCSI - 2),

X3T9/89-042 for general information about the CDROM device model. Table 11-1 lists the name of each command and describes its function.

Table 11-1: SCSI/CAM CDROM/AUDIO I/O Control Commands

Command	Description
Standard Commands	
CDROM_PAUSE_PLAY	Pauses audio operation
CDROM_RESUME_PLAY	Resumes audio operation
CDROM_PLAY_AUDIO	Plays audio in Logical Block Address (LBA) format
CDROM_PLAY_AUDIO_MSF	Plays audio in Minute-/Second-/Frame-units (MSF) format
CDROM_PLAY_AUDIO_TI	Plays audio track or index
CDROM_PLAY_AUDIO_TR	Plays audio track relative
CDROM_TOC_HEADER	Reads Table of Contents (TOC) header
CDROM_TOC_ENTRIES	Reads Table of Contents (TOC) entries
CDROM_EJECT_CADDY	Ejects the CDROM caddy
CDROM_READ_SUBCHANNEL	Reads subchannel data
CDROM_READ_HEADER	Reads track header
Vendor-Unique Commands	
CDROM_PLAY_VAUDIO	Plays audio LBA format
CDROM_PLAY_MSF	Plays audio MSF format
CDROM_PLAY_TRACK	Plays audio track
CDROM_PLAYBACK_CONTROL	Controls playback
CDROM_PLAYBACK_STATUS	Checks playback status
CDROM_SET_ADDRESS_FORMAT	Sets address format

11.2.3.1 Structures Used by SCSI/CAM CDROM/AUDIO I/O Control Commands

Some of the SCSI CDROM/AUDIO device I/O control commands use data structures. This section describes those data structures. The structures are defined in the `/usr/sys/io/cam/cam_disk.h` file. Table 11-2 lists the name of each structure and the commands that use it.

Table 11-2: Structures Used by SCSI/CAM CDROM/AUDIO I/O Control Commands

Structure	Command
cd_address	All
cd_play_audio	CDROM_PLAY_AUDIO CDROM_PLAY_VAUDIO
cd_play_audio_msf	CDROM_PLAY_AUDIO_MSF CDROM_PLAY_MSF
cd_play_audio_ti	CDROM_PLAY_AUDIO_TI
cd_play_track	CDROM_PLAY_AUDIO_TR CDROM_PLAY_TRACK
cd_toc_header	CDROM_TOC_HEADER

Table 11-2: (continued)

Structure	Command
cd_toc	CDROM_TOC_ENTRYS
cd_toc_entry	CDROM_TOC_ENTRYS
cd_sub_channel	CDROM_READ_SUBCHANNEL
cd_subc_position	CDROM_READ_SUBCHANNEL
cd_subc_media_catalog	CDROM_READ_SUBCHANNEL
cd_subc_isrc_data	CDROM_READ_SUBCHANNEL
cd_subc_header	CDROM_READ_SUBCHANNEL
cd_subc_channel_data	CDROM_READ_SUBCHANNEL
cd_subc_information	CDROM_READ_SUBCHANNEL
cd_read_header	CDROM_READ_HEADER
cd_read_header_data	CDROM_READ_HEADER
cd_playback	CDROM_PLAYBACK_CONTROL CDROM_PLAYBACK_STATUS

11.2.3.1.1 Structure Used by All SCSI/CAM CDROM/AUDIO I/O Control Commands – This section describes the `cd_address` union that defines the SCSI CDROM/AUDIO device Track Address structure and that all the SCSI CDROM/AUDIO device I/O control commands use. The SCSI CDROM/AUDIO device returns track addresses in either LBA or MSF format.

```

union cd_address {
    struct {
        u_char          : 8;
        u_char    m_units;
        u_char    s_units;
        u_char    f_units;
    } msf;          /* Minutes/Seconds/Frame format */
    struct {
        u_char    addr3;
        u_char    addr2;
        u_char    addr1;
        u_char    addr0;
    } lba;          /* Logical Block Address format */
};
/*
 * CD-ROM Address Format Definitions.
 */
#define CDROM_LBA_FORMAT      0      /* Logical Block Address format */
#define CDROM_MSFFORMAT      1      /* Minute Second Frame format */

```

The structure members and their descriptions follow:

Structure Member	Description
<code>m_units</code>	The minute-units binary number of the MSF format for CDROM media

Structure Member	Description
s_units	The second-units binary number of the MSF format for CDROM media
f_units	The frame-units binary number of the MSF format for CDROM media
addr3	The fourth logical block address of LBA format for disk media
addr2	The third logical block address of LBA format for disk media
addr1	The second logical block address of LBA format for disk media
addr0	The first logical block address of LBA format for disk media

11.2.3.1.2 Structure Used by the CDROM_PLAY_AUDIO and CDROM_PLAY_VAUDIO Commands – This section describes the structure that is used by the CDROM_PLAY_AUDIO and CDROM_PLAY_VAUDIO commands. The structure is defined as follows:

```
struct cd_play_audio {
    u_long pa_lba; /* Logical block address. */
    u_long pa_length; /* Transfer length in blocks. */
};
```

The structure members and their descriptions follow:

Structure Member	Description
pa_lba	The LBA where the audio playback operation is to begin.
pa_length	The number of contiguous logical blocks to be played.

11.2.3.1.3 Structure Used by the CDROM_PLAY_AUDIO_MSF and CDROM_PLAY_MSF Commands – This section describes the structure that is used by the CDROM_PLAY_AUDIO_MSF and CDROM_PLAY_MSF commands. The structure is defined as follows:

```
struct cd_play_audio_msf {
    u_char msf_starting_M_unit; /* Starting M-unit */
    u_char msf_starting_S_unit; /* Starting S-unit */
    u_char msf_starting_F_unit; /* Starting F-unit */
    u_char msf_ending_M_unit; /* Ending M-unit */
    u_char msf_ending_S_unit; /* Ending S-unit */
    u_char msf_ending_F_unit; /* Ending F-unit */
};
```

The structure members and their descriptions follow:

Structure Member	Description
msf_starting_M_unit	The minute-unit field of the absolute MSF address at which the audio play operation is to begin.
msf_starting_S_unit	The second-unit field of the absolute MSF address at which the audio play operation is to begin.
msf_starting_F_unit	The frame-unit field of the absolute MSF address at which the audio play operation is to begin.
msf_ending_M_unit	The minute-unit field of the absolute MSF address at which the audio play operation is to end.
msf_ending_S_unit	The second-unit field of the absolute MSF address at which the audio play operation is to end.
msf_ending_F_unit	The frame-unit field of the absolute MSF address at which the audio play operation is to end.

11.2.3.1.4 Structure Used by the CDROM_PLAY_AUDIO_TI Command – This section describes the structure that is used by the CDROM_PLAY_AUDIO_TI command. The structure is defined as follows:

```

/*
 * Define Minimum and Maximum Values for Track & Index.
 */
#define CDROM_MIN_TRACK          1          /* Minimum track number */
#define CDROM_MAX_TRACK          99         /* Maximum track number */
#define CDROM_MIN_INDEX          1          /* Minimum index value */
#define CDROM_MAX_INDEX          99         /* Maximum index value */

struct cd_play_audio_ti {
    u_char  ti_starting_track;    /* Starting track number */
    u_char  ti_starting_index;    /* Starting index value */
    u_char  ti_ending_track;      /* Ending track number */
    u_char  ti_ending_index;      /* Ending index value */
};

```

The structure members and their descriptions follow:

Structure Member	Description
ti_starting_track	The track number at which the audio play operation starts.
ti_starting_index	The index number within the track at which the audio play operation starts.
ti_ending_track	The track number at which the audio play operation ends.

Structure Member	Description
ti_ending_index	The index number within the track at which the audio play operation ends.

11.2.3.1.5 Structure Used by the CDROM_PLAY_AUDIO_TR Command – This section describes the structure that is used by the CDROM_PLAY_AUDIO_TR command. The structure is defined as follows:

```
struct cd_play_audio_tr {
    u_long   tr_lba;           /* Track relative LBA */
    u_char   tr_starting_track; /* Starting track number */
    u_short  tr_xfer_length;   /* Transfer length */
};
```

The structure members and their descriptions follow:

Structure Member	Description
tr_lba	The logical block address relative to the track being played. A negative value indicates a start location within the audio pause area at the beginning of the track.
tr_starting_track	Track number at which play is to start.
tr_xfer_length	The number of contiguous logical blocks to be output as audio data.

11.2.3.1.6 Structure Used by the CDROM_TOC_HEADER Command – This section describes the structure that is used by the CDROM_TOC_HEADER command. The structure is defined as follows:

```
struct cd_toc_header {
    u_char   th_data_len1;     /* TOC data length MSB */
    u_char   th_data_len0;     /* TOC data length LSB */
    u_char   th_starting_track; /* Starting track number */
    u_char   th_ending_track;  /* Ending track number */
};
```

The structure members and their descriptions follow:

Structure Member	Description
th_data_len1	The total number of bytes in the table of contents for MSF format.
th_data_len0	The total number of bytes in the table of contents for LBA format.
th_starting_track	Starting track number for which data is to be returned. If the value is 0 (zero), data is to be returned starting with the first track on the medium.

Structure Member	Description
th_ending_track	The track number at which the audio play operation ends.

11.2.3.1.7 Structures Used by the CDROM_TOC_ENTRIES Command – This section describes the structures that are used by the CDROM_TOC_ENTRIES command. The structures are defined as follows:

```
struct cd_toc {
    u_char  toc_address_format;    /* Address format to return */
    u_char  toc_starting_track;    /* Starting track number */
    u_short toc_alloc_length;     /* Allocation length */
    caddr_t toc_buffer;          /* Pointer to TOC buffer */
};
```

The structure members and their descriptions follow:

Structure Member	Description
toc_address_format	The address format, LBA or MSF.
toc_starting_track	The track number at which the audio play operation starts.
toc_alloc_length	The allocation length of the table of contents buffer in bytes
toc_buffer	A pointer to the TOC buffer.

```
struct cd_toc_entry {
    u_char          : 8;    /* Reserved */
    u_char  te_control      : 4;    /* Control field (attributes) */
    u_char  te_addr_type   : 4;    /* Address type information */
    u_char  te_track_number;    /* The track number */
    u_char          : 8;    /* Reserved */
    union cd_address te_absaddr; /* Absolute CD-ROM Address */
};
```

The structure members and their descriptions follow:

Structure Member	Description
te_control	The control field containing attributes. The possible settings follow:

Bit No.	Set to 0 (Zero)	Set to 1
0	Audio without preemphasis	Audio with preemphasis
1	Digital copy prohibited	Digital copy permitted
2	Audio track	Data track
3	Two-channel audio	Four-channel audio

te_addr_type	Address-type information, MSF or LBA
te_track_number	The current track number that is being played.
te_absaddr	The absolute address of the audio track, MSF or LBA format.

11.2.3.1.8 Structures Used by the CDROM_READ_SUBCHANNEL Command –

The CDROM_READ_SUBCHANNEL command requests subchannel data and the state of audio play operations from the target device. This section describes the structure that is used by the CDROM_READ_SUBCHANNEL command. The structure is defined as follows:

```

/*
 * CD-ROM Sub-Channel Q Address Field Definitions.
 */
#define CDROM_NO_INFO_SUPPLIED 0x0 /* Information not supplied */
#define CDROM_CURRENT_POS_DATA 0x1 /* Encodes current position data */
#define CDROM_MEDIA_CATALOG_NUM 0x2 /* Encodes media catalog number */
#define CDROM_ENCODES_ISRC 0x3 /* Encodes ISRC */
/* ISRC=International-Standard-
/* Recording-Code */
/* Codes 0x4 through 0x7 are Reserved */

/*
 * CD-ROM Data Track Definitions
 */
#define CDROM_AUDIO_PREMPH 0x01 /* 0/1 = Without/With Pre-emphasis */
#define CDROM_COPY_PERMITTED 0x02 /* 0/1 = Copy Prohibited/Allowed */
#define CDROM_DATA_TRACK 0x04 /* 0 = Audio, 1 = Data track */
#define CDROM_FOUR_CHAN_AUDIO 0x10 /* 0 = 2 Channel, 1 = 4 Channel */

/*
 * Sub-Channel Data Format Codes
 */
#define CDROM_SUBQ_DATA 0x00 /* Sub-Channel data information */
#define CDROM_CURRENT_POSITION 0x01 /* Current position information */
#define CDROM_MEDIA_CATALOG 0x02 /* Media catalog number */
#define CDROM_ISRC 0x03 /* ISRC information */
/* ISRC=International-Standard-
/* Recording-Code */
/* Codes 0x4 through 0xEF are Reserved */
/* Codes 0xF0 through 0xFF are Vendor Specific */

/*
 * Audio Status Definitions returned by Read Sub-Channel Data Command
 */
#define AS_AUDIO_INVALID 0x00 /* Audio status not supported */
#define AS_PLAY_IN_PROGRESS 0x11 /* Audio play operation in prog */
#define AS_PLAY_PAUSED 0x12 /* Audio play operation paused */
#define AS_PLAY_COMPLETED 0x13 /* Audio play completed */
#define AS_PLAY_COMPLETED 0x13 /* Audio play completed */
#define AS_PLAY_ERROR 0x14 /* Audio play stopped by error */
#define AS_NO_STATUS 0x15 /* No current audio status */

struct cd_sub_channel {
    u_char sch_address_format; /* Address format to return */
    u_char sch_data_format; /* Sub-channel data format code */
    u_char sch_track_number; /* Track number */
    u_short sch_alloc_length; /* Allocation length */
    caddr_t sch_buffer; /* Pointer to SUBCHAN buffer */

```



```
};
```

The structure members and their descriptions follow:

Structure Member	Description
<code>sch_address_format</code>	The address format, LBA or MSF.
<code>sch_data_format</code>	The type of subchannel data to be returned.
<code>sch_track_number</code>	The track from which ISRC data is read.
<code>sch_alloc_length</code>	The allocation length of the table of contents buffer in bytes
<code>sch_buffer</code>	A pointer to the SUBCHAN buffer defined by the <code>sch_data_format</code> member.

```
struct cd_subc_position {
    u_char  scp_data_format;          /* Data Format code */
    u_char  scp_control   : 4;       /* Control field (attributes) */
    u_char  scp_addr_type  : 4;       /* Address type information */
    u_char  scp_track_number;        /* The track number */
    u_char  scp_index_number;        /* The index number */
    union cd_address scp_absaddr;    /* Absolute CD-ROM Address */
    union cd_address scp_reladdr;    /* Relative CD-ROM Address */
};

#define scp_absmsf scp_absaddr.msf
#define scp_abslba scp_absaddr.lba
#define scp_relmsf scp_reladdr.msf
#define scp_rellba scp_reladdr.lba
```

The structure members and their descriptions follow:

Structure Member	Description															
<code>scp_data_format</code>	Data format code.															
<code>scp_control</code>	The control field containing attributes. The possible settings follow:															
	<table border="1"> <thead> <tr> <th>Bit No.</th> <th>Set to 0 (Zero)</th> <th>Set to 1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Audio without preemphasis</td> <td>Audio with preemphasis</td> </tr> <tr> <td>1</td> <td>Digital copy prohibited</td> <td>Digital copy permitted</td> </tr> <tr> <td>2</td> <td>Audio track</td> <td>Data track</td> </tr> <tr> <td>3</td> <td>Two-channel audio</td> <td>Four-channel audio</td> </tr> </tbody> </table>	Bit No.	Set to 0 (Zero)	Set to 1	0	Audio without preemphasis	Audio with preemphasis	1	Digital copy prohibited	Digital copy permitted	2	Audio track	Data track	3	Two-channel audio	Four-channel audio
Bit No.	Set to 0 (Zero)	Set to 1														
0	Audio without preemphasis	Audio with preemphasis														
1	Digital copy prohibited	Digital copy permitted														
2	Audio track	Data track														
3	Two-channel audio	Four-channel audio														
<code>scp_addr_type</code>	Address-type information, MSF or LBA format. The address format, LBA or MSF.															
<code>scp_track_number</code>	The current track number that is being played.															
<code>scp_index_number</code>	The index number within an audio track.															

scp_absaddr	The absolute address of the audio track, MSF or LBA format.
scp_reladdr	The CDROM address relative to the track being played.

```

struct cd_subc_media_catalog {
    u_char  smc_data_format;      /* Data Format code */
    u_char          : 8;        /* Reserved */
    u_char          : 8;        /* Reserved */
    u_char          : 8;        /* Reserved */
    u_char          : 7,        /* Reserved */
                smc_mc_valid    : 1; /* Media catalog valid 1 = True */
    u_char  smc_mc_number[15];    /* Media catalog number ASCII */
};

```

The structure members and their descriptions follow:

Structure Member	Description
smc_data_format	Data format code.
smc_mc_valid	Media catalog number is valid.
smc_mc_number	Media catalog number.

```

struct cd_subc_isrc_data {
    u_char  sid_data_format;      /* Data Format code */
    u_char          : 8;        /* Reserved */
    u_char  sid_track_number;     /* The track number */
    u_char          : 8;        /* Reserved */
    u_char          : 7,        /* Reserved */
                sid_tc_valid    : 1; /* Track code valid, 1 = True */
    u_char  sid_tc_number[15];    /* International-Standard-Recording-Code (ASCII) */
};

```

The structure members and their descriptions follow:

Structure Member	Description
sid_data_format	Data format code.
sid_track_number	The current track number at which ISRC is located.
sid_tc_valid	The track code is valid.
sid_tc_number[15]	The track code number.

```

struct cd_subc_header {
    u_char          : 8;        /* Reserved */
    u_char  sh_audio_status;      /* Audio status */
    u_char  sh_data_len1;        /* Sub-Channel Data length MSB */
    u_char  sh_data_len0;        /* Sub-Channel Data length LSB */
};

```

The structure members and their descriptions follow:

Structure Member	Description
sh_audio_status	The audio status code.
sh_data_len1	The subchannel data length for MSF format.
sh_data_len0	The subchannel data length for LBA format.

```
struct cd_subc_channel_data {
    struct cd_subc_header scd_header;
    struct cd_subc_position scd_position_data;
    struct cd_subc_media_catalog scd_media_catalog;
    struct cd_subc_isrc_data scd_isrc_data;
};
```

The structure members and their descriptions follow:

Structure Member	Description
scd_header	The subchannel data header, which is four bytes.
scd_position_data	CDROM current-position data information.
scd_media_catalog	The Media Catalog Number data information.
scd_isrc_data	Track International-Standard-Recording-Code (ISRC) data information.

```
struct cd_subc_information {
    struct cd_subc_header sci_header;
    union {
        struct cd_subc_channel_data sci_channel_data;
        struct cd_subc_position sci_position_data;
        struct cd_subc_media_catalog sci_media_catalog;
        struct cd_subc_isrc_data sci_isrc_data;
    } sci_data;
};

#define sci_scd          sci_data.sci_channel_data
#define sci_scp          sci_data.sci_position_data
#define sci_smc          sci_data.sci_media_catalog
#define sci_sid          sci_data.sci_isrc_data

#define CDROM_DATA_MODE_ZERO    0    /* All bytes zero */
#define CDROM_DATA_MODE_ONE     1    /* Data mode one format */
#define CDROM_DATA_MODE_TWO     2    /* Data mode two format */
/* Modes 0x03-0xFF are reserved. */
```

This structure is used to allocate data space. The structure members and their descriptions follow:

Structure Member	Description
------------------	-------------

Structure Member	Description
sci_channel_data	Space for channel data.
sci_position_data	Space for current position data.
sci_media_catalog	Space for Media Catalog data.
sci_isrc_data	Space for ISRC data.

11.2.3.1.9 Structures Used by the CDROM_READ_HEADER Command – This section describes the structures that are used by the CDROM_READ_HEADER command. The structures are defined as follows:

```
struct cd_read_header {
    u_char  rh_address_format;    /* Address format to return */
    u_long  rh_lba;              /* Logical block address */
    u_short rh_alloc_length;     /* Allocation length */
    caddr_t rh_buffer;          /* Pointer to header buffer */
};
```

The structure members and their descriptions follow:

Structure Member	Description
rh_address_format	The address format, LBA or MSF.
rh_lba	The logical block address for LBA format.
rh_alloc_length	The allocation length of the header buffer.
rh_buffer	A pointer to the header buffer.

```
struct cd_read_header_data {
    u_char  rhd_data_mode;      /* CD-ROM data mode */
    u_char          : 8;      /* Reserved */
    u_char          : 8;      /* Reserved */
    u_char          : 8;      /* Reserved */
    union cd_address rhd_absaddr; /* Absolute CD-ROM address */
};

#define rhd_msf rhd_absaddr.msf
#define rhd_lba rhd_absaddr.lba
```

The structure members and their descriptions follow:

Structure Member	Description
rhd_data_mode	The CDROM data mode type.
rhd_absaddr	The absolute address of the audio track, MSF or LBA format.

11.2.3.1.10 Structure Used by the CDROM_PLAY_TRACK Command – This section describes the structure that is used by the CDROM_PLAY_TRACK command. The structure is defined as follows:

```
struct cd_play_track {
    u_char  pt_starting_track;    /* Starting track number */
    u_char  pt_starting_index;   /* Starting index value */
    u_char  pt_number_indexes;   /* Number of indexes */
};
```

The structure members and their descriptions follow:

Structure Member	Description
pt_starting_track	The track number at which the audio play operation starts.
pt_starting_index	The index number within the track at which the audio play operation starts.
pt_number_indexes	The number of index values in the audio encoding on CDROM media.

11.2.3.1.11 Structure Used by the CDROM_PLAYBACK_CONTROL and CDROM_PLAYBACK_STATUS Commands – This section describes the structures that are used by the CDROM_PLAYBACK_CONTROL and CDROM_PLAYBACK_STATUS commands. The structures are defined as follows:

```
/*
 * Definitions for Playback Control/Playback Status Output Selection
 * Codes */
#define CDROM_MIN_VOLUME      0x0    /* Minimum volume level */
#define CDROM_MAX_VOLUME      0xFF   /* Maximum volume level */
#define CDROM_PORT_MUTED      0x0    /* Output port is muted */
#define CDROM_CHANNEL_0       0x1    /* Channel 0 to output port */
#define CDROM_CHANNEL_1       0x2    /* Channel 1 to output port */
#define CDROM_CHANNEL_0_1     0x3    /* Channel 0 & 1 to output port */

struct cd_playback {
    u_short pb_alloc_length;    /* Allocation length */
    caddr_t pb_buffer;         /* Pointer to playback buffer */
};
```

The structure members and their descriptions follow:

Structure Member	Description
pb_alloc_length	Allocation length of the playback buffer.
pb_buffer	A pointer to the playback buffer.

11.2.3.1.12 Structure Used by the CDROM_PLAYBACK_CONTROL Command –

This section describes the structure that is used by the CDROM_PLAYBACK_CONTROL command. The structure is defined as follows:

```
struct cd_playback_control {
    u_char  pc_reserved[10];          /* Reserved */
    u_char  pc_chan0_select : 4,     /* Channel 0 selection code */
           : 4;                     /* Reserved */
    u_char  pc_chan0_volume;        /* Channel 0 volume level */
    u_char  pc_chan1_select : 4,     /* Channel 1 selection code */
           : 4;                     /* Reserved */
    u_char  pc_chan1_volume;        /* Channel 1 volume level */
    u_char  pc_chan2_select : 4,     /* Channel 2 selection code */
           : 4;                     /* Reserved */
    u_char  pc_chan2_volume;        /* Channel 2 volume level */
    u_char  pc_chan3_select : 4,     /* Channel 3 selection code */
           : 4;                     /* Reserved */
    u_char  pc_chan3_volume;        /* Channel 3 volume level */
};
```

The structure members and their descriptions follow:

Structure Member	Description
pc_chan0_select	The selection code for Channel 0. The low four bits are reserved.
pc_chan0_volume	The volume level value for Channel 0.
pc_chan1_select	The selection code for Channel 1. The low four bits are reserved.
pc_chan1_volume	The volume level value for Channel 1.
pc_chan2_select	The selection code for Channel 2. The low four bits are reserved.
pc_chan2_volume	The volume level value for Channel 2.
pc_chan3_select	The selection code for Channel 3. The low four bits are reserved.
pc_chan3_volume	The volume level value for Channel 3.

11.2.3.1.13 Structure Used by the CDROM_PLAYBACK_STATUS Command –

This section describes the structure that is used by the CDROM_PLAYBACK_STATUS command. The structure is defined as follows:

```
/*
 * Audio status return by Playback Status Command.
 */
#define PS_PLAY_IN_PROGRESS    0x00    /* Audio Play Oper In Progress */
#define PS_PLAY_PAUSED        0x01    /* Audio Pause Oper In Progress */
#define PS_MUTING_ON           0x02    /* Audio Muting On */
#define PS_PLAY_COMPLETED     0x03    /* Audio Play Oper Completed */
#define PS_PLAY_ERROR          0x04    /* Error Occurred During Play */
#define PS_PLAY_NOT_REQUESTED  0x05    /* Audio Play Oper Not Requested */

/*
 * Data structure returned by Playback Status Command.
 */
struct cd_playback_status {
    u_char          : 8;    /* Reserved */
```

```

    u_char  ps_lbamsf      : 1,      /* Address format 0/1 = LBA/MSF */
                                : 7;      /* Reserved */
    u_char  ps_data_len1;      /* Audio data length MSB */
    u_char  ps_data_len0;      /* Audio data length LSB */
    u_char  ps_audio_status;    /* Audio status */
    u_char  ps_control     : 4,      /* Control field (attributes) */
                                : 4;      /* Reserved */
    union cd_address ps_absaddr; /* Absolute CD-ROM address */
    u_char  ps_chan0_select : 4,      /* Channel 0 selection code */
                                : 4;      /* Reserved */
    u_char  ps_chan0_volume; /* Channel 0 volume level */
    u_char  ps_chan1_select : 4,      /* Channel 1 selection code */
                                : 4;      /* Reserved */
    u_char  ps_chan1_volume; /* Channel 1 volume level */
    u_char  ps_chan2_select : 4,      /* Channel 2 selection code */
                                : 4;      /* Reserved */
    u_char  ps_chan2_volume; /* Channel 2 volume level */
    u_char  ps_chan3_select : 4,      /* Channel 3 selection code */
                                : 4;      /* Reserved */
    u_char  ps_chan3_volume; /* Channel 3 volume level */
};

```

The structure members and their descriptions follow:

Structure Member	Description
ps_lbamsf	The address format: a 0 (zero) means LBA; a 1 means MSF.
ps_data_len1	The audio data length if the address format is MSF.
ps_data_len0	The audio data length if the address format is LBA.
ps_audio_status	The audio status
ps_control	The control field containing attributes. The possible settings follow:

Bit No.	Set to 0 (Zero)	Set to 1
0	Audio without preemphasis	Audio with preemphasis
1	Digital copy prohibited	Digital copy permitted
2	Audio track	Data track
3	Two-channel audio	Four-channel audio

	The low four bits are reserved.
ps_absaddr	The absolute address of the audio track, MSF or LBA format.
ps_chan0_select	The selection code for Channel 0. The low four bits are reserved.
ps_chan0_volume	The volume level setting for Channel 0.
ps_chan1_select	The selection code for Channel 1. The low four bits are reserved.
ps_chan1_volume	The volume level setting for Channel 1.

<code>ps_chan1_select</code>	The selection code for Channel 1. The low four bits are reserved.
<code>ps_chan2_volume</code>	The volume level setting for Channel 2.
<code>ps_chan2_select</code>	The selection code for Channel 2. The low four bits are reserved.
<code>ps_chan3_volume</code>	The volume level setting for Channel 3.

11.3 Adding a Programmer-Defined SCSI/CAM Device

The procedure for installing device drivers described in *Guide to Writing and Porting VMEbus and TURBOchannel Device Drivers* applies to adding SCSI/CAM peripheral device drivers to your system. Follow that procedure after completing the entries to the SCSI/CAM-specific structures described in this chapter and in Chapter 3.


This chapter describes the SCSI/CAM special I/O interface. The USCA software includes an interface developed to process special SCSI I/O control commands used by the existing Digital SCSI subsystem and to aid in porting new or existing SCSI device drivers from other vendors to the USCA.

Application programs issue I/O control commands using the `ioctl` system call to send special SCSI I/O commands to a peripheral device. The term “special” refers to commands that are not usually issued to the device through the standard driver entry points. SCSI device drivers usually require the special I/O control commands in addition to the standard `read` and `write` system calls. With the SCSI/CAM special I/O interface, SCSI/CAM peripheral driver writers do not need detailed knowledge of either the system-specific or the CAM-specific structures and routines used to issue a SCSI command to the CAM I/O subsystem.

12.1 Application Program Access

Application programs access the SCSI/CAM special I/O interface by making requests to peripheral drivers using the `ioctl` system call. This system call is processed by system kernel support routines that invoke the device driver’s I/O control command entry point in the character device switch table defined in the `machine/common/conf.c` file. The device driver’s I/O control routine accesses the special I/O interface using either the supplied SCSI/CAM peripheral common routine, `ccmn_DoSpecialCmd`, or a driver-specific routine. Figure 12-1 shows the flow of application program requests through the operating system to the SCSI/CAM special I/O interface and the CAM I/O subsystem.

Figure 12-1: Application Program Flow Through SCSI/CAM Special I/O Interface

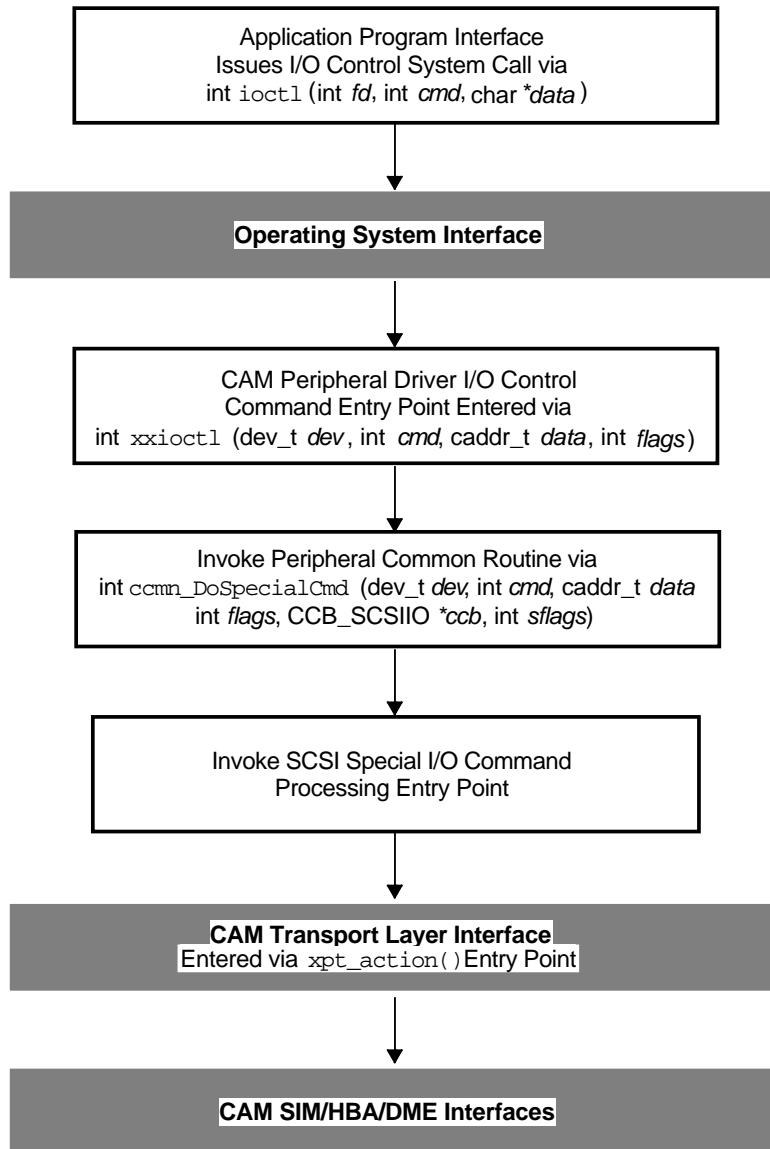


ZK-0264U-R

12.2 Device Driver Access

SCSI/CAM peripheral device drivers access the SCSI/CAM special I/O interface using either the supplied SCSI/CAM peripheral common routine, `ccmn_SysSpecialCmd`, or using a driver-specific routine. Figure 12-2 shows the flow of system requests from device drivers through the SCSI/CAM special I/O interface and the CAM I/O subsystem.

Figure 12-2: Device Driver Flow Through SCSI/CAM Special I/O Interface

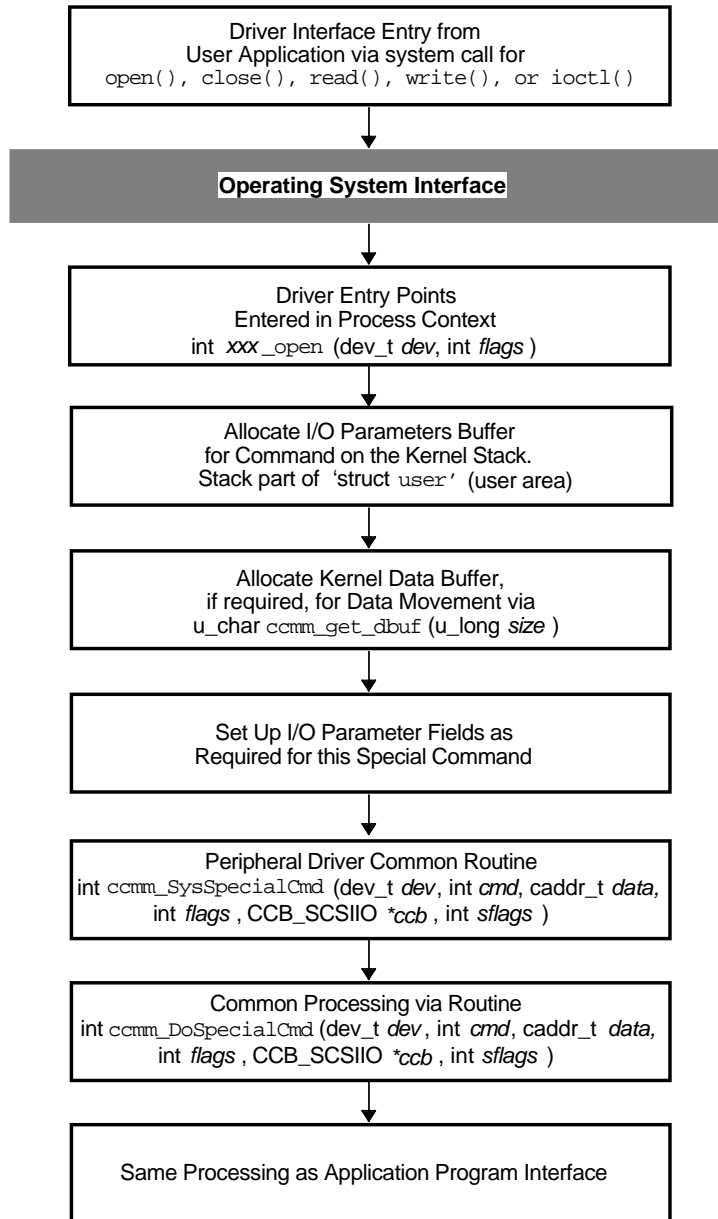

ZK-0470U-R

12.3 SCSI/CAM Special Command Tables

The SCSI/CAM special I/O interface includes default command tables that provide backwards compatibility with existing SCSI I/O control commands. The following predefined SCSI/CAM Special Command Tables are included:

- `cam_GenericCmds`

- cam_DirectCmds
- cam_AudioCmds
- cam_SequentialCmds
- cam_MtCmds

The interface also allows commands to be added to the existing command tables and new command tables to be added. The SCSI/CAM special I/O interface includes routines that manipulate the tables so programmers can write device drivers to easily add and remove command tables.

The command table header structure, SPECIAL_HEADER, provides a bit mask of device types that can be used with a command table. The Special Command Header Structure is defined as follows:

```

/*
 * Special Command Header Structure:
 */

typedef struct special_header {
    struct special_header *sph_flink; /* Forward link to next table */
    struct special_header *sph_blink; /* Backward link to prev table */
    struct special_cmd *sph_cmd_table; /* Pointer to command table */
    u_long sph_device_type; /* The device types supported */
    u_long sph_table_flags; /* Flags to control cmd lookup */
    caddr_t sph_table_name; /* Name of this command table */
} SPECIAL_HEADER;

```

12.3.1 The sph_flink and sph_blink Members

These are table-linkage members that allow command tables to be dynamically added or removed from the list of tables searched by the SCSI/CAM special I/O interface when processing commands.

12.3.2 The sph_cmd_table Member

A pointer to the Special Command Entry Structure.

12.3.3 The sph_device_type Member

The device types supported by this SCSI/CAM Special Command Table.

12.3.4 The sph_table_flags Member

The SPH_SUB_COMMAND, which indicates that the command table contains subcommands.

12.3.5 The sph_table_name Member

The name of this SCSI/CAM Special Command Table.

12.4 SCSI/CAM Special Command Table Entries

Each SCSI/CAM Special Command Table contains multiple entries. Each entry provides enough information to process the command associated with that entry. The command tables can be dynamically added, but the entries within the command tables are not dynamic. Each command table's entries are statically defined so that individual entries cannot be appended to the table. The Special Command Entry Structure structure is defined as follows:

```
/*
 * Special Command Entry Structure:
 */
typedef struct special_cmd {
    int     spc_ioctl_cmd;           /* The I/O control command code */
    int     spc_sub_command;        /* The I/O control sub-command */
    u_char  spc_cmd_flags;          /* The special command flags */
    u_char  spc_cmd_code;          /* The special command code */
    u_short                : 16;    /* Unused ... align next field */
    u_long   spc_device_type;       /* The device types supported */
    u_long   spc_cmd_parameter;     /* Command parameter (if any) */
    u_long   spc_cam_flags;        /* The CAM flags field for CCB */
    u_long   spc_file_flags;       /* File control flags (fcntl) */
    int     spc_data_length;       /* Kernel data buffer length */
    int     spc_timeout;           /* Timeout for this command */
    int     (*spc_docmd)();        /* Function to do the command */
    int     (*spc_mkcdb)();       /* Function to make SCSI CDB */
    int     (*spc_setup)();       /* Setup parameters routine */
    caddr_t spc_cdbp;             /* Pointer to prototype CDB */
    caddr_t spc_cmdp;             /* Pointer to the command name */
} SPECIAL_CMD;
```

12.4.1 The `spc_ioctl_cmd` and `spc_sub_command` Members

These members contain the SCSI I/O control command code and subcommand used to locate the appropriate table entry. The subcommand is checked only if flags are set that indicate a subcommand exists.

12.4.2 The `spc_cmd_flags` Member

This member contains flags to control the action of the SCSI/CAM special I/O interface routines. The flag definitions are described in the following table:

Flag Name	Description
SPC_SUSER	Restricted to superuser.
SPC_COPYIN	User buffer to copy from.
SPC_COPYOUT	User buffer to copy to.
SPC_NOINTR	Do not allow sleep interrupts.
SPC_DATA_IN	Data direction is from device.
SPC_DATA_OUT	Data direction is to device.
SPC_DATA_NONE	No data movement for command.
SPC_SUB_COMMAND	Entry contains subcommand.
SPC_INOUT	Copy in and out.
SPC_DATA_INOUT	Copy data in and out.

12.4.3 The `spc_command_code` Member

This member contains the special SCSI opcode used to execute this command. This member is used during the creation of the CDB.

12.4.4 The `spc_device_type` Member

This member defines the specific device types with which this command is used. For example, direct-access and readonly direct-access devices share many of the same commands. Therefore, rather than duplicating command table entries, both device types can use the same command table. The values that are valid for this member are those defined in the Inquiry data device type member of the `inquiry_info` structure, which is defined in the `/usr/sys/h/scsi_all.h` file.

12.4.5 The `spc_cmd_parameter` Member

This member is used to define any special parameters used by the command. For example, the SCSI START CDB command, which is defined in the `/usr/sys/h/scsi_direct.h` file, is used for stopping, starting, and ejecting a CDROM caddy. The parameter member can be defined as the subcommand code so a common routine can be used to create the CDB.

12.4.6 The `spc_cam_flags` Member

This member contains the CAM flags necessary for processing the command. The CAM flags are defined in the file `/usr/sys/h/cam.h`.

12.4.7 The `spc_file_flags` Member

This member contains the file access bits required for accessing the command. For example, the command can be restricted to device files opened for read and write access. The file flags are defined in the file `/usr/sys/h/file.h`.

12.4.8 The `spc_data_length` Member

This member describes the length of the buffer to hold additional kernel data that is required to process the command. Usually, this member is set to 0 (zero), since the data buffer lengths are normally decoded from the I/O command code or taken from a member in the I/O parameter buffer.

12.4.9 The `spc_timeout` Member

This member defines the default timeout for this command. This value is used for the SCSI I/O CCB timeout member, unless it is overridden by the timeout member in the Special I/O Argument Structure.

12.4.10 The `spc_docmd` Member

This member specifies the routine to invoke to execute the command. A routine is required by I/O commands that need special servicing. For example, if the I/O command does not return all the data read by the SCSI command, then a routine is needed to handle this special servicing.

12.4.11 The `spc_mkcdb` Member

This member specifies the routine that is invoked to create the CDB for the command. A routine is not necessary for simple commands, such as TEST UNIT READY. However, any command that requires additional members to be set up in the CDB prior to issuing the SCSI command must define this routine.

12.4.12 The `spc_setup` Member

This member is required by any command that has special setup requirements. For example, commands that pass a user buffer and length as part of the I/O parameters buffer structure must have a setup routine to copy these members to the Special I/O Argument Structure. This applies to all previously defined commands, but does not apply to commands implemented using the new SCSI_SPECIAL I/O control command code.

12.4.13 The `spc_cdbp` Member

This member is used by commands that can be implemented using a prototype CDB. A prototype CDB is a SCSI command that can be implemented using a statically defined SCSI CDB. Fields within the CDB do not change. Usually, simple SCSI commands, such as SCSI_START_UNIT, can be implemented with a prototype CDB so that the make CDB routine is not required.

12.4.14 The `spc_cmdp` Member

This member points to a string that describes the name of the command. This string is used during error reporting and during debugging.

12.4.15 Sample SCSI/CAM Special Command Table

The example that follows shows a sample SCSI/CAM Special Command Table with one entry defined:

```
#include "../h/cdrom.h"
#include "../h/mtio.h"
#include "../h/rzdisk.h"

#include "../h/cam.h"
#include "../h/cam_special.h"
#include "../h/dec_cam.h"
#include "../h/scsi_all.h"
#include "../h/scsi_direct.h"
#include "../h/scsi_rodirect.h"
#include "../h/scsi_sequential.h"
#include "../h/scsi_special.h"

extern int scmn_MakeFormatUnit(), scmn_SetupFormatUnit();

/*
 * Command Header for Direct-Access Command Table:
 */
struct special_header cam_DirectCmdsHdr = {
    (struct special_header *) 0,          /* sph_flink */
    (struct special_header *) 0,          /* sph_blink */
    cam_DirectCmds,                       /* sph_cmd_table */
    (BM(DTYPE_DIRECT) | BM(DTYPE_RODIRECT)), /* sph_device_type */
    0,                                     /* sph_table_flags */
    "Direct Access Commands"              /* sph_table_name */
};
```

```

/*****
 *
 *          Special Direct Access Command Table
 *
 *****/
struct special_cmd cam_DirectCmds[] = {
    {   SCSI_FORMAT_UNIT,                /* spc_ioctl_cmd */
      0,                                /* spc_sub_command */
      (SPC_COPYIN | SPC_DATA_OUT),      /* spc_cmd_flags */
      DIR_FORMAT_OP,                    /* spc_cmd_code */
      BM(DTYPE_DIRECT),                 /* spc_device_type */
      0,                                /* spc_cmd_parameter */
      CAM_DIR_OUT,                       /* spc_cam_flags */
      FWRITE,                            /* spc_file_flags */
      -1,                                /* spc_data_length */
      (60 * ONE_MINUTE),                 /* spc_timeout */
      (int (*)()) 0,                     /* spc_docmd */
      scmn_MakeFormatUnit,                /* spc_mkcdb */
      scmn_SetupFormatUnit,              /* spc_setup */
      (caddr_t) 0,                       /* spc_cdbp */
      "format unit"                       /* spc_cmdp */
    },
    .
    .
    .
    { END_OF_CMD_TABLE } /* End of cam_DirectCmds[] Table. */
};
/*
 * Define Special Commands Header & Table for Initialization Routine.
 */
struct special_header *cam_SpecialCmds = &cam_SpecialCmdsHdr;
struct special_header *cam_SpecialHdrs[] =
    { &cam_GenericCmdsHdr, &cam_DirectCmdsHdr, &cam_AudioCmdsHdr,
      &cam_SequentialCmdsHdr, &cam_MtCmdsHdr, 0 };

```

12.5 SCSI/CAM Special I/O Argument Structure

A Special I/O Argument Structure is passed to the SCSI/CAM special I/O interface to control processing of the I/O control command being executed. The structure members provide information to process a special command for different SCSI subsystems. Default settings and routines invoked by the SCSI/CAM special I/O interface can be overridden by the calling routine. Table 12-1 shows the members that are mandatory for the calling routine to set up, the members that are optional, and the members that are used or filled in by the SCSI/CAM special I/O interface:

Table 12-1: SCSI/CAM Special I/O Argument Structure

Member Name	Type	Description
u_long sa_flags;	M	Flags to control command
dev_t sa_dev;	M	Device major/minor number
u_char sa_unit;	U	Device logical unit number
u_char sa_bus;	M	SCSI host adapter bus number
u_char sa_target;	M	SCSI device target number
u_char sa_lun;	M	SCSI logical unit number
int sa_ioctl_cmd;	M	The I/O control command

Table 12-1: (continued)

Member Name	Type	Description
<code>int sa_ioctl_scmd;</code>	C	The subcommand, if any
<code>caddr_t sa_ioctl_data;</code>	C	The command data pointer
<code>caddr_t sa_device_name;</code>	M	Pointer to the device name
<code>int sa_device_type;</code>	M	The peripheral device type
<code>int sa_iop_length;</code>	I	Parameters' buffer length
<code>caddr_t sa_iop_buffer;</code>	I	Parameters' buffer address
<code>int sa_file_flags;</code>	M	The file control flags
<code>int sa_sense_length;</code>	O	Sense data buffer length
<code>u_char sa_sense_resid;</code>	I	Sense data residual count
<code>caddr_t sa_sense_buffer;</code>	O	Sense data buffer address
<code>int sa_user_length;</code>	I	User data buffer length
<code>caddr_t sa_user_buffer;</code>	I	User data buffer address
<code>struct buf *sa_bp;</code>	O	Kernel I/O request buffer
<code>CCB SCSIIO *sa_ccb;</code>	O	CAM control block buffer
<code>struct special_cmd *sa_spc;</code>	I	Special command table entry
<code>struct special_header *sa_sph;</code>	O	Special command table header
<code>u_long sa_cmd_parameter;</code>	I	Command parameter, if any
<code>int (*sa_error)();</code>	O	The error report routine
<code>int (*sa_start)();</code>	O	The driver start routine
<code>int sa_data_length;</code>	I	Kernel data buffer length
<code>caddr_t sa_data_buffer;</code>	I	Kernel data buffer address
<code>caddr_t sa_cdb_pointer;</code>	I	Pointer to the CDB buffer
<code>u_char sa_cdb_length;</code>	I	Length of the CDB buffer
<code>u_char sa_cmd_flags;</code>	I	The special command flags
<code>u_char sa_retry_count;</code>	I	The current retry count
<code>u_char sa_retry_limit;</code>	O	Times to retry this command
<code>int sa_timeout;</code>	O	Timeout for this command
<code>int sa_xfer_resid;</code>	I	Transfer residual count
<code>caddr_t sa_specific;</code>	O	Driver-specific information

Legend: M = Mandatory. Must be set up by the caller.
C = Command Dependent. Depends on special command.
O = Optional. Optionally overrides defaults.
I = Interface. Used or filled in by SCSI/CAM special I/O interface.
U = Unused. Not used by SCSI/CAM special I/O interface.

Several of the members marked as mandatory in Table 12-1 are set up initially by the routine that allocates the Special I/O Argument Structure. The following members are initialized by the allocation routine: `sa_bus`; `sa_target`; `sa_lun`; `sa_unit` (same as target); `sa_retry_limit` (set to 30); and `sa_start` (set to `xpt_action`).

Fields that are identified as optional in Table 12-1 can be defined by the caller to override some of the defaults used by the SCSI/CAM special I/O interface. The following table describes the defaults used by the SCSI/CAM special I/O interface:

Member Name	Default
sa_sense_length	Set to DEC_AUTO_SENSE_SIZE, which is defined in /usr/sys/h/dec_cam.h.
sa_sense_buffer	Sense buffer in SCSI/CAM Peripheral Device Driver Working Set Structure.
sa_bp	Allocated as needed for data movement commands.
sa_ccb	Allocated by the CAM xpt_ccb_alloc routine.
sa_error()	Special interface error report routine.
sa_start()	Uses the CAM xpt_action routine.
sa_timeout	Uses the timeout value from the SCSI/CAM Special Command Table entry.
sa_specific	Is not set up or used by SCSI/CAM special I/O interface.

12.5.1 The sa_flags Member

This member is used to control the actions of the SCSI/CAM special I/O interface. The low order five bits of this member can be set by the calling routine. All other bits in this member are reserved. The table that follows shows the control flags that can be set by the calling routine:

Flag Name	Description
SA_NO_ERROR_RECOVERY	Do not perform error recovery.
SA_NO_ERROR_LOGGING	Do not log error messages.
SA_NO_SLEEP_INTR	Do not allow sleep interrupts.
SA_NO_SIMQ_THAW	Leave SIM queue frozen on errors.
SA_NO_WAIT_FOR_IO	Do not wait for I/O to complete.

12.5.2 The sa_dev Member

This member contains the device major/minor number pair passed into the device driver routines. It is used to fill in the bp_dev member of the system I/O request member.

12.5.3 The sa_unit, sa_bus, sa_target, and sa_lun Members

These members are used to address the SCSI device to which the command is being sent. The `sa_unit` member is not used, but has been included for device drivers that implement logical device mapping.

12.5.4 The sa_ioctl_cmd Member

This member contains the I/O control command to be processed. This command usually maps directly to a SCSI I/O Command, but that is not necessary. For example, the Digital-specific `SCSI_GET_SENSE` command returns the sense data from the last failing command. A `REQUEST SENSE` command is not issued to the device, because autosense is assumed to have been enabled on the failing command, and the sense data is part of the common Peripheral Device Structure.

12.5.5 The sa_ioctl_scmd Member

This member must be filled in for special commands implemented with a subcommand code. For example, magnetic tape I/O control commands have both an I/O control command code and a subroutine command code.

12.5.6 The sa_ioctl_data Member

An I/O parameters buffer is required if the I/O control command transfers data to and from the kernel. If the request came from an application program, this buffer is normally passed into the driver `ioctl` routine.

12.5.7 The sa_device_name Member

This member contains a pointer to the device name string that is used when reporting device errors.

12.5.8 The sa_device_type Member

This member contains the device type member from the Inquiry data. This member controls the SCSI/CAM Special Command Tables and the entries within each command table that are searched for the SCSI/CAM special I/O command being issued.

12.5.9 The sa_iop_length and sa_iop_buffer Members

These members are used internally by the SCSI/CAM special I/O interface when processing a command. If I/O would normally be performed directly to the I/O parameters buffer because no other buffer was set up, then a kernel buffer is allocated and set up in these members.

12.5.10 The sa_file_flags Member

This member contains the file flags passed into the device driver routines. The flags describe access control bits associated with the device. The file access flags are defined in the `/usr/sys/h/file.h` file.

12.5.11 The sa_sense_length and sa_sense_buffer Members

These members set up the sense buffer and expected sense data length that are used by autosense when device errors occur. If these members are not set up by the calling routine, then the SCSI/CAM special I/O interface uses the sense buffer allocated in the SCSI/CAM Peripheral Device Driver Working Set Structure that is pointed to by the SCSI I/O CCB.

12.5.12 The sa_user_length and sa_user_buffer Members

These members are set up by command setup routines to describe the user buffer and user data length required by a command. Requests from application programs that pass a user buffer and length in the I/O parameter buffers require a setup routine to copy this information into those members. The SCSI/CAM special I/O interface checks access and locking on this address range and sets up the address and length in the SCSI I/O CCB for the command.

12.5.13 The sa_bp Member

This member contains a pointer to a system I/O request buffer for commands that perform data movement directly to user address space. A system buffer is not required if a kernel data buffer is used for I/O. If the calling routine does not pass a previously allocated request buffer in this member, and the SCSI/CAM special I/O interface determines that the I/O requires one based on the I/O buffer address, then a request buffer is allocated and deallocated automatically by the SCSI/CAM special I/O interface.

12.5.14 The sa_ccb Member

This member contains a pointer to the SCSI I/O CCB for a command. If the calling routine does not specify a SCSI I/O CCB in this member, then the SCSI/CAM special I/O interface automatically allocates and deallocates a SCSI I/O CCB for the command.

12.5.15 The special_cmd Member

This member is used internally by the SCSI/CAM special I/O interface to save the SPECIAL_CMD after a command is located.

12.5.16 The special_header Member

This member can be used by the calling routine to specify the SCSI/CAM Special Command Table to search for the special command. This lets device drivers restrict the SCSI/CAM Special Command Tables that are searched. If this member is not used, then all the SCSI/CAM Special Command Tables in the list are searched for an entry that matches the special command being processed.

12.5.17 The sa_cmd_parameter Member

This member is used to store the command parameter, if any, from the command entry associated with this special command. This member is used by special support routines when setting up members for a particular CDB.

12.5.18 The sa_error Member

This member contains the routine to be invoked when an error condition is detected. If not specified, a SCSI/CAM special I/O interface support routine handles the error condition. Otherwise, the routine is called as follows:

```
status = (*sap->sa_error)(ccb, sense);
```

This member can be specified for drivers requiring specialized error handling and for specific error logging. The SCSI/CAM special I/O interface's error logging uses the `mprintf` facility to report errors. Both sense key and CAM status members are logged.

12.5.19 The sa_start Member

This member contains the routine that starts processing the SCSI I/O CCB. If not specified, the CAM `xpt_action` routine is used. The routine is invoked as follows:

```
(void) ((sap->sa_start)(ccb);
```

12.5.20 The sa_data_length and sa_data_buffer Members

These members are used internally by the SCSI/CAM special I/O interface to store the address and length of an additional kernel buffer required for a command. These members are usually initialized by the resulting value of the Special Command Entry Structure member, `spc_data_length`, but can be used by SCSI/CAM special I/O command developers if needed.

12.5.21 The sa_cdb_pointer Member

This member is used internally by the SCSI/CAM special I/O interface to save a pointer to the CDB for this special command. This member may point to a prototype CDB; to a driver-allocated CDB buffer, if the `CAM_CDB_POINTER` flag is set in CCB header; or to the CDB buffer allocated within the SCSI I/O CCB. This member is set up with the CDB buffer address before the Special Command Header Structure `make CDB` routine is invoked as follows:

```
status = (*spc->spc_mkcdb)(sap, cdbp);
```

12.5.22 The sa_cdb_length Member

This member is used to specify the size in bytes of the CDB required by a SCSI command. If the Special Command Header Structure `make CDB` routine does not set up this member, then the SCSI Group Code is decoded to determine the length.

12.5.23 The sa_cmd_flags Member

This member is initialized from the Special Command Header Structure `spc_cmd_flags` member so SCSI/CAM special I/O command support routines have easy and quick access to the flags.

12.5.24 The sa_retry_count Member

This member contains the number of retries that were required to successfully complete the request. It is filled in by the SCSI/CAM special I/O interface after processing the command.

12.5.25 The sa_retry_limit Member

This member contains the maximum number of times a command is retried. The only retries automatically handled by the SCSI/CAM special I/O interface are a sense key of Unit Attention, or a SCSI bus status of Bus Busy or Reservation Conflict. All other error conditions must be handled by the calling routine.

12.5.26 The sa_timeout Member

This member contains the timeout value, in seconds, to use with the command being processed. This member can be specified by the calling routine. If it is not specified, the timeout value is taken from the Special Command Entry Structure. This member is used to initialize the cam_timeout member of the SCSI I/O CCB before issuing the command.

12.5.27 The sa_xfer_resid Member

This member contains the residual byte count of data movement commands. This member is copied from the cam_resid member of the SCSI I/O CCB before returning to the caller.

12.5.28 The sa_specific Member

This member is not set up or used by the SCSI/CAM special I/O interface. It provides a mechanism for device driver code to pass driver-dependant information to SCSI/CAM special I/O command support routines. The SCSI/CAM peripheral driver common routine ccmn_DoSpecialCmd passes the pointer to the Peripheral Device Structure in this member.

12.5.29 Sample Function to Create a CDB

The following sample function illustrates how to use the SCSI/CAM special I/O interface to create a CDB for a SCSI FORMAT_UNIT command:

```
/*
 *
 * scmn_MakeFormatUnit() - Make Format Unit Command Descriptor Block.
 *
 * Inputs:      sap = Special command argument block pointer.
 *             cdbp = Pointer to command descriptor block.
 *
 * Return Value:
 *             Returns 0 for SUCCESS, or error code on failures.
 */
int
scmn_MakeFormatUnit (sap, cdbp)
register struct special_args *sap; ①
register struct dir_format_cdb6 *cdbp; ②
{
    register struct special_cmd *spc = sap->sa_spc; ③
```

```

register struct format_params *fp; ④

fp = (struct format_params *) sap->sa_iop_buffer;
cdbp->opcode = (u_char) spc->spc_cmd_code;
if (fp->fp_defects == VENDOR_DEFECTS) { ⑤
    cdbp->fmt_data = 1;
    cdbp->cmp_list = 1;
} else if (fp->fp_defects == KNOWN_DEFECTS) {
    cdbp->fmt_data = 1;
    cdbp->cmp_list = 0;
} else if (fp->fp_defects == NO_DEFECTS) {
    cdbp->fmt_data = 0;
    cdbp->cmp_list = 0;
}
cdbp->defect_list_fmt = fp->fp_format; ⑥
cdbp->vendor_specific = fp->fp_pattern;
cdbp->interleave1 = 0;
cdbp->interleave0 = fp->fp_interleave;
return (SUCCESS);
}

```

- ① This line declares a register structure pointer to a Special I/O Argument Structure that controls processing of the I/O command. The Special I/O Argument Structure is defined in the `/usr/sys/h/cam_special.h` file.
- ② This line declares a register structure pointer to a structure containing the format for a 6-byte CDB. The structure is defined in the `/usr/sys/h/scsi_direct.h` file.
- ③ This line declares a register structure pointer to a Special I/O Control Commands Structure that saves the `SPECIAL_CMD` after it is located in the `sa_spc` member of the Special I/O Argument Structure. The Special I/O Control Commands Structure is defined in the `/usr/sys/h/cam_special.h` file.
- ④ This line declares a register structure pointer to a structure containing the format parameters for a SCSI FORMAT UNIT command. The structure is defined in the `/usr/sys/h/rzdisk.h` file.
- ⑤ This section tests the contents of the `fp_defects` member of the format parameters structure to determine the contents of the `fmt_data` and `cmp_list` members of the `dir_format_cdb6` structure.
- ⑥ This section assigns the contents of the `dir_format_cdb6` members to the equivalent members of the `format_params` structure.

12.5.30 Sample Function to Set Up Parameters

The following sample function illustrates how to use the SCSI/CAM special I/O interface to set up parameters for a SCSI FORMAT_UNIT command:

```

/*****
 *
 * scmn_SetupFormatUnit() - Set up Format Unit Parameters.
 *
 * Inputs:      sap = Special command argument block pointer.
 *              data = The address of input/output arguments.
 *
 * Return Value:
 *              Returns 0 for SUCCESS, or error code on failures.
 *
 *****/
int

```

```

scmn_SetupFormatUnit (sap, data)
register struct special_args *sap; ❶
caddr_t data;
{
    struct form2_defect_list_header defect_header; ❷
    register struct form2_defect_list_header *ddh = &defect_header;
    register struct format_params *fp; ❸

    fp = (struct format_params *) data;
    sap->sa_user_buffer = (caddr_t) fp->fp_addr; ❹

    /*
     * For diskettes, there are no defect lists.
     */
    if ( ((sap->sa_user_length = fp->fp_length) == 0) &&
        (fp->fp_defects == NO_DEFECTS) ) {
        sap->sa_cmd_flags &= ~(SPC_INOUT | SPC_DATA_INOUT);
        return (SUCCESS);
    }

    /*
     * Ensure the defect list address is valid (user address).
     */
    if ( ((sap->sa_flags & SA_SYSTEM_REQUEST) == 0) &&
        !IS_KUSEG(fp->fp_addr) ) {
        return (EINVAL);
    }

    /*
     * The format parameters structure is not set up with the length
     * of the defect lists as it should be. Therefore, we must copy
     * in the defect list header then calculate the defect list length.
     */
    if (copyin ((caddr_t)fp->fp_addr, (caddr_t)ddh, sizeof(*ddh)) != 0) {
        return (EFAULT);
    }
    sap->sa_user_length = (int) ( (ddh->defect_len1 << 8) +
                                ddh->defect_len0 + sizeof(*ddh) );

    return (SUCCESS);
}

```

- ❶ This line declares a register structure pointer to a Special I/O Argument Structure that controls processing of the I/O command. The Special I/O Argument Structure is defined in the `/usr/sys/h/cam_special.h` file.
- ❷ This line declares a structure pointer to a structure containing the format defect list header for a SCSI FORMAT UNIT command. The structure is defined in the `/usr/sys/h/rzdisk.h` file.
- ❸ This line declares a register structure pointer to a structure containing the format parameters for a SCSI FORMAT UNIT command. The structure is defined in the `/usr/sys/h/rzdisk.h` file.
- ❹ This line assigns the user buffer data address to the defect list address.

12.6 SCSI/CAM Special I/O Control Command

A SCSI/CAM special I/O control command has been defined to provide a single standard method of implementing new SCSI/CAM special I/O commands. A subcommand member is used to determine the specific SCSI command being issued.

The SCSI/CAM special I/O control command structure can be used both in porting applications using existing SCSI I/O control commands and in implementing new SCSI commands. Applications can be modified to use this structure to gain control over subsystem processing. For example, the SCSI/CAM special I/O command flags can be set to control error recovery and error reporting; sense data can be returned automatically by specifying a sense buffer address and length; and the command timeout and retry limit can be specified.

A member in the Special I/O Control Commands Structure must be initialized to zero if a default value is desired. A nonzero member is used to override the default value.

The SCSI I/O control command and its associated structure and definitions are included in the file `/usr/sys/h/scsi_special.h`. The `scsi_special` structure is defined as follows:

```

/*
 * Structure for Processing Special I/O Control Commands.
 */
struct scsi_special {
    u_long  sp_flags;           /* The special command flags */
    dev_t   sp_dev;           /* Device major/minor number */
    u_char  sp_unit;         /* Device logical unit number */
    u_char  sp_bus;          /* SCSI host adapter bus number */
    u_char  sp_target;       /* SCSI device target number */
    u_char  sp_lun;          /* SCSI logical unit number */
    int     sp_sub_command;   /* The subcommand */
    u_long  sp_cmd_parameter; /* Command parameter (if any) */
    int     sp_iop_length;    /* Parameters buffer length */
    caddr_t sp_iop_buffer;    /* Parameters buffer address */
    u_char  sp_sense_length;  /* Sense data buffer length */
    u_char  sp_sense_resid;   /* Sense data residual count */
    caddr_t sp_sense_buffer; /* Sense data buffer address */
    int     sp_user_length;   /* User data buffer length */
    caddr_t sp_user_buffer;   /* User data buffer address */
    int     sp_timeout;       /* Timeout for this command */
    u_char  sp_retry_count;   /* Retrys performed on command */
    u_char  sp_retry_limit;   /* Times to retry this command */
    int     sp_xfer_resid;    /* Transfer residual count */
};

```

This structure is used with the following SCSI Special I/O Control Command:

```
#define SCSI_SPECIAL    _IOWR('p', 100, struct scsi_special)
```

12.6.1 The `sp_flags` Member

This member controls the actions of the SCSI/CAM special I/O interface. The low order three bits can be set by the calling routine. The other bits are reserved for use by SCSI/CAM peripheral drivers and the SCSI/CAM special I/O interface routines. The bits that can be set by the calling routine are described as follows:

Flag Name	Description
<code>SA_NO_ERROR_RECOVERY</code>	Do not perform error recovery.
<code>SA_NO_ERROR_LOGGING</code>	Do not log error messages.
<code>SA_NO_SLEEP_INTR</code>	Do not allow sleep interrupts.

12.6.2 The `sp_dev`, `sp_unit`, `sp_bus`, `sp_target`, and `sp_lun` Members

These members pass the device major/minor number pair and the device bus, target, LUN, and unit information to the SCSI/CAM special I/O interface when the I/O control command is not being issued to a SCSI/CAM peripheral device driver. These members provide the necessary hooks to allow software pseudodevice drivers, such as the User Agent driver, to send requests to the SCSI/CAM special I/O interface.

12.6.3 The `sp_sub_command` Member

This member contains the SCSI/CAM special I/O subcommand code of the SCSI command to execute. This member can also be defined as an I/O control command to support backwards compatibility with preexisting SCSI I/O control commands. The SCSI/CAM special I/O interface detects an I/O control command, as opposed to a subcommand code, and coerces the arguments into the appropriate format for processing by the support routines associated with that I/O control command. The predefined subcommand codes are listed in the file `/usr/sys/h/scsi_special.h`.

12.6.4 The `sp_cmd_parameter` Member

This member contains the command parameter, if any, for the SCSI special I/O command being issued. This parameter is specific to the special command processing routines and is not used directly by the SCSI/CAM special I/O interface routines.

12.6.5 The `sp_iop_length` and `sp_iop_buffer` Members

These members contain the I/O parameters buffer and length for those commands that require additional parameters. These members are used by the special command processing routines to obtain and set up additional information prior to issuing the SCSI command. For example, the SCSI `FORMAT_UNIT` I/O control command passes a `format_params` structure that describes the format, length, pattern, and interleave information for the defect list. This information is used by the `scmn_MakeFormatUnit` support routine when creating the CDB for this command.

12.6.6 The `sp_sense_length`, `sp_sense_resid`, and `sp_sense_buffer` Members

These members contain the buffer, length, and residual byte count for the sense data that is returned when device errors occur. If these members are specified, then the last sense data is saved in the Peripheral Device Structure from which it can be obtained by the Digital-specific `SCSI_GET_SENSE` I/O control command.

12.6.7 The `sp_user_length` and `sp_user_buffer` Members

These members contain the user buffer and length for those commands that require them. The SCSI/CAM special I/O interface performs verification, locking, and unlocking of the user pages when processing the command.

12.6.8 The `sp_timeout` Member

This member can be specified to override the default timeout, in seconds, which is usually taken from the Special Command Entry Structure.

12.6.9 The `sp_retry_count` Member

This member contains the number of retries that were required to successfully complete the request. It is filled in by the SCSI/CAM special I/O interface after processing the command.

12.6.10 The `sp_retry_limit` Member

This member contains the maximum number of times a command is retried. The only retries automatically handled by the SCSI/CAM special I/O interface are a sense key of Unit Attention, or a SCSI bus status of Bus Busy or Reservation Conflict. All other error conditions must be handled by the calling routine.

12.6.11 The `sp_xfer_resid` Member

This member is filled in with the transfer residual byte count when a command completes. The SCSI/CAM special I/O interface copies the `cam_resid` member of the SCSI I/O CCB to this member before completing the request.

12.6.12 Sample Function to Create an I/O Control Command

The following sample function illustrates how to use the SCSI/CAM special I/O interface to create an I/O control command:

```
/*
 * DoIoctl()      Do An I/O Control Command.
 *
 * Description:
 *   This routine issues the specified I/O control command to the
 * file descriptor associated with the CD-ROM device driver.
 *
 * Inputs:      cmd = The I/O control command.
 *              argp = The command argument to pass.
 *              msgp = The message to display on errors.
 *
 * Return Value:
 *   Returns 0 / -1 = SUCCESS / FAILURE.
 */
int
DoIoctl (cmd, argp, msgp)
int cmd;
caddr_t argp;
caddr_t msgp;
{
    int status;
#ifdef CAM
    struct scsi_special special_cmd; 1
    register struct scsi_special *sp = &special_cmd;
    register struct extended_sense *es; 2

    es = (struct extended_sense *)SenseBufPtr;
#endif
}
```

```

        bzero ((char *) sp, sizeof(*sp));
        bzero ((char *) es, sizeof(*es));
        sp->sp_sub_command = cmd; ❸
        sp->sp_sense_length = sizeof(*es);
        sp->sp_sense_buffer = (caddr_t) es;
        sp->sp_iop_length = ((cmd & ~(_IOC_INOUT|_IOC_VOID)) >> 16);
        sp->sp_iop_buffer = argp;
        if ((status = ioctl (CdrFd, SCSI_SPECIAL, sp)) < 0) { ❹
            perror (msgp);
            if (es->snskey) {
                cdbg_DumpSenseData (es);
            }
        }
    #else /* !defined(CAM) */
        if ((status = ioctl (CdrFd, cmd, argp)) < 0) {
            perror (msgp);
        }
    #endif /* defined(CAM) */
    return (status);
}

```

- ❶ This line declares a structure to process a special I/O control command. The `scsi_special` structure is defined in the `/usr/sys/h/scsi_special.h` file.
- ❷ This line declares a structure defining the extended sense format for a REQUEST SENSE command. The `extended_sense` structure is defined in the `/usr/sys/h/rzdisk.h` file.
- ❸ This section assigns the program parameters to the `special_cmd` members.
- ❹ This is a standard I/O control call issued from application code. The `SCSI_SPECIAL` argument is defined in the `/usr/sys/h/scsi_special.h` file.

12.7 Other Sample Code

This section contains other driver code samples that use the SCSI/CAM special I/O interface.

12.7.1 Sample Code to Open a Device

The following sample code illustrates how to use the SCSI/CAM special I/O interface to open a CDROM device from a device driver:

```

/*****
 *
 * cdrom_open() - Driver Entry Point to Open CD-ROM Device.
 *
 * Inputs:      dev = The device major/minor number pair.
 *              flags = The file open flags (read/write/nodelay).
 *
 * Outputs:     Returns 0 for Success or error code on Failure.
 *
 *****/
cdrom_open (dev, flags)
dev_t dev;
int flags;
{
    register PDRV_DEVICE *pd; ❶
    DIR_READ_CAP_DATA read_capacity; ❷

```

```

        DIR_READ_CAP_DATA *capacity = &read_capacity;
        .
        .
        .
        pd = GET_PDRV_PTR(dev); ❸
        status = cdrom_read_capacity (pd, capacity, flags);
        .
        .
        .
        return (status);
    }
/*****
 *
 * cdrom_read_capacity() - Obtain Disk Capacity Information.
 *
 * Inputs:      pd = Pointer to peripheral driver structure.
 *              capacity = Pointer to read capacity data buffer.
 *              flags = The file open flags.
 *
 * Outputs:     Returns 0 for Success or error code on Failure.
 *
 *****/
int
cdrom_read_capacity (pd, capacity, flags)
PDRV_DEVICE *pd;
DIR_READ_CAP_DATA *capacity;
int flags;
{
    int status;

    PRINTD(DEV_BUS_ID(pd->pd_dev), DEV_TARGET(pd->pd_dev),
           DEV_LUN(pd->pd_dev), CAMD_CDROM, ❹
           ("[%d/%d/%d] cdrom_read_capacity: ENTRY - pd = 0x%x, \
           capacity = 0x%x, flags = 0x%x0,
           DEV_BUS_ID(pd->pd_dev), DEV_TARGET(pd->pd_dev),
           DEV_LUN(pd->pd_dev), pd, capacity, flags));

    bzero ((char *)capacity, sizeof(*capacity));

    status = ccmn_SysSpecialCmd (pd->pd_dev, SCSI_READ_CAPACITY, ❺
    (caddr_t) capacity, flags, (CCB_SCSIIO *) 0, SA_NO_ERROR_LOGGING);

    PRINTD(DEV_BUS_ID(pd->pd_dev), DEV_TARGET(pd->pd_dev),
           DEV_LUN(pd->pd_dev), CAMD_CDROM,
           ("[%d/%d/%d] cdrom_read_capacity: EXIT - status = %d (%s)0,
           DEV_BUS_ID(pd->pd_dev), DEV_TARGET(pd->pd_dev),
           DEV_LUN(pd->pd_dev), status, cdbg_SystemStatus(status)); ❻

    return (status);
}

```

- ❶ This line assigns a register to a Peripheral Device Structure pointer for the device to be opened. The Peripheral Device Structure is defined in the `/usr/sys/h/pdrv.h` file.
- ❷ This line declares a structure to contain the capacity data returned for the device. The `DIR_READ_CAP_DATA` structure is defined in the `/usr/sys/h/scsi_direct.h` file.
- ❸ This line calls the `GET_PDRV_PTR` macro to return a pointer to the Peripheral Device Structure for the device. The `GET_PDRV_PTR` macro is defined in the `/usr/sys/h/pdrv.h` file.

- ④ This section uses the bus, target, and lun information to be printed if the CAMD_CDROM flag is set. The CAMD_CDROM flag is defined in the /usr/sys/io/cam/cam_debug.h file.
- ⑤ This section calls the SCSI/CAM peripheral common routine ccmn_SysSpecialCmd, to issue the SCSI I/O command, passing the major/minor device number pair for the device and the SCSI_READ_CAPACITY ioctl command, which is defined in the /usr/sys/h/rzdisk.h file. It sets the SA_NO_ERROR_LOGGING flag, which is defined in the /usr/sys/h/cam_special.h file for device drivers, and in the /usr/sys/h/scsi_special.h file for application programs.
- ⑥ This debug line calls the cdbg_SystemStatus routine, passing the status as an argument.

12.7.2 Sample Code to Create a Driver Entry Point

The following sample code illustrates how to use the SCSI/CAM special I/O interface to create a driver entry point for I/O control commands:

```

/*****
 *
 * cdrom_ioctl() - Driver Entry Point for I/O Control Commands.
 *
 * Inputs:      dev = The device major/minor number pair.
 *              cmd = The I/O control command code.
 *              data = The I/O parameters data buffer.
 *              flags = The file open flags (read/write/nodelay).
 *
 * Outputs:     Returns 0 for Success or error code on Failure.
 *
 *****/
int
cdrom_ioctl (dev, cmd, data, flags)
dev_t dev;
register int cmd;
caddr_t data;
int flags;
{
    register PDRV_DEVICE *pd; ①
    register DISK_SPECIFIC *cdisk;
    register DEV_DESC *dd;
    int status;

    pd = GET_PDRV_PTR(dev); ②
    dd = pd->pd_dev_desc;
    cdisk = (DISK_SPECIFIC *)pd->pd_specific;

    switch (cmd) {
        .
        .
        /* Process Expected I/O Control Commands */
        .
        .
    default:
        /*
         * Process Special I/O Control Commands.
         */
        status = ccmn_DoSpecialCmd (dev, cmd, data, flags, ③
                                   (CCB SCSIIO *) 0, 0);

        break;
    }
}

```

```
        return (status);  
    }
```

- ❶ This section reserves registers for pointers to a Peripheral Device Structure and a Device Descriptor Structure, both of which are defined in the `/usr/sys/h/pdrv.h` file, and to a `DISK_SPECIFIC` structure, which is defined in the `/usr/sys/io/cam/cam_disk.h` file.
- ❷ This line calls the `GET_PDRV_PTR` macro to return a pointer to the Peripheral Device Structure for the device. The `GET_PDRV_PTR` macro is defined in the `/usr/sys/h/pdrv.h`
- ❸ This section calls the SCSI/CAM peripheral common routine, `ccmn_DoSpecialCmd`, to issue the special I/O command.

Header Files Used by Device Drivers

A

This appendix contains the following:

- A list of header files used by all device drivers
- A list of header files used by SCSI/CAM peripheral device drivers
- The contents of the `/usr/sys/h/cam.h` file.

Table A-1 lists the header files used by all SCSI device drivers, with a short description of the contents of each. For convenience, the full path name for the file is given and the files are listed in alphabetical order. However, device driver code should be written to include header files by specifying the relative path name instead of the full path name. For example, `/usr/sys/h/buf.h`, is the full path name for the file `buf.h`, but device driver code to include `buf.h` should be written as follows:

```
#include ../h/buf.h
```

Table A-1: Header Files Used by Device Drivers

Header File	Contents
<code>/usr/sys/h/buf.h</code>	Defines the <code>buf</code> structure used to pass I/O requests to the <code>strategy</code> routine of a block driver.
<code>/usr/sys/h/clist.h</code>	Defines the <code>cblock</code> structure used to hold <code>clist</code> data.
<code>/usr/sys/h/conf.h</code>	Defines the <code>bdevsw</code> (block device switch), <code>cdevsw</code> (character device switch), and <code>linesw</code> (tty control line switch) structures. This file is included in the source file <code>/usr/sys/machine/common/conf.c</code> .
<code>/usr/sys/h/devio.h</code>	Defines common structures and definitions for device drivers and <code>ioctl</code> .
<code>/usr/sys/h/dir.h</code>	Defines structures and macros that operate on directories.
<code>/usr/sys/h/errno.h</code>	Defines the error codes returned to a user process by a driver. The codes <code>EIO</code> , <code>ENXIO</code> , <code>EACCES</code> , <code>EBUSY</code> , <code>ENODEV</code> , and <code>EINVAL</code> are used by driver routines.
<code>/usr/sys/h/file.h</code>	Defines I/O mode flags supplied by user programs to <code>open</code> and <code>fcntl</code> system calls.

Table A-1: (continued)

Header File	Contents
<code>/usr/sys/h/inode.h</code>	Defines values associated with the generic file system.
<code>/usr/sys/h/ioctl.h</code>	Defines commands for <code>ioctl</code> routines in different drivers.
<code>/usr/sys/h/kernel.h</code>	Defines global variables used by the kernel.
<code>/usr/sys/h/map.h</code>	Defines structures associated with resource allocation maps.
<code>/usr/sys/h/mbuf.h</code>	Defines constants related to memory allocation and macros used for type conversion.
<code>/usr/sys/h/mtio.h</code>	Defines commands and structures for magnetic tape operations.
<code>/usr/sys/h/param.h</code>	Defines constants and macros used by the ULTRIX kernel.
<code>/usr/sys/h/proc.h</code>	Defines the <code>proc</code> structure, which defines a user process. This file is not usually included by device driver source files.
<code>/usr/sys/h/rzdisk.h</code>	Definitions and data structures for SCSI disks.
<code>/usr/sys/h/scsi_all.h</code>	Definitions and data structures that apply to all SCSI device types according to Chapter 7 of the SCSI-2 specification.
<code>/usr/sys/h/scsi_cdb.h</code>	Definitions and data structures that apply to Command Descriptor Blocks.
<code>/usr/sys/h/scsi_direct.h</code>	Definitions and data structures that apply to all SCSI direct-access devices according to Chapter 8 of the SCSI-2 specification.
<code>/usr/sys/h/scsi_opcodes.h</code>	Definitions of operation codes according to Chapter 6 of the SCSI-2 specification.
<code>/usr/sys/h/scsi_phases.h</code>	Definitions of SCSI bus phases according to Chapter 5 of the SCSI-2 specification.
<code>/usr/sys/h/scsi_rodirect.h</code>	Definitions and data structures that apply to read-only direct-access devices according to Chapter 13 of the SCSI 2 specification.
<code>/usr/sys/h/scsi_sequential.h</code>	Definitions and data structures that apply to all SCSI sequential-access devices according to Chapter 9 of the SCSI-2 specification.
<code>/usr/sys/h/smp_lock.h</code>	Defines variables and structures for managing locks for symmetric multiprocessing.
<code>/usr/sys/h/system.h</code>	Defines global variables, such as the number of entries in the block switch and the number of character switch entries. It also defines the structure of the system-entry table.
<code>/usr/sys/h/time.h</code>	Defines structures and symbolic names used by time-related routines and macros.

Table A-1: (continued)

Header File	Contents
<code>/usr/sys/h/tty.h</code>	Defines parameters and structures associated with interactive terminals; also defines the <code>clist</code> structure. This file can be included by any device driver that uses the <code>clist</code> structure.
<code>/usr/sys/h/types.h</code>	Defines system data types and major and minor device macros.
<code>/usr/sys/h/uio.h</code>	Definition of the <code>uio</code> structure, some symbolic names, and an enumerated data type that can be assigned the value <code>UIO_READ</code> or <code>UIO_WRITE</code> .
<code>/usr/sys/h/user.h</code>	Defines the <code>user</code> structure that describes a user process and passes information about I/O requests to device drivers.
<code>/usr/sys/h/vm.h</code>	Contains a sequence of include statements that includes all of the virtual memory-related files. Including this file is a quick way of including all of the virtual memory-related files.
<code>/usr/sys/h/vmmac.h</code>	Definitions for the <code>vtokpfn</code> kernel routine.
<code>/usr/sys/machine/common/cpuconf.h</code>	Defines a variety of macros, constants, and structures used by the system.

Table A-2 lists the header files used by SCSI/CAM peripheral device drivers, along with a short description of the contents of each. For convenience, the full path name for the file is given and the files are listed in alphabetical order.

Table A-2: Header Files Used by SCSI/CAM Drivers

Header File	Contents
<code>/usr/sys/h/cam.h</code>	Definitions and data structures for the CAM subsystem interface.
<code>/usr/sys/h/cam_generic.h</code>	Examples of definitions and data structures for a CAM generic device driver.
<code>/usr/sys/h/cam_logger.h</code>	Definitions and data structures for CAM subsystem error logging.
<code>/usr/sys/h/cam_special.h</code>	Definitions for the SCSI/CAM special I/O interface.
<code>/usr/sys/h/dec_cam.h</code>	Digital-specific definitions and data structures for the CAM routines.
<code>/usr/sys/h/pdrv.h</code>	Definitions and data structures for the SCSI/CAM common routines.
<code>/usr/sys/h/scsi_special.h</code>	Definitions and data structures for the SCSI/CAM special I/O control interface.

Table A-2: (continued)

Header File	Contents
<code>/usr/sys/h/uagt.h</code>	Definitions and data structures for the User Agent Device Driver (UAGT) that controls access to the CAM subsystem.
<code>/usr/sys/h/xpt.h</code>	Definitions and data structures for the Transport Layer, XPT, in the CAM subsystem.
<code>/usr/sys/io/cam/cam_config.h</code>	SCSI/CAM peripheral device driver configuration definitions.
<code>/usr/sys/io/cam/cam_debug.h</code>	CAM debugging macros.
<code>/usr/sys/io/cam/cam_disk.h</code>	Definitions and data structures for SCSI/CAM disk devices.
<code>/usr/sys/io/cam/cam_errlog.h</code>	CAM error logging macros.
<code>/usr/sys/io/cam/cam_tape.h</code>	Definitions and data structures for SCSI/CAM tape devices.
<code>/usr/sys/io/cam/ccfg.h</code>	Definitions and data structures for the Configuration driver module in the CAM subsystem.
<code>/usr/sys/io/cam/dme.h</code>	Definitions and data structures needed by the CAM SIM Data Mover Engine (DME).
<code>/usr/sys/io/cam/dme_3min_94_dma.h</code>	Definitions and data structures needed by the CAM SIM Data Mover Engine (DME) for the DECstation 5000, Model 100 series.
<code>/usr/sys/io/cam/dme_pmax_sii_ram.h</code>	Definitions and data structures needed by the CAM SIM Data Mover Engine (DME) for the DECstation 2100 and DECstation 3100.
<code>/usr/sys/io/cam/dme_turbo_94_ram.h</code>	Definitions and data structures needed by the CAM SIM Data Mover Engine (DME) for the DECstation 5000, Model 200 series.
<code>/usr/sys/io/cam/sim.h</code>	Definitions and data structures needed by the CAM SIM-related files.
<code>/usr/sys/io/cam/sim94.h</code>	Definitions and data structures needed by the NCR53C94 SIM module.
<code>/usr/sys/io/cam/simcirq.h</code>	Definitions and data structures needed by the circular-queue-related functions contained in the Digital CAM subsystem.
<code>/usr/sys/io/cam/sim_common.h</code>	Definitions common to all the SIM-related source files.
<code>/usr/sys/io/cam/sim_config.h</code>	CAM SIM subsystem configuration definitions.
<code>/usr/sys/io/cam/sim_sii.h</code>	Definitions and data structures needed by the Digital SII SIM module.
<code>/usr/sys/io/cam/sim_target.h</code>	Definitions needed for target-mode operation of the SIM.

Table A-2: (continued)

Header File	Contents
/usr/sys/io/cam/sim_xpt.h	Macros and definitions that are specific to the SIM XPT component of the USCA subsystem.

The contents of /usr/sys/h/cam.h follow:

```

/* cam.h          Version 1.09          Jul. 18, 1991 */

/* This file contains the definitions and data structures for the CAM
   Subsystem interface.  The contents of this file should match what
   data structures and constants that are specified in the CAM document,
   X3T9.2/90-186 Rev 2.5 that is produced by the SCSI-2 committee.

   */

/* ----- */

/* Defines for the XPT function codes, Table 8-2 in the CAM spec. */

/* Common function commands, 0x00 - 0x0F */
#define XPT_NOOP 0x00 /* Execute Nothing */
#define XPT SCSI_IO 0x01 /* Execute the requested SCSI IO */
#define XPT_GDEV_TYPE 0x02 /* Get the device type information */
#define XPT_PATH_INQ 0x03 /* Path Inquiry */
#define XPT_REL_SIMQ 0x04 /* Release the SIM queue that is frozen */
#define XPT_SASYNC_CB 0x05 /* Set Async callback parameters */
#define XPT_SDEV_TYPE 0x06 /* Set the device type information */

/* XPT SCSI control functions, 0x10 - 0x1F */
#define XPT_ABORT 0x10 /* Abort the selected CCB */
#define XPT_RESET_BUS 0x11 /* Reset the SCSI bus */
#define XPT_RESET_DEV 0x12 /* Reset the SCSI device, BDR */
#define XPT_TERM_IO 0x13 /* Terminate the I/O process */

/* HBA engine commands, 0x20 - 0x2F */
#define XPT_ENG_INQ 0x20 /* HBA engine inquiry */
#define XPT_ENG_EXEC 0x21 /* HBA execute engine request */

/* Target mode commands, 0x30 - 0x3F */
#define XPT_EN_LUN 0x30 /* Enable LUN, Target mode support */
#define XPT_TARGET_IO 0x31 /* Execute the target IO request */

#define XPT_FUNC 0x7F /* TEMPLATE */
#define XPT_VUNIQUE 0x80 /* All the rest are vendor unique commands */

/* ----- */

/* General allocation length defines for the CCB structures. */

#define IOCDBLEN 12 /* Space for the CDB bytes/pointer */
#define VUHBA 14 /* Vendor Unique HBA length */
#define SIM_ID 16 /* ASCII string len for SIM ID */
#define HBA_ID 16 /* ASCII string len for HBA ID */
#define SIM_PRIV50 /* Length of SIM private data area */

/* Structure definitions for the CAM control blocks, CCB's for the
   subsystem. */

/* Common CCB header definition. */
typedef struct ccb_header
{
    struct ccb_header *my_addr; /* The address of this CCB */

```

```

    u_short cam_ccb_len;      /* Length of the entire CCB */
    u_char cam_func_code;     /* XPT function code */
    u_char cam_status; /* Returned CAM subsystem status */
    u_char cam_hrsvd0; /* Reserved field, for alignment */
    u_char cam_path_id;      /* Path ID for the request */
    u_char cam_target_id;    /* Target device ID */
    u_char cam_target_lun;   /* Target LUN number */
    u_long cam_flags; /* Flags for operation of the subsystem */
} CCB_HEADER;

/* Common SCSI functions. */

/* Union definition for the CDB space in the SCSI I/O request CCB */
typedef union cdb_un
{
    u_char *cam_cdb_ptr;      /* Pointer to the CDB bytes to send */
    u_char cam_cdb_bytes[ IOCDBLEN ]; /* Area for the CDB to send */
} CDB_UN;

/* Get device type CCB */
typedef struct ccb_getdev
{
    CCB_HEADER cam_ch;      /* Header information fields */
    char *cam_inq_data;     /* Ptr to the inquiry data space */
    u_char cam_pd_type;     /* Periph device type from the TLUN */
} CCB_GETDEV;

/* Path inquiry CCB */
typedef struct ccb_pathinq
{
    CCB_HEADER cam_ch;      /* Header information fields */
    u_char cam_version_num; /* Version number for the SIM/HBA */
    u_char cam_hba_inquiry; /* Mimic of INQ byte 7 for the HBA */
    u_char cam_target_sprt; /* Flags for target mode support */
    u_char cam_hba_misc;    /* Misc HBA feature flags */
    u_short cam_hba_eng_cnt; /* HBA engine count */
    u_char cam_vuhba_flags[ VUHBA ]; /* Vendor unique capabilities */
    u_long cam_sim_priv;    /* Size of SIM private data area */
    u_long cam_async_flags; /* Event cap. for Async Callback */
    u_char cam_hpath_id;   /* Highest path ID in the subsystem */
    u_char cam_initiator_id; /* ID of the HBA on the SCSI bus */
    u_char cam_prsvd0;     /* Reserved field, for alignment */
    u_char cam_prsvd1;     /* Reserved field, for alignment */
    char cam_sim_vid[ SIM_ID ]; /* Vendor ID of the SIM */
    char cam_hba_vid[ HBA_ID ]; /* Vendor ID of the HBA */
    u_char *cam_osd_usage; /* Ptr for the OSD specific area */
} CCB_PATHINQ;

/* Release SIM Queue CCB */
typedef struct ccb_relsim
{
    CCB_HEADER cam_ch;      /* Header information fields */
} CCB_RELSIM;

/* SCSI I/O Request CCB */
typedef struct ccb_scsiio
{
    CCB_HEADER cam_ch;      /* Header information fields */
    u_char *cam_pdrv_ptr;   /* Ptr used by the Peripheral driver */
    CCB_HEADER *cam_next_ccb; /* Ptr to the next CCB for action */
    u_char *cam_req_map;    /* Ptr for mapping info on the Req. */
    void (*cam_cbfcnp)(); /* Callback on completion function */
    u_char *cam_data_ptr;  /* Pointer to the data buf/SG list */
    u_long cam_dxfer_len;  /* Data xfer length */
    u_char *cam_sense_ptr; /* Pointer to the sense data buffer */
}

```

```

    u_char cam_sense_len; /* Num of bytes in the Autosense buf */
    u_char cam_cdb_len; /* Number of bytes for the CDB */
    u_short cam_sglist_cnt; /* Num of scatter gather list entries */
    u_long cam_osd_rsvd0; /* OSD Reserved field, for alignment */
    u_char cam_scsi_status; /* Returned scsi device status */
    u_char cam_sense_resid; /* Autosense resid length: 2's comp */
    u_char cam_osd_rsvd1[2]; /* OSD Reserved field, for alignment */
    long cam_resid; /* Transfer residual length: 2's comp */
    CDB_UN cam_cdb_io; /* Union for CDB bytes/pointer */
    u_long cam_timeout; /* Timeout value */
    u_char *cam_msg_ptr; /* Pointer to the message buffer */
    u_short cam_msgb_len; /* Num of bytes in the message buf */
    u_short cam_vu_flags; /* Vendor unique flags */
    u_char cam_tag_action; /* What to do for tag queuing */
    u_char cam_iorsvd0[3]; /* Reserved field, for alignment */
    u_char cam_sim_priv[ SIM_PRIV ]; /* SIM private data area */
} CCB_SCSIIO;

/* Set Async Callback CCB */
typedef struct ccb_setasync
{
    CCB_HEADER cam_ch; /* Header information fields */
    u_long cam_async_flags; /* Event enables for Callback resp */
    void (*cam_async_func)(); /* Async Callback function address */
    u_char *pdrv_buf; /* Buffer set aside by the Per. drv */
    u_char pdrv_buf_len; /* The size of the buffer */
} CCB_SETASYNC;

/* Set device type CCB */
typedef struct ccb_setdev
{
    CCB_HEADER cam_ch; /* Header information fields */
    u_char cam_dev_type; /* Val for the dev type field in EDT */
} CCB_SETDEV;

/* SCSI Control Functions. */

/* Abort XPT Request CCB */
typedef struct ccb_abort
{
    CCB_HEADER cam_ch; /* Header information fields */
    CCB_HEADER *cam_abort_ch; /* Pointer to the CCB to abort */
} CCB_ABORT;

/* Reset SCSI Bus CCB */
typedef struct ccb_resetbus
{
    CCB_HEADER cam_ch; /* Header information fields */
} CCB_RESETBUS;

/* Reset SCSI Device CCB */
typedef struct ccb_resetdev
{
    CCB_HEADER cam_ch; /* Header information fields */
} CCB_RESETDEV;

/* Terminate I/O Process Request CCB */
typedef struct ccb_termio
{
    CCB_HEADER cam_ch; /* Header information fields */
    CCB_HEADER *cam_termio_ch; /* Pointer to the CCB to terminate */
} CCB_TERMIO;

/* Target mode structures. */

```

```

typedef struct ccb_en_lun
{
    CCB_HEADER cam_ch;          /* Header information fields */
    u_short cam_grp6_len;      /* Group 6 VU CDB length */
    u_short cam_grp7_len;      /* Group 7 VU CDB length */
    u_char *cam_ccb_listptr;    /* Pointer to the target CCB list */
    u_short cam_ccb_listcnt;    /* Count of Target CCBs in the list */
} CCB_EN_LUN;

/* HBA engine structures. */

typedef struct ccb_eng_inq
{
    CCB_HEADER cam_ch;          /* Header information fields */
    u_short cam_eng_num;        /* The number for this inquiry */
    u_char cam_eng_type;        /* Returned engine type */
    u_char cam_eng_algo;        /* Returned algorithm type */
    u_long cam_eng_memory;      /* Returned engine memory size */
} CCB_ENG_INQ;

typedef struct ccb_eng_exec /* NOTE: must match SCSIIO size */
{
    CCB_HEADER cam_ch;          /* Header information fields */
    u_char *cam_pdrv_ptr;       /* Ptr used by the Peripheral driver */
    u_long cam_engrsvd0;        /* Reserved field, for alignment */
    u_char *cam_req_map;        /* Ptr for mapping info on the Req. */
    void (*cam_cbfcnp)();       /* Callback on completion function */
    u_char *cam_data_ptr;       /* Pointer to the data buf/SG list */
    u_long cam_dxfer_len;       /* Data xfer length */
    u_char *cam_engdata_ptr;    /* Pointer to the engine buffer data */
    u_char cam_engrsvd1;        /* Reserved field, for alignment */
    u_char cam_engrsvd2;        /* Reserved field, for alignment */
    u_short cam_sglist_cnt;     /* Num of scatter gather list entries */
    u_long cam_dmax_len;        /* Destination data maximum length */
    u_long cam_dest_len;        /* Destination data length */
    long cam_src_resid;         /* Source residual length: 2's comp */
    u_char cam_engrsvd3[12];    /* Reserved field, for alignment */
    u_long cam_timeout;         /* Timeout value */
    u_long cam_engrsvd4;        /* Reserved field, for alignment */
    u_short cam_eng_num;        /* Engine number for this request */
    u_short cam_vu_flags;       /* Vendor unique flags */
    u_char cam_engrsvd5;        /* Reserved field, for alignment */
    u_char cam_engrsvd6[3];     /* Reserved field, for alignment */
    u_char cam_sim_priv[ SIM_PRIV ]; /* SIM private data area */
} CCB_ENG_EXEC;

/* The CAM_SIM_ENTRY definition is used to define the entry points for
the SIMs contained in the SCSI CAM subsystem. Each SIM file will
contain a declaration for it's entry. The address for this entry will
be stored in the cam_conftbl[] array along with all the other SIM
entries. */

typedef struct cam_sim_entry
{
    long (*sim_init)();          /* Pointer to the SIM init routine */
    long (*sim_action)();       /* Pointer to the SIM CCB go routine */
} CAM_SIM_ENTRY;

/* ----- */

/* Defines for the CAM status field in the CCB header. */

#define CAM_REQ_INPROG 0x00 /* CCB request is in progress */
#define CAM_REQ_CMP 0x01 /* CCB request completed w/out error */
#define CAM_REQ_ABORTED 0x02 /* CCB request aborted by the host */

```



```

#define CAM_UA_ABORT      0x03 /* Unable to Abort CCB request */
#define CAM_REQ_CMP_ERR   0x04 /* CCB request completed with an err */
#define CAM_BUSY         0x05 /* CAM subsystem is busy */
#define CAM_REQ_INVALID   0x06 /* CCB request is invalid */
#define CAM_PATH_INVALID0x07 /* Path ID supplied is invalid */
#define CAM_DEV_NOT_THERE0x08 /* SCSI device not installed/there */
#define CAM_UA_TERMIO    0x09 /* Unable to Terminate I/O CCB req */
#define CAM_SEL_TIMEOUT   0x0A /* Target selection timeout */
#define CAM_CMD_TIMEOUT   0x0B /* Command timeout */
#define CAM_MSG_REJECT_REC0x0D /* Message reject received */
#define CAM_SCSI_BUS_RESET0x0E /* SCSI bus reset sent/received */
#define CAM_UNCOR_PARITY0x0F /* Uncorrectable parity err occurred */
#define CAM_AUTOSENSE_FAIL0x10 /* Autosense: Request sense cmd fail */
#define CAM_NO_HBA       0x11 /* No HBA detected Error */
#define CAM_DATA_RUN_ERR0x12 /* Data overrun/underrun error */
#define CAM_UNEXP_BUSFREE0x13 /* Unexpected BUS free */
#define CAM_SEQUENCE_FAIL0x14 /* Target bus phase sequence failure */
#define CAM_CCB_LEN_ERR   0x15 /* CCB length supplied is inadequate */
#define CAM_PROVIDE_FAIL0x16 /* Unable to provide requ. capability */
#define CAM_BDR_SENT      0x17 /* A SCSI BDR msg was sent to target */
#define CAM_REQ_TERMIO    0x18 /* CCB request terminated by the host */

#define CAM_LUN_INVALID   0x38 /* LUN supplied is invalid */
#define CAM_TID_INVALID   0x39 /* Target ID supplied is invalid */
#define CAM_FUNC_NOTAVAIL0x3A /* The requ.func is not available */
#define CAM_NO_NEXUS      0x3B /* Nexus is not established */
#define CAM_IID_INVALID   0x3C /* The initiator ID is invalid */
#define CAM_CDB_RECVD     0x3E /* The SCSI CDB has been received */
#define CAM_SCSI_BUSY     0x3F /* SCSI bus busy */

#define CAM_SIM_QFRZN     0x40 /* The SIM queue is frozen w/this err */
#define CAM_AUTOSNS_VALID0x80 /* Autosense data valid for target */

#define CAM_STATUS_MASK   0x3F /* Mask bits for just the status # */

/* ----- */
/* Defines for the CAM flags field in the CCB header. */

#define CAM_DIR_RESV      0x00000000 /* Data direction (00: reserved) */
#define CAM_DIR_IN        0x00000040 /* Data direction (01: DATA IN) */
#define CAM_DIR_OUT       0x00000080 /* Data direction (10: DATA OUT) */
#define CAM_DIR_NONE      0x000000C0 /* Data direction (11: no data) */
#define CAM_DIS_AUTOSENSE 0x00000020 /* Disable autosense feature */
#define CAM_SCATTER_VALID 0x00000010 /* Scatter/gather list is valid */
#define CAM_DIS_CALLBACK  0x00000008 /* Disable callback feature */
#define CAM_CDB_LINKED    0x00000004 /* The CCB contains a linked CDB */
#define CAM_QUEUE_ENABLE  0x00000002 /* SIM queue actions are enabled */
#define CAM_CDB_POINTER   0x00000001 /* The CDB field contains a pointer */

#define CAM_DIS_DISCONNECT 0x00008000 /* Disable disconnect */
#define CAM_INITIATE_SYNC 0x00004000 /* Attempt Sync data xfer, and SDTR */
#define CAM_DIS_SYNC      0x00002000 /* Disable sync, go to async */
#define CAM_SIM_QHEAD     0x00001000 /* Place CCB at the head of SIM Q */
#define CAM_SIM_QFREEZE   0x00000800 /* Return the SIM Q to frozen state */
#define CAM_SIM_QFRZDIS   0x00000400 /* Disable the SIM Q frozen state */
#define CAM_ENG_SYNC      0x00000200 /* Flush resid bytes before cmplt */

#define CAM_ENG_SGLIST     0x00800000 /* The SG list is for the HBA engine */
#define CAM_CDB_PHYS       0x00400000 /* CDB pointer is physical */
#define CAM_DATA_PHYS     0x00200000 /* SG/Buffer data ptrs are physical */
#define CAM_SNS_BUF_PHYS   0x00100000 /* Autosense data ptr is physical */
#define CAM_MSG_BUF_PHYS   0x00080000 /* Message buffer ptr is physical */
#define CAM_NXT_CCB_PHYS   0x00040000 /* Next CCB pointer is physical */
#define CAM_CALLBCK_PHYS   0x00020000 /* Callback func ptr is physical */

```

```

#define CAM_DATAB_VALID    0x80000000 /* Data buffer valid */
#define CAM_STATUS_VALID  0x40000000 /* Status buffer valid */
#define CAM_MSGB_VALID    0x20000000 /* Message buffer valid */
#define CAM_TGT_PHASE_MODE 0x08000000 /* The SIM will run in phase mode */
#define CAM_TGT_CCB_AVAIL 0x04000000 /* Target CCB available */
#define CAM_DIS_AUTODISC  0x02000000 /* Disable autodisconnect */
#define CAM_DIS_AUTOSRP   0x01000000 /* Disable autosave/restore ptrs */

/* ----- */

/* Defines for the SIM/HBA queue actions. These value are used in the
SCSI I/O CCB, for the queue action field. [These values should match the
defines from some other include file for the SCSI message phases. We may
not need these definitions here. ] */

#define CAM_SIMPLE_QTAG      0x20 /* Tag for a simple queue */
#define CAM_HEAD_QTAG       0x21 /* Tag for head of queue */
#define CAM_ORDERED_QTAG    0x22 /* Tag for ordered queue */

/* ----- */

/* Defines for the timeout field in the SCSI I/O CCB. At this time a
value of 0xF-F indicates a infinite timeout. A value of 0x0-0
indicates that the SIM's default timeout can take effect. */

#define CAM_TIME_DEFAULT    0x00000000 /* Use SIM default value */
#define CAM_TIME_INFINITY  0xFFFFFFFF /* Infinite timeout for I/O */

/* ----- */

/* Defines for the Path Inquiry CCB fields. */

#define CAM_VERSION 0x25 /* Binary value for the current ver */

#define PI_MDP_ABLE    0x80 /* Supports MDP message */
#define PI_WIDE_32     0x40 /* Supports 32 bit wide SCSI */
#define PI_WIDE_16     0x20 /* Supports 16 bit wide SCSI */
#define PI_SDTR_ABLE  0x10 /* Supports SDTR message */
#define PI_LINKED_CDB 0x08 /* Supports linked CDBs */
#define PI_TAG_ABLE   0x02 /* Supports tag queue message */
#define PI_SOFT_RST   0x01 /* Supports soft reset */

#define PIT_PROCESSOR 0x80 /* Target mode processor mode */
#define PIT_PHASE0x40 /* Target mode phase cog. mode */

#define PIM_SCANHILO  0x80 /* Bus scans from ID 7 to ID 0 */
#define PIM_NOREMOVE  0x40 /* Removable dev not included in scan */
#define PIM_NOINQUIRY 0x20 /* Inquiry data not kept by XPT */

/* ----- */

/* Defines for Asynchronous Callback CCB fields. */

#define AC_FOUND_DEVICES 0x80 /* During a rescan new device found */
#define AC_SIM_DEREGISTER 0x40 /* A loaded SIM has de-registered */
#define AC_SIM_REGISTER  0x20 /* A loaded SIM has registered */
#define AC_SENT_BDR      0x10 /* A BDR message was sent to target */
#define AC_SCSI_AEN      0x08 /* A SCSI AEN has been received */
#define AC_UNSOL_RESEL 0x02 /* A unsolicited reselection occurred */
#define AC_BUS_RESET     0x01 /* A SCSI bus RESET occurred */

/* ----- */

/* Typedef for a scatter/gather list element. */

```

```

typedef struct sg_elem
{
    u_char *cam_sg_address; /* Scatter/Gather address */
    u_long cam_sg_count;    /* Scatter/Gather count */
} SG_ELEM;

/* ----- */

/* Defines for the HBA engine inquiry CCB fields. */

#define EIT_BUFFER      0x00 /* Engine type: Buffer memory */
#define EIT_LOSSLESS    0x01 /* Engine type: Lossless compression */
#define EIT_LOSSLY      0x02 /* Engine type: Lossly compression */
#define EIT_ENCRYPT      0x03 /* Engine type: Encryption */

#define EAD_VUNIQUE     0x00 /* Eng algorithm ID: vendor unique */
#define EAD_LZ1V10x00  0x01 /* Eng algorithm ID: LZ1 var. 1*/
#define EAD_LZ2V10x00  0x02 /* Eng algorithm ID: LZ2 var. 1*/
#define EAD_LZ2V20x00  0x03 /* Eng algorithm ID: LZ2 var. 2*/

/* ----- */
/* ----- */

/* Unix OSD defines and data structures. */

#define INQLEN      36 /* Inquiry string length to store. */

#define CAM_SUCCESS      0 /* For signaling general success */
#define CAM_FAILURE     1 /* For signaling general failure */

#define CAM_FALSE0 /* General purpose flag value */
#define CAM_TRUE 1 /* General purpose flag value */

#define XPT_CCB_INVALID      -1 /* for signaling a bad CCB to free */

/* General Union for Kernel Space allocation.  Contains all the
possible CCB structures.  This union should never be used for
manipulating CCB's its only use is for the allocation and deallocation
of raw CCB space. */

typedef union ccb_size_union
{
    CCB_SCSIIO      csio; /* Please keep this first, for debug/print */
    CCB_GETDEV      cgd;
    CCB_PATHINQ     cpi;
    CCB_RELSIM      crs;
    CCB_SETASYNC    csa;
    CCB_SETDEV      csd;
    CCB_ABORT       cab;
    CCB_RESETBUS    crb;
    CCB_RESETDEV    crd;
    CCB_TERMIO      ctio;
    CCB_EN_LUN      cel;
    CCB_ENG_INQ     cei;
    CCB_ENG_EXEC     cee;
} CCB_SIZE_UNION;

/* The typedef for the Async callback information.  This structure is
used to store the supplied info from the Set Async Callback CCB, in
the EDT table in a linked list structure. */

typedef struct async_info
{
    struct async_info *cam_async_next; /* pointer to the next structure */
    u_long cam_event_enable; /* Event enables for Callback resp */
}

```

```

        void (*cam_async_func)();          /* Async Callback function address */
        u_long cam_async_blen;           /* Length of "information" buffer */
        u_char *cam_async_ptr;          /* Address for the "information" */
    } ASYNC_INFO;

/* The CAM EDT table contains the device information for all the
devices, SCSI ID and LUN, for all the SCSI busses in the system. The
table contains a CAM_EDT_ENTRY structure for each device on the bus.
*/

typedef struct cam_edt_entry
{
    long cam_tlun_found; /* Flag for the existence of the target/LUN */
    ASYNC_INFO *cam_ainfo; /* Async callback list info for this B/T/L */
    u_long cam_owner_tag; /* Tag for the peripheral driver's ownership */
    char cam_inq_data[ INQLEN ]; /* storage for the inquiry data */
} CAM_EDT_ENTRY;

/* ----- */

```

Summary of Device Driver Routines

B

Table B-1 summarizes the routines used by all device drivers. The table has the following columns:

- Routine - the driver routine name.
- Structure/file - the structure or file where you define the driver routine entry point.
- Character - an X in this column indicates the routine is applicable to a character device.
- Block - an X in this column indicates the routine is applicable to a block device. N/A indicates not applicable.

For convenience, the routines appear in alphabetical order.

Note

The `psize` routine is no longer used. Previously, the routine determined the location on the disk where ULTRIX should perform a dump. It has been superseded by driver `ioctl` calls that obtain disk geometry information.

Table B-1: Summary of Device Driver Routines

Routine	Structure/File	Character	Block
attach	Peripheral driver	X	X
close	cdevsw bdevsw	X	X
interrupt	System configuration file	X	X
ioctl	cdevsw bdevsw	X	X
mmap	cdevsw	X	N/A
open	cdevsw bdevsw	X	X
probe	SIM	X	X
read	cdevsw	X	N/A
reset	cdevsw	X	N/A
select	cdevsw	X	N/A
slave	Peripheral driver	X	X
stop	cdevsw	X	N/A
strategy	cdevsw bdevsw	X	X
write	cdevsw	X	N/A

SCSI/CAM Routines in ULTRIX Reference Page Format

C

This appendix contains a description of each of the routines described in this guide, in ULTRIX reference page format. The routines are included in alphabetical order.

Name

`cam_logger` – allocates a system error log buffer and fills in a `uerf` error log packet

Syntax

```
u_long cam_logger(cam_err_hdr, bus, target, lun)
CAM_ERR_HDR *cam_err_hdr;
long bus;
long target;
long lun;
```

Arguments

<i>cam_err_hdr</i>	Pointer to the Error Header Structure.
<i>bus</i>	SCSI target's bus controller number.
<i>target</i>	SCSI target's ID number.
<i>lun</i>	SCSI target's logical unit number.

Description

The `cam_logger` routine allocates a system error log buffer and fills in a `uerf` error log packet. The routine fills in the bus, target, and LUN information from the Error Header Structure passed to it and copies the Error Header Structure and the Error Entry Structures and data to the error log buffer.

Return Value

None

Name

`ccfg_attach` – calls a SCSI/CAM peripheral driver's attach routine after a match on the `cpd_name` member of the `CAM_PERIPHERAL_DRIVER` structure is found

Syntax

```
int ccfg_attach(ui)
register struct uba_device *ui;
```

Arguments

ui Pointer to the device information contained in the `uba_device` structure.

Description

The `ccfg_attach` routine calls a SCSI/CAM peripheral driver's attach routine after a match on the `cpd_name` member of the `CAM_PERIPHERAL_DRIVER` structure is found. The routine is called during autoconfiguration. The `ccfg_attach` routine locates the configured driver in the SCSI/CAM peripheral driver configuration table. If the driver is located successfully, the SCSI/CAM peripheral driver's attach routine is called with a pointer to the unit information structure for the device from the kernel `uba_device` structure. The SCSI/CAM peripheral driver's attach routine performs its own attach initialization.

Return Value

0 = success

1 = failure

The return value is ignored by autoconfiguration code.

Name

`ccfg_edtscan` – issues SCSI INQUIRY commands to all possible SCSI targets and LUNs attached to the buses

Syntax

```
u_long ccfg_edtscan(scan_type, bus, target, lun)  
long scan_type;  
long bus;  
long target;  
long lun;
```

Arguments

scan_type Types of scans are: FULL, which traverses the CAM_EDT_ENTRY structure and sends an INQUIRY command to each target and LUN; PARTIAL, which sends an INQUIRY command only to targets and LUNs flagged as ‘not found’; or SINGLE, which sends an INQUIRY command to the selected bus, target, and LUN passed as arguments.

bus SCSI target’s bus controller number.

target SCSI target’s ID number.

lun SCSI target’s logical unit number.

Description

The `ccfg_edtscan` routine issues SCSI INQUIRY commands to all possible SCSI targets and LUNs attached to the buses. The routine uses the CAM subsystem in the normal manner by sending SCSI I/O CCBs to the SIMs. The INQUIRY data returned is stored in the EDT structures and the `cam_t lun_found` flag is set. This routine can be called by the SCSI/CAM peripheral device drivers to reissue a full, partial, or single bus scan command.

Return Value

CAM_SUCCESS
CAM_FAILURE

Name

`ccfg_slave` – calls a SCSI/CAM peripheral driver's slave routine after a match on the `cpd_name` member of the `CAM_PERIPHERAL_DRIVER` structure is found

Syntax

```
int ccfg_slave(ui)
register struct uba_device *ui;
caddr_t csr;
```

Arguments

ui Pointer to the device information contained in the `uba_device` structure.
csr The virtual address of the control and status register (CSR) address.

Description

The `ccfg_slave` routine calls a SCSI/CAM peripheral driver's slave routine after a match on the `cpd_name` member of the `CAM_PERIPHERAL_DRIVER` structure is found. The routine is called during autoconfiguration. The `ccfg_slave` routine locates the configured driver in the SCSI/CAM peripheral driver configuration table. If the driver is located successfully, the SCSI/CAM peripheral driver's slave routine is called with a pointer to the unit information structure for the device from the kernel `uba_device` structure and the virtual address of its control and status register (CSR). The SCSI/CAM peripheral driver's slave routine performs its own slave initialization.

Return Value

0 = slave is alive
1 = slave is not alive

Name

`ccmn_DoSpecialCmd` – provides a simplified interface to the special command routine

Syntax

```
ccmn_DoSpecialCmd(dev, cmd, data, flags, ccb, sflags)
dev_t      dev;
int        cmd;
caddr_t    data;
int        flags;
CCB_SCSIIO *ccb;
int        sflags;
```

Arguments

dev The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

cmd The ioctl command, `UAGT_CAM_IO`.

data The user data buffer.

flags Flags set when a file is open.

ccb Pointer to the SCSI I/O CCB structure. This field is optional.

sflags SCSI/CAM special I/O control flags. The available flags are:

Flag Name	Description
<code>SA_NO_ERROR_RECOVERY</code>	Do not perform error recovery
<code>SA_NO_ERROR_LOGGING</code>	Do not log error messages
<code>SA_NO_SLEEP_INTR</code>	Do not allow sleep interrupts
<code>SA_NO_SIMQ_THAW</code>	Leave SIM queue frozen when there are errors

Description

The `ccmn_DoSpecialCmd` routine provides a simplified interface to the special command routine. The routine prepares for and issues special commands.

Return Value

The `ccmn_DoSpecialCmd` routine returns a value of 0 (zero) upon successful completion. It returns the appropriate error code on failure.

Name

`ccmn_SysSpecialCmd` – lets a system request issue SCSI I/O commands to the SCSI/CAM special I/O interface

Syntax

```
ccmn_SysSpecialCmd(dev, cmd, data, flags, ccb, sflags)
dev_t      dev;
int        cmd;
caddr_t    data;
int        flags;
CCB_SCSIIO *ccb;
int        sflags;
```

Arguments

dev The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

cmd The ioctl command, `UAGT_CAM_IO`.

data The user data buffer.

flags Flags set when a file is open.

ccb Pointer to the SCSI I/O CCB structure. This field is optional.

sflags SCSI/CAM special I/O control flags. The available flags are:

Flag Name	Description
<code>SA_NO_ERROR_RECOVERY</code>	Do not perform error recovery
<code>SA_NO_ERROR_LOGGING</code>	Do not log error messages
<code>SA_NO_SLEEP_INTR</code>	Do not allow sleep interrupts
<code>SA_NO_SIMQ_THAW</code>	Leave SIM queue frozen when there are errors

Description

The `ccmn_SysSpecialCmd` routine lets a system request issue SCSI I/O commands to the SCSI/CAM special I/O interface. This permits existing SCSI commands to be issued from within kernel code.

Return Value

The `ccmn_DoSpecialCmd` routine returns a value of 0 (zero) upon successful completion. It returns the appropriate error code on failure.

Name

`ccmn_abort_ccb_bld` – creates an ABORT CCB and sends it to the XPT

Syntax

```
ccmn_abort_ccb_bld(dev, cam_flags, abort_ccb)
dev_t      dev;
u_long     cam_flags;
CCB_HEADER *abort_ccb;
```

Arguments

- dev* The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.
- cam_flags* The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
<code>CAM_DIR_RESV</code>	Data direction (00: reserved)
<code>CAM_DIR_IN</code>	Data direction (01: DATA IN)
<code>CAM_DIR_OUT</code>	Data direction (10: DATA OUT)
<code>CAM_DIR_NONE</code>	Data direction (11: no data)
<code>CAM_DIS_AUTOSENSE</code>	Disable autosense feature
<code>CAM_SCATTER_VALID</code>	Scatter/gather list is valid
<code>CAM_DIS_CALLBACK</code>	Disable callback feature
<code>CAM_CDB_LINKED</code>	CCB contains linked CDB
<code>CAM_QUEUE_ENABLE</code>	SIM queue actions are enabled
<code>CAM_CDB_POINTER</code>	CDB field contains pointer
<code>CAM_DIS_DISCONNECT</code>	Disable disconnect
<code>CAM_INITIATE_SYNC</code>	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
<code>CAM_DIS_SYNC</code>	Disable synchronous mode, go to asynchronous
<code>CAM_SIM_QHEAD</code>	Place CCB at head of SIM queue
<code>CAM_SIM_QFREEZE</code>	Return SIM queue to frozen state
<code>CAM_ENG_SYNC</code>	Flush residual bytes from HBA data engine before terminating I/O
<code>CAM_ENG_SGLIST</code>	Scatter/gather list is for HBA engine
<code>CAM_CDB_PHYS</code>	CDB pointer is physical address
<code>CAM_DATA_PHYS</code>	Scatter/gather/buffer data pointers are physical address

Flag Name	Description
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBCK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

abort_ccb Pointer to the CAM Control Block (CCB) header structure to abort.

Description

The `ccmn_abort_ccb_bld` routine creates an ABORT CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine fills in the address of the CCB to be aborted and calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

Return Value

CCB_ABORT pointer

See Also

`ccmn_get_ccb`, `ccmn_send_ccb`

Name

`ccmn_abort_que` – sends an ABORT CCB request for each SCSI I/O CCB on the active queue

Syntax

```
ccmn_abort_que(pd)  
PDRV_DEVICE *pd;
```

Arguments

pd Pointer to the CAM Peripheral Device Structure allocated for each SCSI device in the system.

Description

The `ccmn_abort_que` routine sends an ABORT CCB request for each SCSI I/O CCB on the active queue. This routine must be called with the Peripheral Device Structure locked.

The `ccmn_abort_que` routine calls the `ccmn_abort_ccb_bld` routine to create an ABORT CCB for the first active CCB on the active queue and send it to the XPT. It calls the `ccmn_send_ccb` routine to send the ABORT CCB for each of the other CCBs on the active queue that are marked as active to the XPT. The `ccmn_abort_que` routine then calls the `ccmn_rel_ccb` routine to return the ABORT CCB to the XPT.

Return Value

None

See Also

`ccmn_abort_ccb_bld`, `ccmn_rel_ccb`, `ccmn_send_ccb`

Name

`ccmn_bdr_ccb_bld` – creates a BUS DEVICE RESET CCB and sends it to the XPT

Syntax

```
ccmn_bdr_ccb_bld(dev, cam_flags)
dev_t dev;
u_long cam_flags;
```

Arguments

dev The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

cam_flags The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
CAM_DIR_RESV	Data direction (00: reserved)
CAM_DIR_IN	Data direction (01: DATA IN)
CAM_DIR_OUT	Data direction (10: DATA OUT)
CAM_DIR_NONE	Data direction (11: no data)
CAM_DIS_AUTOSENSE	Disable autosense feature
CAM_SCATTER_VALID	Scatter/gather list is valid
CAM_DIS_CALLBACK	Disable callback feature
CAM_CDB_LINKED	CCB contains linked CDB
CAM_QUEUE_ENABLE	SIM queue actions are enabled
CAM_CDB_POINTER	CDB field contains pointer
CAM_DIS_DISCONNECT	Disable disconnect
CAM_INITIATE_SYNC	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
CAM_DIS_SYNC	Disable synchronous mode, go to asynchronous
CAM_SIM_QHEAD	Place CCB at head of SIM queue
CAM_SIM_QFREEZE	Return SIM queue to frozen state
CAM_ENG_SYNC	Flush residual bytes from HBA data engine before terminating I/O
CAM_ENG_SGLIST	Scatter/gather list is for HBA engine
CAM_CDB_PHYS	CDB pointer is physical address
CAM_DATA_PHYS	Scatter/gather/buffer data pointers are physical address
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address

Flag Name	Description
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBCK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

Description

The `ccmn_bdr_ccb_bld` routine creates a BUS DEVICE RESET CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

Return Value

CCB_RESETDEV pointer

See Also

`ccmn_get_ccb`, `ccmn_send_ccb`

Name

`ccmn_br_ccb_bld` – creates a BUS RESET CCB and sends it to the XPT

Syntax

```
ccmn_br_ccb_bld(dev, cam_flags)  
dev_t dev;  
u_long cam_flags;
```

Arguments

dev The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

cam_flags The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
CAM_DIR_RESV	Data direction (00: reserved)
CAM_DIR_IN	Data direction (01: DATA IN)
CAM_DIR_OUT	Data direction (10: DATA OUT)
CAM_DIR_NONE	Data direction (11: no data)
CAM_DIS_AUTOSENSE	Disable autosense feature
CAM_SCATTER_VALID	Scatter/gather list is valid
CAM_DIS_CALLBACK	Disable callback feature
CAM_CDB_LINKED	CCB contains linked CDB
CAM_QUEUE_ENABLE	SIM queue actions are enabled
CAM_CDB_POINTER	CDB field contains pointer
CAM_DIS_DISCONNECT	Disable disconnect
CAM_INITIATE_SYNC	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
CAM_DIS_SYNC	Disable synchronous mode, go to asynchronous
CAM_SIM_QHEAD	Place CCB at head of SIM queue
CAM_SIM_QFREEZE	Return SIM queue to frozen state
CAM_ENG_SYNC	Flush residual bytes from HBA data engine before terminating I/O
CAM_ENG_SGLIST	Scatter/gather list is for HBA engine
CAM_CDB_PHYS	CDB pointer is physical address
CAM_DATA_PHYS	Scatter/gather/buffer data pointers are physical address
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address

Flag Name	Description
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBACK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

Description

The `ccmn_br_ccb_bld` routine creates a BUS RESET CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

Return Value

CCB_RESETBUS pointer

See Also

`ccmn_get_ccb`, `ccmn_send_ccb`

Name

`ccmn_ccb_status` – assigns individual CAM status values to generic categories

Syntax

```
ccmn_ccb_status(ccb)  
CCB_HEADER *ccb;
```

Arguments

ccb Pointer to the CAM Control Block (CCB) header structure whose status is to be categorized.

Description

The `ccmn_ccb_status` routine assigns individual CAM status values to generic categories. The following table shows the returned category for each CAM status value:

CAM Status	Assigned Category
<code>CAM_REQ_INPROG</code>	<code>CAT_INPROG</code>
<code>CAM_REQ_CMP</code>	<code>CAT_CMP</code>
<code>CAM_REQ_ABORTED</code>	<code>CAT_ABORT</code>
<code>CAM_UA_ABORT</code>	<code>CAT_ABORT</code>
<code>CAM_REQ_CMP_ERR</code>	<code>CAT_CMP_ERR</code>
<code>CAM_BUSY</code>	<code>CAT_BUSY</code>
<code>CAM_REQ_INVALID</code>	<code>CAT_CCB_ERR</code>
<code>CAM_PATH_INVALID</code>	<code>CAT_NO_DEVICE</code>
<code>CAM_DEV_NOT_THERE</code>	<code>CAT_NO_DEVICE</code>
<code>CAM_UA_TERMIO</code>	<code>CAT_ABORT</code>
<code>CAM_SEL_TIMEOUT</code>	<code>CAT_DEVICE_ERR</code>
<code>CAM_CMD_TIMEOUT</code>	<code>CAT_DEVICE_ERR</code>
<code>CAM_MSG_REJECT_REC</code>	<code>CAT_DEVICE_ERR</code>
<code>CAM_SCSI_BUS_RESET</code>	<code>CAT_RESET</code>
<code>CAM_UNCOR_PARITY</code>	<code>CAT_DEVICE_ERR</code>
<code>CAM_AUTOSENSE_FAIL</code>	<code>CAT_BAD_AUTO</code>
<code>CAM_NO_HBA</code>	<code>CAT_NO_DEVICE</code>
<code>CAM_DATA_RUN_ERR</code>	<code>CAT_DEVICE_ERR</code>
<code>CAM_UNEXP_BUSFREE</code>	<code>CAT_DEVICE_ERR</code>
<code>CAM_SEQUENCE_FAIL</code>	<code>CAT_DEVICE_ERR</code>
<code>CAM_CCB_LEN_ERR</code>	<code>CAT_CCB_ERR</code>
<code>CAM_PROVIDE_FAIL</code>	<code>CAT_CCB_ERR</code>
<code>CAM_BDR_SENT</code>	<code>CAT_RESET</code>
<code>CAM_REQ_TERMIO</code>	<code>CAT_ABORT</code>
<code>CAM_LUN_INVALID</code>	<code>CAT_NO_DEVICE</code>
<code>CAM_TID_INVALID</code>	<code>CAT_NO_DEVICE</code>
<code>CAM_FUNC_NOTAVAIL</code>	<code>CAT_CCB_ERR</code>
<code>CAM_NO_NEXUS</code>	<code>CAT_NO_DEVICE</code>
<code>CAM_IID_INVALID</code>	<code>CAT_NO_DEVICE</code>
<code>CAM_SCSI_BUSY</code>	<code>CAT_SCSI_BUSY</code>
Other	<code>CAT_UNKNOWN</code>

Return Value

The following categories can be returned:

CAM Status	Assigned Category
CAT_INPROG	Request is in progress.
CAT_CMP	Request has completed without error.
CAT_CMP_ERR	Request has completed with error.
CAT_ABORT	Request either has been aborted or terminated, or it cannot be aborted or terminated.
CAT_BUSY	CAM is busy.
CAT_SCSI_BUSY	SCSI is busy.
CAT_NO_DEVICE	No device at address specified in request.
CAT_DEVICE_ERR	Bus or device problems.
CAT_BAD_AUTO	Invalid autosense data.
CAT_CCB_ERR	Invalid CCB.
CAT_RESET	Unit or bus has detected a reset condition.
CAT_UNKNOWN	Invalid CAM status.

Name

`ccmn_ccbwait` – sleeps waiting for a SCSI I/O CCB request to complete

Syntax

```
ccmn_ccbwait(ccb, priority)  
register CCB_SCSIIO *ccb;  
register int *priority;
```

Arguments

ccb Pointer to the CCB on which to wait.

priority Software priority at which to sleep.

Description

The `ccmn_ccbwait` routine sleeps waiting for a SCSI I/O CCB request to complete. If the priority is greater than `PZERO`, the `ccmn_ccbwait` routine sleeps at an interruptible priority in order to catch signals.

Return Value

`EINTR` – Sleep was interrupted due to receiving a signal
`0` – CCB has completed

Name

`ccmn_close_unit` – handles the common close for all SCSI/CAM peripheral device drivers

Syntax

```
ccmn_close_unit(dev)  
dev_t dev;
```

Arguments

dev The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

Description

The `ccmn_close_unit` routine handles the common close for all SCSI/CAM peripheral device drivers. It sets the open count to zero.

Return Value

None

See Also

`ccmn_open_unit`

Name

ccmn_errlog – reports error conditions for the SCSI/CAM peripheral device driver

Syntax

```
ccmn_errlog(func_str, opt_str, flags, ccb, dev, unused)  
u_char      *func_str;  
u_char      *opt_str;  
u_long      flags;  
CCB_HEADER *ccb;  
dev_t       dev;  
u_char      *unused;
```

Arguments

<i>func_str</i>	Pointer to function in which the error was detected.
<i>opt_str</i>	Pointer to optional logging string.
<i>flags</i>	Flags for peripheral drivers error types. The flags are: CAM_INFORMATIONAL; CAM_SOFTERR; CAM_HARDERR; CAM_SOFTWARE; and CAM_DUMP_ALL. They are defined in the /usr/sys/h/cam_logger.h file.
<i>ccb</i>	Pointer to the CAM Control Block (CCB) header structure.
<i>dev</i>	The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.
<i>unused</i>	Unused. It is needed to match the number of arguments expected by the CAM_ERROR macro, which is defined in the /usr/sys/io/cam/cam_errlog.h file

Description

The `ccmn_errlog` routine reports error conditions for the SCSI/CAM peripheral device driver. The routine is passed a pointer to the name of the function in which the error was detected. The routine builds informational strings based on the error condition.

Return Value

None

Name

`ccmn_gdev_ccb_bld` – creates a GET DEVICE TYPE CCB and sends it to the XPT

Syntax

```
ccmn_gdev_ccb_bld(dev, cam_flags, inq_addr)
dev_t dev;
u_long cam_flags;
u_char *inq_addr;
```

Arguments

- dev* The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.
- cam_flags* The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
<code>CAM_DIR_RESV</code>	Data direction (00: reserved)
<code>CAM_DIR_IN</code>	Data direction (01: DATA IN)
<code>CAM_DIR_OUT</code>	Data direction (10: DATA OUT)
<code>CAM_DIR_NONE</code>	Data direction (11: no data)
<code>CAM_DIS_AUTOSENSE</code>	Disable autosense feature
<code>CAM_SCATTER_VALID</code>	Scatter/gather list is valid
<code>CAM_DIS_CALLBACK</code>	Disable callback feature
<code>CAM_CDB_LINKED</code>	CCB contains linked CDB
<code>CAM_QUEUE_ENABLE</code>	SIM queue actions are enabled
<code>CAM_CDB_POINTER</code>	CDB field contains pointer
<code>CAM_DIS_DISCONNECT</code>	Disable disconnect
<code>CAM_INITIATE_SYNC</code>	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
<code>CAM_DIS_SYNC</code>	Disable synchronous mode, go to asynchronous
<code>CAM_SIM_QHEAD</code>	Place CCB at head of SIM queue
<code>CAM_SIM_QFREEZE</code>	Return SIM queue to frozen state
<code>CAM_ENG_SYNC</code>	Flush residual bytes from HBA data engine before terminating I/O
<code>CAM_ENG_SGLIST</code>	Scatter/gather list is for HBA engine
<code>CAM_CDB_PHYS</code>	CDB pointer is physical address
<code>CAM_DATA_PHYS</code>	Scatter/gather/buffer data pointers are physical address

Flag Name	Description
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBACK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

inq_addr Pointer to the address for Inquiry data returned.

Description

The `ccmn_gdev_ccb_bld` routine creates a GET DEVICE TYPE CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The `ccmn_gdev_ccb_bld` routine calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

Return Value

CCB_GETDEV pointer

See Also

`ccmn_get_ccb`, `ccmn_send_ccb`

Name

`ccmn_get_bp` – allocates a `buf` structure

Syntax

`ccmn_get_bp()`

Arguments

None

Description

The `ccmn_get_bp` routine allocates a `buf` structure. This function must not be called at interrupt context. The function may sleep waiting for resources.

Return Value

Pointer to `buf` structure. This pointer may be `NULL`.

Name

`ccmn_get_ccb` – allocates a CCB and fills in the common portion of the CCB header

Syntax

```
ccmn_get_ccb(dev, func_code, cam_flags, ccb_len)
dev_t dev;
u_char func_code;
u_long cam_flags;
u_short ccb_len;
```

Arguments

- dev* The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.
- func_code* The XPT function code for the CCB. See American National Standard for Information Systems, *SCSI-2 Common Access Method: Transport and SCSI Interface Module*, working draft, X3T9.2/90-186, Section 8.1.2, for a list of the function codes.
- cam_flags* The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
CAM_DIR_RESV	Data direction (00: reserved)
CAM_DIR_IN	Data direction (01: DATA IN)
CAM_DIR_OUT	Data direction (10: DATA OUT)
CAM_DIR_NONE	Data direction (11: no data)
CAM_DIS_AUTOSENSE	Disable autosense feature
CAM_SCATTER_VALID	Scatter/gather list is valid
CAM_DIS_CALLBACK	Disable callback feature
CAM_CDB_LINKED	CCB contains linked CDB
CAM_QUEUE_ENABLE	SIM queue actions are enabled
CAM_CDB_POINTER	CDB field contains pointer
CAM_DIS_DISCONNECT	Disable disconnect
CAM_INITIATE_SYNC	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
CAM_DIS_SYNC	Disable synchronous mode, go to asynchronous
CAM_SIM_QHEAD	Place CCB at head of SIM queue
CAM_SIM_QFREEZE	Return SIM queue to frozen state
CAM_ENG_SYNC	Flush residual bytes from HBA data engine before terminating I/O

Flag Name	Description
CAM_ENG_SGLIST	Scatter/gather list is for HBA engine
CAM_CDB_PHYS	CDB pointer is physical address
CAM_DATA_PHYS	Scatter/gather/buffer data pointers are physical address
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBCK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

ccb_len The length of the CCB.

Description

The `ccmn_get_ccb` routine allocates a CCB and fills in the common portion of the CCB header. The routine calls the `xpt_ccb_alloc` routine to allocate a CCB structure. The `ccmn_get_ccb` routine fills in the common portion of the CCB header and returns a pointer to that `CCB_HEADER`.

Return Value

Pointer to newly allocated CCB header.

See Also

`xpt_ccb_alloc`

Name

`ccmn_get_dbuf` – allocates a data buffer area of the size specified by calling the kernel memory allocation routines

Syntax

```
ccmn_get_dbuf(size)  
u_long size;
```

Arguments

size Size of buffer in bytes.

Description

The `ccmn_get_dbuf` routine allocates a data buffer area of the size specified by calling the kernel memory allocation routines .

Return Value

Pointer to kernel data space. If this is NULL, no data buffer structures are available and no more can be allocated.

Name

`ccmn_init` – initializes the XPT and the unit table lock structure

Syntax

`ccmn_init ()`

Description

The `ccmn_init` routine initializes the XPT and the unit table lock structure. The first time the `ccmn_init` routine is called, it calls the `xpt_init` routine to request the XPT to initialize the CAM subsystem.

Return Value

None

See Also

`xpt_init`

Name

`ccmn_io_ccb_bld` – allocates a SCSI I/O CCB and fills it in

Syntax

```
ccmn_io_ccb_bld(dev, data_addr, data_len, sense_len, cam_flags, comp_func, \  
               tag_action, timeout, bp)  
dev_t dev;  
u_char *data_addr;  
u_long data_len;  
u_short sense_len;  
u_long cam_flags;  
void (*comp_func) ();  
u_char tag_action;  
u_long timeout;  
struct buf *bp;
```

Arguments

dev The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

data_addr Pointer to the data buffer.

data_len Size of the data transfer.

sense_len Length of the sense data buffer to be returned on autosense, which is predefined as 64 bytes in the `DEC_AUTO_SENSE_SIZE` environment variable but can be larger.

cam_flags The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
<code>CAM_DIR_RESV</code>	Data direction (00: reserved)
<code>CAM_DIR_IN</code>	Data direction (01: DATA IN)
<code>CAM_DIR_OUT</code>	Data direction (10: DATA OUT)
<code>CAM_DIR_NONE</code>	Data direction (11: no data)
<code>CAM_DIS_AUTONSENSE</code>	Disable autosense feature
<code>CAM_SCATTER_VALID</code>	Scatter/gather list is valid
<code>CAM_DIS_CALLBACK</code>	Disable callback feature
<code>CAM_CDB_LINKED</code>	CCB contains linked CDB
<code>CAM_QUEUE_ENABLE</code>	SIM queue actions are enabled
<code>CAM_CDB_POINTER</code>	CDB field contains pointer
<code>CAM_DIS_DISCONNECT</code>	Disable disconnect
<code>CAM_INITIATE_SYNC</code>	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)

Flag Name	Description
CAM_DIS_SYNC	Disable synchronous mode, go to asynchronous
CAM_SIM_QHEAD	Place CCB at head of SIM queue
CAM_SIM_QFREEZE	Return SIM queue to frozen state
CAM_ENG_SYNC	Flush residual bytes from HBA data engine before terminating I/O
CAM_ENG_SGLIST	Scatter/gather list is for HBA engine
CAM_CDB_PHYS	CDB pointer is physical address
CAM_DATA_PHYS	Scatter/gather/buffer data pointers are physical address
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBCK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

comp_func SCSI device driver I/O callback completion function. This pointer may be NULL if the CAM DISABLE CALLBACK bit is set in the CAM FLAGS field.

tag_action Type of action to perform for tagged requests:

CAM_SIMPLE_QTAG	Tag for simple queue
CAM_HEAD_QTAG	Tag for head of queue
CAM_ORDERED_QTAG	Tag for ordered queue

timeout Timeout for the request in seconds. A value of 0 (zero) indicates the default, which is five seconds.

bp A `buf` structure pointer, which is used for request mapping. This pointer may be NULL.

Description

The `ccmn_io_ccb_bld` routine allocates a SCSI I/O CCB and fills it in. The routine calls the `ccmn_get_ccb` routine to obtain a CCB structure with the header portion filled in. The `ccmn_io_ccb_bld` routine fills in the SCSI I/O-specific fields from the parameters passed and checks the length of the sense data to see if it exceeds the length of the reserved sense buffer. If it does, a sense buffer is allocated using the `ccmn_get_dbuf` routine.

Return Value

Pointer to a SCSI I/O CCB

See Also

`ccmn_get_ccb`, `ccmn_get_dbuf`

Name

`ccmn_mode_select` – creates a SCSI I/O CCB for the MODE SELECT command and sends it to the XPT for processing

Syntax

```
ccmn_mode_select(pd, sense_len, cam_flags, comp_func, tag_action, timeout, ms_index)
PDRV_DEVICE *pd;
u_short sense_len;
u_long cam_flags;
void (*comp_func) ();
u_char tag_action;
u_long timeout;
unsigned ms_index;
```

Arguments

- pd* Pointer to the CAM Peripheral Device Structure allocated for each SCSI device in the system.
- sense_len* Length of the sense data buffer to be returned on autosense, which is predefined as 64 bytes in the DEC_AUTO_SENSE_SIZE environment variable but can be larger.
- cam_flags* The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
CAM_DIR_RESV	Data direction (00: reserved)
CAM_DIR_IN	Data direction (01: DATA IN)
CAM_DIR_OUT	Data direction (10: DATA OUT)
CAM_DIR_NONE	Data direction (11: no data)
CAM_DIS_AUTOSENSE	Disable autosense feature
CAM_SCATTER_VALID	Scatter/gather list is valid
CAM_DIS_CALLBACK	Disable callback feature
CAM_CDB_LINKED	CCB contains linked CDB
CAM_QUEUE_ENABLE	SIM queue actions are enabled
CAM_CDB_POINTER	CDB field contains pointer
CAM_DIS_DISCONNECT	Disable disconnect
CAM_INITIATE_SYNC	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
CAM_DIS_SYNC	Disable synchronous mode, go to asynchronous
CAM_SIM_QHEAD	Place CCB at head of SIM queue
CAM_SIM_QFREEZE	Return SIM queue to frozen state

Flag Name	Description
CAM_ENG_SYNC	Flush residual bytes from HBA data engine before terminating I/O
CAM_ENG_SGLIST	Scatter/gather list is for HBA engine
CAM_CDB_PHYS	CDB pointer is physical address
CAM_DATA_PHYS	Scatter/gather/buffer data pointers are physical address
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBACK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

comp_func SCSI device driver I/O callback completion function. This pointer may be NULL if the CAM DISABLE CALLBACK bit is set in the CAM FLAGS field.

tag_action Type of action to perform for tagged requests:

CAM_SIMPLE_QTAG	Tag for simple queue
CAM_HEAD_QTAG	Tag for head of queue
CAM_ORDERED_QTAG	Tag for ordered queue

timeout Timeout for the request in seconds. A value of 0 (zero) indicates the default, which is five seconds.

ms_index An index into a page in the Mode Select Table that is pointed to in the Device Descriptor Structure.

Description

The `ccmn_mode_select` routine creates a SCSI I/O CCB for the MODE SELECT command and sends it to the XPT for processing. This routine may be called from interrupt context since it will not wait (sleep) for the command to complete. The routine calls the `ccmn_io_ccb_bld` routine to obtain a SCSI I/O CCB structure. It uses the *ms_index* parameter to index into the Mode Select Table pointed to by the `dd_modsel_tbl` member of the Device Descriptor Structure for

the SCSI device. The `ccmn_mode_select` routine calls the `ccmn_send_ccb` routine to send the SCSI I/O CCB to the XPT.

Return Value

CCB_SCSIIO pointer

See Also

`ccmn_io_ccb_bld`, `ccmn_send_ccb`

Name

`ccmn_open_unit` – handles the common open for all SCSI/CAM peripheral device drivers

Syntax

```
ccmn_open_unit(dev, scsi_dev_type, flag, dev_size)  
dev_t dev;  
u_long scsi_dev_type;  
u_long flag;  
u_long dev_size;
```

Arguments

dev The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

scsi_dev_type SCSI device type value from Inquiry data.

flag Indicates whether or not the device is being opened for exclusive use. A setting of 1 means exclusive use; a setting of 0 (zero) means nonexclusive use.

dev_size The device-specific structure size in bytes.

Description

The `ccmn_open_unit` routine handles the common open for all SCSI/CAM peripheral device drivers. It must be called for each open before any SCSI device-specific open code is executed.

On the first call to the `ccmn_open_unit` routine for a device, the `ccmn_gdev_ccb_bld` routine is called to issue a GET DEVICE TYPE CCB to obtain the Inquiry data. The `ccmn_open_unit` routine allocates the Peripheral Device Structure, `PDRV_DEVICE`, and a device-specific structure, either `TAPE_SPECIFIC` or `DISK_SPECIFIC`, based on the device size argument passed. The routine also searches the `cam_devdesc_tab` to obtain a pointer to the Device Descriptor Structure for the SCSI device and increments the open count. The statically allocated `pdrv_unit_table` structure contains a pointer to the `PDRV_DEVICE` structure. The `PDRV_DEVICE` structure contains pointers to the `DEV_DESC` structure and to the device-specific structure.

Return Value

The `ccmn_open_unit` routine returns a value of 0 (zero) upon successful completion.

Diagnostics

The `ccmn_open_unit` routine fails under the following conditions:

- [EBUSY] The device is already opened and the exclusive use bit is set.
- [ENXIO] The device does not exist.
- [EINVAL] The *scsi_dev_type* parameter does not match the device type in the Inquiry data returned by GET DEVICE TYPE CCB. The *scsi_dev_type* was not configured.

See Also

`ccmn_close_unit`, `ccmn_gdev_ccb_bld`

Name

`ccmn_pinq_ccb_bld` – creates a PATH INQUIRY CCB and sends it to the XPT

Syntax

```
ccmn_pinq_ccb_bld(dev, cam_flags)  
dev_t dev;  
u_long cam_flags;
```

Arguments

dev The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

cam_flags The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
<code>CAM_DIR_RESV</code>	Data direction (00: reserved)
<code>CAM_DIR_IN</code>	Data direction (01: DATA IN)
<code>CAM_DIR_OUT</code>	Data direction (10: DATA OUT)
<code>CAM_DIR_NONE</code>	Data direction (11: no data)
<code>CAM_DIS_AUTOSENSE</code>	Disable autosense feature
<code>CAM_SCATTER_VALID</code>	Scatter/gather list is valid
<code>CAM_DIS_CALLBACK</code>	Disable callback feature
<code>CAM_CDB_LINKED</code>	CCB contains linked CDB
<code>CAM_QUEUE_ENABLE</code>	SIM queue actions are enabled
<code>CAM_CDB_POINTER</code>	CDB field contains pointer
<code>CAM_DIS_DISCONNECT</code>	Disable disconnect
<code>CAM_INITIATE_SYNC</code>	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
<code>CAM_DIS_SYNC</code>	Disable synchronous mode, go to asynchronous
<code>CAM_SIM_QHEAD</code>	Place CCB at head of SIM queue
<code>CAM_SIM_QFREEZE</code>	Return SIM queue to frozen state
<code>CAM_ENG_SYNC</code>	Flush residual bytes from HBA data engine before terminating I/O
<code>CAM_ENG_SGLIST</code>	Scatter/gather list is for HBA engine
<code>CAM_CDB_PHYS</code>	CDB pointer is physical address
<code>CAM_DATA_PHYS</code>	Scatter/gather/buffer data pointers are physical address
<code>CAM_SNS_BUF_PHYS</code>	Autosense data pointer is physical address

Flag Name	Description
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBCK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

Description

The `ccmn_pinq_ccb_bld` routine creates a PATH INQUIRY CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

Return Value

CCB_PATHINQ pointer

See Also

`ccmn_get_ccb`, `ccmn_send_ccb`

Name

`ccmn_rel_bp` – deallocates a `buf` structure

Syntax

```
ccmn_rel_bp(bp)  
struct buf *bp;
```

Arguments

bp A `buf` structure pointer, which is used for request mapping.

Description

The `ccmn_rel_bp` routine deallocates a `buf` structure.

Return Value

None

Name

`ccmn_rel_ccb` – releases a CCB and returns the sense data buffer for SCSI I/O CCBs, if allocated

Syntax

```
ccmn_rel_ccb(ccb)  
CCB_HEADER *ccb;
```

Arguments

ccb Pointer to the CAM Control Block (CCB) header structure to be released.

Description

The `ccmn_rel_ccb` routine releases a CCB and returns the sense data buffer for SCSI I/O CCBs, if allocated. The routine calls the `xpt_ccb_free` routine to release a CCB structure. For SCSI I/O CCBs, if the sense data length is greater than the default sense data length, the `ccmn_rel_ccb` routine calls the `ccmn_rel_dbuf` routine to return the sense data buffer to the data buffer pool.

Return Value

None

See Also

`ccmn_rel_dbuf`, `xpt_ccb_free`

Name

`ccmn_rel_dbuf` – deallocates a data buffer

Syntax

```
ccmn_rel_dbuf(addr)  
caddr_t addr;
```

Arguments

addr Address of the data buffer to deallocate.

Description

The `ccmn_rel_dbuf` routine deallocates a data buffer.

Return Value

None

Name

`ccmn_rem_ccb` – removes a SCSI I/O CCB request from the SCSI/CAM peripheral driver active queue and starts a tagged request if a tagged CCB is pending

Syntax

```
ccmn_rem_ccb(pd,ccb)  
PDRV_DEVICE *pd;  
CCB_SCSIIO *ccb;
```

Arguments

pd Pointer to the CAM Peripheral Device Structure allocated for each SCSI device in the system.

ccb Pointer to the SCSI I/O CCB structure to remove from the active queue.

Description

The `ccmn_rem_ccb` routine removes a SCSI I/O CCB request from the SCSI/CAM peripheral driver active queue and starts a tagged request if a tagged CCB is pending. If a tagged CCB is pending, the `ccmn_rem_ccb` routine places the request on the active queue and calls the `xpt_action` routine to start the tagged request.

Return Value

None

See Also

`xpt_action`

Name

`ccmn_rsq_ccb_bld` – creates a RELEASE SIM QUEUE CCB and sends it to the XPT

Syntax

```
ccmn_rsq_ccb_bld(dev, cam_flags)  
dev_t dev;  
u_long cam_flags;
```

Arguments

dev The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

cam_flags The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
<code>CAM_DIR_RESV</code>	Data direction (00: reserved)
<code>CAM_DIR_IN</code>	Data direction (01: DATA IN)
<code>CAM_DIR_OUT</code>	Data direction (10: DATA OUT)
<code>CAM_DIR_NONE</code>	Data direction (11: no data)
<code>CAM_DIS_AUTOSENSE</code>	Disable autosense feature
<code>CAM_SCATTER_VALID</code>	Scatter/gather list is valid
<code>CAM_DIS_CALLBACK</code>	Disable callback feature
<code>CAM_CDB_LINKED</code>	CCB contains linked CDB
<code>CAM_QUEUE_ENABLE</code>	SIM queue actions are enabled
<code>CAM_CDB_POINTER</code>	CDB field contains pointer
<code>CAM_DIS_DISCONNECT</code>	Disable disconnect
<code>CAM_INITIATE_SYNC</code>	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
<code>CAM_DIS_SYNC</code>	Disable synchronous mode, go to asynchronous
<code>CAM_SIM_QHEAD</code>	Place CCB at head of SIM queue
<code>CAM_SIM_QFREEZE</code>	Return SIM queue to frozen state
<code>CAM_ENG_SYNC</code>	Flush residual bytes from HBA data engine before terminating I/O
<code>CAM_ENG_SGLIST</code>	Scatter/gather list is for HBA engine
<code>CAM_CDB_PHYS</code>	CDB pointer is physical address
<code>CAM_DATA_PHYS</code>	Scatter/gather/buffer data pointers are physical address
<code>CAM_SNS_BUF_PHYS</code>	Autosense data pointer is physical address

Flag Name	Description
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBCK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

Description

The `ccmn_rsq_ccb_bld` routine creates a RELEASE SIM QUEUE CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

Return Value

CCB_RELSIM pointer

See Also

`ccmn_get_ccb`, `ccmn_send_ccb`

Name

`ccmn_sasy_ccb_bld` – creates a SET ASYNCHRONOUS CALLBACK CCB and sends it to the XPT

Syntax

```
ccmn_sasy_ccb_bld(dev, cam_flags, async_flags, callb_func, buf, buflen)  
dev_t dev;  
u_long cam_flags;  
u_long async_flags;  
void (*callb_func) ();  
u_char *buf;  
u_char buflen;
```

Arguments

dev The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.

cam_flags The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
CAM_DIR_RESV	Data direction (00: reserved)
CAM_DIR_IN	Data direction (01: DATA IN)
CAM_DIR_OUT	Data direction (10: DATA OUT)
CAM_DIR_NONE	Data direction (11: no data)
CAM_DIS_AUTOSENSE	Disable autosense feature
CAM_SCATTER_VALID	Scatter/gather list is valid
CAM_DIS_CALLBACK	Disable callback feature
CAM_CDB_LINKED	CCB contains linked CDB
CAM_QUEUE_ENABLE	SIM queue actions are enabled
CAM_CDB_POINTER	CDB field contains pointer
CAM_DIS_DISCONNECT	Disable disconnect
CAM_INITIATE_SYNC	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
CAM_DIS_SYNC	Disable synchronous mode, go to asynchronous
CAM_SIM_QHEAD	Place CCB at head of SIM queue
CAM_SIM_QFREEZE	Return SIM queue to frozen state
CAM_ENG_SYNC	Flush residual bytes from HBA data engine before terminating I/O
CAM_ENG_SGLIST	Scatter/gather list is for HBA engine

Flag Name	Description
CAM_CDB_PHYS	CDB pointer is physical address
CAM_DATA_PHYS	Scatter/gather/buffer data pointers are physical address
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBCK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

async_flags Asynchronous Callback CCB flags for registering a callback routine for a specific bus, target, and LUN. The flags are defined in the `/usr/sys/h/cam.h` file.

callb_func Asynchronous callback function.

buf SCSI/CAM peripheral buffer for asynchronous information.

buflen Allocated SCSI/CAM peripheral buffer length.

Description

The `ccmn_sasy_ccb_bld` routine creates a SET ASYNCHRONOUS CALLBACK CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine fills in the asynchronous fields of the CCB and calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

Return Value

CCB_SETASYNC pointer

See Also

`ccmn_get_ccb`, `ccmn_send_ccb`

Name

`ccmn_sdev_ccb_bld` – creates a SET DEVICE TYPE CCB and sends it to the XPT

Syntax

```
ccmn_sdev_ccb_bld(dev, cam_flags, scsi_dev_type)  
dev_t dev;  
u_long cam_flags;  
u_char scsi_dev_type;
```

Arguments

- dev* The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.
- cam_flags* The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
<code>CAM_DIR_RESV</code>	Data direction (00: reserved)
<code>CAM_DIR_IN</code>	Data direction (01: DATA IN)
<code>CAM_DIR_OUT</code>	Data direction (10: DATA OUT)
<code>CAM_DIR_NONE</code>	Data direction (11: no data)
<code>CAM_DIS_AUTOSENSE</code>	Disable autosense feature
<code>CAM_SCATTER_VALID</code>	Scatter/gather list is valid
<code>CAM_DIS_CALLBACK</code>	Disable callback feature
<code>CAM_CDB_LINKED</code>	CCB contains linked CDB
<code>CAM_QUEUE_ENABLE</code>	SIM queue actions are enabled
<code>CAM_CDB_POINTER</code>	CDB field contains pointer
<code>CAM_DIS_DISCONNECT</code>	Disable disconnect
<code>CAM_INITIATE_SYNC</code>	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
<code>CAM_DIS_SYNC</code>	Disable synchronous mode, go to asynchronous
<code>CAM_SIM_QHEAD</code>	Place CCB at head of SIM queue
<code>CAM_SIM_QFREEZE</code>	Return SIM queue to frozen state
<code>CAM_ENG_SYNC</code>	Flush residual bytes from HBA data engine before terminating I/O
<code>CAM_ENG_SGLIST</code>	Scatter/gather list is for HBA engine
<code>CAM_CDB_PHYS</code>	CDB pointer is physical address
<code>CAM_DATA_PHYS</code>	Scatter/gather/buffer data pointers are physical address

Flag Name	Description
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBCK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

scsi_dev_type

SCSI device type value from Inquiry data.

Description

The `ccmn_sdev_ccb_bld` routine creates a SET DEVICE TYPE CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine fills in the device type field of the CCB and calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

Return Value

CCB_SETDEV pointer

See Also

`ccmn_get_ccb`, `ccmn_send_ccb`

Name

`ccmn_send_ccb` – sends CCBs to the XPT layer by calling the `xpt_action` routine

Syntax

```
ccmn_send_ccb(pd,ccb, retry)  
PDRV_DEVICE *pd;  
CCB_HEADER *ccb;  
u_char      retry
```

Arguments

- pd* Pointer to the CAM Peripheral Device Structure allocated for each SCSI device in the system.
- ccb* Pointer to the CAM Control Block (CCB) header structure to be sent to the `xpt_action` routine to handle the request.
- retry* Indicates whether this request is a retry of a request that is already on the active queue. A 1 indicates RETRY, and a 0 (zero) indicates NOT_RETRY.

Description

The `ccmn_send_ccb` routine sends CCBs to the XPT layer by calling the `xpt_action` routine. This routine must be called with the Peripheral Device Structure locked.

For SCSI I/O CCBs that are not retries, the request is placed on the active queue. If the CCB is a tagged request and the tag queue size for the device has been reached, the request is placed on the tagged pending queue so that the request can be sent to the XPT at a later time. A high-water mark of half the queue depth for the SCSI device is used for tagged requests so that other initiators on the SCSI bus will not be blocked from using the device.

Return Value

Value returned from the `xpt_action` routine.

See Also

`xpt_action`

Name

`ccmn_start_unit` – creates a SCSI I/O CCB for the START UNIT command and sends it to the XPT for processing

Syntax

```
ccmn_start_unit(pd, sense_len, cam_flags, comp_func, tag_action, timeout)
PDRV_DEVICE *pd;
u_short sense_len;
u_long cam_flags;
void (*comp_func) ();
u_char tag_action;
u_long timeout;
```

Arguments

- pd* Pointer to the CAM Peripheral Device Structure allocated for each SCSI device in the system.
- sense_len* Length of the sense data buffer to be returned on autosense, which is predefined as 64 bytes in the DEC_AUTO_SENSE_SIZE environment variable but can be larger.
- cam_flags* The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
CAM_DIR_RESV	Data direction (00: reserved)
CAM_DIR_IN	Data direction (01: DATA IN)
CAM_DIR_OUT	Data direction (10: DATA OUT)
CAM_DIR_NONE	Data direction (11: no data)
CAM_DIS_AUTOSENSE	Disable autosense feature
CAM_SCATTER_VALID	Scatter/gather list is valid
CAM_DIS_CALLBACK	Disable callback feature
CAM_CDB_LINKED	CCB contains linked CDB
CAM_QUEUE_ENABLE	SIM queue actions are enabled
CAM_CDB_POINTER	CDB field contains pointer
CAM_DIS_DISCONNECT	Disable disconnect
CAM_INITIATE_SYNC	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
CAM_DIS_SYNC	Disable synchronous mode, go to asynchronous
CAM_SIM_QHEAD	Place CCB at head of SIM queue
CAM_SIM_QFREEZE	Return SIM queue to frozen state

Flag Name	Description
CAM_ENG_SYNC	Flush residual bytes from HBA data engine before terminating I/O
CAM_ENG_SGLIST	Scatter/gather list is for HBA engine
CAM_CDB_PHYS	CDB pointer is physical address
CAM_DATA_PHYS	Scatter/gather/buffer data pointers are physical address
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBACK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

comp_func SCSI device driver I/O callback completion function. This pointer may be NULL if the CAM DISABLE CALLBACK bit is set in the CAM FLAGS field.

tag_action Type of action to perform for tagged requests:

CAM_SIMPLE_QTAG	Tag for simple queue
CAM_HEAD_QTAG	Tag for head of queue
CAM_ORDERED_QTAG	Tag for ordered queue

timeout Timeout for the request in seconds. A value of 0 (zero) indicates the default, which is five seconds.

Description

The `ccmn_start_unit` routine creates a SCSI I/O CCB for the START UNIT command and sends it to the XPT for processing. This routine may be called from interrupt context since it will not wait (sleep) for the command to complete.

The `ccmn_start_unit` routine calls the `ccmn_io_ccb_bld` routine to obtain a SCSI I/O CCB structure. The `ccmn_start_unit` routine calls the `ccmn_send_ccb` routine to send the SCSI I/O CCB to the XPT.

Return Value

CCB_SCSIIO pointer

See Also

`ccmn_io_ccb_bld`, `ccmn_send_ccb`

Name

`ccmn_term_ccb_bld` – creates a TERMINATE I/O CCB and sends it to the XPT

Syntax

```
ccmn_term_ccb_bld(dev, cam_flags, term_ccb)
dev_t dev;
u_long cam_flags;
CCB_HEADER *term_ccb;
```

Arguments

- dev* The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.
- cam_flags* The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
CAM_DIR_RESV	Data direction (00: reserved)
CAM_DIR_IN	Data direction (01: DATA IN)
CAM_DIR_OUT	Data direction (10: DATA OUT)
CAM_DIR_NONE	Data direction (11: no data)
CAM_DIS_AUTOSENSE	Disable autosense feature
CAM_SCATTER_VALID	Scatter/gather list is valid
CAM_DIS_CALLBACK	Disable callback feature
CAM_CDB_LINKED	CCB contains linked CDB
CAM_QUEUE_ENABLE	SIM queue actions are enabled
CAM_CDB_POINTER	CDB field contains pointer
CAM_DIS_DISCONNECT	Disable disconnect
CAM_INITIATE_SYNC	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
CAM_DIS_SYNC	Disable synchronous mode, go to asynchronous
CAM_SIM_QHEAD	Place CCB at head of SIM queue
CAM_SIM_QFREEZE	Return SIM queue to frozen state
CAM_ENG_SYNC	Flush residual bytes from HBA data engine before terminating I/O
CAM_ENG_SGLIST	Scatter/gather list is for HBA engine
CAM_CDB_PHYS	CDB pointer is physical address
CAM_DATA_PHYS	Scatter/gather/buffer data pointers are physical address

Flag Name	Description
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBACK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

term_ccb Pointer to the CAM Control Block (CCB) header structure to terminate.

Description

The `ccmn_term_ccb_bld` routine creates a TERMINATE I/O CCB and sends it to the XPT. The routine calls the `ccmn_get_ccb` routine to allocate a CCB structure and fill in the common portion of the CCB header. The routine fills in the CCB to be terminated and calls the `ccmn_send_ccb` routine to send the CCB structure to the XPT. The request is carried out immediately, so it is not placed on the device driver's active queue.

Return Value

CCB_TERMIO pointer

See Also

`ccmn_get_ccb`, `ccmn_send_ccb`

Name

`ccmn_term_que` – sends a TERMINATE I/O CCB request for each SCSI I/O CCB on the active queue

Syntax

```
ccmn_term_que(pd)  
PDRV_DEVICE *pd;
```

Arguments

pd Pointer to the CAM Peripheral Device Structure allocated for each SCSI device in the system.

Description

The `ccmn_term_que` routine sends a TERMINATE I/O CCB request for each SCSI I/O CCB on the active queue. This routine must be called with the Peripheral Device Structure locked.

The `ccmn_term_que` routine calls the `ccmn_term_ccb_bld` routine to create a TERMINATE I/O CCB for the first active CCB on the active queue and send it to the XPT. It calls the `ccmn_send_ccb` routine to send the TERMINATE I/O CCB for each of the other CCBs on the active queue that are marked as active to the XPT. The `ccmn_term_que` routine then calls the `ccmn_rel_ccb` routine to return the TERMINATE I/O CCB to the XPT.

Return Value

None

See Also

`ccmn_rel_ccb`, `ccmn_send_ccb`

Name

`ccmn_tur` – creates a SCSI I/O CCB for the TEST UNIT READY command and sends it to the XPT for processing

Syntax

```
ccmn_tur(pd, sense_len, cam_flags, comp_func, tag_action, timeout)
PDRV_DEVICE *pd;
u_short sense_len;
u_long cam_flags;
void (*comp_func) ();
u_char tag_action;
u_long timeout;
```

Arguments

pd Pointer to the CAM Peripheral Device Structure allocated for each SCSI device in the system.

sense_len Length of the sense data buffer to be returned on autosense, which is predefined as 64 bytes in the `DEC_AUTO_SENSE_SIZE` environment variable but can be larger.

cam_flags The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
<code>CAM_DIR_RESV</code>	Data direction (00: reserved)
<code>CAM_DIR_IN</code>	Data direction (01: DATA IN)
<code>CAM_DIR_OUT</code>	Data direction (10: DATA OUT)
<code>CAM_DIR_NONE</code>	Data direction (11: no data)
<code>CAM_DIS_AUTOSENSE</code>	Disable autosense feature
<code>CAM_SCATTER_VALID</code>	Scatter/gather list is valid
<code>CAM_DIS_CALLBACK</code>	Disable callback feature
<code>CAM_CDB_LINKED</code>	CCB contains linked CDB
<code>CAM_QUEUE_ENABLE</code>	SIM queue actions are enabled
<code>CAM_CDB_POINTER</code>	CDB field contains pointer
<code>CAM_DIS_DISCONNECT</code>	Disable disconnect
<code>CAM_INITIATE_SYNC</code>	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
<code>CAM_DIS_SYNC</code>	Disable synchronous mode, go to asynchronous
<code>CAM_SIM_QHEAD</code>	Place CCB at head of SIM queue
<code>CAM_SIM_QFREEZE</code>	Return SIM queue to frozen state

Flag Name	Description
CAM_ENG_SYNC	Flush residual bytes from HBA data engine before terminating I/O
CAM_ENG_SGLIST	Scatter/gather list is for HBA engine
CAM_CDB_PHYS	CDB pointer is physical address
CAM_DATA_PHYS	Scatter/gather/buffer data pointers are physical address
CAM_SNS_BUF_PHYS	Autosense data pointer is physical address
CAM_MSG_BUF_PHYS	Message buffer pointer is physical address
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBACK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

comp_func SCSI device driver I/O callback completion function. This pointer may be NULL if the CAM DISABLE CALLBACK bit is set in the CAM FLAGS field.

tag_action Type of action to perform for tagged requests:

CAM_SIMPLE_QTAG	Tag for simple queue
CAM_HEAD_QTAG	Tag for head of queue
CAM_ORDERED_QTAG	Tag for ordered queue

timeout Timeout for the request in seconds. A value of 0 (zero) indicates the default, which is five seconds.

Description

The `ccmn_tur` routine creates a SCSI I/O CCB for the TEST UNIT READY command and sends it to the XPT for processing. This routine may be called from interrupt context since it will not wait (sleep) for the command to complete.

The `ccmn_tur` routine calls the `ccmn_io_ccb_bld` routine to obtain a SCSI I/O CCB structure. The `ccmn_tur` routine calls the `ccmn_send_ccb` routine to send the SCSI I/O CCB to the XPT.

Return Value

CCB_SCSIIO pointer

See Also

`ccmn_io_ccb_bld`, `ccmn_send_ccb`

Name

`cdbg_CamFunction` – reports CAM XPT function codes

Syntax

```
char * cdbg_CamFunction(cam_function, report_format)
register u_char  cam_function;
int             report_format;
```

Arguments

cam_function The entry from the CAM XPT Function Code Table.

report_format The format of the message text returned, which can be `CDBG_BRIEF` or `CDBG_FULL`.

Description

The `cdbg_CamFunction` routine reports CAM XPT function codes. Program constants are defined to allow either the function code name only or a brief explanation to be printed. The XPT function codes are defined in the `/usr/sys/h/cam.h` file.

Return Value

Returns a character pointer to a text string.

Name

`cdbg_CamStatus` – decodes CAM CCB status codes

Syntax

```
char * cdbg_CamStatus(cam_status, report_format)
register u_char   cam_status;
int              report_format;
```

Arguments

cam_status The information from the CAM SCSI I/O CCB.

report_format The format of the message text returned, which can be `CDBG_BRIEF` or `CDBG_FULL`.

Description

The `cdbg_CamStatus` routine decodes CAM CCB status codes. Program constants are defined to allow either the status code name only or a brief explanation to be printed. The CAM status codes are defined in the `/usr/sys/h/cam.h` file.

Return Value

Returns a character pointer to a text string.

Name

`cdbg_DumpABORT` – dumps the contents of an ABORT CCB

Syntax

```
void cdbg_DumpABORT(ccb)  
register CCB_ABORT *ccb;
```

Arguments

ccb Pointer to the ABORT CCB.

Description

The `cdbg_DumpABORT` routine dumps the contents of an ABORT CCB. The ABORT CCB is defined in the `/usr/sys/h/cam.h` file.

Return Value

None

Name

void `cdbg_DumpBuffer` – dumps the contents of a data buffer in hexadecimal bytes

Syntax

```
void cdbg_DumpBuffer(buffer, size)  
char      *buffer;  
register int size;
```

Arguments

buffer SCSI/CAM peripheral buffer pointer.
size Size of buffer in bytes.

Description

The `cdbg_DumpBuffer` routine dumps the contents of a data buffer in hexadecimal bytes. The calling routine must display a header line. The format of the dump is 16 bytes per line.

Return Value

None

Name

`cdbg_DumpCCBHeader` – dumps the contents of a CAM Control Block (CCB) header structure

Syntax

```
void cdbg_DumpCCBHeader(ccb)
register CCB_HEADER *ccb;
```

Arguments

ccb Pointer to the CAM Control Block (CCB) header structure.

Description

The `cdbg_DumpCCBHeader` routine dumps the contents of a CAM Control Block (CCB) header structure. The CAM Control Block (CCB) header structure is defined in the `/usr/sys/h/cam.h` file.

Return Value

None

Name

`cdbg_DumpCCBHeaderFlags` – dumps the contents of the `cam_flags` member of a CAM Control Block (CCB) header structure

Syntax

```
void cdbg_DumpCCBHeaderFlags(cam_flags)
register u_long cam_flags;
```

Arguments

cam_flags The *cam_flags* flag names and their bit definitions are listed in the table that follows:

Flag Name	Description
<code>CAM_DIR_RESV</code>	Data direction (00: reserved)
<code>CAM_DIR_IN</code>	Data direction (01: DATA IN)
<code>CAM_DIR_OUT</code>	Data direction (10: DATA OUT)
<code>CAM_DIR_NONE</code>	Data direction (11: no data)
<code>CAM_DIS_AUTOSENSE</code>	Disable autosense feature
<code>CAM_SCATTER_VALID</code>	Scatter/gather list is valid
<code>CAM_DIS_CALLBACK</code>	Disable callback feature
<code>CAM_CDB_LINKED</code>	CCB contains linked CDB
<code>CAM_QUEUE_ENABLE</code>	SIM queue actions are enabled
<code>CAM_CDB_POINTER</code>	CDB field contains pointer
<code>CAM_DIS_DISCONNECT</code>	Disable disconnect
<code>CAM_INITIATE_SYNC</code>	Attempt synchronous data transfer, after issuing Synchronous Data Transfer Request (SDTR)
<code>CAM_DIS_SYNC</code>	Disable synchronous mode, go to asynchronous
<code>CAM_SIM_QHEAD</code>	Place CCB at head of SIM queue
<code>CAM_SIM_QFREEZE</code>	Return SIM queue to frozen state
<code>CAM_ENG_SYNC</code>	Flush residual bytes from HBA data engine before terminating I/O
<code>CAM_ENG_SGLIST</code>	Scatter/gather list is for HBA engine
<code>CAM_CDB_PHYS</code>	CDB pointer is physical address
<code>CAM_DATA_PHYS</code>	Scatter/gather/buffer data pointers are physical address
<code>CAM_SNS_BUF_PHYS</code>	Autosense data pointer is physical address
<code>CAM_MSG_BUF_PHYS</code>	Message buffer pointer is physical address

Flag Name	Description
CAM_NXT_CCB_PHYS	Next CCB pointer is physical address
CAM_CALLBCK_PHYS	Callback function pointer is physical address
CAM_DATAB_VALID	Data buffer valid
CAM_STATUS_VALID	Status buffer valid
CAM_MSGB_VALID	Message buffer valid
CAM_TGT_PHASE_MODE	SIM will run in phase mode
CAM_TGT_CCB_AVAIL	Target CCB available
CAM_DIS_AUTODISC	Disable autodisconnect
CAM_DIS_AUTOSRP	Disable autosave/restore pointers

Description

The `cdbg_DumpCCBHeaderFlags` routine dumps the contents of the `cam_flags` member of a CAM Control Block (CCB) header structure. The CAM Control Block (CCB) header structure is defined in the `/usr/sys/h/cam.h` file.

Return Value

None

Name

`cdbg_DumpInquiryData` – dumps the contents of an `ALL_INQ_DATA` structure

Syntax

```
void cdbg_DumpInquiryData(inquiry)
register ALL_INQ_DATA *inquiry;
```

Arguments

inquiry Pointer to the `ALL_INQ_DATA` structure.

Description

The `cdbg_DumpInquiryData` routine dumps the contents of an `ALL_INQ_DATA` structure. The `ALL_INQ_DATA` structure is defined in the `/usr/sys/h/scsi_all.h` file.

Return Value

None

Name

`cdbg_DumpPDRVws` – dumps the contents of a SCSI/CAM Peripheral Device Driver Working Set Structure

Syntax

```
void cdbg_DumpPDRVws(pws)  
register PDRV_WS *pws;
```

Arguments

pws Pointer to the SCSI/CAM Peripheral Device Driver Working Set Structure.

Description

The `cdbg_DumpPDRVws` routine dumps the contents of a SCSI/CAM Peripheral Device Driver Working Set Structure. The SCSI/CAM Peripheral Device Driver Working Set Structure is defined in the `/usr/sys/h/pdrv.h` file.

Return Value

None

Name

`cdbg_DumpSCSIIO` – dumps the contents of a SCSI I/O CCB

Syntax

```
void cdbg_DumpSCSIIO(ccb)  
register CCB_SCSIIO *ccb;
```

Arguments

ccb Pointer to the SCSI I/O CCB structure.

Description

The `cdbg_DumpSCSIIO` routine dumps the contents of a SCSI I/O CCB. The SCSI I/O CCB is defined in the `/usr/sys/h/cam.h` file.

Return Value

None

Name

`cdbg_DumpTERMIO` – dumps the contents of a TERMINATE I/O CCB

Syntax

```
void cdbg_DumpTERMIO(ccb)  
register CCB_TERMIO *ccb;
```

Arguments

ccb Pointer to the TERMINATE I/O CCB.

Description

The `cdbg_DumpTERMIO` routine dumps the contents of a TERMINATE I/O CCB. The TERMINATE I/O CCB is defined in the `/usr/sys/h/cam.h` file.

Return Value

None

Name

`cdbg_GetDeviceName` – returns a pointer to a character string describing the `dtype` member of an `ALL_INQ_DATA` structure

Syntax

```
char * cdbg_GetDeviceName(device_type)
register device_type;
```

Arguments

device_type SCSI device type value from Inquiry data.

Description

The `cdbg_GetDeviceName` routine returns a pointer to a character string describing the `dtype` member of an `ALL_INQ_DATA` structure. The `ALL_INQ_DATA` structure is defined in the `/usr/sys/h/scsi_all.h` file.

Return Value

Returns a character pointer to a text string.

Name

`cdbg_ScsiStatus` – reports SCSI status codes

Syntax

```
char * cdbg_ScsiStatus(scsi_status, report_format)
register u_char   scsi_status;
int             report_format;
```

Arguments

scsi_status The SCSI status from the CAM SCSI I/O CCB.

report_format

The format of the message text returned, which can be `CDBG_BRIEF` or `CDBG_FULL`.

Description

The `cdbg_ScsiStatus` routine reports SCSI status codes. Program constants are defined to allow either the status code name only or a brief explanation to be printed. The SCSI status codes are defined in the `/usr/sys/h/scsi_status.h` file.

Return Value

Returns a character pointer to a text string.

Name

`cdbg_SystemStatus` – reports system error codes

Syntax

```
char * cdbg_SystemStatus(errno)  
int errno;
```

Arguments

errno The error number.

Description

The `cdbg_SystemStatus` routine reports system error codes. The system error codes are defined in the `/usr/sys/h/errno.h` file.

Return Value

Returns a character pointer to a text string.

Name

`cgen_async` – handles notification of asynchronous events

Syntax

```
void cgen_async(opcode, path_id, target, lun, buf_ptr, data_cnt)
u_long opcode;
u_char path_id;
u_char target;
u_char lun;
caddr_t buf_ptr;
u_char data_cnt;
```

Arguments

<i>opcode</i>	SCSI asynchronous callback operation code.
<i>path_id</i>	SCSI target's bus controller number.
<i>target</i>	SCSI target's ID number.
<i>lun</i>	SCSI target's logical unit number.
<i>buf_ptr</i>	Buffer address for Asynchronous Event Notification (AEN).
<i>data_cnt</i>	Number of bytes the XPT had to transfer from the SIM's buffer or the limit of the SCSI/CAM peripheral buffer.

Description

The `cgen_async` routine handles notification of asynchronous events. The routine is called when an Asynchronous Event Notification (AEN), Bus Device Reset (BDR), or Bus Reset (BR) occurs. The routine sets the `CGEN_RESET_STATE` flag and clears the `CGEN_RESET_PEND_STATE` flag for BDRs and bus resets. The routine sets the `CGEN_UNIT_ATTEN_STATE` flag for AENs.

Return Value

None

Name

`cgen_attach` – called for each bus, target, and LUN after the `cgen_slave` routine returns SUCCESS

Syntax

```
cgen_attach(ui)  
struct uba_device *ui;
```

Arguments

ui Pointer to the device information contained in the `uba_device` structure.

Description

The `cgen_attach` routine is called for each bus, target, and LUN after the `cgen_slave` routine returns SUCCESS. The routine calls the `ccmn_open_unit` routine, passing the bus, target, and LUN information.

The `cgen_attach` routine calls the `ccmn_close_unit` routine to close the device. If a device of the specified type is found, the device identification string is printed. See the *Guide to Writing and Porting VMEbus and TURBOchannel Device Drivers* for more information.

Return Value

PROBE_FAILURE
PROBE_SUCCESS

See Also

`ccmn_close_unit`, `ccmn_open_unit`, `cgen_slave`

Name

`cgen_ccb_chkcond` – decodes the autosense data for a device driver

Syntax

```
cgen_ccb_chkcond(pdrv_dev, ccb)  
PDRV_DEVICE *pdrv_dev;  
CCB_SCSIIO *ccb;
```

Arguments

pdrv_dev Pointer to the CAM Peripheral Device Structure allocated for each SCSI device in the system.

ccb Pointer to the SCSI I/O CCB structure.

Description

The `cgen_ccb_chkcond` routine decodes the autosense data for a device driver and returns the appropriate status to the calling routine. The routine is called when a SCSI I/O CCB is returned with a CAM status of `CAM_REQ_CMP_ERR` (request completed with error) and a SCSI status of `SCSI_STAT_CHECK_CONDITION`. The routine also sets the appropriate flags in the Generic-Specific Structure.

Return Value

An integer indicating one of the following values:

Flag Name	Description
<code>CHK_CHK_NOSENSE</code>	Request sense did not complete without error. Sense buffer contents cannot be used to determine error condition.
<code>CHK_SENSE_NOT_VALID</code>	Valid bit in sense buffer is not set; sense data is useless.
<code>CHK_EOM</code>	End of media detected.
<code>CHK_FILEMARK</code>	Filemark detected.
<code>CHK_ILI</code>	Incorrect record length detected.
<code>CHK_NOSENSE_BITS</code>	Sense key equals no sense, but there are no bits set in byte 2 of sense data.
<code>CHK_SOFTERR</code>	Soft error detected; corrected by unit.
<code>CHK_NOT_READY</code>	Unit is not ready.
<code>CHK_HARDERR</code>	Unit has detected a hard error.
<code>CHK_UNIT_ATTEN</code>	Unit has either had media change or just powered up.

Flag Name	Description
CHK_DATA_PROT	Unit is write protected.
CHK_UNSUPPORTED	Sense key that is unsupported has been returned.
CHK_CMD_ABORTED	Unit aborted this command.
CHK_INFORMATIONAL	Unit is reporting informational message.
CHK_UNKNOWN_KEY	Unit has returned sense key that is not supported by SCSI 2 specification.

Name

`cgen_close` – closes the device

Syntax

```
cgen_close(dev, flags)  
dev_t dev;  
int flags;
```

Arguments

<i>dev</i>	The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.
<i>flags</i>	Flags set when a file is open.

Description

The `cgen_close` routine closes the device. The routine checks any device flags that are defined to see if action is required, such as rewind on close or release the unit. The `cgen_close` closes the device by calling the `ccmn_close_unit` routine.

Return Value

The `cgen_close` routine returns `GENERIC_SUCCESS` upon successful completion.

Diagnostics

The `cgen_close` routine fails under the following condition:

[ENOMEM]	Resource problem
----------	------------------

See Also

`ccmn_close_unit`

Name

`cgen_done` – the entry point for all nonread and nonwrite I/O callbacks

Syntax

```
cgen_done(ccb)  
CCB_SCSIIO *ccb;
```

Arguments

ccb Pointer to the SCSI I/O CCB structure.

Description

The `cgen_done` routine is the the entry point for all nonread and nonwrite I/O callbacks. The generic device driver uses two callback entry points, one for all nonuser I/O requests and one for all user I/O requests. The SCSI/CAM peripheral device driver writer can declare multiple callback routines for each type of command and can fill the CCB with the address of the appropriate callback routine.

This is a generic routine for all nonread and nonwrite SCSI I/O CCBs. The SCSI I/O CCB should not contain a pointer to a `buf` structure in the `cam_req_map` member of the structure. If it does, then a wake-up call is issued on the address of the CCB and the error is reported. If the SCSI I/O CCB does not contain a pointer to a `buf` structure in the `cam_req_map` member, then a wake-up call is issued on the address of the CCB and the CCB is removed from the active queues. No CCB completion status is checked because that is the responsibility of the routine that created the CCB and is waiting for completion status. When this routine is entered, context is on the interrupt stack and the driver cannot sleep waiting for an event.

Return Value

None

Name

`cgen_ioctl` – handles user process requests for specific actions other than read, write, open, or close for SCSI tape devices

Syntax

```
cgen_ioctl(dev, cmd, data, flags)  
dev_t dev;  
int cmd;  
caddt_t data;  
int flags;
```

Arguments

<i>dev</i>	The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.
<i>cmd</i>	The ioctl command, <code>UAGT_CAM_IO</code> .
<i>data</i>	Pointer to the kernel copy of the structure passed by the user process.
<i>flags</i>	User process flags.

Description

The `cgen_ioctl` routine handles user process requests for specific actions other than read, write, open, or close for SCSI tape devices. The routine currently issues a `DE_IOCTLGET` ioctl command for the device, which fills out the `devget` structure passed in, and then calls the `cgen_mode_sns` routine which issues a `SCSI_MODE_SENSE` to the device to determine the device's state. The routine then calls the `ccmn_rel_ccb` routine to release the CCB. When the call to `cgen_mode_sns` completes, the `cgen_ioctl` routine fills out the rest of the `devget` structure based on information contained in the mode sense data.

Return Value

[EINVAL] The device does not exist.

See Also

`ccmn_rel_ccb`, `cgen_mode_sns`, `ioctl(2)`

Name

`cgen_iodone` – the entry point for all read and write I/O callbacks

Syntax

```
cgen_iodone(ccb)  
CCB_SCSIIO *ccb;
```

Arguments

ccb Pointer to the SCSI I/O CCB structure.

Description

The `cgen_iodone` routine is the entry point for all read and write I/O callbacks. This is a generic routine for all read and write SCSI I/O CCBs. The SCSI I/O CCB should contain a pointer to a `buf` structure in the `cam_req_map` member of the structure. If it does not, then a wake-up call is issued on the address of the CCB and the error is reported. If the SCSI I/O CCB does contain a pointer to a `buf` structure in the `cam_req_map` member, as it should, then the completion status is decoded. Depending on the CCB's completion status, the correct fields within the `buf` structure are filled out.

The device's active queues may need to be aborted because of errors or because the device is a sequential access device and the transaction was an asynchronous request.

The CCB is removed from the active queues by a call to the `ccmn_rem_ccb` routine and is released back to the free CCB pool by a call to the `ccmn_rel_ccb` routine. When the `cgen_iodone` routine is entered, context is on the interrupt stack and the driver cannot sleep waiting for an event.

Return Value

None

See Also

`ccmn_rem_ccb`, `ccmn_rel_ccb`

Name

`cgen_minphys` – compares the `b_bcount` with the maximum transfer limit for the device

Syntax

```
cgen_minphys(bp)  
register struct buf *bp;
```

Arguments

bp A `buf` structure pointer, which is used for request mapping.

Description

The `cgen_minphys` routine compares the `b_bcount` with the maximum transfer limit for the device. The routine compares the `b_bcount` field in the `buf` structure with the maximum transfer limit for the device in the Device Descriptor Structure. The count is adjusted if it is greater than the limit.

Return Value

None

Name

`cgen_mode_sns` – issues a SCSI_MODE_SENSE command to the unit defined

Syntax

```
cgen_mode_sns(pdrv_dev, action, done, page_code, page_ctrl, sleep)  
PDRV_DEVICE *pdrv_dev;  
CGEN_ACTION *action;  
void (*done) ();  
u_char page_code;  
u_char page_ctrl;  
u_long sleep;
```

Arguments

- pdrv_dev* Pointer to the CAM Peripheral Device Structure allocated for each SCSI device in the system.
- action* Pointer to the caller's Generic Action Structure.
- done* The address of the completion routine to be called when the SCSI command completes.
- page_code* The user process's target page.
- page_ctrl* The page control settings field.
- sleep* Whether or not the GENERIC_SLEEP flag is set.

Description

The `cgen_mode_sns` routine issues a SCSI_MODE_SENSE command to the unit defined. The CGEN_ACTION structure is filled in for the calling routine based on the completion status of the CCB.

Return Value

NULL – command could not be issued
CCB_SCSIIO pointer

See Also

`ccmn_ccb_status`

Name

`cgen_open` – called by the kernel when a user process requests an open of the device

Syntax

```
cgen_open(dev, flags)  
dev_t dev;  
int flags;
```

Arguments

<i>dev</i>	The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.
<i>flags</i>	Flags set when a file is open.

Description

The `cgen_open` routine is called by the kernel when a user process requests an open of the device. The `cgen_open` routine calls the `ccmn_open_unit` routine, which manages the `SMP_LOCKS` and, if passed the exclusive use flag for SCSI devices, makes sure that no other process has opened the device. If the `ccmn_open_unit` routine returns success, the necessary data structures are allocated.

The `cgen_open` routine calls the `ccmn_sasy_ccb_bld` routine to register for asynchronous event notification for the device. The `cgen_open` routine then enters a `for` loop based on the power-up time specified in the Device Descriptor Structure for the device. Within the loop, calls are made to the `cgen_ready` routine, which calls the `ccmn_tur` routine to issue a TEST UNIT READY command to the device.

The `cgen_open` routine calls the `ccmn_rel_ccb` routine to release the CCB. The `cgen_open` routine checks certain state flags for the device to decide whether to send the initial SCSI mode select pages to the device. Depending on the setting of the state flags `CGEN_UNIT_ATTEN_STATE` and `CGEN_RESET_STATE`, the `cgen_open` routine calls the `cgen_open_sel` routine for each mode select page to be sent to the device. The `cgen_open_sel` routine fills out the Generic Action Structure based on the completion status of the CCB for each mode select page it sends.

Return Value

The `cgen_open` routine returns `GENERIC_SUCCESS` upon successful completion.

Diagnostics

The `cgen_open` routine fails under the following conditions:

[EBUSY]	The device is already opened and the exclusive use bit is set.
[ENOMEM]	Resource problem
[EINVAL]	The <i>scsi_dev_type</i> parameter does not match the device type in the Inquiry data returned by GET DEVICE TYPE CCB. The <i>scsi_dev_type</i> was not configured.
[ENXIO]	The device does not exist.
[EIO]	Check device conditions.

See Also

`ccmn_close_unit`, `ccmn_open_unit`, `ccmn_rel_ccb`,
`ccmn_sasy_ccb_bld`, `ccmn_tur`, `cgen_open_sel`, `cgen_close`

Name

`cgen_open_sel` – issues a SCSI_MODE_SELECT command to the SCSI device

Syntax

```
cgen_open_sel(pdrv_dev, action, ms_index, done, sleep)
PDRV_DEVICE *pdrv_dev;
CGEN_ACTION *action;
u_long ms_index;
void (*done) ();
u_long sleep;
```

Arguments

pdrv_dev Pointer to the CAM Peripheral Device Structure allocated for each SCSI device in the system.

action Pointer to the caller's Generic Action Structure.

ms_index An index into a page in the Mode Select Table that is pointed to in the Device Descriptor Structure.

done The address of the completion routine to be called when the SCSI command completes.

sleep Whether or not the GENERIC_SLEEP flag is set.

Description

The `cgen_open_sel` routine issues a SCSI_MODE_SELECT command to the SCSI device. The mode select data sent to the device is based on the data contained in the Mode Select Table Structure for the device, if one is defined. The CGEN_ACTION structure is filled in for the calling routine based on the completion status of the CCB.

The `cgen_open_sel` routine calls the `ccmn_mode_select` routine to create a SCSI I/O CCB and send it to the XPT for processing.

Return Value

None

See Also

`ccmn_ccb_status`, `ccmn_mode_select`

Name

`cgen_read` – handles synchronous read requests for user processes

Syntax

```
cgen_read(dev, uio)  
dev_t dev;  
struct uio *uio;
```

Arguments

<i>dev</i>	The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.
<i>uio</i>	Pointer to the device information contained in the <code>uio</code> I/O structure.

Description

The `cgen_read` routine handles synchronous read requests for user processes. It passes the user process requests to the `cgen_strategy` routine. The `cgen_read` routine calls the `ccmn_get_bp` routine to allocate a `buf` structure for the user process read request. When the I/O is complete, the `cgen_read` routine calls the `ccmn_rel_bp` routine to deallocate the `buf` structure.

Return Value

The `cgen_read` routine passes the return from the `physio` routine.

See Also

`ccmn_get_bp`, `ccmn_rel_bp`, `cgen_strategy`

Name

`cgen_ready` – issues a TEST UNIT READY command to the unit defined

Syntax

```
cgen_ready(pdrv_dev, action, done, sleep)  
PDRV_DEVICE *pdrv_dev;  
CGEN_ACTION *action;  
void (*done) ();  
u_long sleep;
```

Arguments

- | | |
|-----------------|--|
| <i>pdrv_dev</i> | Pointer to the CAM Peripheral Device Structure allocated for each SCSI device in the system. |
| <i>action</i> | Pointer to the caller's Generic Action Structure. |
| <i>done</i> | The address of the completion routine to be called when the SCSI command completes. |
| <i>sleep</i> | Whether or not the GENERIC_SLEEP flag is set. |

Description

The `cgen_ready` routine issues a TEST UNIT READY command to the unit defined. The routine calls the `ccmn_tur` routine to issue the TEST UNIT READY command and sleeps waiting for command status.

Return Value

None

See Also

`ccmn_tur`

Name

`cgen_slave` – called at system boot to initialize the lower levels

Syntax

```
cgen_slave(ui, reg)  
struct uba_device *ui;  
caddr_t reg;
```

Arguments

<i>ui</i>	Pointer to the device information contained in the <code>uba_device</code> structure.
<i>reg</i>	The virtual address of the controller.

Description

The `cgen_slave` routine is called at system boot to initialize the lower levels. The routine also checks the bounds for the unit number to ensure it is within the allowed range and sets the device-configured bit for the device at the specified bus, target, and LUN.

Return Value

```
PROBE_FAILURE  
PROBE_SUCCESS
```

See Also

`ccmn_close_unit`, `ccmn_init`, `ccmn_open_unit`

Name

`cgen_strategy` – handles all I/O requests for user processes

Syntax

```
cgen_strategy(bp)  
struct buf *bp;
```

Arguments

bp A `buf` structure pointer, which is used for request mapping.

Description

The `cgen_strategy` routine handles all I/O requests for user processes. It performs specific checks, depending on whether the request is synchronous or asynchronous and on the SCSI device type. The `cgen_strategy` routine calls the `ccmn_io_ccb_bld` routine to obtain an initialized SCSI I/O CCB and build either a read or a write command based on the information contained in the `buf` structure. The `cgen_strategy` routine then calls the `ccmn_send_ccb` to place the CCB on the active queue and send it to the XPT layer.

Return Value

[EINVAL]
[EIO]

See Also

`ccmn_io_ccb_bld`, `ccmn_send_ccb`, `cgen_iodone`

Name

`cgen_write` – handles synchronous write requests for user processes

Syntax

```
cgen_write(dev, uio)  
dev_t dev;  
struct uio *uio;
```

Arguments

<i>dev</i>	The major/minor device number pair that identifies the bus number, target ID, and LUN associated with this SCSI device.
<i>uio</i>	Pointer to the device information contained in the <code>uio</code> I/O structure.

Description

The `cgen_write` routine handles synchronous write requests for user processes. The routine passes the user process requests to the `cgen_strategy` routine. The `cgen_write` routine calls the `ccmn_get_bp` routine to allocate a `buf` structure for the user process write request. When the I/O is complete, the `cgen_write` routine calls the `ccmn_rel_bp` routine to deallocate the `buf` structure.

Return Value

The `cgen_write` routine passes the return from the `physio` routine.

See Also

`ccmn_get_bp`, `ccmn_rel_bp`, `cgen_strategy`

Name

`sim_action` – initiates an I/O request from a SCSI/CAM peripheral device driver

Syntax

```
sim_action(ccb_hdr)  
CCB_HEADER *ccb_hdr;
```

Arguments

ccb_hdr Address of the header for the ccb.

Description

The `sim_action` routine initiates an I/O request from a SCSI/CAM peripheral device driver. The routine is used by the XPT for immediate as well as for queued operations. When the operation completes, the SIM calls back directly to the peripheral driver using the CCB callback address, if callbacks are enabled and the operation is not to be carried out immediately.

The SIM determines whether an operation is to be carried out immediately or to be queued according to the function code of the CCB structure. All queued operations, such as “Execute SCSI I/O” (reads or writes), are placed by the SIM on a nexus-specific queue and return with a CAM status of `CAM_INPROG`.

Some immediate operations, as described in the American National Standard for Information Systems, *SCSI-2 Common Access Method: Transport and SCSI Interface Module*, working draft, X3T9.2/90-186, may not be executed immediately. However, all CCBs to be carried out immediately return to the XPT layer immediately. For example, the `ABORT` CCB command does not always complete synchronously with its call; however, the `CCB_ABORT` is returned to the XPT immediately. An `XPT_RESET_BUS` CCB returns to the XPT following the reset of the bus.

Return Value

`CAM_REQ_INPROG` for queued commands
`CAM_REQ_CMP` for immediate commands
A valid CAM error value

See Also

American National Standard for Information Systems, *SCSI-2 Common Access Method: Transport and SCSI Interface Module*, working draft, X3T9.2/90-186

Name

`sim_init` – initializes the SIM

Syntax

```
sim_init(pathid)  
u_long   pathid;
```

Arguments

pathid SCSI target's bus controller number.

Description

The `sim_init` routine initializes the SIM. The SIM clears all its queues and releases all allocated resources in response to this call. This routine is called using the function address contained in the `CAM_SIM_ENTRY` structure. This routine can be called at any time; the SIM layer must ensure that data integrity is maintained.

Return Value

`CAM_REQ_CMP`

Name

`uagt_close` – handles the close of the User Agent driver

Syntax

```
uagt_close(dev, flag)  
dev_t dev;  
int flag;
```

Arguments

dev The major/minor device number pair that identifies the User Agent.
flag Unused.

Description

The `uagt_close` routine handles the close of the User Agent driver. For the last close operation for the driver, if any queues are frozen, a RELEASE SIM QUEUE CCB is sent to the XPT layer for each frozen queue detected by the User Agent.

Return Value

None

See Also

`uagt_open`, `xpt_ccb_free`

Name

`uagt_ioctl` – handles the `ioctl` system call for the User Agent driver

Syntax

```
uagt_ioctl(dev, cmd, data, flag)  
dev_t dev;  
register int cmd;  
caddr_t data;  
int flag;
```

Arguments

dev The major/minor device number pair that identifies the User Agent.

cmd The `ioctl` command, `UAGT_CAM_IO`.

data Pointer to the `UAGT_CAM_CCB` structure passed by the user process.

flag Unused.

Description

The `uagt_ioctl` routine handles the `ioctl` system call for the User Agent driver. The `ioctl` commands supported are: `DEVIOCGET`, to obtain the User Agent driver's SCSI device status; `UAGT_CAM_IO`, the `ioctl` define for calls to the User Agent driver; `UAGT_CAM_SINGLE_SCAN`, to scan a bus, target, and LUN; and `UAGT_CAM_FULL_SCAN`, to scan a bus.

For SCSI I/O CCB requests, the user data area is locked before passing the CCB to the XPT. The User Agent sleeps waiting for the I/O to complete and issues a `ABORT CCB` if a signal is caught while sleeping.

Return Value

The `uagt_ioctl` routine returns a value of 0 (zero) upon successful completion.

Diagnostics

The `uagt_ioctl` routine fails under the following conditions:

[EFAULT]	Copy to or from user space failed.
[EINVAL]	An unsupported <code>cmd</code> value was passed to <code>ioctl()</code> . The CCB copied from the user process contained an invalid XPT function code, or an invalid target or LUN.
[EBUSY]	The maximum allowable number of User Agent requests has been reached (<code>MAX_UAGT_REQ</code>).

See Also

`ioctl(2)`, `xpt_action`, `xpt_ccb_alloc`

Name

`uagt_open` – handles the open of the User Agent driver

Syntax

```
uagt_open(dev, flag)  
dev_t    dev;  
int     flag;
```

Arguments

dev The major/minor device number pair that identifies the User Agent.
flag Unused.

Description

The `uagt_open` routine handles the open of the User Agent driver.

The character device special file name used for the open is `/dev/cam`.

Return Value

The `uagt_open` routine returns a value of 0 (zero) upon successful completion.

See Also

`uagt_close`, `xpt_init`

Name

`xpt_action` – calls the appropriate XPT/SIM routine

Syntax

```
long xpt_action (ch)  
CCB_HEADER * ch;
```

Arguments

ch Specifies a pointer to the CAM Control Block (CCB) on which to act.

Description

The `xpt_action` routine calls the appropriate XPT/SIM routine. The routine routes the specified CCB to the appropriate SIM module or to the Configuration driver, depending on the CCB type and on the path ID specified in the CCB. Vendor-unique CCBs are also supported. Those CCBs are passed to the appropriate SIM module according to the path ID specified in the CCB.

Return Value

Upon completion, the `xpt_action` routine returns a valid CAM status value.

See Also

`xpt_ccb_alloc`, `xpt_ccb_free`

Name

`xpt_ccb_alloc` – allocates a CAM Control Block (CCB)

Syntax

```
CCB_HEADER *xpt_ccb_alloc ()
```

Arguments

None

Description

The `xpt_ccb_alloc` routine allocates a CAM Control Block (CCB) for use by a SCSI/CAM peripheral device driver. The `xpt_ccb_alloc` routine returns a pointer to a preallocated data buffer large enough to contain any CCB structure. The peripheral device driver uses this structure for its XPT/SIM requests. The routine also ensures that the SIM private data space and peripheral device driver pointer, `cam_pdrv_ptr`, are set up.

Return Value

Upon successful completion, `xpt_ccb_alloc` returns a pointer to a preallocated data buffer. The data buffer returned by `xpt_ccb_alloc` is initialized to be a SCSI I/O CCB. For other types of CCBs, some fields may have to be reinitialized for the specific CCB.

See Also

`xpt_ccb_free`

Name

`xpt_ccb_free` – frees a previously allocated CCB

Syntax

```
long xpt_ccb_free(ch)
CCB_HEADER *ch;
```

Arguments

ch Specifies a pointer to the CCB to be freed. This CCB was allocated in a call to `xpt_ccb_alloc`.

Description

The `xpt_ccb_free` routine frees a previously allocated CCB. The routine returns a CCB, previously allocated by a peripheral device driver, to the CCB pool.

Return Value

`XPT_CCB_INVALID` or `CAM_SUCCESS`

See Also

`xpt_ccb_alloc`

Name

xpt_init – validates the initialized state of the CAM subsystem

Syntax

```
long xpt_init()
```

Arguments

None

Description

The `xpt_init` routine validates the initialized state of the CAM subsystem. The routine initializes all global and internal variables used by the CAM subsystem through a call to the Configuration driver. Peripheral device drivers must call this routine either during or prior to their own initialization. The `xpt_init` routine simply returns to the calling SCSI/CAM peripheral device driver if the CAM subsystem was previously initialized.

Return Value

Upon completion, `xpt_init` returns one of the following values:

Return Value	Meaning
CAM_SUCCESS	The <code>xpt_init</code> routine initialized the CAM subsystem.
CAM_FAILURE	The <code>xpt_init</code> routine did not initialize the CAM subsystem and the CAM subsystem cannot be used.

A

ABORT CCB (CAM), 5–6

B

BUS DEVICE RESET CCB (CAM), 5–6

BUS RESET CCB (CAM), 5–6

C

CALLD macro (CAM), 10–1

CAM

common structures and routines, 1–4

Configuration driver structures and routines, 1–5

generic structures and routines, 1–5

overview, 1–1

SCSI CDROM/AUDIO device structures and commands, 1–5

SCSI disk device structures and routines, 1–5

SCSI tape device structures and routines, 1–5

SCSI/CAM peripheral drivers, 1–4

SCSI/CAM special I/O interface, 1–5

SIM SCSI Interface layer, 1–6

User Agent driver structures and routines, 1–3

XPT transport layer, 1–6

CAM common close unit routine

See also CAM open unit routine

CAM common data structures

introduction, 3–1

CAM common macros

introduction, 3–5

CAM common routines

introduction, 3–1, 3–6

CAM Control Block (CAM), 5–1

CAM Control Block (CCB) header structure (CAM), 5–2

CAM Control Blocks

described, 5–1t

CAM debug macros

described, 10–1

introduction, 10–1

CAM debug routines

introduction, 10–1

CAM equipment device table (CAM), 6–2

CAM error handling

CAM_ERROR macro, 9–1

introduction, 9–1

CAM error-logging data structures

introduction, 9–2

CAM generic maximum transfer limit routine, 4–8, C–79

CAM identification macros

described, 3–5t

CAM locking macros

described, 3–5t

CAM programmer-defined routines

introduction, 11–1

CAM programmer-defined structures

introduction, 11–1

samples, 11–11

CAM routines

cam_logger, C–2, 9–4

ccfg_action, 6–5

ccfg_attach, C–3, 6–5

ccfg_edtscan, C–4, 6–5

ccfg_slave, C–5, 6–5

ccmn_abort_ccb_bld, 3–12, C–9

ccmn_abort_que, 3–9, C–10

CAM routines (cont.)

ccmn_bdr_ccb_bld, 3-12, C-12
ccmn_br_ccb_bld, 3-12, C-14
ccmn_ccb_status, 3-13, C-15
ccmn_ccbwait, 3-15, C-17
ccmn_close_unit, 3-8, C-18
ccmn_DoSpecialCmd, 3-15, C-6
ccmn_errlog, 3-15, C-19
ccmn_gdev_ccb_bld, 3-11, C-21
ccmn_get_bp, 3-14, C-22
ccmn_get_ccb, 3-10, C-24
ccmn_get_dbuf, 3-14, C-25
ccmn_init, 3-8, C-26
ccmn_io_ccb_bld, 3-11, C-29
ccmn_mode_select, 3-13, C-31
ccmn_open_unit, 3-8, C-33
ccmn_pinq_ccb_bld, 3-11, C-36
ccmn_rel_bp, 3-14, C-37
ccmn_rel_ccb, 3-10, C-38
ccmn_rel_dbuf, 3-14, C-39
ccmn_rem_ccb, 3-9, C-40
ccmn_rsq_ccb_bld, 3-11, C-42
ccmn_sasy_ccb_bld, 3-11, C-44
ccmn_sdev_ccb_bld, 3-11, C-46
ccmn_send_ccb, 3-9, C-47
ccmn_start_unit, 3-13, C-49
ccmn_SysSpecialCmd, 3-15, C-7
ccmn_term_ccb_bld, 3-12, C-52
ccmn_term_que, 3-9, C-53
ccmn_tur, 3-13, C-55
cdbg_CamFunction, 10-4, C-57
cdbg_CamStatus, 10-4, C-58
cdbg_DumpABORT, 10-6, C-59
cdbg_DumpBuffer, 10-6, C-60
cdbg_DumpCCBHeader, 10-5, C-61
cdbg_DumpCCBHeaderFlags, 10-5, C-63
cdbg_DumpInquiryData, 10-6, C-64
cdbg_DumpPDRVws, 10-6, C-65
cdbg_DumpSCSIIO, 10-6, C-66
cdbg_DumpTERMIO, 10-6, C-67
cdbg_GetDeviceName, 10-6, C-68
cdbg_ScsiStatus, 10-5, C-69
cdbg_SystemStatus, 10-5, C-70
cgen_async, 4-7, C-71

CAM routines (cont.)

cgen_attach, 4-8, C-72
cgen_ccb_chkcond, 4-7, C-73
cgen_close, 4-5, C-75
cgen_done, 4-7, C-76
cgen_ioctl, 4-6, C-77
cgen_iodone, 4-7, C-78
cgen_minphys, 4-8, C-79
cgen_mode_sns, 4-9, C-80
cgen_open, 4-5, C-81
cgen_open_sel, 4-9, C-83
cgen_read, 4-5, C-84
cgen_ready, 4-8, C-85
cgen_slave, 4-8, C-86
cgen_strategy, 4-6, C-87
cgen_write, 4-6, C-88
SCSI/CAM special I/O interface, 12-1
sim_action, 8-2, C-89
sim_init, 8-2, C-90
uagt_close, 2-4, C-91
uagt_ioctl, 2-5, C-92
uagt_open, 2-4, C-94
xpt_action, C-95, 7-1
xpt_ccb_free, C-97, 7-1
xpt_init, C-98, 7-2

CAM SIM callback handling

description, 8-1

CAM SIM routines

introduction, 8-2

CAM structures

ABORT CCB, 5-6
BUS DEVICE RESET CCB, 5-6
BUS RESET CCB, 5-6
CAM Control Block (CCB) header structure, 5-2,
5-6
CAM Control Block structures, 5-1
CAM_ERR_ENTRY, 9-2
CAM_ERR_HDR, 9-3
CAM_PERIPHERAL_DRIVER, 6-3
CCB_ABORT, 5-6
CCB_GETDEV, 5-7
CCB_HEADER, 5-2
CCB_PATHINQ, 5-7
CCB_RELSIM, 5-5

CAM structures (cont.)

- CCB_RESETDEV, 5–6
- CCB_SCSIIO, 5–4
- CCB_SETASYNC, 5–5
- CCB_SETDEV, 5–7
- CCFG_CTRL, 6–2
- cd_address, 11–17
- CDB_UN, 5–5
- CDROM_PLAY_AUDIO and
 - CDROM_PLAY_VAUDIO commands, 11–18
- CDROM_PLAY_AUDIO_MSF and
 - CDROM_PLAY_MSF commands, 11–18
- CDROM_PLAY_AUDIO_TI command, 11–19
- CDROM_PLAY_AUDIO_TR command, 11–20
- CDROM_PLAYBACK_CONTROL and
 - CDROM_PLAYBACK_STATUS commands, 11–27
- CDROM_PLAYBACK_CONTROL command, 11–28
- CDROM_PLAYBACK_STATUS command, 11–28
- CDROM_PLAY_TRACK command, 11–27
- CDROM_READ_HEADER command, 11–26
- CDROM_READ_SUBCHANNEL command, 11–22
- CDROM_TOC_ENTRYS command, 11–21
- CDROM_TOC_HEADER command, 11–20
- CGEN_ACTION, 4–3
- CGEN_SPECIFIC, 4–2
- Density Table Structure, 11–8
- DENSITY_TBL, 3–4, 11–8
- DEV_DESC, 11–5
- Device Descriptor Structure, 11–5
- DISK_SPECIFIC, 11–14
- EDT, 6–2
- GET DEVICE TYPE CCB, 5–7
- MODESEL_TBL, 3–3, 11–9
- PATH INQUIRY CCB, 5–7
- PDRV_DEVICE, 3–2, 11–2
- PDRV_WS, 3–4
- Peripheral Device Unit Table, 3–1, 11–1, 11–2
- RELEASE SIM QUEUE CCB, 5–5
- SCSI I/O CCB, 5–4

CAM structures (cont.)

- SCSI/CAM Special Command Table, 12–3
- SCSI/CAM Special Command Table example, 12–7
- SET ASYNCHRONOUS CALLBACK CCB, 5–5
- SET DEVICE TYPE CCB, 5–7
- Special I/O Argument Structure, 12–8
- Special I/O Control Commands Structure, 12–16, 12–17
- SPECIAL_HEADER, 12–3
- TAPE_SPECIFIC, 11–11
- TERMINATE I/O CCB, 5–6
- UAGT_CAM_CCB, 2–2
- UAGT_CAM_SCAN, 2–4

CAM User Agent driver

- error handling, 2–1
- introduction, 2–1

CAM XPT routines

- introduction, 7–1

CAM_ERROR macro (CAM)

- defined, 9–1
- described, 9–1

cam_logger (CAM), C–2, 9–4

CCB_ABORT structure (CAM), 5–6

CCB_GETDEV structure (CAM), 5–7

CCB_HEADER structure (CAM), 5–2

CCB_PATHINQ structure (CAM), 5–7

CCB_RELSIM structure (CAM), 5–5

CCB_RESETBUS structure (CAM), 5–6

CCB_RESETDEV structure (CAM), 5–6

CCB_SCSIIO structure (CAM), 5–4

CCB_SETASYNC structure (CAM), 5–5

CCB_SETDEV structure (CAM), 5–7

CCB_TERMIO structure (CAM), 5–6

cfg_action (CAM), 6–5

cfg_attach (CAM), C–3, 6–5

cfg_edtscan (CAM), C–4, 6–5

cfg_slave (CAM), C–5, 6–5

ccmn_abort_ccb_bld (CAM), 3–12, C–9

ccmn_abort_que (CAM), 3–9, C–10

ccmn_bdr_ccb_bld (CAM), 3–12, C–12

ccmn_br_ccb_bld (CAM), 3–12, C–14

ccmn_ccb_status (CAM), 3–13, C–15

ccmn_ccbwait (CAM), 3–15, C–17
ccmn_close_unit (CAM), 3–8, C–18
ccmn_DoSpecialCmd (CAM), 3–15, C–6
ccmn_errlog (CAM), 3–15, C–19
ccmn_gdev_ccb_bld (CAM), 3–11, C–21
ccmn_get_bp (CAM), 3–14, C–22
ccmn_get_ccb (CAM), 3–10, C–24
ccmn_get_dbuf (CAM), 3–14, C–25
ccmn_init (CAM), 3–8, C–26
ccmn_io_ccb_bld (CAM), 3–11, C–29
ccmn_mode_select (CAM), 3–13, C–31
ccmn_open_unit (CAM), 3–8, C–33
ccmn_pinq_ccb_bld (CAM), 3–11, C–36
ccmn_rel_bp (CAM), 3–14, C–37
ccmn_rel_ccb (CAM), 3–10, C–38
ccmn_rel_dbuf (CAM), 3–14, C–39
ccmn_rem_ccb (CAM), 3–9, C–40
ccmn_rsqs_ccb_bld (CAM), 3–11, C–42
ccmn_sasy_ccb_bld (CAM), 3–11, C–44
ccmn_sdev_ccb_bld (CAM), 3–11, C–46
ccmn_send_ccb (CAM), 3–9, C–47
ccmn_start_unit (CAM), 3–13, C–49
ccmn_SysSpecialCmd (CAM), 3–15, C–7
ccmn_term_ccb_bld (CAM), 3–12, C–52
ccmn_term_que (CAM), 3–9, C–53
ccmn_tur (CAM), 3–13, C–55
cdbg_CamFunction (CAM), 10–4, C–57
cdbg_CamStatus (CAM), 10–4, C–58
cdbg_DumpABORT (CAM), 10–6, C–59
cdbg_DumpBuffer (CAM), 10–6, C–60
cdbg_DumpCCBHeader (CAM), 10–5, C–61
cdbg_DumpCCBHeaderFlags (CAM), 10–5, C–63
cdbg_DumpInquiryData (CAM), 10–6, C–64
cdbg_DumpPDRVws (CAM), 10–6, C–65
cdbg_DumpSCSIIO (CAM), 10–6, C–66
cdbg_DumpTERMIO (CAM), 10–6, C–67
cdbg_GetDeviceName (CAM), 10–6, C–68
cdbg_ScsiStatus (CAM), 10–5, C–69
cdbg_SystemStatus (CAM), 10–5, C–70
CDB_UN structure (CAM), 5–5
CGEN_ACTION (CAM), 4–3
cgen_async (CAM), 4–7, C–71
cgen_attach (CAM), 4–8, C–72
cgen_ccb_chkcond (CAM), 4–7, C–73
cgen_close (CAM), 4–5, C–75
cgen_done (CAM), 4–7, C–76
cgen_ioctl (CAM), 4–6, C–77
cgen_iodone (CAM), 4–7, C–78
cgen_minphys (CAM), 4–8, C–79
cgen_mode_sns (CAM), 4–9, C–80
cgen_open (CAM), 4–5, C–81
cgen_open_sel (CAM), 4–9, C–83
cgen_read (CAM), 4–5, C–84
cgen_ready (CAM), 4–8, C–85
cgen_slave (CAM), 4–8, C–86
CGEN_SPECIFIC (CAM), 4–2
cgen_strategy (CAM), 4–6, C–87
cgen_write (CAM), 4–6, C–88
common abort CCB routine (CAM), 3–9, 3–12, C–9, C–10
common bus-device-reset CCB routine (CAM), 3–12, C–12
common bus-reset CCB routine (CAM), 3–12, C–14
common close unit routine (CAM), 3–8, C–18
common create SCSI I/O CCB for ccmn_mode_select command (CAM), 3–13, C–31
common create SCSI I/O CCB for START UNIT command (CAM), 3–13, C–49
common create SCSI I/O CCB for TEST UNIT READY command (CAM), 3–13, C–55
common create SCSI I/O CCB routine (CAM), 3–11, C–29
common data structures (CAM) introduction, 3–1
common deallocate buf structure routine (CAM), 3–14, C–37
common deallocate data buffer routine (CAM), 3–14, C–39
common error logging routine (CAM), 3–15, C–19
common get buf structure routine (CAM), 3–14, C–22
common get CCB routine (CAM), 3–10, C–24
common get data buffer routine (CAM), 3–14, C–25
common get-device-type CCB routine (CAM), 3–11, C–21

common initialization routine (CAM), 3–8, C–26

common I/O CCB wait routine (CAM), 3–15, C–17

common open unit routine (CAM), 3–8, C–33
See also common close unit routine (CAM)

common path-inquiry CCB routine (CAM), 3–11, C–36

common release CCB routine (CAM), 3–10, C–38

common release-SIM-queue CCB routine (CAM), 3–11, C–42

common remove CCB routine (CAM), 3–9, C–40

common routine to assign generic status categories (CAM), 3–13, C–15

common routines (CAM)
 introduction, 3–1

common send CCB routine (CAM), 3–9, C–47

common set-asynchronous-callback CCB routine (CAM), 3–11, C–44

common set-device-type CCB routine (CAM), 3–11, C–46

common special command interface routine (CAM), 3–15, C–6, C–7

common terminate CCB routine (CAM), 3–9, C–53

common terminate I/O CCB routine (CAM), 3–12, C–52

Configuration driver (CAM)
 and XPT routines, 6–1

Configuration driver configuraton file (CAM), 6–3
 sample entry, 6–4

Configuration driver control structure (CAM), 6–2

Configuration driver data structures (CAM)
 CAM_PERIPHERAL_DRIVER, 6–3
 CCFG_CTRL, 6–2
 EDT, 6–2
 introduction, 6–1

Configuration driver routines
 entry-point routine introduction, 6–4

Configuration driver routines (CAM)
 ccfg_action, 6–5
 ccfg_attach, C–3, 6–5
 ccfg_edtscan, C–4, 6–5
 ccfg_slave, C–5, 6–5
 description, 6–1
 introduction, 6–1

D

debug macros (CAM)
 introduction, 10–1

debug routines (CAM)
 introduction, 10–1

Density Table Structure (CAM), 3–4

Density Table Structure structure (CAM), 11–8
 sample entry, 11–9

DENSITY_TBL structure (CAM), 3–4, 11–8

DEV_DESC structure (CAM), 11–5

Device Descriptor Structure structure (CAM), 11–5

device driver
 summary of device driver routines, B–1t

DISK_SPECIFIC structure (CAM), 11–14

E

Error Entry Structure (CAM), 9–2

error handling (CAM)
 CAM_ERROR macro, 9–1
 introduction, 9–1

Error Header Structure (CAM), 9–3

error-logging data structures (CAM)
 CAM_ERR_ENTRY, 9–2
 CAM_ERR_HDR, 9–3
 introduction, 9–2

G

generic action data structure (CAM), 4–3

generic asynchronous event handling routine (CAM), 4–7, C–71

generic attach routine (CAM), 4–8, C–72

generic close unit routine (CAM), 4–5, C–75
See also generic open unit routine (CAM)

generic completion routine (CAM), 4–7, C–76

generic data structures (CAM)
 introduction, 4–2

generic I/O completion routine (CAM), 4–7, C–78

generic ioctl command routine (CAM), 4–6, C–77

generic open unit routine (CAM), 4–5, C–81
See also generic close unit routine (CAM)

generic read routine (CAM), 4–5, C–84
See also generic write routine (CAM)

generic routines (CAM)

- error handling, 4-2
- implementing ioctl commands, 4-1
- introduction, 4-1
- kernel entry points, 4-2
- rules, 4-1

generic slave routine (CAM), 4-8, C-86

generic strategy routine (CAM), 4-6, C-87

generic write routine (CAM), 4-6, C-88

See also generic read routine (CAM)

generic-specific data structure (CAM), 4-2

GET DEVICE TYPE CCB (CAM), 5-7

H

header files

- header files Used by device drivers, A-1t
- header files Used by SCSI/CAM device drivers, A-3t

M

Mode Select Table Structure (CAM), 3-3, 11-9

Mode Select Table Structure structure (CAM)

- sample entry, 11-11

MODESEL_TBL structure (CAM), 3-3, 11-9

P

PATH INQUIRY CCB (CAM), 5-7

PDRV_DEVICE structure (CAM), 3-2, 11-2

PDRV_WS structure (CAM), 3-4

Peripheral Device Unit Table structure (CAM), 3-1, 11-1, 11-2

PRINTD macro (CAM), 10-1

programmer-defined routines (CAM)

- introduction, 11-1

programmer-defined structures (CAM)

- introduction, 11-1
- samples, 11-11

R

RELEASE SIM QUEUE CCB (CAM), 5-5

routine to dump a CCB_ABORT (CAM), 10-6, C-59

routine to dump a CCB_HEADER (CAM), 10-5, C-61

routine to dump a CCB_SCSIIO (CAM), 10-6, C-66

routine to dump a CCB_TERMIO (CAM), 10-6, C-67

routine to dump a data buffer (CAM), 10-6, C-60

routine to dump a PDRV_WS (CAM), 10-6, C-65

routine to dump an ALL_INQ_DATA structure (CAM), 10-6, C-64

routine to dump cam_flags from a CCB_HEADER (CAM), 10-5, C-63

routine to dump the device type (CAM), 10-6, C-68

routine to fill in an error log packet (CAM), C-2, 9-4

routine to print CAM status codes (CAM), 10-4, C-58

routine to print SCSI status codes (CAM), 10-5, C-69

routine to print system error codes (CAM), 10-5, C-70

routine to print XPT function codes (CAM), 10-4, C-57

S

SCSI CDROM/AUDIO device cd_address structure (CAM), 11-17

SCSI CDROM/AUDIO device CDROM_PLAY_AUDIO and CDROM_PLAY_VAUDIO commands structure (CAM), 11-18

SCSI CDROM/AUDIO device CDROM_PLAY_AUDIO_MSF and CDROM_PLAY_MSF commands structure (CAM), 11-18

SCSI CDROM/AUDIO device CDROM_PLAY_AUDIO_TI command

- structure (CAM)
- SCSI CDROM/AUDIO device**
 - CDROM_PLAY_AUDIO_TI command**
 - structure (CAM) (cont.)
- Book Title (cont.)
 - 11–19 (cont.)
 - (cont.)
 - (cont.) , 11–19
- SCSI CDROM/AUDIO device**
 - CDROM_PLAY_AUDIO_TR command**
 - structure (CAM), 11–20
- SCSI CDROM/AUDIO device**
 - CDROM_PLAYBACK_CONTROL and**
 - CDROM_PLAYBACK_STATUS commands**
 - structures (CAM), 11–27
- SCSI CDROM/AUDIO device**
 - CDROM_PLAYBACK_CONTROL**
 - command structure (CAM), 11–28
- SCSI CDROM/AUDIO device**
 - CDROM_PLAYBACK_STATUS command**
 - structure (CAM), 11–28
- SCSI CDROM/AUDIO device**
 - CDROM_PLAY_TRACK command**
 - structure (CAM), 11–27
- SCSI CDROM/AUDIO device**
 - CDROM_READ_HEADER command**
 - structures (CAM), 11–26
- SCSI CDROM/AUDIO device**
 - CDROM_READ_SUBCHANNEL command**
 - structure (CAM), 11–22
- SCSI CDROM/AUDIO device**
 - CDROM_TOC_ENTRYS command**
 - structures (CAM), 11–21
- SCSI CDROM/AUDIO device**
 - CDROM_TOC_HEADER command**
 - structure (CAM), 11–20
- SCSI CDROM/AUDIO device Track Address**
 - structure (CAM), 11–17
- SCSI device**
 - attaching, 4–8, C–72
 - closing, 2–4, 3–8, 4–5, C–18, C–75, C–91
 - opening, 2–4, 3–8, 4–5, C–33, C–81, C–94
 - reading, 4–5, C–84
 - writing, 4–6, C–88
- SCSI I/O CCB (CAM), 5–4**
- SCSI/CAM peripheral driver configuration**
 - structure (CAM), 6–3
- SCSI/CAM peripheral driver configuration table (CAM)**
 - adding entries, 6–3
 - sample entry, 6–4
- SCSI/CAM Special Command Table (CAM), 12–3**
 - entries, 12–5
- SCSI/CAM Special Command Table (CAM)**
 - example, 12–7
- SCSI/CAM special I/O interface (CAM), 12–1**
 - See also* generic routines (CAM)
 - application program access, 12–1
 - command table entries, 12–5
 - command table example, 12–7
 - command tables, 12–3
 - control command, 12–16, 12–17
 - device driver access, 12–2
 - introduction, 12–1
 - I/O control command processing, 12–8
 - sample code, 12–20, 12–22
 - sample function, 12–14, 12–15, 12–19
 - SCSI/CAM Special Command Table, 12–3
 - SCSI/CAM Special Command Table entries, 12–5
 - SCSI/CAM Special Command Table example, 12–7
 - Special I/O Control Commands Structure, 12–16, 12–17
 - SPECIAL_HEADER, 12–3
- SET ASYNCHRONOUS CALLBACK CCB (CAM), 5–5**
- SET DEVICE TYPE CCB (CAM), 5–7**
- SIM action routine (CAM), 8–2, C–89**
- SIM initialization routine (CAM), 8–2, C–90**
- SIM routines (CAM)**
 - introduction, 8–1
- sim_action (CAM), 8–2, C–89**
- sim_init (CAM), 8–2, C–90**
- Special I/O Argument Structure (CAM), 12–8**
- Special I/O Control Commands Structure (CAM), 12–16, 12–17**
- SPECIAL_HEADER (CAM), 12–3**

T

TAPE_SPECIFIC structure (CAM), 11–11

TERMINATE I/O CCB (CAM), 5–6

U

UAGT_CAM_CCB (CAM), 2–2

UAGT_CAM_SCAN (CAM), 2–4

uagt_close (CAM), 2–4, C–91

uagt_ioctl (CAM), 2–5, C–92

uagt_open routine (CAM), 2–4, C–94

USCA (CAM)

common structures and routines, 1–4

Configuration driver structures and routines, 1–5

generic structures and routines, 1–5

overview, 1–1

SCSI CDROM/AUDIO device structures and
commands, 1–5

SCSI disk device structures and routines, 1–5

SCSI tape device structures and routines, 1–5

SCSI/CAM peripheral drivers, 1–4

SCSI/CAM special I/O interface, 1–5

SIM SCSI Interface layer, 1–6

User Agent driver structures and routines, 1–3

XPT transport layer, 1–6

User Agent close routine

See also User Agent open routine

User Agent close routine (CAM), 2–4, C–91

User Agent driver (CAM)

error handling, 2–1

introduction, 2–1

sample inquiry programs, 2–5

sample programs, 2–5

sample scanner programs, 2–15

User Agent ioctl routine (CAM), 2–5, C–92

User Agent open routine

See also User Agent close routine

X

XPT free CCB routine (CAM), C–97, 7–1

XPT initialization routine (CAM), C–98, 7–2

XPT routines

xpt_ccb_alloc, C–96, 7–1

XPT routines (CAM)

introduction, 7–1

XPT routing routine (CAM), C–95, 7–1

xpt_action (CAM), C–95, 7–1

xpt_ccb_alloc, C–96, 7–1

xpt_ccb_free (CAM), C–97, 7–1

xpt_init (CAM), C–98, 7–2

How to Order Additional Documentation

Technical Support

If you need help deciding which documentation best meets your needs, call 800-343-4040 before placing your electronic, telephone, or direct mail order.

Electronic Orders

To place an order at the Electronic Store, dial 800-234-1998 using a 1200- or 2400-baud modem from anywhere in the USA, Canada, or Puerto Rico. If you need assistance using the Electronic Store, call 800-DIGITAL (800-344-4825).

Telephone and Direct Mail Orders

Your Location	Call	Contact
Continental USA, Alaska, or Hawaii	800-DIGITAL	Digital Equipment Corporation P.O. Box CS2008 Nashua, New Hampshire 03061
Puerto Rico	809-754-7575	Local Digital Subsidiary
Canada	800-267-6215	Digital Equipment of Canada Attn: DECdirect Operations KAO2/2 P.O. Box 13000 100 Herzberg Road Kanata, Ontario, Canada K2K 2A6
International	—————	Local Digital subsidiary or approved distributor
Internal*	—————	SSB Order Processing - WMO/E15 <i>or</i> Software Supply Business Digital Equipment Corporation Westminster, Massachusetts 01473

* For internal orders, you must submit an Internal Software Order Form (EN-01740-07).

Reader's Comments

ULTRIX SCSI/CAM Architecture
Guide to Writing Device Drivers for the
ULTRIX SCSI/CAM Architecture Interfaces
AA-PN5HA-TE

Please use this postage-paid form to comment on this manual. If you require a written reply to a software problem and are eligible to receive one under Software Performance Report (SPR) service, submit your comments on an SPR form.

Thank you for your assistance.

Please rate this manual:

	Excellent	Good	Fair	Poor
Accuracy (software works as manual says)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Completeness (enough information)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Clarity (easy to understand)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Organization (structure of subject matter)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Figures (useful)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Examples (useful)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Index (ability to find topic)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Page layout (easy to find information)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

What would you like to see more/less of? _____

What do you like best about this manual? _____

What do you like least about this manual? _____

Please list errors you have found in this manual:


Page	Description
_____	_____
_____	_____
_____	_____
_____	_____

Additional comments or suggestions to improve this manual:

What version of the software described by this manual are you using? _____
Name/Title _____ Dept. _____
Company _____ Date _____
Mailing Address _____
_____ Email _____ Phone _____

Do Not Tear – Fold Here and Tape

digital™




NO POSTAGE
NECESSARY
IF MAILED IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST-CLASS MAIL PERMIT NO. 33 MAYNARD MA

POSTAGE WILL BE PAID BY ADDRESSEE

DIGITAL EQUIPMENT CORPORATION
OPEN SOFTWARE PUBLICATIONS MANAGER
ZK03-3/Y32
110 SPIT BROOK ROAD
NASHUA NH 03062-2698



Do Not Tear – Fold Here

Cut
Along
Dotted
Line

Reader's Comments

ULTRIX SCSI/CAM Architecture
Guide to Writing Device Drivers for the
ULTRIX SCSI/CAM Architecture Interfaces
AA-PN5HA-TE

Please use this postage-paid form to comment on this manual. If you require a written reply to a software problem and are eligible to receive one under Software Performance Report (SPR) service, submit your comments on an SPR form.

Thank you for your assistance.

Please rate this manual:

	Excellent	Good	Fair	Poor
Accuracy (software works as manual says)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Completeness (enough information)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Clarity (easy to understand)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Organization (structure of subject matter)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Figures (useful)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Examples (useful)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Index (ability to find topic)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Page layout (easy to find information)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

What would you like to see more/less of? _____

What do you like best about this manual? _____

What do you like least about this manual? _____

Please list errors you have found in this manual:

Page	Description
_____	_____
_____	_____
_____	_____
_____	_____
_____	_____

Additional comments or suggestions to improve this manual:

What version of the software described by this manual are you using? _____

Name/Title _____ Dept. _____


Company _____ Date _____

Mailing Address _____

_____ Email _____ Phone _____

Do Not Tear – Fold Here and Tape

digital™




NO POSTAGE
NECESSARY
IF MAILED IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST-CLASS MAIL PERMIT NO. 33 MAYNARD MA

POSTAGE WILL BE PAID BY ADDRESSEE

DIGITAL EQUIPMENT CORPORATION
OPEN SOFTWARE PUBLICATIONS MANAGER
ZKO3-3/Y32
110 SPIT BROOK ROAD
NASHUA NH 03062-2698



Do Not Tear – Fold Here

Cut
Along
Dotted
Line