

RS/6000
@server pSeries



Diagnostic Information for Multiple Bus Systems

Version 5.1.0.0

Thirteenth Edition (December 2001)

Before using this information and the product it supports, read the information in "Appendix F. Notices" on page 653.

A reader's comment form is provided at the back of this publication. If the form has been removed, address comments to Information Development, Department H6DS-905-6C006, 11400 Burnet Road, Austin, Texas 78758-3493. To send comments electronically, use this commercial internet address: aix6kpub@austin.ibm.com. Any information that you supply may be used without incurring any obligation to you.

© **International Business Machines Corporation 1995, 2001. All rights reserved.** Note to U.S. Government Users, Restricted Rights -- Use, duplication, or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

About This Book	ix
Who Should Use This Book	ix
How to Use This Book	ix
ISO 9000	ix
Online Publications.	ix
Related Publications	x
Trademarks	x
CSU/CE Feature Installation.	xi
Chapter 1. Service Hints	1
Using the Maintenance Analysis Procedures	1
About Slow Boot	2
Multiple SRN or Error Code Reporting and Handling.	2
General SCSI Configuration Checks	3
High Availability or Multiple SCSI System Checks.	3
SCSI-2 Single-Ended Adapter PTC Failure Isolation Procedure	4
External SCSI-2 Single-Ended Bus PTC Isolation Procedure	5
Internal SCSI-2 Single-Ended Bus PTC Isolation Procedure	7
SCSI-2 Differential Adapter PTC Failure Isolation Procedure	9
External SCSI-2 Differential Adapter Bus PTC Isolation Procedure.	10
Dual-Channel Ultra SCSI Adapter PTC Failure Isolation Procedure	13
Chapter 2. Start of Call MAP.	15
Chapter 3. Fast Path MAP	17
Fast Path Table	18
Chapter 4. MAP 0020: Problem Determination Procedure	29
Purpose of This MAP.	29
Chapter 5. MAP 0025: SCSI RAID Problem Determination Procedure	41
Purpose of This MAP.	41
Chapter 6. MAP 0030: Additional Problem Determination.	47
Purpose of This MAP.	47
Chapter 7. MAP 0040: Intermittent Problem Isolation	49
Purpose of This MAP.	49
Chapter 8. MAP 0050: SCSI Bus Problems.	53
Purpose of This MAP.	53
Chapter 9. MAP 0070: 888 Sequence in Operator Panel Display	61
Purpose of This MAP.	61
Chapter 10. MAP 0080: System Bus Problem Isolation	65

Purpose of This MAP.	65
Chapter 11. MAP 0210: General Problem Resolution	69
Purpose of This MAP.	69
Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution	79
Purpose of This MAP.	79
Chapter 13. MAP 0230: Platform Error Problem Resolution	85
Purpose of This MAP.	85
Chapter 14. MAP 0240: Memory Problem Resolution	91
Purpose of This MAP.	91
Chapter 15. MAP 0250: Unexpected System Halts During Diagnostics	95
Chapter 16. MAP 0260: System Hangs During Resource Configuration	97
Purpose of This MAP.	97
Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification	101
Purpose of This MAP	101
Chapter 18. MAP 0280: Boot Problem Resolution	109
Purpose of This MAP	109
Chapter 19. MAP 0290: Missing Resource Problem Resolution	111
Purpose of This MAP	111
Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution	113
Purpose of This MAP	113
Chapter 21. MAP 0410: Repair Checkout	115
Purpose of This MAP	115
Chapter 22. MAP 0420: System Checkout.	121
Purpose of This MAP	121
Chapter 23. Installation Checkout	123
Installation Checkout Procedure.	123
Chapter 24. General Diagnostic Information	127
AIX Operating System Message Files.	127
CE Login	129
Automatic Diagnostic Tests	129
CPU and Memory Testing and Error Log Analysis	130
Diagnostic Programs	131
Periodic Diagnostics	133
Automatic Error Log Analysis (diagela)	134
Log Repair Action	136

System Fault Indicator and System Identify Indicator	136
Testing the Line Printer	137
Chapter 25. Using Standalone and Online Diagnostics	139
Standalone and Online Diagnostics Operating Considerations	139
Online Diagnostics Mode of Operation	146
Standalone Diagnostic Operation	149
General Information about Multiple Systems.	151
Determining System Architecture	152
High-Availability SCSI	153
Diagnostic Summary	153
Diagnostics Tasks and Resources	154
SCSI RAID Descriptions and Diagnostic Procedures	156
Chapter 26. Introduction to Tasks and Service Aids	163
Tasks	164
Add Resource to Resource List	165
AIX Shell Prompt	165
Analyze Adapter Internal Log.	165
Backup and Restore Media	166
Certify Media	167
Change Hardware Vital Product Data	170
Configure Dials and LPF Keys	171
Configure ISA Adapter	171
Configure Reboot Policy	172
Configure Remote Maintenance Policy	173
Configure Ring Indicate Power-On Policy.	175
Configure Ring Indicate Power On	175
Configure Service Processor	175
Configure Surveillance Policy	178
Create Customized Configuration Diskette	178
Delete Resource from Resource List	179
Disk Maintenance	179
Display Configuration and Resource List	180
Display Firmware Device Node Information	180
Display Hardware Error Report	180
Display Hardware Vital Product Data	181
Display Machine Check Error Log	181
Display Microcode Level	181
Display or Change Bootlist	181
Display or Change Diagnostic Run-Time Options	182
Display Previous Diagnostic Results	183
Display Resource Attributes	183
Display Service Hints	183
Display Software Product Data	184
Display System Environmental Sensors	184
Display Test Patterns	186
Display USB Devices	186
Download Microcode	186
Fibre Channel RAID Service Aids	188

Flash SK-NET FDDI Firmware	189
Format Media.	189
Gather System Information	191
Generic Microcode Download	191
Hot Plug Task.	191
Local Area Network Analyzer.	196
Log Repair Action	196
Periodic Diagnostics	197
PCI RAID Physical Disk Identify.	197
Process Supplemental Media	197
Run Diagnostics	198
Run Error Log Analysis	198
Run Exercisers	198
Save or Restore Hardware Management Policies	201
Save or Restore Service Processor Configuration	201
SCSI Bus Analyzer	202
SCSD Tape Drive Service Aid	203
Spare Sector Availability	204
SSA Service Aid	204
System Fault Indicator	205
Update Disk-Based Diagnostics.	206
Update System or Service Processor Flash	206
Update System Flash	209
7135 RAIDiant Array Service Aid	209
7318 Serial Communications Network Server Service Aid	210
Chapter 27. Diagnostics Numbers and Location Codes	211
Operator Panel Display Numbers	211
Diagnostic Load Progress Indicators	224
Location Codes for RSPC Model Architecture System Units	228
Location Codes for CHRP Model Architecture System Units	230
Physical Location Codes	230
AIX Location Codes.	233
Chapter 28. Using the SRN List	237
Service Request Number	237
Using the Service Request Number List	238
Service Request Number Lists	238
Chapter 29. Five-Digit SRNs 10112 through DFFFF	241
Service Request Number List	241
Chapter 30. SRNs 101-000 through 699-120	253
Chapter 31. SRNs 700-102 through 89c-302	357
Chapter 32. SRNs 900-001 through xxxxxxx	439
Chapter 33. SRNs A01-(x)xxx through A1D-(x)xxx	509

Chapter 34. SRNs 2520-212 through 2590-(x)xxx	527
Chapter 35. Failing Function Codes (FFCs)	531
Description of the Failing Function Code List	531
Machine Types	532
Failing Function Code List	534
Chapter 36. FRU Cross-References	607
Using the FRU Name Cross-Reference List	607
Appendix A. Wrap Plugs.	615
Appendix B. Test Media	617
Appendix C. System Memory Reference	619
System Unit Memory Combinations	619
Appendix D. General Attributes Required When Using a TTY Terminal	623
Additional Communication Attributes	624
Additional Keyboard Attributes	625
Additional Printer Attributes	625
Appendix E. CHRP Error Log Structure	627
CHRP Error Logs in AIX	627
Versions of the Error Log Format	629
RTAS Error Return Format Fixed Part (All Versions)	629
Extended Error Log Formats	631
Version 2 Extension of CHRP Error Log Format	641
RTAS General Extended Error Log Format, Version 3	644
Extended Log Debug Data	652
Appendix F. Notices	653
Index	655

About This Book

The diagnostic information contained in this book is common to all multiple bus system units. Any information or diagnostic procedure that is specific to a certain system unit or device is in the service guide for that system unit or device.

Who Should Use This Book

This book is used for problem isolation and service procedures by a service representative specifically trained on the system unit being serviced.

This book combines operating instructions for hardware diagnostic programs with Maintenance Analysis Procedures (MAPs), corresponding Service Request Numbers (SRNs) and three-digit display codes. The SRNs are, in turn, keyed to failing function codes (FFCs) and corresponding part numbers for specific machine types.

How to Use This Book

This book has a version number in the title. Always use the book version that is equal to or greater than the first two digits of your diagnostics version level. For example, if your CD-ROM version is 2.2 or 2.25, use version 2.2 or higher of this diagnostics information manual.

If you are analyzing a system problem, start with “Chapter 2. Start of Call MAP” on page 15.

The SRN lists in Chapters 28-32 direct you to the correct failing function. A cross-reference by name, (such as adapter or device) to Failing Function Code can be found in “Chapter 36. FRU Cross-References” on page 607.

Refer to “Chapter 23. Installation Checkout” on page 123 if you are checking the system unit or device after installation.

ISO 9000

ISO 9000 registered quality systems were used in the development and manufacturing of this product.

Online Publications

RS/6000 and pSeries publications are available online. To access the online books, visit our Web site at: http://www.rs6000.ibm.com/resource/hardware_docs/.

Related Publications

The following books are used to isolate a problem in the system.

- *Adapters, Devices, and Cable Information for Multiple Bus Systems* contains information about common device, adapter, and cabling of the system unit.
- *Site and Hardware Planning Information* is a planning and site preparation guide.
- *Installation Guide* contains the instructions for installing the operating system.
- *RS/6000 SP System Service Guide* contains the service procedures that are specific to RS/6000 SP systems.
- If you are servicing a clustered @server, go to the Start of Call MAP 100 in the *Clustered @server Installation and Service Guide*.
- The service documentation for the system units or devices contains the service procedures that are specific to that device or system unit. The service documentation contains the following:
 - Reference information such as data flow, cable diagrams, and specifications
 - System unit or device-specific Maintenance Analysis Procedures (MAPs), such as the power MAP
 - Removal and replacement procedures
 - The system unit or device installation procedures
 - Parts diagrams and parts lists.

Trademarks

The following terms are trademarks of International Business Machines Corporation in the United States, other countries, or both:

- AIX
- e (logo)
- ESCON
- IBM
- LANStreamer
- Portmaster
- POWER Gt1
- POWER Gt3
- POWER Gt4
- pSeries
- RETAIN
- RS/6000
- S/370
- SP
- TURBOWAYS

Other company, product, and service names may be trademarks or service marks of others.

CSU/CE Feature Installation

Attention: The following information indicates which features on various systems/models are intended to be installed by the customer and which features are to be installed by a Customer Engineer/Customer Service Representative (CE/CSR) as part of a Miscellaneous Equipment Specification (MES). This information is for systems/models available as of the edition date.

Notes:

1. CSU = Customer Set-Up.
2. For a description of Feature Codes. See the Feature Code Descriptions below the following table.
3. The 7013 Model J30 was announced as CSU. U.S. practice has been for CE installation.

Machine Type	Model	System CSU ¹	Features/Options ²	
			CE Install	Customer Install
7006	(All)	Yes	All Features	None
7007	(All)	Yes	All Features	None
7008	(All)	Yes	All Features	None
7009	(All)	Yes	All Features	None
7010	(All)	Yes	All Features	None
7011	(All)	Yes	All Features	None
7012	(All)	Yes	All Features	None
7013	(All) ³	No	All Features	None
7015	(All)	No	All Features	None
7017	(All)	No	All Features	None
7024	(All)	Yes	FC 6309	All Other Features
7025	(All)	Yes	FC 2856, 6309, 6549	All Other Features
7026	(All except B80)	No	All Other Features	FC 2901, 2908, 2909, 2911, 2913, 3071, 3072, 3074, 3078, 3079, 3083
7026	(B80)	Yes	FC 4361, 4362, 4363	All Other Features
7027	(All)	No	All Other Features	FC 2616, 3080, 3083, 3084, 3090, 6142, 6147, 3133, 3134, 3137, 3138, 6153, 6294, 6295
7040	(All)	No	All Features	None
7043	(All)	Yes	FC 2856 & 6309	All Other Features
7044	(All)	Yes	FC 2856 & 6309 c.All Other Features	
7046	(All)	Yes	FC 2856 & 6309	All Other Features
7236	(All)	No	All Features	None
7248	(All)	Yes	FC 2856	All Other Features

Machine Type	Model	System CSU ¹	Features/Options ²	
			CE Install	Customer Install
7317	(All)	No	All Features	None
7318	(All)	No	All Features	None
7319	(All)	No	All Features	None

Feature Code	Feature Code Description
2616	Internal CD-ROM 2/4X/Tray Loading, 600KB/s
2856	PCI/Short/32bit/3.3 or 5V, 7250 Attach Adapter
2901	4.5GB F/W Ultra SCSI DASD Module
2908	9.1GB Ultra SCSI DASD Module
2909	18.2GB Ultra SCSI DASD Module
2911	9.1GB F/W Ultra SCSI DASD Module
2913	9.1GB F/W Ultra Module, 1" High
3071	4.5GB SSA DASD Module, 1" High
3072	9.1GB SSA DASD Module, 1.6" High
3074	9.1GB SSA DASD Module, Hot Swap
3078	9.1GB SSA DASD Module, 10K
3079	9.1GB SSA DASD Module, 10K
3080	4.5GB F/W SCSI DASD Module
3083	2.2GB F/W SCSI DASD Module
3084	4.5GB F/W SCSI DASD Module
3090	9.1GB F/W SCSI DASD Module
3133	Cable SCSI, 3M, to F/W MC SCSI Adapter (SE OR Diff)
3134	Cable SCSI, 6M, to F/W MC SCSI Adapter (SE OR Diff)
3137	Cable SCSI/DIFF, 12M, to F/W MC SCSI Adapter
3138	Cable SCSI/DIFF, 18M, to F/W MC SCSI Adapter
4361	1-Way 375MHz POWER3-II Processor Card
4362	2-Way 375MHz POWER3-II Processor Card
4363	2-Way 375MHz POWER3-II Processor Card (8MB L2/Processor)
6142	Internal 4mm 4/8GB Tape
6147	8mm 5/10GB VDAT Tape
6153	4mm Tape Drive + Autoloader, Horizontal
6294	Optional AC Power Supply for 7027 SCSI Drawers
6295	Optional bifurcated (Y-cable) Power Cord for 7027 SCSI Drawers
6309	Digital Trunk Quad Adapter, PCI/Long/32Bit/5V
6549	Additional Power Supply for 2nd and 3rd 6-Pks on Model F40

Chapter 1. Service Hints

Most hardware errors in the AIX error log contain *sysplanar0* as the resource name. The resource name identifies the resource that detected the error; it does not indicate that the resource is faulty or should be replaced. Use the resource name to determine the appropriate diagnostic to analyze the error.

Using the Maintenance Analysis Procedures

Some MAPs or procedures may ask whether the system is running one or more logical partition (LPAR) versus running a full machine partition. If you are not certain about the system configuration, ask the customer; if the system does not have an HMC (Hardware Management Console) then it is running a full machine partition (however, a system with an HMC may be in running one or more logical partitions or running a full machine partition).

On a partitioned system, some service aids may only be run in a partition that is set up with service authority. To set up a partition with service authority, ask the system administrator to refer to **Partition Management Tasks** within the *HMC Operations Guide*.

The maintenance analysis procedures (MAPs) provide the service representative a step-by-step procedure to analyze a problem with the system hardware. Hardware procedures are intended for use by a service representative trained on the system unit being serviced.

Some of the devices that are supported by the diagnostic programs also have their own maintenance documentation. You may want to use the maintenance documentation for that device before running the diagnostics for the system. Sometimes the maintenance package for an attached device allows the customer to continue operating the system while that device is being diagnosed. You can use the diagnostic programs to check the adapter to which that device is attached.

Begin all problem analysis with “Chapter 2. Start of Call MAP” on page 15.

MAPs may direct you to run diagnostics. Information on how to run the diagnostics, in various modes, is in “Chapter 24. General Diagnostic Information” on page 127. These MAPs may direct you to other MAPs or to other service information. Be prepared to record code numbers and other data while using these MAPs.

Some adapters may show a different SRN than expected if the adapter cannot be configured. If the SRN or FFC are listed by onscreen diagnostics, use that information first. Otherwise, use the part number that is on the adapter.

SRN and Failing Function Code (FFC) Discrepancies

SRNs listed in this book may not list the same FFCs and FRUs as reported by onscreen diagnostics. If the FRUs listed in this book do not solve the problem, check if any other FRUs are listed by onscreen diagnostics, and if so, try them.

About Slow Boot

Some systems support a service mode fast or slow boot. If you suspect a problem in the base system or can't otherwise localize the defect, do a slow-mode boot in service mode.

This can be specified using the System Power Control Menu on the service processor main menu. A fast-mode boot skips much of the built-in diagnostic testing. A slow-mode boot may yield a new 8-character error code on the operator panel and new errors in the service processor error log. If a new error code is reported, use it in subsequent steps to continue problem analysis.

Multiple SRN or Error Code Reporting and Handling

The AIX® Diagnostics can generate SRNs using hardware tests or from error log analysis. The diagnostics also report platform-unique 8-digit error codes detected and logged during POST, and device-unique error codes generated by the device diagnostics.

When you run the diagnostics, more than one SRN or error code may be reported. This may occur when there are multiple entries in the error log or when the diagnostic tests detect multiple hardware problems.

The SRNs are normally displayed in the order in which the devices are tested and the error log entries analyzed. Error log entries logged against a single device type are displayed in descending order with the newest entry first.

SRNs with a source code of **F** do not provide maximum isolation. Online diagnostics must run in Advanced and Problem Determination Mode to obtain maximum isolation. SRNs with a source code of **G** are the result of an error log entry.

Handle multiple SRNs and error codes in the following order:

1. 8-digit Error Codes. Multiple 8-digit error codes may not be listed in the correct order. See the "Error Code to FRU Index" in the system service guide to identify those error codes that require special handling.
2. SRNs in the range of A01-xxx to A1D-xxx.
3. SRNs with a source code other than F or G.
4. SRNs with a source code of F. Online diagnostics must be run in Advanced and Problem Determination Mode to obtain maximum isolation.
5. SRNs with a source code of G.
6. Device SRNs and error codes (5-digit SRNs).

If there are multiple SRNs within a group, it does not matter which SRN is handled first.

General SCSI Configuration Checks

The following steps apply to all types of SCSI problems:

1. Verify that all SCSI devices on the SCSI bus have a unique address.
2. Verify that all cables are connected securely and that there is proper termination at both ends of the SCSI bus.
3. Verify that the cabling configuration does not exceed the maximum cable length for the adapter in use. Refer to *Adapters, Devices, and Cable Information for Multiple Bus Systems* for more details on SCSI cabling.
4. Verify that the adapters and devices that you are working with are at the appropriate microcode levels for the customer situation. Contact your service support if you need assistance with microcode issues.
5. If there are multiple SCSI adapters on the SCSI bus, verify that the customer is using the appropriate software (such as HACMP or HANFS) to support such an arrangement. If the correct software is not in use, some SCSI errors should be expected when multiple adapters attempt to access the same SCSI device. Also, each adapter should have a unique address.

High Availability or Multiple SCSI System Checks

If you have a high-availability configuration, or if more than one system is attached to the same SCSI bus, do the following:

1. Verify that the adapters and devices have unique SCSI addresses. The default SCSI adapter address is always 7. If you have more than one adapter on the bus, change the address of at least one adapter. This can be done by using SMIT (SMIT Devices > SCSI Adapter > Change/Show characteristics of an adapter). You must make the changes to the database only, then reboot the system in order for the change to take effect.

Note: Diagnostics defaults to using ID 7 (it is recommended that this ID not be used in high availability configurations).

2. If RAID devices such as the 7135 or 7137 are attached, be sure to run the proper diagnostics for the device. If problems occur, contact your service support structure for assistance. If the diagnostics are run incorrectly on these devices, misleading SRNs can result.
3. Diagnostics cannot be run against OEM devices; doing so results in misleading SRNs.
4. Verify that all cables are connected securely and that both ends of the SCSI bus is terminated correctly.
5. Verify that the cabling configuration does not exceed the maximum cable length for the adapter in use. Refer to the SCSI Cabling section in the *Adapters, Devices, and Cable Information for Multiple Bus Systems* for more details on SCSI cabling issues.
6. Verify that adapter and devices are at the appropriate microcode levels for the customer situation. Contact your service support structure if you need assistance with microcode issues.

SCSI-2 Single-Ended Adapter PTC Failure Isolation Procedure

Before replacing a SCSI-2 single-ended adapter, use these procedures to determine if a short-circuit condition exists on the SCSI bus. The same positive temperature coefficient (PTC) resistor is used for both the internal and external buses. The PTC protects the SCSI bus from high currents due to shorts on the cable, terminator, or device. It is unlikely that the PTC can be tripped by a defective adapter. Unless instructed to do so by these procedures, do not replace the adapter because of a tripped PTC resistor.

A fault (short-circuit) causes an increase in PTC resistance and temperature. The increase in resistance causes the PTC to halt current flow. The PTC returns to a low resistive and low temperature state when the fault is removed from the SCSI bus or when the system is turned off. Wait 5 minutes for the PTC resistor to fully cool, then retest.

These procedures determine if the PTC resistor is still tripped and then determine if there is a short somewhere on the SCSI bus.

Determining Where to Start

Use the following to determine the adapter configuration and select the proper procedure:

- If there are external cables attached to the adapter, start with the "External Bus PTC Isolation Procedure" for your type adapter. The procedures are found in this chapter.
- If there are no external cables attached, start with the "Internal SCSI-2 Single-Ended Bus PTC Isolation Procedure" on page 7.
- If there is a combination of external and internal cables start with the "External Bus PTC Isolation Procedure" for your type adapter. The procedures are found in this chapter. If this procedure does not resolve the problem, continue with the "Internal Bus PTC Isolation Procedure" for your type adapter. The procedures are found in this chapter.

External SCSI-2 Single-Ended Bus PTC Isolation Procedure

Isolate the external SCSI bus PTC fault with the following procedure:

Note: The external bus is of single-ended design.

1. Ensure the system power and all externally attached device power is turned off. All testing is accomplished with the power off.
2. Disconnect any internal and external cables from the adapter and remove the adapter from the system.
3. Verify with a digital Ohmmeter that the internal PTC resistor, labeled Z1, (refer to the illustration after Internal SCSI-2 Single-Ended Bus PTC Isolation Procedure, step 3 on page 7) is cool and in a low resistance state, typically less than 1/2 Ohm. Measuring across, be sure to probe both sides of the PTC where the solder joints and board come together. The polarity of the test leads is not important. If necessary, allow the PTC resistor to cool and measure again.
4. This step determines if there is a short on the adapter. Locate Capacitor C1 and measure the resistance across it by using the following procedure:
 - a. Connect the positive lead to the side of the capacitor where the + is indicated on the board near C1. Be sure to probe at the solder joint where the capacitor and board come together.
 - b. Connect the negative lead to the opposite side of the capacitor marked "GND." Be sure to probe at the solder joint where the capacitor and board come together.
 - c. If there is no short present, then the resistance reading is high, typically hundreds of Ohms.

Note: Because this is a measurement across unpowered silicon devices, the reading is a function of the Ohmmeter used.

- If there is a fault, the resistance reading is low, typically below 10 Ohms. Because there are no cables attached, the fault is on the adapter. Replace the adapter.

Note: Some multi-function meters label the leads specifically for voltage measurements. When using this type of meter to measure resistance, the plus lead and negative lead may not be labeled correctly. If you are not sure that your meter leads accurately reflect the polarity for measuring resistance, repeat this step with the leads reversed. If the short circuit is not indicated with the leads reversed, the SCSI bus is not faulted (shorted).

- If the resistance measured was high, proceed to the next step.
- 5. Reattach the external cable to the adapter, then do the following:
 - a. Measure across C1 as previously described.
 - b. If the resistance is still high, in this case above 10 Ohms, then there is no apparent cause for a PTC failure from this bus. If there are internal cables attached continue to the “Internal SCSI-2 Single-Ended Bus PTC Isolation Procedure” on page 7.
 - c. If the resistance is less than 10 Ohms, there is a possibility of a fault on the external SCSI bus. Troubleshoot the external SCSI bus by disconnecting devices and terminators. Measure across C1 to determine if the fault has been removed. Replace the failing component. Go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

External SCSI-2 Single-Ended Bus Probable Tripped PTC Causes

The following list provides some suggestions of things to check when the PTC is tripped:

- A shorted terminator or cable. Check for bent pins on each connector and removable terminator.
- Intermittent PTC failures can be caused by improperly seated cable connectors. Reseat the connector and flex the cable in an attempt to duplicate the fault condition across C1.
- Plugging or unplugging a cable or terminator while the system is turned on (hot plugging).
- A shorted device.
- Differential devices or terminators are attached to the single-ended SCSI bus.

Note: The SCSI-2 Fast/Wide and Ultra PCI Adapters use an onboard electronic terminator on the external SCSI bus. When power is removed from the adapter, as in the case of this procedure, the terminator goes to a high impedance state and the resistance measured cannot be verified, other than it is high. Some external terminators use an electronic terminator, which also goes to a high impedance state when power is removed. Therefore, this procedure is designed to find a short or low resistance fault as opposed to the presence of a terminator or a missing terminator.


Internal SCSI-2 Single-Ended Bus PTC Isolation Procedure

Isolate the internal SCSI bus PTC resistor fault with the following procedure:

Note: The internal bus is single-ended.

1. Ensure that system power and all externally attached device power is turned off.
2. Disconnect any internal and external cables from the adapter then remove the adapter from the system.
3. Verify with a digital Ohmmeter, that the internal PTC resistor, labeled Z1, is cool and in a low resistance state, typically less than 1/2 Ohm. Measuring across, be sure to probe both sides of the PTC where the solder joints and board come together. The polarity of the test leads is not important. If necessary, allow the PTC to cool and measure again. Refer to the following illustration.

SCSI-2 Fast/Wide PCI Single-Ended Adapter

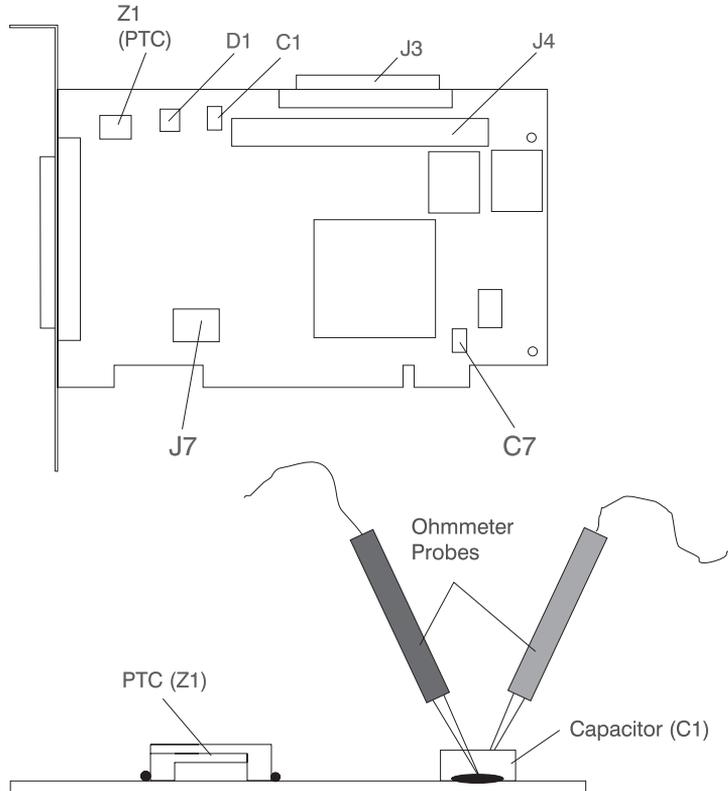

Note: Only the probe tips are touching the solder joints. Do not allow the probes to touch any other part of the component.

4. This step determines if there is a short on the adapter. Locate capacitor C1 and measure the resistance across it using the following procedure:
 - a. Connect the positive lead to the side of the capacitor where the + is indicated. Be sure to probe at the solder joint where the capacitor and board come together.
 - b. Connect the negative lead to the opposite side of the capacitor. Be sure to probe at the solder joint where the capacitor and board come together.
 - c. If there is no short present, the resistance reading is high, typically hundreds of Ohms.

Note: Because this is a measurement across unpowered silicon devices, the reading is a function of the Ohmmeter used.

- If there is a fault, the resistance reading is low, typically below 10 Ohms. Because there are no cables attached, the fault is on the adapter. Replace the adapter.

Note: Some multi-function meters label the leads specifically for voltage measurements. When using this type of meter to measure resistance, the plus lead and negative lead may not be labeled correctly. If you are not sure that your meter leads accurately reflect the polarity for measuring resistance, repeat this step with the leads reversed. Polarity is important in this measurement to prevent forward-biasing diodes which lead to a false low resistance reading. If the short circuit is not indicated with the leads reversed, the SCSI bus is not faulted (shorted).

- If the resistance is high and there is no internal cable to reattach, there is no apparent cause for the PTC resistor diagnostic failure.
- If the resistance is high and there is an internal cable to reattach, proceed to the next step.

5. Reattach the internal cable to the adapter, then do the following:
 - a. Measure across C1 as described above.
 - b. If the resistance is still high, above 25 Ohms, there is no apparent cause for a PTC failure.
 - c. If the resistance is less than 10 Ohms, a fault on the internal SCSI bus is possible. Troubleshoot the internal SCSI bus by disconnecting devices and terminators. Measure across C1 to determine if the fault has been removed.

Note: Some internal cables have nonremovable terminators.

Internal SCSI-2 Single-Ended Bus Probable Tripped PTC Resistor Causes

The following list provides some suggestions of things to check when the PTC is tripped:

- A shorted terminator or cable. Check for bent pins on each connector and removable terminator.
- Intermittent PTC failures can be caused by incorrectly seated cable connectors. Reseat the connector and flex the cable in an attempt to duplicate the fault condition across C1.
- A shorted device.
- On some systems, the terminator is fixed to the internal cable and cannot be removed. If all devices are removed from the cable and the resistance is still low, then the cable should be replaced.

Note: The SCSI-2 Fast/Wide and Ultra PCI adapters use an onboard electronic terminator on the internal SCSI bus. When power is removed from the adapter, as in the case of this procedure, the terminator goes to a high impedance state and the resistance measured cannot be verified, other than it is high. Some internal terminators use an electronic terminator, which also goes to a high impedance state when power is removed. Therefore, this procedure is designed to find a short or low resistance fault as opposed to the presence of a terminator or a missing terminator.

SCSI-2 Differential Adapter PTC Failure Isolation Procedure

Use this procedure when SRN xxx-240 or xxx-800 has been indicated.

The differential adapter can be identified by the 4-B or 4-L on the external bracket plate.

Before replacing a SCSI-2 differential adapter, use these procedures to determine if a short-circuit condition exists on the SCSI Bus. The PTC protects the SCSI bus from high currents due to shorts on the cable, terminator, or device. It is unlikely that the PTC can be tripped by a defective adapter. Unless instructed to do so by these procedures, do not replace the adapter because of a tripped PTC resistor.

A fault (short-circuit) causes an increase in PTC resistance and temperature. The increase in resistance causes the PTC to halt current flow. The PTC returns to a low resistive and low temperature state when the fault is removed from the SCSI bus or when the system is turned off. Wait 5 minutes for the PTC resistor to fully cool, then retest.

These procedures determine if the PTC resistor is still tripped and then determine if there is a short somewhere on the SCSI bus.


External SCSI-2 Differential Adapter Bus PTC Isolation Procedure

Isolate the external SCSI bus PTC fault with the following procedure:

Notes:

1. Only the probe tips are touching the solder joints. Do not allow the probes to touch any other part of the component.
2. The external bus is differential.
 1. Ensure that system power and all externally attached device power is turned off.
 2. Check to ensure all devices are marked SCSI Differential and that the terminator on the end of the SCSI bus is also marked differential. If not, you may have a single-ended SCSI device or terminator on the differential SCSI bus. Single-ended devices do not work on a differential SCSI bus and may cause a PTC type error to be reported. The entire SCSI bus may appear to be intermittent. After ensuring the system is completely differential, continue.
 3. Disconnect the external cables from the adapter and remove the adapter from the system.
 4. Verify with a digital Ohmmeter that the internal PTC resistor, labeled Z1, (refer to the illustration on page "External SCSI-2 Differential Adapter Bus PTC Isolation Procedure") is cool and in a low resistance state, typically less than 1/2 Ohm. Measuring across, be sure to probe both sides of the PTC resistor where the solder joints and board come together. The polarity of the test leads is not important. If necessary, allow the PTC resistor to cool and measure again.

SCSI-2 Differential Fast/Wide PCI Adapter

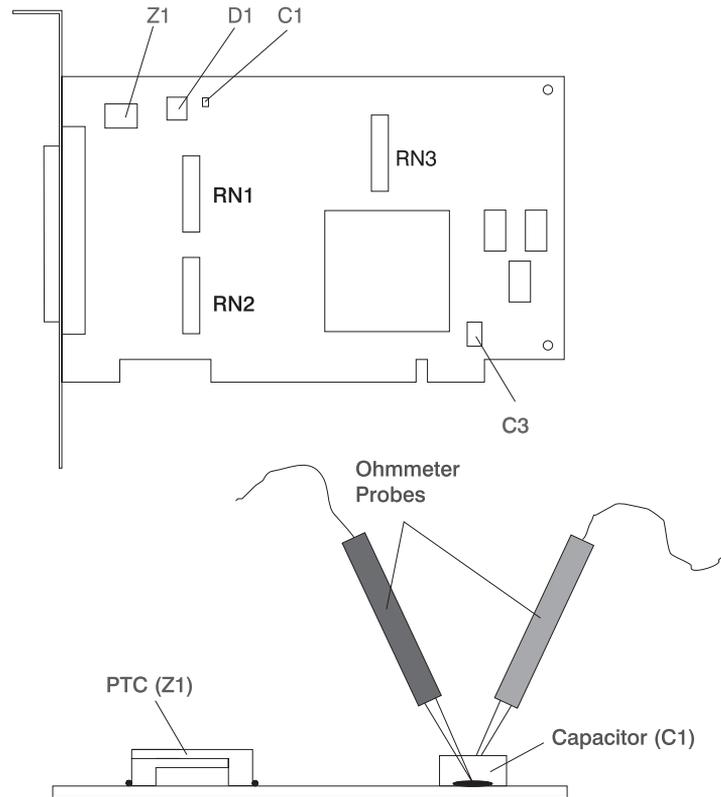

5. This step determines if there is a short on the adapter. Locate capacitor C1 and measure the resistance across it using the following procedure:
 - a. Connect the negative lead to the side of the capacitor marked "GND". Be sure to probe at the solder joint where the capacitor and board come together.
 - b. Connect the positive lead to the side of the capacitor marked "Cathode D1" on the board near C1. Be sure to probe at the solder joint where the capacitor and board come together.
 - If there is no fault present, then the resistance reading is 25 to 35 Ohms. The adapter is not faulty. Continue to the next step.
 - If the resistance measured is higher than 35 Ohms, check to see if RN1, RN2, and RN3 are plugged into their sockets. If these sockets are empty, you are working with a Multi-Initiators or High-Availability system. With these sockets empty, a resistive reading across C1 cannot be verified other than it measures a high resistance (not a short). If the resistance measurement is not low enough to be suspected as a fault (lower than 10 Ohms), continue to the next step.

- If the resistance is high and there is no external cable to reattach, there is no apparent cause for the PTC diagnostic failure.
 - If the resistance reading is low, typically below 10 Ohms, there is a fault. Because there are no cables attached, the fault is on the adapter. Replace the adapter.
 - If the resistance measured was high and there is an external cable to reattach, proceed to the next step.
6. Reattach the external cable to the adapter.
 - a. Measure across C1 as previously described.
 - b. If the resistance is between 10 to 20 Ohms, there is no apparent cause for a PTC resistor failure.
 - c. If the resistance is less than 10 Ohms, there is a possibility of a fault on the external SCSI bus. Troubleshoot the external SCSI bus by disconnecting devices and terminators. Measure across C1 to determine if the fault has been removed.

SCSI-2 Differential Adapter Probable Tripped PTC Causes

The following list provides some suggestions of things to check when the PTC is tripped:

- A shorted terminator or cable. Check for bent pins on each connector and removable terminator.
- Intermittent PTC failures can be caused by incorrectly seated cable connectors. Reseat the connector and flex the cable in an attempt to duplicate the fault condition across C1.
- Plugging or unplugging a cable or terminator while the system is turned on (hot-plugging).
- A shorted device.
- Single-ended devices are attached to the differential SCSI bus.

Dual-Channel Ultra SCSI Adapter PTC Failure Isolation Procedure

Use the following procedures if diagnostics testing indicates a potential positive temperature coefficient (PTC) resistor fault or the TERMPWR Shorted LED is lit.

This procedure is used for SRNs 637-240 and 637-800 on the Dual-Channel Ultra SCSI Adapter. If the TERMPWR Shorted LED is lit, use this procedure to help isolate the source of the problem on the failing channel.

1. Identify the adapter by its label of 4-R on the external bracket. Then, determine if the failure is on channel A or channel B.
2. The same PTC is used for both the internal and external buses. The PTC protects the SCSI bus from high currents due to shorts on the cable, terminator, or device. It is unlikely that the PTC can be tripped by a defective adapter. A fault (short-circuit) causes an increase in PTC resistance and temperature. The increase in resistance causes the PTC to halt current flow. The PTC returns to a low resistive and low temperature state when the fault is removed from the SCSI bus or when the system is turned off.

Wait 5 minutes for the PTC resistor to fully cool, then retest.

3. If this same error persists, or the TERMPWR Shorted LED is lit, replace the components of the failing channel in the following order (wait five minutes between steps):
 - a. If the failure is on the external cable, replace the following:
 - 1) Cable
 - 2) Device
 - 3) Attached subsystem
 - 4) Adapter
 - b. If the failure is on the internal cable, replace the following:
 - 1) Cable
 - 2) Device
 - 3) Backplane
 - 4) Adapter
 - c. If the failure persists, verify that the parts exchanged are in the correct channel (internal or external, A or B).

If the errors are still occurring, continue isolating the problem by going to “Step 0050-9” on page 55.

Chapter 2. Start of Call MAP

This MAP is the starting point for a service call.

If you are servicing an SP system, go to the Start of Call MAP 100 in the *RS/6000 SP System Service Guide*.

If you are servicing a clustered @server, go to the Start of Call MAP 100 in the *Clustered @server Installation and Service Guide*.

Note: Do not run the diagnostics until you are instructed to do so.

1. If this system has a Hardware Management Console (HMC) with Service Focal Point (SFP), go to the "Quick Entry MAP for Systems with Service Focal Point" in the system service guide. Otherwise, go to step 2.
2. The Fast Path MAP in Chapter 3 is provided to help you quickly resolve a problem. Use the Fast Path MAP when you know or have been provided with a symptom.

Use the following table to help determine your next step.

Symptom	Action
You do not have a problem or symptom, but you want to generate one.	Go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 in this manual.
You have been provided with a problem or symptom.	Go to "Chapter 3. Fast Path MAP" on page 17 in this manual.

Note: Some of the devices that are supported by the diagnostic programs also have their own maintenance documentation. You may want to use the maintenance documentation for that device before running the diagnostics for the system. Sometimes the maintenance package for the attached device allows the customer to continue operating the system while that device is being diagnosed. You can use the diagnostic programs to check the adapter to which that device is attached.

Chapter 3. Fast Path MAP

In most cases, these procedures direct you to run the Online Diagnostics. If the Online Diagnostics are not installed, the Standalone Diagnostics should be used.

Notes:

1. If the actions listed for a specific symptom do not resolve the problem, go to “Chapter 4. MAP 0020: Problem Determination Procedure” on page 29.
2. If you replace a part, use “Chapter 21. MAP 0410: Repair Checkout” on page 115 to verify the fix.
3. If you are directed to the system unit’s service guide, use the MAPs in the service guide to complete the repair. If none of the MAPs in the service guide have you verify the fix, return to this book and use “Chapter 21. MAP 0410: Repair Checkout” on page 115.
4. If you are servicing an SP system, go to the Start of Call MAP 100 in the *RS/6000 SP System Service Guide*.
5. If you are servicing a clustered @server, go to the Start of Call MAP 100 in the *Clustered @server Installation and Service Guide*.

When possible, run the Online Diagnostics in Service Mode unless you are directed otherwise.

Fast Path MAP Table of Contents

Problem Description	Page No.
Eight-Digit Error Codes	18
Six-Digit Error Codes Containing No Dash (-)	18
888 Sequence in Operator Panel Display	19
The System Stops or Hangs With a Value Displayed in the Operator Panel Display	19
Diagnostic SRNs	19
System Automatically Reboots	19
System does not Reboot When Reset Button Pushed	20
ASYNCR Communication Problems	20
SCSI Adapter Problems	20
SCSI Bus Problems	20
Tape Drive Problems	21
CD-ROM Drive Problems	21
SCSI Disk Drive Problems	22
Diskette Drive Problems	23
Token-Ring Problems	23

Problem Description	Page No.
Ethernet Problems	23
Display Problems	24
Keyboard or Mouse	24
Printer and TTY Problems	24
Other Adapter Problems	25
System Messages	25
Processor and Memory Problems	25
Service Processor Problems	25
Degraded Performance or Installed Memory Mismatch	26
Missing Resources	26
System Hangs or Loops When Running the Operating System or Diagnostics	26
Exchanged FRUs Did Not Fix the Problem	27
RAID Problems	27
System Date and Time Problems	27
SSA Problems	27
Power Indicator Light is Not On	28
System Power Problems	28
You Cannot Find the Symptoms in This Table	27

Fast Path Table

Symptoms	What You Should Do
Eight-Digit Error Codes	
You have an eight-digit error code.	Go to the "Error Code to FRU Index" in the service guide, read the notes on the first page, and do the listed action for the eight-digit error code. Note: If the repair for this code does not involve replacing a FRU (for instance, if you run an AIX command that fixes the problem or if you change a hot-pluggable FRU), then run the Log Repair Action option on resource sysplanar0 from the Task Selection menu under Online Diagnostics to update the AIX error log.
Six-Digit Error Codes Containing No Dash (-)	
You have a six-digit error code (like an SRN) containing no dash (-) between the third and fourth digit.	Go to the "Error Code to FRU Index" in the service guide, read the notes at the beginning of this section, and do the listed action for the six-digit error code.

Symptoms	What You Should Do
888 Sequence in Operator Panel Display	
An 888 sequence in the operator panel display.	Go to "Chapter 9. MAP 0070: 888 Sequence in Operator Panel Display" on page 61.
The System Stops or Hangs With a Value Displayed in the Operator Panel Display	
The operator panel display alternates between two codes that begin with the letter E.	Go to the Entry MAP in the service guide.
The system stopped with a 4-digit code that begins with a digit other than 0 (zero) or 2 (two) displayed in the operator panel display.	Go to the Entry MAP in the service guide.
The system stopped with a 4-digit code that begins with 0 (zero) displayed in the operator panel display.	Record SRN 101-xxx (where xxx is the last three digits of the code displayed). Find the SRN in the SRN chapters and do the indicated action.
The system stopped with a 4-digit code that begins with a 2 (two) displayed in the operator panel display.	Record SRN 101-xxxx (where xxxx is the four digits of code displayed). The physical location code, AIX location code, or device name displays on system units with a multiple-line operator panel display if AIX 4.3.3 or later is installed. If a physical location code or an AIX location code is displayed, record it, then find the SRN in the SRN chapters and do the indicated action
The system stopped with a 3-digit code that begins with either A or F displayed in the operator panel display.	Go to the Entry MAP in the service guide.
The system stopped with a 3-digit code that begins with a digit or character other than A or F in the operator panel display.	Record SRN 101-xxx (where xxx is the three digits of the code displayed). Find the SRN in the SRN chapters and do the indicated action.
Diagnostic SRNs	
An SRN is displayed when running diagnostics.	<ol style="list-style-type: none"> 1. Record the SRN and location code. 2. Look up the SRN in the SRN chapters and do the listed action.
You have an SRN.	<p>Look up the SRN in the SRN chapters and do the listed action.</p> <p>Note: Customer-provided SRNs should be verified. This can be done by using the Display Previous Results Service Aid or by running the diagnostics again.</p>
System Automatically Reboots	

Symptoms	What You Should Do
System automatically reboots.	<ol style="list-style-type: none"> 1. Turn off the system unit power. 2. Turn on the system unit power and boot from a removable media, disk, or LAN in service mode. 3. Run the diagnostics in Problem Determination Mode. 4. Select the All Resources option from the Resource Selection menu to test all resources. 5. If an SRN displays, lookup the SRN in the SRN chapters and do the action listed. 6. If an SRN is not displayed, suspect a power supply or power source problem.
System does not Reboot When Reset Button is Pushed	
System does not reboot (reset) when the reset button is pushed.	Record SRN 111-999. Find the SRN in the SRN chapters and do the indicated action.
ASYNC Communication Problems	
You suspect an Async communication problem.	<ol style="list-style-type: none"> 1. Run the Advanced Async Diagnostics on the ports you are having problems with. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 2. If you suspect a problem with the Async Concentrator, Remote Async Node, and so on, refer to the documentation in <i>Adapters, Devices, and Cable Information for Multiple Bus Systems</i> on these devices and perform any tests or checks listed.
SCSI Adapter Problems	
<p>You suspect a SCSI adapter problem.</p> <p>SCSI Adapter Diagnostics can only be run on a SCSI adapter that was not used for booting. The POST tests any SCSI Adapter before attempting to use it for booting. If the system was able to boot using a SCSI adapter, then the adapter is most likely good.</p> <p>SCSI adapters problems are also logged into the error log and are analyzed when the Online SCSI Diagnostics are run in Problem Determination Mode. Problems are reported if the number of errors is above defined thresholds.</p>	<ol style="list-style-type: none"> 1. Run the Online SCSI Adapter Diagnostic in Problem Determination Mode. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 2. Use "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53. Note: If you cannot load diagnostics (standalone or online) go to MAP 1540 in the service guide.
SCSI Bus Problems	

Symptoms	What You Should Do
You suspect a SCSI bus problem.	<ol style="list-style-type: none"> 1. Use "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53. 2. Use the SCSI Bus Service Aid to exercise and test the SCSI Bus.
Tape Drive Problems	
You suspect a tape drive problem.	<ol style="list-style-type: none"> 1. Refer to the tape drive documentation and clean the tape drive. 2. Refer to the tape documentation and do any listed problem determination procedures. 3. Run the Online Advanced Tape Diagnostics in Problem Determination Mode. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 4. Use the Backup/Restore Media Service Aid to exercise and test the drive and media. 5. Use "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53. 6. Use the SCSI Bus Service Aid to exercise and test the SCSI bus. 7. Refer to the device section of <i>Adapters, Devices, and Cable Information for Multiple Bus Systems</i> for additional information and "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 of this manual for problem determination procedures. <p>Note: Information on tape cleaning and tape-problem determination is normally either in the tape drive operator guide or the system operator guide.</p>
CD-ROM Drive Problems	

Symptoms	What You Should Do
<p>You suspect a CD-ROM drive problem.</p>	<ol style="list-style-type: none"> 1. Refer to the CD-ROM documentation and do any listed problem determination procedures. 2. Before servicing a CD-ROM Drive ensure that it is not in use and that the power connector is correctly attached to the drive. If the load or unload operation does not function, replace the CD-ROM drive. 3. Run the Online Advanced CD-ROM Diagnostics in Problem Determination Mode. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 4. Use "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53. 5. Use the SCSI Bus Service Aid to exercise and test the SCSI Bus. 6. Refer to the device section of <i>Adapters, Devices, and Cable Information for Multiple Bus Systems</i> for additional information and "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 of this manual for problem determination procedures. <p>Note: Information on CD-ROM problem determination is usually in the CD-ROM drive operator guide or the system user's guide.</p>
SCSI Disk Drive Problems	

Symptoms	What You Should Do
<p>You suspect a disk drive problem.</p> <p>Disk problems are logged in the error log and are analyzed when the Online Disk Diagnostics are run in Problem Determination Mode. Problems are reported if the number of errors is above defined thresholds.</p> <p>If the diagnostics are booted from a disk, then the diagnostics can only be run on those drives that are not part of the root volume group. However, error log analysis is run if these drives are selected. To run the disk diagnostic tests on disks that are part of the root volume group, the Standalone Diagnostics must be used.</p>	<ol style="list-style-type: none"> 1. Run the Online Advanced Disk Diagnostics in Problem Determination Mode. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 2. Run Standalone Disk Diagnostics. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 3. Use the Certify Disk Service Aid to verify that the disk can be read. 4. Use "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53. 5. Use the SCSI Bus Service Aid to exercise and test the SCSI Bus. 6. Refer to the device section of <i>Adapters, Devices, and Cable Information for Multiple Bus Systems</i> for additional information and "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 of this manual for problem determination procedures.
Diskette Drive Problems	
<p>You suspect a diskette drive problem.</p>	<ol style="list-style-type: none"> 1. Run the diskette drive diagnostics. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 2. Use the Diskette Media Service Aid to test the diskette media. 3. Use the Backup/Restore Media Service Aid to exercise and test the drive and media.
Token-Ring Problems	
<p>You suspect a Token-Ring Adapter or network problem.</p>	<ol style="list-style-type: none"> 1. Run the Online Advanced Token-Ring Diagnostics in Problem Determination Mode. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 2. Use the ping command to exercise and test the network. 3. Refer to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 for additional information and problem determination procedures.
Ethernet Problems	

Symptoms	What You Should Do
You suspect an Ethernet Adapter or network problem.	<ol style="list-style-type: none"> 1. Run the Online Advanced Ethernet Diagnostics in Problem Determination Mode. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 2. Use the ping command to exercise and test the network. 3. Refer to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 for additional information and problem determination procedures.
Display Problems	
You suspect a display problem.	<ol style="list-style-type: none"> 1. Go to the Problem Determination Procedures for the display. 2. Run diagnostics on the adapter that the display is attached. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 3. Refer to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 for additional information and problem determination procedures.
Keyboard or Mouse	
You suspect a keyboard or mouse problem.	<p>Run the device diagnostics. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action.</p> <p>If you are unable to run diagnostics because the system does not respond to the keyboard, replace the keyboard or system planar.</p> <p>Note: If the problem is with the keyboard it could be caused by the mouse device. To check, unplug the mouse and then recheck the keyboard. If the keyboard works, replace the mouse.</p>
Printer and TTY Problems	

Symptoms	What You Should Do
<p>You suspect a TTY terminal or printer problem.</p>	<ol style="list-style-type: none"> 1. Go to problem determination procedures for the printer or terminal. 2. Check the port that the device is attached to by running diagnostics on the port. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 3. Use the "Testing the Line Printer" procedure in "Chapter 24. General Diagnostic Information" on page 127 to test the connection to the printer. If a problem exists, replace the following in the order listed: <ol style="list-style-type: none"> a. Device cable b. Port the printer or terminal is connected to.
Other Adapter Problems	
<p>You suspect a problem on another adapter that is not listed above.</p>	<ol style="list-style-type: none"> 1. Run the Online Advanced Diagnostics in Problem Determination on the adapter you suspect. If an SRN is displayed, look up the SRN in the SRN chapters and do the listed action. 2. Refer to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 for additional information and problem determination procedures.
System Messages	
<p>A System Message is displayed.</p>	<ol style="list-style-type: none"> 1. If the message describes the cause of the problem, attempt to correct it. 2. Look for another symptom to use.
Processor and Memory Problems	
<p>You suspect a memory problem.</p> <p>Memory tests are only done during POST. Only problems that prevent the system from booting are reported during POST. All other problems are logged and analyzed when the sysplanar0 option under the Advanced Diagnostics Selection menu is run.</p> <p>System Crashes are logged in the AIX Error Log. The sysplanar0 option under the Advanced Diagnostic Selection menu is run in Problem Determination Mode to analyze the error.</p>	<ol style="list-style-type: none"> 1. Power off the system. 2. Turn on the system unit power and load the Online Diagnostics in Service Mode. 3. Run either the sysplanar0 or the Memory option under the Advanced Diagnostics in Problem Determination Mode. 4. If an SRN is displayed, record the SRN and location code. 5. Look up the SRN in the SRN chapters and do the listed action.
Service Processor Problems	

Symptoms	What You Should Do
<ul style="list-style-type: none"> • Modem does not dial out or answer calls using Service Processor functions. • Service Processor menus do not display or display incorrectly on a TTY terminal. • Cannot input to the Service Processor menus using a TTY keyboard. 	<p>Remove the Service Processor and then run advanced diagnostics on the built-in serial ports. If an SRN is reported, lookup the SRN and do the indicated action. If no SRN is reported, replace the Service Processor. If the problem remains after replacing the Service Processor, replace the system planar.</p>
Degraded Performance or Installed Memory Mismatch	
<p>Degraded Performance or Installed Memory Mismatch</p>	<p>Degraded Performance can be caused by memory problems that cause a reduction in the size of available memory. To verify that the system detected the full complement of installed memory use one of the following methods based on the level of AIX being used.</p> <ul style="list-style-type: none"> • AIX 4.2.1 and Higher From the Task Selection Menu select the 'Display Resource Attribute'. From the Resource Selection menu select one of the listed memory resources. Verify the amount of memory listed matches the amount actually installed. • All Other AIX Versions Use the Display or Change Configuration Service Aid to verify that all installed memory is being detected. The Display Vital Product Data (VPD) option shows the amount of memory that is installed. If an installed memory module or card does not appear or appears as the wrong size, replace it. If the problem is not corrected, replace the card or board that contains the missing memory.
Missing Resources	
<p>Missing Resources</p>	<p>Note: ISA resources must be configured before they appear in the configuration. The ISA Adapter Configuration Service Aid is used to configure ISA adapter for Standalone Diagnostics. SMIT can be used to configure during Online Diagnostics.</p> <p>Use the 'Display or Change Configuration or Vital Product Data (VPD) Service Aid' to verify that the resource was configured.</p> <p>If an installed resource does not appear, check that it is installed correctly. If you do not find a problem, go to MAP 0020.</p>
System Hangs or Loops When Running the OS or Diagnostics	

Symptoms	What You Should Do
The system hangs in the same application.	<p>Suspect the application. To check the system:</p> <ol style="list-style-type: none"> 1. Power off the system. 2. Turn on the system unit power and load the Online Diagnostics in Service Mode. 3. Select the All Resources option from the Resource Selection menu to test all resources. 4. If an SRN is displayed at anytime, record the SRN and location code. 5. Look up the SRN in the SRN chapters and do the listed action.
The system hangs in different applications.	<ol style="list-style-type: none"> 1. Power off the system. 2. Turn on system unit power and load the Online Diagnostics in Service Mode. 3. Select the All Resources option from the Resource Selection menu to test all resources. 4. If an SRN is displayed at anytime, record the SRN and location code. 5. Look up the SRN in the SRN chapters and do the listed action.
The system hangs when running diagnostics.	Replace the resource that is being tested.
You Cannot Find the Symptom in This Table	
All other problems.	Go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29.
Exchanged FRUs Did Not Fix the Problem	
A FRU or FRUs you exchanged did not fix the problem.	Go to "Chapter 6. MAP 0030: Additional Problem Determination" on page 47
RAID Problems	
You suspect a problem with a RAID.	A potential problem with a RAID adapter exists. Run diagnostics on the RAID adapter. Refer to the <i>RAID Adapters User's Guide and Maintenance Information</i> or the service guide for the RAID.
System Date and Time Problems	
<ul style="list-style-type: none"> • The system does not retain the calendar date after the system has been booted. • The system does not retain the time of day after the system has been booted. <p>Note: It is normal for the system time of day to gain or lose a few seconds each month.</p>	<ol style="list-style-type: none"> 1. Run the sysplanar0 option under the Advanced Diagnostics in Problem Determination mode. If an SRN is reported, record the SRN and location code information and do the indicated action for the SRN. 2. Replace the TOD (NVRAM) battery. If this does not fix the problem, replace the system planar.
SSA Problems	

Symptoms	What You Should Do
You suspect an SSA problem.	A potential problem with an SSA adapter exists. Run diagnostics on the SSA adapter. If the system has external SSA drives, refer to the <i>SSA Adapters User's Guide and Maintenance Information</i> or the service guide for your disk subsystem. If the system has internal SSA drives, go to the SSA MAP in either the system unit's service guide or user's guide.
Power Indicator Light is Not On	
A drawer power indicator is not on.	Refer to the Entry MAP section of the Maintenance Analysis Procedures (MAPs) in the system service manual.
System Power Problem	
The system does not power on.	Go to the Entry MAP in the service guide.
The system powers on when it should not.	Go to the Entry MAP in the service guide.

Chapter 4. MAP 0020: Problem Determination Procedure

Purpose of This MAP

Use this MAP to get a service request number (SRN) if the customer or a previous MAP provided none.

If you are unable to power the system on, refer to the MAP 1520 in the system's service guide.

Note: If another system connects to this system, refer to "Chapter 25. Using Standalone and Online Diagnostics" on page 139 for pertinent information before proceeding further.

Step 0020-1

Visually check the system for obvious problems such as unplugged power cables or external devices that are powered off.

Did you find an obvious problem?

NO Go to "Step 0020-2".

YES Fix the problem; then go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Step 0020-2

Are the Online Diagnostics installed?

Note: If you are uncertain how to answer the above question, answer it yes.

NO If the operating system is running, perform its shutdown procedure. Get help if needed. Go to "Step 0020-4" on page 30.

YES Go to "Step 0020-3" on page 30.

Step 0020-3

Note: When possible, run Online Diagnostics in Service Mode. Online diagnostics perform additional functions, compared to Standalone Diagnostics.

Run Online Diagnostics in Concurrent Mode when the customer does not let you power-off the system unit. To run Online Diagnostics in Service Mode, go to substep 5, otherwise do substeps 1 through 4.

1. Log in with root authority or use CE login. If necessary, ask the customer for the password.
2. Enter the **diag -a** command to check the system for missing resources. Follow any instructions displayed. If an SRN displays, record it and go to “Step 0020-15” on page 38. If there are no instructions display or missing resources, proceed to the next substep to run concurrent diagnostics.
3. Enter the **diag** command.
4. Go to “Step 0020-5” on page 31.
5. If the operating system is running, perform its shutdown procedure (get help if needed).
6. Turn off the system unit power and wait 45 seconds before proceeding.
7. Turn on the system unit power.
8. Load the Online Diagnostics in Service Mode (if needed, refer to the service guide).
9. Wait until the Diagnostic Operating Instructions display or the system appears to have stopped.

Are the Diagnostic Operating Instructions Displayed?

NO Go to “Step 0020-16” on page 39.

YES Go to “Step 0020-5” on page 31.

Step 0020-4

1. Turn off the system unit power and wait 45 seconds before proceeding.
2. Turn on the system unit power. If the system supports Slow boot (See “About Slow Boot” on page 2), do a slow boot on the system. If the system does not support slow boot, do a normal boot
3. Load the Standalone Diagnostics in Service Mode. Refer to the system unit service guide if needed.
4. Wait until the Diagnostic Operating Instructions display or the system appears to have stopped.

Are the Diagnostic Operating Instructions Displayed?

NO Go to “Step 0020-16” on page 39.

YES Go to “Step 0020-5” on page 31.

Step 0020-5

Are the Diagnostic Operating Instructions Displayed (screen number 801001) with no obvious problem (for example, blurred or distorted)?

NO For display problems, go to “Step 0020-12” on page 36.

YES To continue with diagnostics, go to “Step 0020-6”.

Step 0020-6

Press the Enter key.

Is the FUNCTION SELECTION menu displayed (screen number 801002)?

NO Go to “Step 0020-13” on page 36.

YES Go to “Step 0020-7”.

Step 0020-7

1. Select the **ADVANCED DIAGNOSTICS ROUTINES** option.

Note: If the terminal type is not defined, do so now. You cannot proceed until this is done.

2. If the DIAGNOSTIC MODE SELECTION menu (screen number 801003) displays, select the **PROBLEM DETERMINATION** option.
3. Find your system response in the following table. Follow the instructions in the Action column.

Note: This table spans several pages.

System Response	Action
The RESOURCE SELECTION menu or the ADVANCED DIAGNOSTIC SELECTION menu is displayed (screen number 801006).	Go to “Step 0020-11” on page 34.
The system halted while testing a resource.	Record SRN 110-xxx, where xxx is the first three digits of the menu number displayed in the upper-right corner of the diagnostic menu. If no menu number is displayed, use “Chapter 36. FRU Cross-References” on page 607 to obtain the failing function code (FFC) for the device. Use the FFC code of the device for xxx. Go to “Step 0020-15” on page 38.

System Response	Action
<p>The MISSING RESOURCE menu is displayed.</p>	<p>Follow the displayed instructions until either the ADVANCED DIAGNOSTIC SELECTION menu or an SRN is displayed.</p> <p>Note: Run any supplemental media that may have been supplied with the adapter or device, and then return to substep 1 of “Step 0020-7” on page 31.</p> <p>Notes:</p> <ol style="list-style-type: none"> 1. If the SCSI Enclosure Services device appears on the Missing Resource list along with the other resources, select it first. 2. ISA adapters cannot be detected by the system. The ISA Adapter Configuration Service Aid in Standalone Diagnostics allows the identification and configuration of ISA adapters. <p>If the ADVANCED DIAGNOSTIC SELECTION menu is displayed, go to “Step 0020-11” on page 34.</p> <p>If an 8-digit error code is displayed, go to the system’s service guide and find the error in the “Error Code to FRU Index”. Perform the listed action.</p> <p>If an SRN is displayed, record it, and go to “Step 0020-15” on page 38.</p>
<p>The message The system will now continue the boot process is displayed continuously on the system unit’s console.</p>	<p>Go to “Step 0020-4” on page 30.</p>
<p>The message Processing supplemental diagnostic diskette media is displayed continuously on the system unit’s console.</p>	<p>Call your service support structure.</p>

System Response	Action
<p>The diagnostics begin testing a resource. Note: If the Problem Determination Option was selected from the DIAGNOSTIC MODE SELECTION menu, and if a recent error has been logged in the error log, the diagnostics automatically begin testing the resource.</p>	<p>Follow the displayed instructions.</p> <p>If the No Trouble Found screen is displayed, press Enter.</p> <p>If another resource is tested, repeat this step.</p> <p>If the ADVANCED DIAGNOSTIC SELECTION menu is displayed, go to "Step 0020-11" on page 34.</p> <p>If an SRN is displayed, record it, and go to "Step 0020-15" on page 38. If an eight-digit error code is displayed, record it and go to the system unit's service guide and find the error in the "Error Code to FRU Index". Perform the listed action.</p>
<p>The system did not respond to selecting the Advanced Diagnostics option.</p>	<p>Go to "Step 0020-13" on page 36.</p>
<p>A system unit with a beeper did not beep while booting.</p>	<p>Record SRN 111-947 and then go to "Step 0020-15" on page 38.</p>
<p>The system unit emits a continuous sound from the beeper.</p>	<p>Record SRN 111-947 and then go to "Step 0020-15" on page 38.</p>
<p>An SRN, or six-digit error code containing no dash (-), or an eight-digit error code is displayed.</p>	<p>Record the error code, the FRU names, and the location code for the FRUs. If an SRN is displayed, go to "Step 0020-15" on page 38. If a six-digit error code containing no dash (-) or an 8-digit error code is displayed, go to either the system's or subsystem's service guide and find the error in the "Error Code to FRU Index". Perform the listed action.</p>
<p>The system stopped with a 3-digit or 4-digit code displayed in the operator panel display.</p>	<p>Record SRN 101-xxx (where xxx is the rightmost three digits of the displayed code). Go to "Step 0020-15" on page 38.</p>
<p>An 888 message is displayed in the operator panel display. Note: The 888 may or may not be flashing.</p>	<p>Go to "Chapter 9. MAP 0070: 888 Sequence in Operator Panel Display" on page 61.</p>

Step 0020-8

On the DIAGNOSTIC SELECTION or ADVANCED DIAGNOSTIC SELECTION menu, look through the list of resources to make sure that all adapters and SCSI devices are listed including any new resources.

Notes:

1. Resources attached to serial and parallel ports may not appear in the resource list.
2. ISA adapters cannot be detected by the system. The ISA Adapter Configuration Service Aid in Standalone Diagnostics allows the identification and configuration of ISA adapters.

3. If running diagnostics in a partition within a partitioned system, resources assigned to other partitions will not be displayed on the resource list.

Did you find the all the adapters or devices on the list?

NO Go to “Step 0020-9”.

YES Go to “Step 0020-11”.

Step 0020-9

Is the new device or adapter an exact replacement for a previous one installed at same location?

NO Go to “Step 0020-10”.

YES The replacement device or adapter may be defective. If possible, try installing it in an alternate location if one is available; if it works in that location, then suspect that the location where it failed to appear has a defective slot; schedule time to replace the hardware that supports that slot. If it does not work in alternate location, suspect a bad replacement adapter or device. If you are still unable to detect the device or adapter, contact your service support structure.

Step 0020-10

Is the operating system software to support this new adapter or device installed?

NO Load the operating system software.

YES The replacement device or adapter may be defective. If possible, try installing it in an alternate location if one is available; if it works in that location, then suspect that the location where it failed to appear has a defective slot; schedule time to replace the hardware that supports that slot. If it does not work in alternate location, suspect a bad replacement adapter or device. If you are still unable to detect the device or adapter, contact your service support structure.

Step 0020-11

Select and run the diagnostic test problem determination or system verification on one of the following:

- The resources with which the customer is having problems. If the resource is not shown on the DIAGNOSTIC SELECTION menu, then run diagnostics on its parent (the adapter or controller to which the resource is attached).
- The resources you suspect are causing a problem.
- All resources.

Find the response in the following table or follow the directions on the test results screen.

Diagnostic Response	Action
An SRN, six-digit error code containing no dash (-), or an eight-digit error code is displayed on the screen.	Record the error code, the FRU names, and the location code for the FRUs. If an SRN is displayed, go to "Step 0020-15" on page 38. If a six-digit error code containing no dash (-) or an 8-digit error code is displayed, go to either the system's or subsystem's service guide and find the error in the "Error Code to FRU Index." Perform the listed action.
The TESTING COMPLETE menu and the No trouble was found message are displayed, and you have not tested all of the resources.	Press Enter and continue testing other resources.
The TESTING COMPLETE menu and the No trouble was found message are displayed, and you have tested all of the resources.	Go to "Step 0020-14" on page 38. Note: If you have not run the sysplanar test, do so before going to "Step 0020-14" on page 38.
The system halted while testing a resource.	Record SRN 110-xxx, where xxx is the first three digits of the menu number displayed in the upper-right corner of the diagnostic menu screen. If no menu number is displayed, use "Chapter 36. FRU Cross-References" on page 607 to obtain the failing function code (FFC) for the device. Use the FFC code of the device for xxx. Go to "Step 0020-15" on page 38.
When running the Online Diagnostics, an installed device does not appear in the test list. Note: If the missing device is an ISA adapter or a device connected to an ISA adapter, the device is not listed until you configure it.	Ensure that the diagnostic support for the device was installed. The Display Configuration service aid can be used to determine whether diagnostic support is installed for the device. Record SRN 110-101. Go to "Step 0020-15" on page 38. Note: Supplemental diskettes may be required if service aids are run from Standalone Diagnostics.
The IBM ARTIC960 Quad T1/E1 Adapter diagnostics displays a message indicating that the interface board (PMC) is either not installed or is malfunctioning.	Install a PMC board if not already installed. When running Online Diagnostics on any of the IBM ARTIC960 family of adapters and the message indicates that the PMC (daughter board) is not installed, but it is installed, do the following: <ul style="list-style-type: none"> • Reseat the PMC board, then run diagnostics. • If the response is the same, replace the PMC and then go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.
The symptom was not found in the table.	Go back to the "Chapter 2. Start of Call MAP" on page 15.

Step 0020-12

The following step analyzes a console display problem.

Find your type of console display in the following table. Follow the instructions given in the Action column.

Type of Console Display	Action
TTY-type terminal	Be sure the TTY terminal attributes are set correctly. See "Running the Diagnostic Programs from a TTY Terminal" in "Chapter 25. Using Standalone and Online Diagnostics" on page 139. If you did not find a problem with the attributes, go to the documentation for this type of TTY terminal, and continue problem determination. If you do not find the problem, record SRN 111-259; then go the "Step 0020-15" on page 38.
Graphics display	Go to the documentation for this type of graphics display, and continue problem determination. If you do not find the problem, record SRN 111-82c; then go to "Step 0020-15" on page 38.
HMC (Hardware Management Console)	Go to MAP 1540 of the <i>HMC Maintenance Guide</i> . If HMC tests find no problem, there may be a problem with the communication between the HMC and the managed system. If the HMC communicates with the managed system through a network interface, verify whether the network interface is functional. If the HMC communicates with the managed system through the HMC interface, check the cable between the HMC and the managed system, if it is not causing the problem, suspect a configuration problem of the HMC communications setup."

Step 0020-13

There is a problem with the keyboard.

Find the type of keyboard you are using in the following table. Follow the instructions given in the Action column.

Keyboard Type	Action
Type 101 keyboard (U.S.). Identify by the size of the Enter key. The Enter key is in only one horizontal row of keys.	Record SRN 111-736, then go to "Step 0020-15" on page 38.
Type 102 keyboard (W.T.). Identify by the size of the Enter key. The Enter key extends into two horizontal rows.	Record SRN 111-922; then go to "Step 0020-15" on page 38.
Kanji-type keyboard. (Identify by the Japanese characters.)	Record SRN 111-923; then go to "Step 0020-15" on page 38.
TTY terminal keyboard	Go to the documentation for this type of TTY terminal and continue problem determination.

Keyboard Type	Action
HMC (Hardware Management Console)	<p>Go to MAP 1540 of the <i>HMC Maintenance Guide</i>. If HMC tests find no problem, there may be a problem with the communication between the HMC and the managed system. If the HMC communicates with the managed system through a network interface, verify whether the network interface is functional. If the HMC communicates with the managed system through the HMC interface, check the cable between the HMC and the managed system, if it is not causing the problem, suspect a configuration problem of the HMC communications setup.”</p>

Step 0020-14

The diagnostics did not detect a problem.

If the problem is related to either the system unit or the I/O expansion box, refer to the service guide for that unit.

If the problem is related to an external resource, use the problem determination procedures, if available, for that resource.

If a problem occurs when running Online Diagnostics but not when running the Standalone Diagnostics, suspect a software problem.

Check for the presence of supplemental diagnostic material, such as diskettes or documentation.

This is possibly a problem with software or intermittent hardware. If you think that you have an intermittent hardware problem, go to "Chapter 7. MAP 0040: Intermittent Problem Isolation" on page 49.

Step 0020-15

Take the following actions:

1. Handle multiple SRNs and error codes in the following order:
 - a. 8-Digit Error Codes. Multiple 8-digit error codes listings are not always in the correct order. See the "Error Code to FRU Index" in the system service guide to identify those error codes that require special handling.
 - b. SRNs in the range of A01-xxx to A1D-xxx.
 - c. SRNs with a source code other than F or G.
 - d. SRNs with a source code of F. Run Online diagnostics in Advanced and Problem Determination Mode to obtain maximum isolation.
 - e. SRNs with a source code of G.
 - f. Device SRNs and error codes (5-digit SRNs).

If a group has multiple SRNs, it does not matter which SRN is handled first.

2. Find the SRN in "Chapter 28. Using the SRN List" on page 237.

Note: If the SRN is not listed, look for it in the following:

- Any supplemental service manual for the device
- The diagnostic problem report screen for additional information
- The "Service Hints" service aid in "Chapter 25. Using Standalone and Online Diagnostics" on page 139
- The "CEREADME File" on page 128 (by using the Service Hints service aid)

3. Perform the action listed.

Step 0020-16

Refer to “Configuration Program Indicators” on page 211 for definitions of configuration program indicators. They are normally 0xxx on CHRP systems and Yxx on RSPC systems (where Y is a digit or character other than A or F).

Is a Configuration Program Indicator Displayed?

- NO** Go to the Entry MAP in the service guide.
- YES** Record SRN 101-xxx (where xxx is the rightmost three digits or characters of the Configuration Program Indicator). Go to “Step 0020-17”.

Step 0020-17

The physical location code, AIX location code, or device name displays on system units with a multiple-line operator panel display if AIX 4.3.3 or later is installed.

Is a physical location code or an AIX location code displayed on the operator panel display?

- NO** Go to “Step 0020-15” on page 38.
- YES** Record the location code, then go to “Step 0020-15” on page 38.

Chapter 5. MAP 0025: SCSI RAID Problem Determination Procedure

Purpose of This MAP

To determine if there is a problem with the SCSI RAID subsystem.

Step 0025-1

Determining the Status of the SCSI RAID Subsystem.

Ask the customer to determine the status of the RAID subsystem. Below is an example of this procedure:

1. Login as root (if not already root).
2. Type `smit pdam`.
3. Select **List PCI SCSI RAID Arrays**.
4. Select the adapter associated with the RAID upon which you want to do problem determination.
5. Press Enter.

Is the status of the RAID Array listed as optimal?

NO Go to "Step 0025-2".

YES Fix the problem; then go to "Step 0025-12" on page 43.

Step 0025-2

Is the status of the RAID Array listed as Degraded?

NO Go to "Step 0025-3".

YES Make a note of the failing drive Channel and ID, and go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101 to replace the drive on that channel.

Step 0025-3

Is the status of the RAID Array listed as Reconstructing?

NO Go to "Step 0025-5" on page 42.

YES Go to "Step 0025-4".

Step 0025-4

Is the RAID Array reconstructing but no percentage is shown?

NO Wait for the RAID Array to complete reconstructing, then go to "Step 0025-12" on page 43.

YES Go to "Step 0025-5" on page 42.

Step 0025-5

Is the status of the RAID Array listed as Defined?

NO Go to “Step 0025-11” on page 43.

YES Go to “Step 0025-6”.

Step 0025-6

Ask the customer to determine the status of the RAID adapter. For example, type:

```
lsdev -C -l sraidX
```

where X is the number of the corresponding RAID adapter.

Is the result of this command that adapter is listed in Defined state?

NO Go to “Step 0025-11” on page 43.

YES Go to “Step 0025-7”.

Step 0025-7

Ask the customer to remove the adapter and reconfigure it. For example, to remove the adapter type:

```
rmdev -l sraidX
```

and to reconfigure the adapter, type:

```
cfgmgr -l sraidX
```

where X is the number of the corresponding RAID adapter.

Did the adapter become Available?

No Go to “Step 0025-10” on page 43.

Yes Go to “Step 0025-8”.

Step 0025-8

Ask the customer to configure the defined disk array. An example of this procedure:

1. Type `smitty pdam`
2. Select **Configure a Defined PCI SCSI Disk Array**.
3. Select the defined array that you want to make available.
4. A message displays indicating the outcome of the procedure. Make a note of the message.
5. Press PF10 to exit.

Did the procedure fail?

NO Go to “Step 0025-9” on page 43.

YES Go to “Step 0025-10” on page 43.

Step 0025-9

Was the array listed in optimal state?

NO Using the new state of the array, go to “Step 0025-2” on page 41.

YES Go to “Step 0025-10”

Step 0025-10

Run Diagnostics on the RAID system.

1. Type `diag`.
2. Select **Advanced Diagnostic Routines**.
3. Select **System Verification**.
4. If any menus other than the **Advanced Diagnostics Selection** menu are displayed, follow their instructions.
5. When the **Advanced Diagnostic Selection** menu displays, select **scraidX** (where X is the ID of the SCSI RAID adapter). Press **F7**. (an alternative method of running steps 2-6 from AIX command line is to type `diag -v -d scraidX` where X is the ID of the SCSI RAID adapter).

Were any SRNs reported?

NO Contact your service support structure.

YES Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.

Step 0025-11

If the RAID array is not online, it is most likely due to multiple drive failures. If you believe that a failed drive is actually good, ask the customer to revive a failing drive. Below is an example of this procedure:

1. Login as root (if not already root).
2. Type `smit pdam`.
3. Select **Revive a failed Drive in a PCI SCSI Disk Array**.

If the drive can be recovered, it will be put into Reconstructing or Degraded mode, repeat “Step 0025-1” on page 41 using the indicated mode. If the drive cannot be recovered, go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101 to replace the drive.

Step 0025-12

1. Select **Advanced Diagnostic Routines**.
2. Select **Problem Determination**.
3. If any menus other than the **Advanced Diagnostics Selection** menu are displayed, follow their instructions.

4. When the **Advanced Diagnostic Selection** menu displays, select **scraidX** (where X is the ID of the SCSI RAID adapter). Press **F7**. (an alternative method of running substeps 2-6 from the AIX command line is to type `diag -d scraidX` where X is the ID of the SCSI RAID adapter).

If the resource is in use and you do not wish to take it offline, select **Testing Should Stop**. This will show information about the RAID subsystem including the address of the failing disk drives used by that SCSI RAID channel and ID.

Note: Problem determination will not be performed unless the device is NOT in use.

Were any SRNs reported?

No Go to “Step 0025-13”.

Yes Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.

Step 0025-13

1. Type `diag`
2. Select **Task Selection**
3. Select **Analyze Adapter Internal Log**

Are there any Hard or Media errors reported on specific drives?

No Go to “Step 0025-14” on page 45.

Yes Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101 to replace drives with media errors one at a time.

CAUTION:

Only for the 4-Channel PCI SCSI RAID adapter, drives will be decoded as channels 0-3 rather than channels 1-4. So if an error is indicated on channel 1 ID 4, the error is really on channel 2 ID 4.

Step 0025-14

Are there other RAID problems?

No No RAID problems were found. Exit this MAP.

Yes Contact your service support structure.

Chapter 6. MAP 0030: Additional Problem Determination

Purpose of This MAP

This MAP is used for problems that still occur after all FRUs indicated by the SRN or error code have been exchanged.

Step 0030-1

Some external devices (including rack drawers that contain devices) have their own problem-determination procedures. If the problem is related to an external device that has its own problem-determination procedure, run those procedures if not already run. If they do not correct the problem, continue with this MAP.

Step 0030-2

The problem may have been caused by a resource that has not been tested. System Checkout tests all resources. If the Online Diagnostics are installed and you are able to load them, then **All Resources** under the Diagnostic Selection menu should be run. If you get a different SRN, then look up the SRN in the SRN chapters and do the listed action. If you are unable to run **All Resources** under the Diagnostic Selection menu or you do not get another SRN when running it, continue with this MAP.

Step 0030-3

If the problem is related to a SCSI device, SCSI bus, or SCSI controller, go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53. If you are unable to isolate the problem with MAP 0050, continue with “Step 0030-4” on page 48.

Step 0030-4

1. Find the resource(s) that are identified by the SRN or error code in the following table.
2. Perform the first action listed for the resource.
3. If you exchange a FRU or change a switch setting, test the resource again.
4. If the action does not correct the problem, perform the next action until all actions have been tried. If an action says to exchange a FRU that you have already exchanged, go to the next action. If an action corrects the problem, go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.
5. If you perform all of the actions and do not correct the problem, check the Service Hints service aid for information. If the service aid does not help, call your service support structure.

Failing Resource	Repair Action
SCSI Device	Exchange the SCSI Controller. Replace the power supply.
Pluggable SCSI or IDE Controller	Exchange the planar into which the adapter is plugged.
Keyboard, tablet, mouse, dials, LPFK, diskette drive	Check the cable attaching the device to its adapter. If you do not find a problem, exchange the device's adapter.
Pluggable adapters, CPU cards, and controllers	<p>Determine whether the adapter contains any attached FRUs such as fuses, DRAMs, and crossover cables.</p> <ol style="list-style-type: none"> 1. Check or exchange any attached FRU on the resource. 2. If the adapter is plugged into a riser card, check or exchange the riser card. 3. Exchange the planar into which the adapter is plugged. <p>Note: To check for other FRUs, find the resource in “Chapter 36. FRU Cross-References” on page 607; then go to the FFC listed.</p>
System and I/O planars	Use MAP 1540 in the service guide for the system unit.
Built-In serial ports	Replace the Service Processor if present.
A device attached to the system by a cable and an adapter.	<ol style="list-style-type: none"> 1. Replace the adapter for the device. 2. Replace the cable to the device.
IDE Device	Replace the cable between the IDE controller and the device. If the IDE controller is packaged on a planar, replace that planar, otherwise replace the adapter containing the IDE controller.

Chapter 7. MAP 0040: Intermittent Problem Isolation

Purpose of This MAP

This MAP provides a structured way of analyzing intermittent problems. It consists of two tables: Hardware Symptoms and Software Symptoms.

Because software or hardware can cause intermittent problems, consider all symptoms relevant to your problem.

How to Use This MAP

This MAP contains information about causes of intermittent symptoms. In the following tables, find your symptoms, and read the list of things to check.

When you exchange a FRU, go to “Chapter 21. MAP 0410: Repair Checkout” on page 115 to check out the system.

Hardware Symptoms

Note: This table spans several pages.

Symptom of Hardware Problem	Things to Check For
Any hardware log entry in the error log.	Use the Hardware Error Report service aid to view the error log and check for: <ul style="list-style-type: none">• Multiple errors on devices attached to the same SCSI bus.• Multiple errors on devices attached to the same async adapter.• Multiple errors on internally installed devices only. Contact your service support structure for assistance with error report interpretation.
Hardware-caused system crashes	<ul style="list-style-type: none">• The connections on the CPU planar or CPU card• Memory modules for correct connections• Connections to the system planar.• Cooling fans operational• The environment for a too-high or too-low operating temperature.• Vibration: proximity to heavy equipment.• If available, run the system memory test from the System Management Services menu to check for intermittent memory problems.

Symptom of Hardware Problem	Things to Check For
System unit powers off a few seconds after powering On.	<ul style="list-style-type: none"> • Fan speed. Some fans contain a speed-sensing circuit. If one of these fans is slow, the power supply powers the system unit off. • Correct voltage at the outlet into which the system unit is plugged. • Loose power cables and fan connectors, both internal and external.
System unit powers off after running for more than a few seconds.	<ul style="list-style-type: none"> • Excessive temperature in the power supply area. • Loose cable connectors on the power distribution cables. • Fans turning at full speed after the system power has been on for more than a few seconds.
Only internally installed devices are failing.	<p>Check the following items that are common to more than one device:</p> <ul style="list-style-type: none"> • Ground connections on all of the disk drives and other types of drives installed. • Loose connections on the power cables to the planars, drives, fans, and battery. • System unit cooling. Is the input air temperature within limits? Are all the fans running at full speed? Are any of the vent areas blocked? • Signal cables to the diskette drives, and the power supply. • SCSI device signal cables for loose connectors and terminators. • Loose SCSI device address jumpers. • Possible contamination of any device that has a cleaning procedure. See the operator guide for cleaning instructions. • Excessive static electricity. • Correct voltage at the system unit power outlet

Symptom of Hardware Problem	Things to Check For
Only externally attached devices are failing.	<p>Check the following items that are common to more than one device.</p> <ul style="list-style-type: none"> • Check the SCSI signal cables to the devices for loose connectors and terminators. • Check devices that use jumpers to set the SCSI address for loose jumpers. • Check any device that has a cleaning procedure for contamination. See the operator guide for cleaning instructions. • Check for excessive static electricity. • Check the outlet that the device is plugged into for correct voltage. • Check the error log for entries for the adapter driving the failing devices. • Check the temperature of the devices. Are the cooling vents blocked? Are the fans running? • Check for other devices near the failing device that may be radiating noise (displays, printers, and so on).

Software Symptoms

Symptom of Software Problem	Things to Check For
Any symptom you suspect is related to software.	<p>Use the software documentation to analyze software problems.</p> <p>Be sure to check RETAIN® for known problems with your type of system unit or software.</p>
Software-caused system crashes	<p>Check the following software items:</p> <ul style="list-style-type: none"> • Is the problem only with one application program? • Is the problem only with one device? • Does the problem occur on a recently installed program? • Was the program recently patched or modified in any way? • Is the problem associated with any communication lines? • Check for static discharge occurring at the time of the failure.

Chapter 8. MAP 0050: SCSI Bus Problems

Purpose of This MAP

Use this MAP to analyze problems with a SCSI bus.

For additional information about this adapter, see the *Adapters, Devices, and Cable Information for Multiple Bus Systems*.

Considerations

- Remove power from the system before connecting and disconnecting cables or devices to prevent hardware damage or erroneous diagnostic results.
- Also, use this MAP for SCSI adapters that are built into system boards or I/O boards. Replace the system board or I/O board when the procedure calls for replacing the adapter.
- If the failure is a terminator power failure (SRNs xxx-226, xxx-240, xxx-800), always allow five minutes for the PTC to cool.
- The differential version of the adapter has socket-type terminators to support high-availability. If this is the adapter's configuration, the terminators would have been removed from the adapter. MAP steps requiring the removal of the cable from the adapter are inapplicable, since an adapter that is not terminated always fails diagnostics. Proper SCSI diagnostics require proper termination. If the configuration involves a Y-cable, leave it, with the appropriate terminator, attached to the adapter. Or, place an external differential terminator on the external port.
- If the system uses shared DASD or high-availability configuration, be sure that the other system sharing the devices is not using those devices. For additional information concerning high-availability configurations, see "Chapter 1. Service Hints" on page 1.
- For intermittent problems that cannot be resolved with this MAP, refer to "Chapter 1. Service Hints" on page 1.
- If the SCSI bus is attached to a RAID subsystem, refer to the RAID subsystem documentation for any problem determination.

Follow the steps in this MAP to isolate a SCSI bus problem.

Step 0050-1

Have recent changes been made to the SCSI configuration?

NO Go to "Step 0050-2" on page 54.

YES Go to "Step 0050-5" on page 54.

Step 0050-2

Are there any hot-swap devices controlled by the adapter?

NO Go to "Step 0050-3".

YES Go to "Step 0050-11" on page 56.

Step 0050-3

Are there any devices other than hot-swappable devices controlled by the adapter?

NO Go to "Step 0050-4".

YES Go to "Step 0050-13" on page 56.

Step 0050-4

Is an enclosure or drawer that supports hot-swap devices controlled by the adapter?

NO Go to "Step 0050-22" on page 60.

YES Go to "Step 0050-15" on page 58.

Step 0050-5

This step handles cases where recent changes have been made to the SCSI configuration.

Using the first three digits of the SRN, refer to the FFC listing and determine if the adapter is single-ended or differential.

Is the adapter a single-ended adapter?

NO Go to "Step 0050-6".

YES Go to "Step 0050-7" on page 55.

Step 0050-6

The adapter's termination jumper settings may be incorrect. Power off the system, and inspect Jumper J7. Refer to the "SCSI Cabling" section of the *Adapters, Devices, and Cable Information for Multiple Bus Systems* for the correct jumper settings.

Are the jumpers correct?

NO Go to "Step 0050-8" on page 55.

YES Go to "Step 0050-9" on page 55.

Step 0050-7

If the adapter *is not* being used in a high-availability configuration, be sure sockets RN1, RN2, and RN3 are populated.

If the adapter *is* being used in a high-availability configuration, be sure sockets RN1, RN2, and RN3 *are not* populated.

Go to “Step 0050-9”.

Step 0050-8

1. Correct the jumper settings and reinstall the adapter and all cables.
2. Power on the system, and run diagnostics on the adapter.

Did the diagnostic pass?

NO Go to “Step 0050-9”.

YES Go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

Step 0050-9

Check for the following problems:

- Address conflicts between devices.
- Cabling problems such as; configurations that exceed the maximum cable lengths, missing termination, or excessive termination.

Refer to the *Adapters, Devices, and Cable Information for Multiple Bus Systems* for more details about supported SCSI cabling.

Did you find a problem?

NO Go to “Step 0050-2” on page 54.

YES Go to “Step 0050-10”.

Step 0050-10

1. Correct the problem.
2. Power on the system, and run diagnostics on the adapter.

Did a failure occur?

NO Go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

YES Go to “Step 0050-2” on page 54.

Step 0050-11

This step determines if a hot-swap device is causing the failure.

1. Power off the system.
2. Disconnect all hot-swap devices attached to the adapter.
3. Power on the system, and boot the system in the same mode that you were in when you received the symptom that led you to this MAP.
4. If the Missing Options menu displays, select the **The resource has been turned off, but should remain in the system configuration** option for all the devices that were disconnected.
5. Run the diagnostics on the adapter.

Did a failure occur?

NO Go to "Step 0050-12".

YES Go to "Step 0050-3" on page 54.

Step 0050-12

Reconnect the hot-swap devices one at time. After reconnecting each device, follow this procedure:

1. Rerun the diagnostics on the adapter.
2. If the adapter fails, the problem may be with the last device reconnected. Perform these substeps:
 - a. Follow repair procedures for that last device.
 - b. Rerun diagnostics on the adapter.
 - c. If diagnostics fail, replace the SES backplane corresponding to the slot for the device.
 - d. Rerun diagnostics.
 - e. If diagnostics fail, put back the last device.
 - f. Rerun diagnostics on the adapter.
 - g. If diagnostics pass, go to "Chapter 21. MAP 0410: Repair Checkout" on page 115. Otherwise, contact your support center.
3. If no errors occur, the problem could be intermittent. Make a record of the problem. Running the diagnostics for each device on the bus may provide additional information.

Step 0050-13

This step determines if a device other than a hot-swappable device is causing the failure. Follow these steps:

1. Power off the system.
2. Disconnect all devices attached to the adapter.
3. Power on the system.
4. If the Missing Options menu displays, select the **The resource has been turned off, but should remain in the system configuration** option for all the devices that were disconnected.

5. Run the diagnostics on the adapter.

Did a failure occur?

NO Go to "Step 0050-14" on page 58.

YES Go to "Step 0050-4" on page 54.

Step 0050-14

Reconnect the devices one at time. After reconnecting each device, follow this procedure:

1. Rerun the diagnostics on the adapter.
2. If there is a failure, the problem should be with the last device reconnected. Follow the repair procedures for that device, then go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.
3. If no errors occur, the problem could be intermittent. Make a record of the problem. Running the diagnostics for each device on the bus may provide additional information.

Step 0050-15

This step determines if the SCSI Enclosure Services (SES) is the problem. Note that the SES is referred to as the DASD controller in some systems.

Refer to the system or enclosure service guide to determine if the SES (DASD controller) is a FRU that plugs into the backplane or is integrated on the backplane.

Does the SES (DASD controller) plug into the backplane?

NO Go to “Step 0050-18” on page 59.

YES Go to “Step 0050-16”.

Step 0050-16

Follow these steps:

1. Power off the system.
2. Remove the SES (DASD controller). Locate the SES (DASD controller) part number under FFC 199.
3. Power on the system.
4. If the Missing Options menu displays, select the **The resource has been turned off, but should remain in the system configuration** option for all the devices that were disconnected.
5. Run the diagnostics on the adapter.

Did a failure occur?

NO Go to “Step 0050-17”.

YES Go to “Step 0050-18” on page 59.

Step 0050-17

Follow these steps:

1. Power off the system.
2. Replace the SES (DASD controller).
3. Go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

Step 0050-18

Follow these steps:

1. Power off the system.
2. Disconnect all cables attached to the adapter. For SCSI differential adapters in a high-availability configuration, see “Considerations” on page 53.
3. Power on the system.
4. If the Missing Options menu displays, select the **The resource has been turned off, but should remain in the system configuration** option for all the devices that were disconnected.
5. Run the diagnostics on the adapter.

Did a failure occur?

NO Go to “Step 0050-19”.

YES Replace the adapter, then go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

Step 0050-19

Follow these steps:

1. Power off the system.
2. Reconnect the cables to the adapter.

Does the SES (DASD controller) plug into the backplane?

NO Go to “Step 0050-20”.

YES Go to “Step 0050-21” on page 60.

Step 0050-20

Follow these steps:

1. Replace the SES (DASD controller). Locate the SES (DASD controller) part number under FFC 199.
2. Power on the system.
3. If the Missing Options menu displays, select the **The resource has been turned off, but should remain in the system configuration** option for all the devices that were disconnected.
4. Run the diagnostics on the adapter.

Did a failure occur?

NO Go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

YES Go to “Step 0050-21” on page 60.

Step 0050-21

One of the cables remaining in the system is defective. Refer to FFC 190 for the cable part numbers. Replace the parts one at a time in the order listed. Follow these steps for each FRU replaced:

1. Rerun the diagnostics for the adapter.
2. If there is any failure, continue with the next FRU.
3. If there is no failure, go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Step 0050-22

Follow these steps:

1. Power off the system.
2. Disconnect all cables attached to the adapter.
3. Power on the system.
4. If the Missing Options menu displays, select the **The resource has been turned off, but should remain in the system configuration** option for all the devices that were disconnected.
5. Run the diagnostics on the adapter.

Did a failure occur?

NO Go to "Step 0050-23".

YES Replace the adapter, then go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Step 0050-23

One of the cables remaining in the system is defective. Refer to FFC 190 for the cable part numbers. Replace the parts one at a time in the order listed. Follow these steps for each FRU replaced:

1. Rerun the diagnostics for the adapter.
2. If there is any failure, continue with the next FRU.
3. If there is no failure, go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Chapter 9. MAP 0070: 888 Sequence in Operator Panel Display

Purpose of This MAP

An 888 sequence in operator panel display suggests that either a hardware or software problem has been detected and a diagnostic message is ready to be read.

Note: The 888 may or may not be flashing on the operator panel display.

Step 0070-1

Perform the following steps to record the information contained in the 888 sequence message.

1. Wait until the 888 sequence displays.
2. Record, in sequence, every code displayed after the 888. On systems with a 3-digit or a 4-digit operator panel, you will need to press the system's "reset" button to view the additional digits after the 888. Stop recording when the 888 digits reappear.
3. Go to "Step 0070-2".

Step 0070-2

Using the first code that you recorded, use the following list to determine the next step to use.

Type 102 Go to "Step 0070-3".

Type 103 Go to "Step 0070-4" on page 62.

Step 0070-3

A Type 102 message generates when a software or hardware error occurs during system execution of an application. Use the following information to determine the content of the type 102 message. Descriptions of the crash codes and the dump status codes are in "Chapter 27. Diagnostics Numbers and Location Codes" on page 211.

The message readout sequence is:

102 = Message type

RRR = Crash code (the three-digit code that immediately follows the 102)

SSS = Dump status code (the three-digit code that immediately follows the Crash code).

Record the Crash code and the Dump Status from the message you recorded in "Step 0070-1". For an explanation of the Dump Status or the Crash Codes, see "Chapter 27. Diagnostics Numbers and Location Codes" on page 211.

Are there additional codes following the Dump Status?

No Go to "Step 0070-5".

YES The message also has a type 103 message included in it. Go to "Step 0070-4" to decipher the SRN and field replaceable unit (FRU) information in the Type 103 message.

Note: Type 102 messages have no associated SRNs.

Step 0070-4

A Type 103 message generates upon hardware error detection. Use the following steps and information you recorded in "Step 0070-1" on page 61 to determine the content of the Type 103 message.

The message readout sequence is:

103 = Message type

(x)xxx (y)yyy = SRN

(where (x)xxx = the three- or four-digit code following the 103 and (y)yyy is the three- or four-digit code following the (x)xxx code).

1. Record the SRN and FRU location codes from the recorded message.
2. Find the SRN in the Service Request Number List and do the indicated action.

Note: The only way to recover from an 888 type of halt is to turn off the system unit.

Step 0070-5

Perform the following steps:

1. Turn off the system unit power.
2. Turn on the system unit power, and load the online diagnostics in service mode.
3. Wait until one of the following conditions occurs:
 - You are able to load the diagnostics to the point where the Diagnostic Mode Selection menu displays.
 - The system stops with an 888 sequence.
 - The system appears hung.

Is the Diagnostic Mode Selection menu displayed?

No Go to Entry MAP in the system unit service guide.

Yes Go to "Step 0070-6" on page 63.

Step 0070-6

Run the **sysplanar0** option under Advanced Diagnostics in Problem Determination Mode.

Was an SRN reported by the diagnostics?

- No** This is possibly a software-related 888 sequence. Follow the procedure for reporting a software problem.
- Yes** Record the SRN and its location code information. Find the SRN in the SRN Listing and do the indicated action.

Chapter 10. MAP 0080: System Bus Problem Isolation

Purpose of This MAP

Use this MAP to analyze a bus problem that does not prevent the system from booting.

Note: Some devices installed in the system may require the loading of supplemental diskettes for diagnostic support.

Step 0080-1

1. Perform a system shutdown and then, if necessary, turn off the system unit power.
2. Locate the diagnostic CD-ROM disc.
3. Turn on the system unit power, and then load the diagnostic CD-ROM disc into the CD-ROM drive.
4. Load the Standalone Diagnostics.
5. Wait until the "Please Define the System Console" screen displays or all system activity appears to have stopped.

Is the "Please Define the System Console" screen displayed?

No The symptom has changed. Use MAP 1540 in the system unit's service guide.

Yes Go to "Step 0080-2".

Step 0080-2

Follow the displayed instructions until the Installed Resources menu displays.

Are all of the installed PCI adapters listed on the Installed Resources menu?

No Go to "Step 0080-3" on page 66 and make a note of all PCI adapters not listed and their locations.

Yes You may have an intermittent problem. If you think that you have an intermittent problem, go to "Chapter 7. MAP 0040: Intermittent Problem Isolation" on page 49.

Step 0080-3

1. Perform a system shutdown, and then, if necessary, turn off the system unit power.
2. Remove all but one of the PCI adapters that was not listed on the Installed Resources menu.

Note: If only one adapter is present, do not remove it.

3. Turn on the system unit power, and load standalone diagnostics from the CD-ROM.
4. Wait until the "Please define the System Console" screen displays or all system activity appears to have stopped.

Is the "Please Define the System Console" screen displayed?

No The symptom has changed. Use MAP 1540 in the system unit's service guide.

Yes Go to "Step 0080-4".

Step 0080-4

Follow the displayed instructions until the Installed Resources menu displays.

Is the adapter that you did not remove shown as an installed resource?

No Record SRN 111-78C and make a note of the adapter you just installed. Look up the SRN in the SRN listings and perform the indicated action.

Yes Go to "Step 0080-5".

Step 0080-5

Have you installed all of the removed adapters?

No Go to "Step 0080-6".

Yes Call your service support structure.

Step 0080-6

1. Perform a system shutdown and then, if necessary, turn off the system unit power.
2. Install one of the remaining removed adapters into its original location.
3. Turn on the system unit power, and load Standalone Diagnostics from the CD-ROM.
4. Wait until the "Please Define the System Console" screen displays or all system activity appears to stop.

Is the "Please Define the System Console" screen displayed?

No The symptom has changed. Use MAP 1540 in the system unit's service guide.

Yes Go to "Step 0080-7" on page 67.

Step 0080-7

Follow the displayed instructions until the Installed Resources menu displays.

Is the adapter that you just installed shown as an installed resource?

- No** Record SRN 111-78C and make a note of the adapter you just installed. Look up the SRN in the SRN listings and perform the indicated action.
- Yes** Go to “Step 0080-5” on page 66.

Chapter 11. MAP 0210: General Problem Resolution

Purpose of This MAP

Use this MAP to exchange the FRUs in the order of their failure probability.

Step 0210-1

Read the following information before proceeding.

- Version 4.3.3 and later diagnostics display the part number and the physical location code, if available, on the Problem Report screen. The parts are listed in probability-of-failure order.
- Part numbers display if they are available from vital product data (VPD). If the part number displays, use it in place of the part number in the FFC List. In some cases, the part number provided by the VPD may be incorrect. In that case, use the part number in the FFC list.
- When identifying the location of a planar or a plug-in card, the physical location code may contain the failing FRU's extended location information. For additional information, see "Location Codes for RSPC Model Architecture System Units" on page 228, "Location Codes for CHRP Model Architecture System Units" on page 230, or the system unit's service guide.

Go to "Step 0210-2".

Step 0210-2

Find the failing function codes in the "Failing Function Code List" on page 534, and record the FRU part number and description of each FRU.

Do you want to exchange this FRU as a hot-plug FRU?

NO Go to "Step 0210-3".

YES Go to "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.

Step 0210-3

1. Referring to "Service Request Number Lists" on page 238, record the SRN source code and the failing function codes in the order of their listing.
2. Find the failing function codes in the "Failing Function Code List," refer to "Chapter 35. Failing Function Codes (FFCs)" on page 531, and record the part number and description for each FRU.
3. If the operating system is running, perform the operating system's shutdown procedure (get help if needed).
4. Turn off the system power.

Exchange one of the FRUs (normally the first one listed).

To verify the repair, find the SRN source code that you recorded in the following table. Go to the step indicated in the Action column.

SRN Source Code	Action
A	Go to "Step 0210-8" on page 72.
B	Go to "Step 0210-8" on page 72.
C	Go to "Step 0210-4".
D	Go to "Step 0210-8" on page 72.
E	Go to "Step 0210-8" on page 72.
F	Go to "Step 0210-8" on page 72.
G	Go to "Step 0210-14" on page 75.
H	Go to "Step 0210-17" on page 76.

Step 0210-4

The following steps handle the problems when the system does not detect a resource.

Note: Use the following substeps for the SRNs having source code: C.

1. Turn on the system power.
2. Load Online Diagnostics in Service Mode (refer to the system's service guide if needed).
3. Wait until the diagnostics are loaded or the system appears to stop.

Were you able to load the diagnostics?

NO The symptom has changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to the system unit's service guide.

YES Go to "Step 0210-5" on page 71.

Step 0210-5

1. Press Enter.
2. Select the **Advanced Diagnostics** option.

Note: If the terminal type is not defined, you are prompted to define it. You cannot continue until this is done.

3. When the DIAGNOSTIC MODE SELECTION menu displays, select **System Verification**.

Is the **MISSING RESOURCE** menu displayed?

NO This completes the repair. Go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

YES Go to “Step 0210-6”.

Step 0210-6

Look at the failing function codes and the FRU part numbers you recorded for this SRN.

Have you exchanged all the FRUs that correspond to the failing function codes?

NO Go to “Step 0210-7”.

YES The SRN did not identify the failing FRU. Go to “Chapter 6. MAP 0030: Additional Problem Determination” on page 47.

Step 0210-7

1. After performing a shutdown of the operating system, turn off the system unit power.
2. Remove the new FRU and install the original FRU.
3. Exchange the next FRU in the list.
4. Turn on the system unit power.
5. Load the Online Diagnostics in Service Mode. Refer to the system unit service guide if needed.
6. Wait until the diagnostics are loaded or the system appears to stop.

Were you able to load the diagnostics?

NO The symptom has changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to the system’s service guide.

YES Go to “Step 0210-5”, and repeat the steps.

Step 0210-8

Note: Run Online Diagnostics, if possible. If the system planar or battery has been replaced and you are loading diagnostics from a server over a network, it may be necessary for the customer to set the network boot information. The system time and date information should also be set when the repair is completed.

1. Turn on the system power.
2. Load either the Online or Standalone Diagnostics in Service Mode. Refer to the system's service guide if needed.
3. Wait until the diagnostics are loaded or the system appears to stop.

Were you able to load the diagnostics?

NO The symptom has changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 and get a new SRN.

YES Go to "Step 0210-9".

Step 0210-9

1. Press Enter.
2. Select the **Advanced Diagnostics Routines** option.

Note: If the terminal type is not defined, you are prompted to define it. You cannot continue until this is done.

3. If the MISSING RESOURCES menu displays, skip the next step and answer the question below. If it does not display, proceed to the next substep.
4. When the DIAGNOSTIC MODE SELECTION menu displays, select the **System Verification** option.

Is the ADVANCED DIAGNOSTIC SELECTION menu displayed?

NO Go to "Step 0210-15" on page 75.

YES Go to "Step 0210-10" on page 73.

Step 0210-10

Select and run the diagnostics for the FRU you exchanged. If the FRU you exchanged does not appear on the resource selection screen, select `sysplanar0`.

Note: The RESOURCE REPAIR ACTION menu allows a repair action to be logged for the resource being tested. This prevents Error Log Analysis from reporting problems on FRUs that have been replaced. If the RESOURCE REPAIR ACTION menu displays, perform the following:

1. Select the resource that has been replaced from the menu.
2. After all selections have been made, select Commit (F7 key).

Did the FRU pass the test?

NO Go to "Step 0210-11".

YES This completes the repair. Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Step 0210-11

Look at the failing function codes and FRU part numbers you recorded for this SRN.

Have you exchanged all the FRUs that correspond to the failing function codes?

NO Go to "Step 0210-12" on page 74.

YES The SRN did not identify the failing FRU. Go to "Chapter 6. MAP 0030: Additional Problem Determination" on page 47.

Step 0210-12

1. After performing a shutdown of the operating system, turn off the system unit power.
2. Remove the new FRU and install the original FRU.
3. Exchange the next FRU in the list.
4. Turn on the system unit power.
5. Load either the Online or Standalone Diagnostics in Service Mode. Refer to the system's service guide if needed.
6. Wait until the diagnostics are loaded or the system appears to stop.

Were you able to load the diagnostics?

- NO** The symptom has changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to the system's service guide.
- YES** Go to "Step 0210-13".

Step 0210-13

1. Press Enter.
2. Select the **Advanced Diagnostics Routines** option.
3. If the MISSING RESOURCES menu displays, skip the rest of these steps and answer the question below. If it does not display, proceed to the next substep.
4. When the DIAGNOSTIC MODE SELECTION menu displays, select the **System Verification** option.

Note: If the terminal type is not defined, you are prompted to define it. You cannot continue until this is done.

Is the ADVANCED DIAGNOSTIC SELECTION menu displayed?

- NO** Go to "Step 0210-15" on page 75.
- YES** Go to "Step 0210-10" on page 73.

Step 0210-14

Every time the **Problem Determination** option is selected from the Diagnostics Mode Selection menu, the error log for the preceding time period is analyzed, and problems are assigned the SRN source: G. Although a FRU may have already been replaced, based on that error log analysis, repeated selection of the **Problem Determination** option continues to reflect the same error for a period of time. The **System Verification** option does not perform error analysis. Ensure that the indicated failing FRU has not been replaced in the previous week.

Has the FRU called out by this SRN been replaced within the past week?

- NO** Go to “Step 0210-8” on page 72.
- YES** Disregard this SRN. If the **Problem Determination** option needs to be run, use the operating system’s **errclear** command to delete the error log entry for the replaced resource. If more information is needed, see the operating system Commands Reference. Go to “Chapter 4. MAP 0020: Problem Determination Procedure” on page 29.

Step 0210-15

Is the Missing Resource menu displayed?

- NO** The symptom has changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to the “Chapter 4. MAP 0020: Problem Determination Procedure” on page 29 and get a new SRN.
- YES** Go to “Step 0210-16”.

Step 0210-16

Follow the displayed instructions. When you finish processing the missing resources, answer the following:

Did you get an SRN?

- NO** Go to “Step 0210-22” on page 77.
- YES** Go to “Step 0210-21” on page 77.

Step 0210-17

The following steps handle the problem when the machine stops with an 888 sequence displayed in the operator panel display while it is loading diagnostics.

1. Power on the system and load the Online Diagnostics in Service Mode (refer to the system's service guide if needed).
2. Wait until one of the following conditions occurs and answer the question.
 - The machine stops for at least three minutes with a steady number in the operator panel display.
 - An 888 sequence displays in the operator panel display.
 - The operator panel display is blank.
 - The DIAGNOSTIC OPERATING INSTRUCTIONS displays.

Did the system stop with an 888 sequence in the operator panel display?

NO This completes the repair. Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

YES Go to "Step 0210-18".

Step 0210-18

1. Read out the message in the operator panel display. If needed see "Chapter 9. MAP 0070: 888 Sequence in Operator Panel Display" on page 61.
2. Find and record the SRN in the message.
3. Find and record the location codes for the FRUs in the message.

Are the SRN and the location codes the same as the SRN you were analyzing?

NO Go to "Step 0210-1" on page 69 and analyze the new SRN.

YES Go to "Step 0210-19".

Step 0210-19

Look at the failing function codes and FRU part numbers you recorded for this SRN.

Have you exchanged all the FRUs that correspond to the failing function codes?

NO Go to "Step 0210-20" on page 77.

YES The SRN did not identify the failing FRU. Go to "Chapter 6. MAP 0030: Additional Problem Determination" on page 47.

Step 0210-20

1. Set the power switch on the system unit to Off.
2. Remove the new FRU and install the original FRU.
3. Replace FRU parts in the order the FFCs are listed.
4. Power on the system.
5. Load the Online Diagnostics in Service Mode (refer to the system's service guide if needed).
6. Wait until one of the following conditions occurs and answer the question.
 - The machine stops for at least three minutes with a steady number in the operator panel display.
 - An 888 sequence displays in the operator panel display.
 - The operator panel display is blank.
 - The DIAGNOSTIC OPERATING INSTRUCTIONS displays.

Did the system stop with an 888 sequence in the operator panel display?

NO This completes the repair. Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

YES Go to "Step 0210-19" on page 76.

Step 0210-21

Is the SRN the Same as the Original SRN?

NO The symptom has changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to the "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 and get a new SRN.

YES Go to "Step 0210-22".

Step 0210-22

1. Exit the Missing Resources menu.
2. When the DIAGNOSTIC MODE SELECTION menu displays, select the **System Verification** option.
3. Go to "Step 0210-10" on page 73.

Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution

Purpose of This MAP

Use this MAP to exchange hot-swappable FRUs.

Attention: If the FRU is a disk drive or an adapter, ask the system administrator to perform any steps necessary to prepare the device for removal.

Step 0220-1

1. If the system displayed a FRU part number on the screen, use that part number to exchange the FRU.
If there is no FRU part number displayed on the screen, refer to the SRN listing. Record the SRN source code and the failing function codes in the order listed.
2. Find the failing function codes in the FFC listing, and record the FRU part number and description of each FRU.
3. Refer to the removal and replacements procedures in your system's service guide or the *PCI Adapter Placement Reference Guide* to determine if the FRU is hot-swappable.

Does this system unit support hot-swapping of the first FRU listed?

NO Go to MAP 0210.

YES Go to "Step 0220-2".

Step 0220-2

Is the FRU a hot-swap power supply or fan?

NO Go to "Step 0220-4" on page 80.

YES Go to "Step 0220-3".

Step 0220-3

Note: Refer to the system unit's service guide for removal and replacement procedures.

1. Remove the old FRU.
2. Install the new FRU.
3. Enter the **diag** command.

Go to "Step 0220-14" on page 82.

Step 0220-4

Is the FRU a hot-plug PCI adapter?

NO Go to "Step 0220-5".

YES Go to "Step 0220-12" on page 82.

Step 0220-5

Is the FRU a SCSI hot-plug device?

NO Go to "Step 0220-11" on page 81.

YES Go to "Step 0220-6".

Step 0220-6

Is the hot-plug drive located within a system unit?

NO Go to "Step 0220-8".

YES Go to "Step 0220-7".

Step 0220-7

Refer to the system's service guide in the "Removing Hot-Plug SCSI Disk Drives" section under "Removal and Replacement Procedures" for information about replacing hot-plug SCSI Disk Drives.

Go to "Step 0220-13" on page 82.

Step 0220-8

Does the hot-plug drive's enclosure have a system guide with procedures for Removing and Replacing hot-plug SCSI Disk drives?

NO Go to "Step 0220-9".

YES Use that procedure to remove the old hot-plug SCSI disk drive and replace it with a new hot-plug SCSI disk drive. Go to "Step 0220-13" on page 82.

Step 0220-9

1. Ask the customer to back up the data on the drive that you intend to replace onto another drive.
2. Verify that the disk drive has been removed from the operating system configuration. The amber LED on the hot-plug disk drive should be off.

Is the hot-plug disk drive's amber LED unlit?

NO Ask the customer to remove the hot-plug disk drive from the operating system configuration (refer them to System Management guide for more information).

YES Go to "Step 0220-10" on page 81.

Step 0220-10

Using the Hot-Plug Task service aid described in “Chapter 26. Introduction to Tasks and Service Aids” on page 163, replace the hot-plug drive using the following procedure:

1. Use the **List the SES Devices** option to show the configuration of the hot-plug slots. Identify the slot number of the adapter for the FRU you want to replace.
2. Select the **REPLACE/REMOVE a Device Attached to an SES Device** option.
3. Select the slot which contains the SCSI hot-plug drive you wish to replace. Press Enter. You will see a fast blinking green light on the front on the hot-plug drive indicating that it is ready for removal.

Note: Refer to service guide for the system unit or enclosure that contains the hot-plug drive for removal and replacement procedures.

4. Remove the old hot-plug drive.
5. Install the new hot-plug drive. Once the hot-plug drive is in place, press Enter.
6. Press the exit key. Wait while configuration is done on the drive, until you see the “hot-plug task” on the service aid menu.

Go to “Step 0220-15” on page 83.

Step 0220-11

Using the Hot Plug Task service aid described in “Chapter 26. Introduction to Tasks and Service Aids” on page 163, replace the hot-plug drive using the hot plug RAID service aid:

Note: The drive you wish to replace must be either a SPARE or FAILED drive. Otherwise, the drive would not be listed as an IDENTIFY AND REMOVE RESOURCES selection within the RAID HOT PLUG DEVICES screen. In that case you must ask the customer to put the drive into FAILED state. Refer them to the System Management Guide for more information. Ask the customer to back up the data on the drive that you intend to replace.

1. Select the **RAID HOT PLUG DEVICES** option within the **HOT PLUG TASK** under **DIAGNOSTIC SERVICE AIDS**.
2. Select the RAID adapter that is connected to the RAID array containing the RAID drive you wish to remove, then select **COMMIT**.
3. Choose the **IDENTIFY** option in the IDENTIFY AND REMOVE RESOURCES menu.
4. Select the physical disk which you wish to remove from the RAID array and press Enter.
5. The disk will go into the **IDENTIFY** state, indicated by a flashing light on the drive. Verify that it is the physical drive you wish to remove, then press Enter.
6. At the IDENTIFY AND REMOVE RESOURCES menu, choose the **REMOVE** option and press Enter.
7. A list of the physical disks in the system which may be removed will be displayed. If the physical disk you wish to remove is listed, select it and press Enter. The physical disk will go into the REMOVE state, as indicated by the LED on the drive. If the physical disk you wish to remove is not listed, it is not a SPARE or FAILED drive. Ask

the customer to put the drive in the FAILED state before you can proceed to remove it. Refer the customer to the System Management Guide for more information.

8. Refer to service guide for the system unit or enclosure that contains the physical drive for removal and replacement procedures for the following substeps:
 - a. Remove the old hot-plug RAID drive.
 - b. Install the new hot-plug RAID drive. Once the hot-plug drive is in place, press Enter. The drive will exit the REMOVE state, and will go to the NORMAL state once you exit diagnostics.

Note: There are no elective tests to run on a RAID drive itself under diagnostics (the drives are tested by the RAID adapter).

9. This completes the repair. Return the system to the customer. Ask the customer to add the physical disk drive to the original configuration within the RAID. Refer them to system management guide for more information.

Step 0220-12

Remove the old adapter FRU and install the new adapter FRU. Refer to the "Replacing a Hot-Pluggable PCI Adapter" section within the "Removal and Replacement Procedures" section of the system service guide. Enter the `diag` command.

Go to "Step 0220-14".

Step 0220-13

1. Enter the `diag` command.
2. Go to the FUNCTION SELECTION menu, select the **Advanced Diagnostics Routines** option.
3. When the DIAGNOSTIC MODE SELECTION menu displays, Select the **System Verification** option.

Does the hot-plug drive you just replaced appear on the resource list?

NO Go to "Chapter 11. MAP 0210: General Problem Resolution" on page 69 to replace the resource that the hot-plug drive is plugged in to.

YES Go to "Step 0220-14".

Step 0220-14

Run the diagnostic test on the hot-plug drive you just replaced.

Did the diagnostics run with no trouble found?

NO Go to "Step 0220-15" on page 83.

YES Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115. Before returning the system to the customer, ask the customer to add the hot-plug disk drive to the operating system configuration. Refer to system management guide for more information."

Step 0220-15

1. Use the **Log Repair Action** option in the TASK SELECTION menu to update the AIX error log. If the repair action was reseating a cable or adapter, select the resource associated with your repair action. If it is not displayed on the resource list, select **sysplanar0**.

Note: On systems with a Fault Indicator LED, this changes the Fault Indicator LED from the "Fault" state to the "Normal" state.

2. While in diagnostics, go to the FUNCTION SELECTION menu. Select the **Advanced Diagnostics Routines** option.
3. When the DIAGNOSTIC MODE SELECTION menu displays, select the **System Verification** option. Run the diagnostic test on the FRU you just replaced, or **sysplanar0**.

Did the diagnostics run with no trouble found?

NO Go to "Step 0220-16" on page 84.

YES If you changed the Service Processor or Network settings, restore the settings to the value they had prior to servicing the system. If you performed service on a RAID subsystem involving changing of the RAID adapter cache card or changing the configuration on RAID disks, ask the customer to run PCI SCSI Disk Array Manager using smitty to resolve the PCI SCSI RAID Adapter configuration. The following is an example of how the customer would resolve the configuration:

1. At the AIX command line, type `smitty pdam`.
2. On the "PCI SCSI Disk Array Manager" screen, select **RECOVERY OPTIONS**.
3. If a previous configuration exists on the replacement adapter, this must be cleared. Select Clear PCI SCSI RAID Adapter Configuration. Press F3.
4. On the "Recovery Options" screen, select **RESOLVE PCI SCSI RAID ADAPTER CONFIGURATION**.
5. On the "Resolve PCI SCSI RAID Adapter Configuration" screen, select **ACCEPT CONFIGURATION** on **DRIVES**.
6. On the PCI SCSI RAID Adapter selection menu, select the adapter that you changed.
7. On the next screen, press Enter.
8. When you get the "Are You Sure?" selection menu, press Enter to continue.
9. You should get an OK status message when the recovery is complete. If you get a Failed status message, verify that you are doing recovery on the correct adapter, then do this complete procedure. When you complete the recovery, exit smitty to return to the AIX command line.

Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Step 0220-16

Does the original problem persist?

- NO** If a FRU was replaced, run the Log Repair Action service aid under the Online Diagnostics for the resource that was replaced. If the resource associated with your action is not displayed on the Resource List, select **sysplanar0**. If steps were taken to make the device ready for removal, inform the System Administrator of the steps required to return the system to the original state. Go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.
- YES** Go to “Step 0220-17”.

Step 0220-17

Have you exchanged all the FRUs that correspond to the failing function codes?

- NO** Go to “Step 0220-18”.
- YES** The SRN did not identify the failing FRU. Schedule a time to run diagnostics in service mode. If the same SRN is reported in service mode, go to “Chapter 6. MAP 0030: Additional Problem Determination” on page 47.

Step 0220-18

Note: Before proceeding, remove the FRU you just replaced and install the original FRU in it's place.

Does the system unit support hot-swapping of the next FRU listed?

- NO** Go to “Chapter 11. MAP 0210: General Problem Resolution” on page 69.
- YES** The SRN did not identify the failing FRU. Schedule a time to run diagnostics in service mode. If the same SRN is reported in service mode, go to “Step 0220-14” on page 82.


Chapter 13. MAP 0230: Platform Error Problem Resolution

Purpose of This MAP

Use this MAP to resolve problems reported by SRNs A00-000 to A1F-FFF.

Step 0230-1

1. The last character of the SRN is bit-encoded as follows:

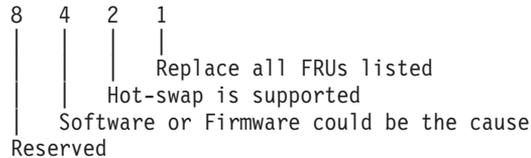

2. Refer to the last character in the SRN. A 4, 5, 6, or 7 indicates a possible software or firmware problem.

Does the last character indicate a possible software or firmware problem?

NO Go to "Step 0230-4" on page 86.

YES Go to "Step 0230-2".

Step 0230-2

Ask the customer if any software or firmware has been installed recently.

Has any software or firmware been installed recently?

NO Go to "Step 0230-4" on page 86.

YES Go to "Step 0230-3".

Step 0230-3

Suspect the new software or firmware.

Check with your support center for any known problems with the new software or firmware.

Are there any known problems with the software or firmware?

NO Go to "Step 0230-4" on page 86.

YES Obtain and follow the procedure to correct the software problem. This completes the repair.

Step 0230-4

Were any FRUs reported with the SRN?

NO Go to "Step 0230-5".

YES Go to "Step 0230-8".

Step 0230-5

Run the diagnostics in problem determination mode on **sysplanar0**.

Were there any FRUs reported with the SRN?

NO Go to "Step 0230-6".

YES Go to "Step 0230-8".

Step 0230-6

Were there any other SRNs that begin with an A00 to A1F reported?

NO Go to "Step 0230-7".

YES Go to "Step 0230-1" on page 85 and use the new SRN.

Step 0230-7

Attempt to boot the system on slow boot mode.

If the system boots, run the diagnostics in problem determination mode on **sysplanar0**

Were any new error codes or SRNs reported?

NO Call your support center.

YES Follow the procedure for the new error code or SRN.

Step 0230-8

1. Obtain the list of physical location codes and FRU numbers that were listed on the Problem Report Screen. The list can be obtained by running the **sysplanar0** diagnostics or using the **Display Previous Diagnostic Results** task.
2. Record the physical location codes and FRU numbers.
3. Refer to the last character in the SRN. A 2, 3, 6, or 7 indicates that hot-swap is possible.

Does the last character indicate that hot-swap is possible?

NO Go to "Step 0230-9".

YES Go to "Step 0230-13" on page 89.

Step 0230-9

1. If the operating system is running, perform the operating system's shutdown procedure.

2. Turn off power to the system.
3. Refer to the last character in the SRN. A 1, 3, 5, or 7 indicates that all FRUs listed on the Problem Report Screen need to be replaced. For SRNs ending with any other character, exchange one FRU at a time, in the order listed.
4. Turn on power to the system.
5. Load Online Diagnostics in service mode (see the system's service guide if needed).

Note: If the Diagnostics Operating Instructions do not display or you are unable to select the **Task Selection** option, check for loose cards, cables, and obvious problems. If you do not find a problem, go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 and get a new SRN.

6. Wait until the **Diagnostics Operating Instructions** are displayed or the system appears to stop.
7. Press Enter.
8. Select the **Task Selection** option.
9. Select the **Log Repair Action** option.
10. Log a repair action for each replaced resource.
11. If the resource associated with your repair action is not displayed on the resource list, select **sysplanar0**.
12. Return to the Task Selection Menu.
13. Select **Run Exercisers** and run the short exercisers on all the resources.

Note: On a partitioned system, if the FRU you replaced contains resources that may be allocated to different partitions (for example, if the FRU is a MCM containing multiple processors, where the processors may be assigned to different partitions) you may wish to also run exercisers on those other partitions containing these resources in addition to running them in the partition that reported the SRN.

14. After the exercisers are complete, return to the Task Selection menu.
15. Select **Run Error Log Analysis** and run analysis on all the resources.

Was a problem reported?

NO The repair is complete. Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

YES Go to "Step 0230-10".

Step 0230-10

Is the problem the same as the original problem?

NO The symptom has changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 and get a new SRN.

YES Go to "Step 0230-11" on page 88.

Step 0230-11

Look at the physical location codes and FRU part numbers you recorded.

Have you exchanged all the FRUs that were listed?

NO Go to “Step 0230-12”.

YES The SRN did not identify the failing FRU. Call your support person for assistance.

Step 0230-12

1. After performing a shutdown of the operating system, turn off power to the system.
2. Remove the new FRU and install the original FRU.
3. Exchange the next FRU in list.
4. Turn on power to the system.
5. Load Online Diagnostics in service mode (see the system’s service guide if needed).

Note: If the Diagnostics Operating Instructions do not display or you are unable to select the **Task Selection** option, check for loose cards, cables, and obvious problems. If you do not find a problem, go to “Chapter 4. MAP 0020: Problem Determination Procedure” on page 29 and get a new SRN.

6. Wait until the Diagnostics Operating Instructions are displayed or the system appears to stop.
7. Press Enter.
8. Select the **Task Selection** option.
9. Select the **Log Repair Action** option.
10. Log a repair action for each replaced resource.
11. If the resource associated with your action does not appear on the Resource List, select **sysplanar0**.
12. Return to the Task Selection Menu.
13. Select **Run Exercisers** and run the short exerciser on all the resources.
14. After the exercisers are complete, return to the Task Selection Menu.
15. Select **Run Error Log Analysis** and run analysis on all the resources.

Was a problem reported?

NO The repair is complete. Go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

YES Go to “Step 0230-10” on page 87.

Step 0230-13

The FRUs can be hot-swapped. If you do not want to use the hot-swap, go to “Step 0230-9” on page 86.

Note: See the hot-swap procedures in the “Removal and Replacement” section of your system unit’s service guide.

1. Refer to the last character in the SRN. A 1, 3, 5, or 7 indicates that all FRUs listed on the Problem Report Screen must be replaced. For SRNs ending with any other character, exchange one FRU at a time, in the order listed.
2. If available, use the CE Login and enter the **diag** command.

Note: If CE Login is not available, have the system administrator enter superuser mode and then enter the **diag** command.

3. After the Diagnostics Operating Instructions display, press Enter.
4. Select the **Task Selection** option.
5. Select the **Log Repair Action** option.
6. Log a repair action for each replaced resource.
7. If the resource associated with your action is not displayed on the Resource List, select **sysplanar0**.
8. Return to the Task Selection menu.
9. Select **Run Exercisers** and run the short exerciser on all resources.
10. After the exercisers are complete, return to the Task Selection Menu.
11. Select **Run Error Log Analysis** and run analysis on all the replaced resources.

Was a problem reported?

NO The repair is completed. Return the system to the customer.

YES Go to “Step 0230-14”.

Step 0230-14

Is the problem the same as the original problem?

NO The symptom has changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to “Chapter 4. MAP 0020: Problem Determination Procedure” on page 29 and get a new SRN.

YES Go to “Step 0230-15” on page 90.

Step 0230-15

Look at the physical location codes and FRU part numbers you recorded.

Have you exchanged all the FRUs that were listed?

NO Go to "Step 0230-16".

YES The SRN did not identify the failing FRU. Call your support person for assistance.

Step 0230-16

1. Remove the new FRU and install the original FRU.
2. Exchange the next FRU in the list.
3. Return to the Task Selection Menu.
4. Select the **Log Repair Action** option.
5. Log a repair action for each replaced resource.
6. If the resource associated with your action is not displayed on the Resource List, select **sysplanar0**.
7. Return to the Task Selection Menu.
8. Select **Run Exercisers** and run the short exercisers on all resources.
9. After the exercisers are complete, return to the Task Selection Menu.
10. Select **Run Error Log Analysis** and run analysis on all exchanged resources.

Was a problem reported?

NO The repair is complete. Return the system to the customer.

YES Go to "Step 0230-14" on page 89.

Chapter 14. MAP 0240: Memory Problem Resolution

Purpose of This MAP

This MAP handles memory problems.

Step 0240-1

1. If the system displayed a FRU part number on the screen, use that part number to exchange the FRU.
If there was no FRU part number displayed on the screen, find your SRN in the “Service Request Number List” on page 241.
2. Record the SRN source code and the failing function codes in the order of their listing.
3. Find the function codes in the “Failing Function Code List” on page 534 and record the part number and description for each FRU.
4. If the operating system is running, perform the operating system’s shutdown procedure (get help if needed).
5. Turn off the system power.

Exchange the first FRU listed.

Notes:

1. If more than one memory module is listed, replace all the listed memory modules simultaneously.
2. If the SRN table lists multiple FRUs, (other than memory modules) exchange the FRUs one at a time based on the order listed. If an exchanged FRU does not fix the problem, reinstall the original FRU, and then replace the next FRU listed when directed by the MAPs.

Go to “Step 0240-2”.

Step 0240-2

1. Turn off the system power.
2. Load either the Online or Standalone Diagnostics in Service Mode (refer to the system’s service guide if needed).
3. Wait until the diagnostics are loaded or the system appears to stop.

Were you able to load the diagnostics?

NO The symptom has changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to the system unit’s service guide.

YES Go to “Step 0240-3” on page 92.

Step 0240-3

1. Press Enter.
2. When the FUNCTION SELECTION menu is displayed, select the **Advanced Diagnostics** option.

Note: If the terminal type is not defined, you are prompted to define it. You cannot continue until this is done.

3. When the DIAGNOSTIC MODE SELECTION menu is displayed, select the **System Verification** option.
4. If the ADVANCED DIAGNOSTIC SELECTION menu is displayed, select the **sysplanar0** option. If the RESOURCE SELECTION MENU is displayed, select **Memory test**.

Did the test pass?

NO Go to "Step 0240-4".

YES This completes the repair. Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Step 0240-4

Have you exchanged all the FRUs that correspond to the failing function codes?

NO Go to "Step 0240-5".

YES Go to "Step 0240-7" on page 93.

Step 0240-5

1. After performing a system shutdown, turn off the system power.
2. Remove the new FRU and install the original FRU.
3. Exchange the next FRU in the list. If more than one memory module is listed, replace all of the memory modules simultaneously.
4. Turn on the system power.
5. Load either the Online or Standalone Diagnostics in Service Mode (refer to the system unit's service guide if needed).
6. Wait until the diagnostics are loaded or the system appears to stop.

Were you able to load the diagnostics?

NO The symptom has changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to the system unit's service guide.

YES Go to "Step 0240-6" on page 93.

Step 0240-6

1. Press Enter.
2. When the Function Selection menu is displayed, select the **Advanced Diagnostics** option.

Note: If the terminal type is not defined, you are prompted to define it. You cannot continue until this is done.

3. Select the **Advanced Diagnostics** option.
4. When the DIAGNOSTIC MODE SELECTION menu displays, select the **System Verification** option.
5. If the ADVANCED DIAGNOSTIC SELECTION menu is displayed, select the **sysplanar0** option. If the RESOURCE SELECTION MENU is displayed, select **Memory test**.

Did the test pass?

NO Go to “Step 0240-4” on page 92, and repeat the steps.

YES This completes the repair. Go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

Step 0240-7

Look at the FRU descriptions you recorded for this SRN.

Is the only FRU identified by this SRN a memory module?

NO The SRN did not identify the failing FRU. Call your support person.

YES Go to “Step 0240-8”.

Step 0240-8

1. After performing a shutdown, turn off the system power.
2. Exchange the planar or memory card that contains the memory module.
3. Turn on the system power.
4. Load either the Online or Standalone Diagnostics in Service Mode (refer to the system unit’s service guide if needed).
5. Wait until the diagnostics are loaded or the system appears to stop.

Were you able to load the diagnostics?

NO The symptom has changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to the system unit’s service guide.

YES Go to “Step 0240-9” on page 94.

Step 0240-9

1. Press Enter.
2. When the Function Selection menu is displayed, select the **Advanced Diagnostic** option.

Note: If the terminal type is not defined, you are prompted to define it. You cannot continue until this is done.

3. When the DIAGNOSTIC MODE SELECTION menu is displayed, select the **System Verification** option.
4. If the ADVANCED DIAGNOSTIC SELECTION menu is displayed, select the **sysplanar0** option. If the RESOURCE SELECTION MENU is displayed, select **Memory test**.

Did the test pass?

NO The SRN did not identify the failing FRU. Call your support person.

YES This completes the repair. Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Chapter 15. MAP 0250: Unexpected System Halts During Diagnostics

Purpose of This MAP

This MAP handles unexpected system halts that occur while running the diagnostic programs. Go to “Step 0250-1”.

Step 0250-1

The last three or four digits of the SRN following the dash (-) match a failing function code number. Refer to “Failing Function Code List” on page 534 and find the failing function code that matches the last three digits of your SRN. Record the FRU part number and description.

Does this system unit contain only one of this kind of FRU?

NO Go to “Step 0250-2”.

YES Go to “Step 0250-3”.

Step 0250-2

One of the multiple FRUs of this kind is defective.

Remove this kind of FRU one at a time. Test the system unit after each FRU is removed. When the test is successful or all FRUs of this kind have been removed.

Were you able to identify a failing FRU?

NO Go to MAP 1540 in the system unit’s service guide.

YES Go to “Step 0250-3”.

Step 0250-3

1. Turn off the system unit power.
2. Exchange the FRU identified in “Step 0250-2” or the FRU identified by the last three or four digits of the SRN following the dash (-).
3. Turn on the system power.
4. Load either the Online or Standalone Diagnostics in Service Mode (refer to the system unit’s service guide if needed).
5. Wait until the diagnostics are loaded or the system appears to stop.

Were you able to load the diagnostics?

NO The symptom changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to the system unit's service guide.

YES Go to "Step 0250-4".

Step 0250-4

1. Press Enter.
2. When the FUNCTION SELECTION menu is displayed, select the **Advanced Diagnostics** option.

Note: If the terminal type is not defined, you are prompted to define it. You cannot continue until this is done.

3. When the DIAGNOSTIC MODE SELECTION menu is displayed, select the **System Verification** option.

Did the ADVANCED DIAGNOSTIC SELECTION menu display?

NO The symptom changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29 and get a new SRN.

YES Go to "Step 0250-5".

Step 0250-5

Run diagnostics on the FRU that you exchanged.

Did the FRU pass the test?

NO Contact your support person.

YES This completes the repair. Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Chapter 16. MAP 0260: System Hangs During Resource Configuration

Purpose of This MAP

This MAP handles problems when the system unit hangs while configuring a resource.

Step 0260-1

The last three or four digits of the SRN following the dash (-) match a failing function code number.

Look at the “Failing Function Code List” on page 534 and find the failing function code that matches the last three digits of your SRN. Record the FRU part number and description (use the first FRU part listed when multiple FRUs are listed).

The physical location code, AIX location code, or device name displays on system units with multiple-line LCD operator panel display if AIX 4.3.3 or higher operating system is installed.

Do you have either a physical location code or AIX location code displayed?

NO Go to “Step 0260-4” on page 98.

YES Go to “Step 0260-2”.

Step 0260-2

Are there any FRUs attached to the device described by the physical location code or AIX location code?

No Go to “Step 0260-6” on page 99

Yes Go to “Step 0260-3”

Step 0260-3

Remove this kind of FRU attached to the device described in the location code one at a time. Note whether the system still hangs after each device is removed. Do this until you no longer get a hang, or all attached FRUS have been removed from the adapter or device.

Has the symptom changed?

No Go to “Step 0260-6” on page 99

Yes Use the location code of the attached device that you removed when the symptom changed, and go to “Step 0260-6” on page 99.

Step 0260-4

Does your system unit contain only one of this kind of FRU?

NO Go to "Step 0260-5".

YES Go to "Step 0260-6" on page 99.

Step 0260-5

One of the FRUs of this kind is defective.

Remove this kind of FRU one at a time. Test the system unit after each FRU is removed. When the test completes successfully or when you have removed all of the FRUs of this kind.

Were you able to identify a failing FRU?

NO Go to MAP 1540 in the service guide for this system unit.

YES Go to "Step 0260-6" on page 99.

Step 0260-6

1. Turn off the system unit.
2. Exchange the FRU identified by the location code or “Step 0260-5” on page 98.

Is this system capable of running online diagnostics in Service Mode?

NO Go to “Step 0260-7”.

YES Go to “Step 0260-8”.

Step 0260-7

1. Turn on the system unit.
2. Load the Standalone diagnostics (if needed, refer to the Service Guide).
3. Wait until the Diagnostic Operating Instructions display or the system appears to have stopped.

Are the DIAGNOSTIC OPERATING INSTRUCTIONS displayed?

NO Go to “Step 0260-9”.

YES Go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

Step 0260-8

1. Turn on the system unit.
2. Load the Online Diagnostics in Service Mode (if needed, refer to the Service Guide).
3. Wait until the Diagnostic Operating Instructions display or the system appears to have stopped.

Are the DIAGNOSTIC OPERATING INSTRUCTIONS displayed?

NO Go to “Step 0260-9”.

YES Go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

Step 0260-9

Look at the operator panel display.

Is the number displayed the same as the last three or four digits after the dash (-) of your SRN?

NO The symptom changed. Check for loose cards, cables, and obvious problems. If you do not find a problem, go to “Chapter 4. MAP 0020: Problem Determination Procedure” on page 29 and get a new SRN.

YES Go to “Step 0260-10” on page 100.

Step 0260-10

Was the FRU you exchanged an adapter or a planar?

NO Go to "Step 0260-11".

YES Go to MAP 1540 in the service guide for this system unit.

Step 0260-11

Was the FRU you exchanged a device?

NO Go to MAP 1540 in the service guide for this system unit.

YES Go to "Step 0260-12".

Step 0260-12

The adapter for the device may be causing the problem.

1. Turn off the system unit.
2. Exchange the adapter for the device.

Note: If the AIX operating system is not used on the system, start diagnostics from an alternate source.

3. Turn on the system unit. If c31 is displayed, follow the displayed instructions to select a console display.
4. Load the Online Diagnostics in Service Mode (if needed, refer to the service guide).
5. Wait until the DIAGNOSTIC OPERATING INSTRUCTIONS display or the system appears to have stopped.

Are the DIAGNOSTIC OPERATING INSTRUCTIONS displayed?

NO Go to MAP 1540 in the service guide for this system unit.

YES Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification

Purpose of This MAP

Use this MAP to Resolve SCSI RAID Adapter, Cache, or drive problems.

Note: This MAP assumes that the RAID adapter and drive microcode is at the correct level. To check microcode level, see “SCSI RAID Descriptions and Diagnostic Procedures” on page 156.

Attention: If the FRU is a disk drive or an adapter, ask the system administrator to perform any steps necessary to prepare the device for removal.

Step 0270-1

1. If the system displayed a FRU part number on the screen, use that part number. If there is no FRU part number displayed on the screen, refer to the SRN listing. Record the SRN source code and the failing function codes in the order listed.
2. Find the failing function codes in the FFC listing, and record the FRU part number and description of each FRU.

Go to “Step 0270-2”.

Step 0270-2

Is the FRU a RAID drive?

NO Go to “Step 0270-6” on page 104.

YES Go to “Step 0270-3” on page 102.

Step 0270-3

If the RAID drive you want to replace is not already in the **failed** state, then ask the customer to run the **PCI SCSI Disk Array Manager** using **smit** to fail the drive that you wish to replace. An example of this procedure is:

1. Login as root.
2. Type `smit pdam`.
3. Select **Fail a Drive in a PCI SCSI Disk Array**.
4. Select the appropriate disk array by placing the cursor over that array and press Enter.
5. Select the appropriate drive to fail based on the Channel and ID called out in diagnostics.
6. The **Fail a Drive** screen will appear. Verify that you are failing the correct drive by looking at the Channel ID row. Press Enter when verified correct. Press Enter again.
7. Press **F10** and type `smit pdam`
8. Select **"Change/Show PCI SCSI RAID Drive Status -> Remove a Failed Drive**
9. Select the drive that just failed.

Go to "Step 0270-4" Step 270-4

Step 0270-4

Using the Hot Plug Task service aid described in "Hot Plug Task" on page 191, replace the RAID drive using the RAID HOT PLUG DEVICES service aid:

Note: The drive you wish to replace must be either a SPARE or FAILED drive. Otherwise, the drive would not be listed as an IDENTIFY AND REMOVE RESOURCES selection within the RAID HOT PLUG DEVICES screen. In that case you must ask the customer to put the drive into FAILED state. Refer them to the *System Management Guide* for more information.

1. Select the RAID HOT PLUG DEVICES option within the HOT PLUG TASK under DIAGNOSTIC SERVICE AIDS.
2. Select the RAID adapter that is connected to the RAID array containing the RAID drive you wish to remove, then select COMMIT.
3. Choose the IDENTIFY option in the IDENTIFY AND REMOVE RESOURCES menu.
4. Select the physical disk which you wish to remove from the RAID array and press Enter.
5. The disk will go into the IDENTIFY state, indicated by a flashing light on the drive. Verify that it is the physical drive you wish to remove, then press Enter.
6. At the IDENTIFY AND REMOVE RESOURCES menu, choose the REMOVE option and press Enter.
7. A list of the physical disks in the system which may be removed will be displayed. If the physical disk you wish to remove is listed, select it and press Enter. The physical disk will go into the REMOVE state, as indicated by the LED on the drive. If the physical disk you wish to remove is not listed, it is not a SPARE or FAILED

drive. Ask the customer to put the drive in the FAILED state before you can proceed to remove it. Refer the customer to the *System Management Guide* for more information.

8. Refer to *Service Guide* for the system unit or enclosure that contains the physical drive for removal and replacement procedures for the following substeps:
 - a. Remove the old hot-plug RAID drive.
 - b. Install the new hot-plug RAID drive. Once the hot-plug drive is in place, press Enter. The drive will exit the REMOVE state, and will go to the NORMAL state once you exit diagnostics.

Note: There are no elective tests to run on a RAID drive itself under diagnostics (the drives are tested by the RAID adapter).

Go to “Step 0270-5” on page 104

Step 0270-5

If the RAID did not begin reconstructing automatically, then perform the steps that follow.

Adding a Disk to the RAID array and Reconstructing:

Ask the customer to run the PCI SCSI Disk Array Manager using **smit**. An example of this procedure is:

1. Login as root.
2. Type `smit pdam`.
3. Select **Change/Show PCI SCSI RAID Drive Status**.
4. Select **Add a Spare Drive**.
5. Select the appropriate adapter.
6. Select the Channel and ID of the drive which was replaced.
7. Press Enter when verified.
8. Press **F3** until you are back at the **Change/Show PCI SCSI RAID Drive Status** screen.
9. Select **Add a Hot Spare**
10. Select the drive you just added as a spare.
11. If there was no hot spare previously installed in the array then the array will begin reconstructing immediately. Reconstruction time will vary based on the size of the RAID array. Allow 1-2 hours for completion.

To check the progress of the reconstruction:

1. Login as root.
2. Type `smit pdam`.
3. Select **List PCI SCSI RAID Arrays**.
4. Choose the array containing the drive you replaced.
If the state of the RAID Array is reconstructing then it is in process of reconstructing. If it is optimal, then reconstruction has completed.
5. Press **F10** to exit.

Go to "Step 0270-17" on page 108.

Step 0270-6

Is the FRU a RAID adapter base card, RAID adapter cache card, or RAID adapter battery?

- NO** Go to "Step 0270-15" on page 107.
- YES** Go to "Step 0270-7" on page 105.

Step 0270-7

Do you want to change the FRU using a hotplug operation?

- No** Power down the system, and remove the RAID adapter, if necessary refer to the Removal and Replacement Procedures section of the system *Service Guide*. Go to “Step 0270-8”.
- Yes** Remove the RAID adapter, if necessary refer to the **Replacing a Hot-Pluggable PCI Adapter** within the Removal and Replacement Procedures section of the system *Service Guide*. Go to “Step 0270-8”.

Step 0270-8

Is the FRU you want to replace a RAID adapter cache card or RAID adapter battery?

- NO** Go to “Step 0270-10”.
- YES** Go to “Step 0270-9”.

Step 0270-9

Replace the FRU onto the existing base card.

Go to “Step 0270-11”.

Step 0270-10

After physically removing the base card from the system, remove any other good FRUs (RAID cache card or cache battery) from the RAID base card adapter. Plug these FRUs on to the replacement RAID base card adapter FRU.

Go to “Step 0270-11”.

Step 0270-11

Did you change the FRU using a hotplug operation?

- No** Install the RAID adapter assembly into the system, if necessary, refer to the Removal and Replacement Procedures section of the system *Service Guide*. Power up the system and login to AIX. Go to “Step 0270-12”.
- Yes** Install the RAID adapter assembly into the system. If needed, refer to the **Replacing a Hot-Pluggable PCI Adapter** section within the Removal and Replacement Procedures section of the system *Service Guide*. Go to “Step 0270-12”.

Step 0270-12

Was the replacement FRU a RAID base card?

- No** NO Go to “Step 0270-14” on page 107.
- Yes** Go to “Step 0270-13” on page 106

Step 0270-13

Warning: Prior to cabling the SCSI RAID adapter to the subsystem check for pre-existing configurations on the replacement SCSI RAID Base Card. The replacement base card can overwrite your system's configuration data if it already has a configuration written to it! Check it before cabling up the SCSI RAID Subsystem Array.

Ask to customer to check for pre-existing configuration on the SCSI RAID Base Card. Below is an example of this procedure:

1. Login as root (if not already root).
2. Type `smit pdam`.
3. Select **List PCI SCSI RAID Arrays**.
4. If no RAID Arrays are listed, then there are no preexisting configurations on the base card.
5. Press **F10** key to exit

If a pre-existing configuration exists on the base card, ask the customer to run the PCI SCSI Disk Array Manager using **smitty**.

1. Login as root (if not already root)
2. Type `smit pdam` from the AIX Command prompt (if not already in the RAID manager)
3. Select **Recovery Options**
4. Select **Clear PCI SCSI RAID Adapter Configuration**. Select the adapter which you just installed. Press Enter" to confirm.
5. Return to the **Recovery Options** menu (if not already there). Select **Resolve PCI SCSI RAID Adapter Configuration**. Select **Accept Configuration on Drives**. Select the adapter which you just installed. Press Enter to confirm. The configuration on the new adapter should now match the configuration existent on the drives.
6. Press **F10** to exit

You may now proceed to cable up the RAID system array.

Go to "Step 0270-16" on page 107.

Step 0270-14

Ask the customer to resynchronize the RAID Array configuration. Below is an example of this procedure:

1. Log in as root (if not already root).
2. Type `smit pdam`.
3. Select **Recovery Options**.
4. Select Resolve **PCI SCSI RAID Adapter Configuration**.
5. Select **Retry Current Configuration**.
6. Select the appropriate sraid adapter.
7. A message will be displayed as to the success of the operation.
8. Press **F10** to exit.

Go to "Step 0270-16".

Step 0270-15

Other RAID FRUs require that the system be shut down prior to replacement.

1. If the operating system is running, perform the operating system shutdown procedure (get help if needed).
2. Turn off the system power.
3. Replace the FRU indicated by the FFC.

Go to "Step 0270-16".

Step 0270-16

Run the diagnostics in system verification mode on the RAID subsystem.

Did the diagnostics run with no trouble found?

No Go to "Step 0270-18" on page 108

Yes Go to "Step 0270-17" on page 108

Step 0270-17

1. Use the **Log Repair Action** option in the TASK SELECTION menu to update the AIX error log. Select **scraidX** (where X is the RAID adapter number of the RAID subsystem you've been working on).

Note: On systems with Fault Indicator LED, this changes the Fault Indicator LED from the **Fault** state to the **Normal** state.

2. While in diagnostics, go to the FUNCTION SELECTION menu. Select the **Advanced Diagnostics Routines** option.
3. When the DIAGNOSTIC MODE SELECTION menu displays, select the System Verification option. Run the diagnostic test on **scraidX** (where X is the RAID adapter number)

Did the diagnostics run with no trouble found?

NO Go to the "Step 0270-18"

YES If you changed the Service Processor or Network settings, restore the settings to the value they had prior to servicing the system. If the system you are servicing has a hardware management console (HMC) with service focal point (SFP) go to the **End of Call MAP for systems with Service Focal Point** in the system *Service Guide*.

This completes the repair, return the system to the customer.

Step 0270-18

Have you exchanged all the FRUs that correspond to the failing function codes?

NO Go to "Step 0270-19".

YES The SRN did not identify the failing FRU. Schedule a time to run diagnostics in service mode. If the same SRN is reported in service mode, go to "Chapter 6. MAP 0030: Additional Problem Determination" on page 47.

Step 0270-19

Note: Note: Before proceeding, remove the FRU you just replaced and install the original FRU in it's place.

Use the next FRU on the list and Go to "Step 0270-2" on page 101.

Chapter 18. MAP 0280: Boot Problem Resolution

Purpose of This MAP

Use this MAP to handle problems caused during booting of the system unit.

Entry Table	
Entry 1	Go to "Step 0280-1".
Entry 2	Go to "Step 0280-2".
Entry 3	Go to "Step 0280-3" on page 110.

Step 0280-1

The system fails to respond to keyboard entries.

This problem is most likely caused by a faulty keyboard, keyboard adapter, or keyboard cable.

Try the FRUs in the order listed below: (Test each FRU by retrying the failing operation.)

1. Keyboard
2. Keyboard adapter (normally located on the system board)
3. Keyboard cable (if not included with the keyboard)

Were you able to resolve the problem?

No Go to "Chapter 6. MAP 0030: Additional Problem Determination" on page 47.

Yes Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Step 0280-2

1. Some systems have a graphic adapter POST. Check your system guide for information about graphic adapter POSTs. If a graphic adapter POST is supported and it indicates a failure, follow the procedures in the system guide to resolve the problem.
2. If a graphic adapter POST is supported and it does not indicate a failure, suspect the display or display cable.
3. If the system does not have a graphic adapter POST, go to the display problem determination procedures. If you do not find a problem, replace the graphics adapter.

Were you able to resolve the problem?

No Go to "Chapter 6. MAP 0030: Additional Problem Determination" on page 47.

Yes Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Step 0280-3

Go to the problem determination procedure for the terminal. If you do not find a problem, suspect the serial port adapter or terminal cable.

Were you able to resolve the problem?

No Call your support person.

Yes Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Chapter 19. MAP 0290: Missing Resource Problem Resolution

Purpose of This MAP

Use this MAP to handle problems when a resource is not detected by the diagnostics.

Step 0290-1

Use the “Display Configuration and Resource List” on page 180 to display the resources that were sensed by the configuration program when the diagnostic programs were loaded. Go to “Step 0290-2”.

Notes:

1. Supplemental diskettes may be required for specific adapters and devices if service aids are run from Standalone Diagnostics.
2. ISA adapters cannot be detected by the system. The ISA Adapter Configuration Service Aid in Standalone Diagnostics allows the identification and configuration of ISA adapters, based on user input.
3. A resource’s software must be installed on the AIX operating system before a resource can be detected by the Online Diagnostics.

Step 0290-2

Is the undetected resource a SCSI device installed in an externally attached enclosure for a SCSI device(s)?

NO Go to “Step 0290-4”.

YES Go to “Step 0290-3”.

Step 0290-3

Go to the documentation for SCSI devices installed in an externally attached enclosure for a SCSI device(s), and check the device(s) for proper power, cabling, fans running, and any other checks available. Return to this step after you check the device.

Did you find a problem?

NO Go to “Step 0290-4”.

YES Correct the problem; then go to “Chapter 21. MAP 0410: Repair Checkout” on page 115.

Step 0290-4

Are you running Standalone Diagnostics?

NO Go to “Step 0290-7” on page 112.

YES Go to “Step 0290-5” on page 112.

Step 0290-5

Are multiple devices missing that are connected to the same adapter?

NO Go to "Step 0290-7".

YES Suspect a problem with the device adapter. Run diagnostics on the device adapter then go to "Step 0290-6".

Step 0290-6

Did the diagnostics detect a problem with the adapter?

NO Go to "Step 0290-8".

YES Record the SRN then find the SRN in the SRN List and do the listed action.

Step 0290-7

Take the following steps:

1. Exchange the undetected resource.
2. Use the "Display Configuration and Resource List" on page 180 to display the resources sensed by the configuration program.

Is the resource listed?

NO Go to "Chapter 6. MAP 0030: Additional Problem Determination" on page 47.

YES Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Step 0290-8

Are the missing devices attached to a backplane?

NO Go to "Step 0290-7".

YES Exchange the backplane then go to "Step 0290-9".

Note: Before exchanging the backplane check that all cables connected to the backplane are properly seated and that all cables and connectors are in good working condition. If a problem is found, correct it, and then go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Step 0290-9

Load the standalone diagnostics; then use the list of resources in the DIAGNOSTIC SELECTION to determine if devices that were previously missing now appear on the resource list.

Are the previously missing devices now listed on the resource list?

NO Go to "Step 0290-7".

YES Go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution

Purpose of This MAP

Use this MAP when a bus or device (such as a disk drive) is reported as a missing resource by the diagnostics.

Step 0291-1

The device may be missing because of a power problem.

If the missing device is located in a drawer or enclosure, do the following:

1. Check for any environmental problem indicators such as power or cooling that may indicate a problem. (if needed, refer to the service documentation.)
2. If a problem is indicated, follow the service documentation to resolve the problem.

Go to "Step 0291-2".

Step 0291-2

Inspect the cables (signal and power) of the missing device. Be sure all connections are in place and power is present. Refer to the system or enclosure documentation containing the power wiring diagram or system cable diagram to locate specific cables, determine the cable numbering, and check for a problem-determination procedure. Look for obvious power cabling problems, such as missing or loose cable connectors.

Power problems can sometimes be identified by checking other devices that use the same power source (such as a diskette drive and a SCSI tape drive, even though they have different controllers). If other devices that share a power source are reported as missing devices, suspect the power source as the problem.

If there is a power problem, refer to the system or enclosure documentation to resolve the problem.

Did you find a problem?

NO Go to "Step 0291-3" on page 114.

YES Correct the problem, then go to "Chapter 21. MAP 0410: Repair Checkout" on page 115.

Step 0291-3

Is the missing device a SCSI device installed in a SCSI Enclosure Services (AIX resource SESx) device?

NO Go to “Step 0210-1” on page 69.

YES Go to “Step 0291-4”.

Step 0291-4

Run the Advanced Diagnostics in Problem Determination mode on the SCSI Enclosure Services device.

Did you get a different SRN than when you ran the diagnostics previously?

NO Go to “Step 0210-1” on page 69.

YES Take the following action:

1. Find the SRN in “Chapter 28. Using the SRN List” on page 237.

Note: If the SRN is not listed a Service Request Number Lists, look for additional information in the following:

- Any supplemental service manual for the device.
- The diagnostic Problem Report screen.
- The Service Hints service aid in “Chapter 25. Using Standalone and Online Diagnostics” on page 139.

2. Perform the action listed.

Chapter 21. MAP 0410: Repair Checkout

Purpose of This MAP

This MAP is used to check out the system after a repair is completed.

Note: Only use Standalone Diagnostics for repair checkout when no other diagnostics are available on the system. Standalone Diagnostics do not log repair actions.

If you are servicing an SP system, go to the End of Call MAP in the *RS/6000 SP System Service Guide*.

If you are servicing a clustered @server, go to the End of Call MAP in the *Clustered @server Installation and Service Guide*.

Step 0410-1

Did you use a hot-swap operation to change the FRU?

NO Go to "Step 0410-2".

YES Go to "Step 0410-6" on page 116.

Step 0410-2

Note: If the system planar or battery has been replaced and you are loading diagnostics from a server over a network, it may be necessary for the customer to set the network boot information for this system before diagnostics can be loaded. The system time and date information should also be set when the repair is completed.

Do you have cards, adapters, cables, devices, or any other FRUs that were removed during problem analysis that you want to put back into the system?

NO Go to "Step 0410-4" on page 116.

YES Go to "Step 0410-3".

Step 0410-3

1. After performing a system shutdown, turn off the system power and unplug all power cords (cables) from electrical outlets.
2. Install all of the cards, adapters, cables, devices, and any other FRUs that were removed during problem analysis.

Go to "Step 0410-4" on page 116.

Step 0410-4

Do you want to run the concurrent diagnostics?

NO Go to "Step 0410-7" on page 117.

YES Go to "Step 0410-5".

Step 0410-5

1. If the system supports Slow boot (See "About Slow Boot" on page 2) do a slow boot on the system. If the system does not support slow boot, do a normal boot.
2. Power on the system.
3. Wait until the AIX operating system login prompt displays or until apparent system activity on the operator panel or display has stopped.

Did the AIX Login Prompt display?

NO Go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29.

YES Go to "Step 0410-6".

Step 0410-6

1. Log into the operating system either with root authority (if needed, ask the customer to enter the password) or use the CE login.
2. Enter the **diag -a** command and check for missing resources. Follow any instructions that display. If an SRN displays, suspect a loose card or connection. If no instructions display, no resources were detected as missing.
3. Enter the **diag** command.
4. Press Enter.
5. Select the **Advanced Diagnostics** option.
6. When the DIAGNOSTIC MODE SELECTION menu displays, select **System Verification**.
7. When the ADVANCED DIAGNOSTIC SELECTION menu displays, select the **All Resources** option or test the FRUs you exchanged by selecting the diagnostics for the individual FRU(s).

Did the RESOURCE REPAIR ACTION menu (801015) display?

NO Go to "Step 0410-12" on page 119.

YES Go to "Step 0410-13" on page 119.

Step 0410-7

Note: If you are uncertain, answer Yes to the following question.

Are the Online Diagnostics Installed on the system?

- NO** If the operating system is running, do the Shutdown Procedure to stop it (get help if needed). Go to “Step 0410-8”.
- YES** Go to “Step 0410-9”.

Step 0410-8

1. Load the Standalone diagnostics.
2. Wait until the diagnostics are loaded or the system appears to stop.
3. Press Enter.
4. Select the **Advanced Diagnostics** option.

Note: If the terminal type is not defined. You are prompted to define it. You cannot continue until this is done.

5. When the DIAGNOSTIC MODE SELECTION menu displays, choose **System Verification**. On the DIAGNOSTIC SELECTION menu, test the FRUs you exchanged by selecting the diagnostics for the individual FRUs. If the resource associated with your action is not displayed on the Resource List, select **planar0**.

Did the TESTING COMPLETE, no trouble was found menu (801010) display?

- NO** There is still a problem. Go to “Chapter 4. MAP 0020: Problem Determination Procedure” on page 29.
- YES** Go to “Step 0410-14” on page 120.

Step 0410-9

1. Power on the system (if it is not already powered on).
2. Load the Online Diagnostics in Service Mode (refer to the system unit’s service guide if needed).
3. Wait until the Diagnostic Operating Instructions display or the system appears to stop.

Are the Diagnostic Operating Instructions Displayed?

- NO** Go to “Chapter 4. MAP 0020: Problem Determination Procedure” on page 29.
- YES** Go to “Step 0410-10” on page 118.

Step 0410-10

1. Press Enter.
2. Select the **Task Selection** option.

Note: If the terminal type is not defined. You are prompted to define it. You cannot continue until this is done.

3. Select the **Log Repair** option.
4. Select the resource associated with the repair action. If the repair action was reseating a cable or adapter, select the resource associated with that repair action. If the resource associated with your repair action is not displayed on the Resource List, select **sysplanar0**.
5. Press **commit** after you have made your selection.
6. Press the key for the previous menu two times to get to the Function Selection menu.
7. Select the **Advanced Diagnostics Routines** option.
8. If the DIAGNOSTIC MODE SELECTION menu displays, select the **System Verification** option.

Is the ADVANCED DIAGNOSTIC SELECTION menu displayed?

- NO** Go to Step 1 of "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29.
- YES** Go to "Step 0410-11".

Step 0410-11

Note: If the resource associated with your action is not displayed on the Resource List, select **sysplanar0**.

Test the FRUs you exchanged by selecting the individual FRUs.

Did the RESOURCE REPAIR ACTION menu (801015) display?

- NO** Go to "Step 0410-12" on page 119.
- YES** Use **sysplanar0** as the resource and go to "Step 0410-13" on page 119.

Step 0410-12

Did the **TESTING COMPLETE, no trouble was found menu (801010) display?**

NO There is still a problem. Go to “Chapter 4. MAP 0020: Problem Determination Procedure” on page 29.

YES Use the **Log Repair Action** option, if not previously logged, in the **TASK SELECTION** menu to update the AIX Error Log. If the repair action was reseating a cable or adapter, select the resource associated with that repair action.

If the resource associated with your action is not displayed on the Resource List, select **sysplanar0**.

Note: On systems with a Fault Indicator LED, this changes the Fault Indicator LED from the *Fault* state to the *Normal* state.

Go to “Step 0410-14” on page 120

Step 0410-13

When a test is run on a resource in System Verification mode, and that resource has an entry in the AIX error log, if the test on the resource was successful, the **RESOURCE REPAIR ACTION** menu displays.

After replacing a FRU, you must select the resource for that FRU from the **RESOURCE REPAIR ACTION** menu. This updates the AIX error log to indicate that a system-detectable FRU has been replaced.

Note: On systems with a Fault Indicator LED, this changes the Fault Indicator LED from the *Fault* state to the *Normal* state.

Do the following:

1. Select the resource that has been replaced from the **RESOURCE REPAIR ACTION** menu. If the repair action was reseating a cable or adapter, select the resource associated with that repair action.

If the resource associated with your action is not displayed on the Resource List, select **sysplanar0**.

2. Press **Commit** after you make your selections.
3. If the No Trouble Found menu displays, go to “Step 0410-14” on page 120.

Step 0410-14

If you changed the Service Processor or Network settings, as instructed in previous MAPs, restore the settings to the value they had prior to servicing the system. If you performed service on a RAID subsystem involving changing of the RAID adapter cache card or changing the configuration on RAID disks, ask the customer to run the PCI SCSI Disk Array Manager using smitty. Use the **Recovery Options** selection to resolve the RAID configuration. To do this, perform the following:

1. At the AIX command line, type `smitty pdam`.
2. On the PCI SCSI Disk Array Manager screen, select **Recovery Options**.
3. If a previous configuration exists on the replacement adapter, this must be cleared. Select **Clear PCI SCSI RAID Adapter Configuration**. Press F3.
4. On the Recovery Options screen, select **Resolve PCI SCSI RAID Adapter Configuration**.
5. On the Resolve PCI SCSI RAID Adapter Configuration screen, select **Accept Configuration on Drives**.
6. On the PCI SCSI RAID Adapter selection menu, select the adapter that you changed.
7. On the next screen, press Enter.
8. When you get the Are You Sure selection menu, press Enter to continue.
9. You should get an OK status message when the recovery is complete. If you get a Failed status message, verify that you selected the correct adapter, then repeat this procedure again. When recovery is complete, exit smitty to return to the AIX command line.

Go to step "Step 0410-15".

Step 0410-15

If the system you are servicing has a Hardware Management Console (HMC), with Service Focal Point (SFP) go to the "End of call MAP for Systems with Service Focal Point" in the system service guide

This completes the repair, return the system to the customer.

Chapter 22. MAP 0420: System Checkout

Purpose of This MAP

Use this MAP to verify that the system is working correctly.

Step 0420-1

1. If the operating system is running, perform the operating system's shutdown procedure (get help if needed).
2. Power off the system.
3. Power on the system.
4. Load either the Online or Standalone Diagnostics in Service Mode (refer to the system unit's service guide if necessary).
5. Wait until the diagnostics are loaded or the system appears to stop.

Were you able to load the diagnostics?

NO There is a problem. Go to the system unit's service guide.

YES Go to "Step 0420-2".

Step 0420-2

1. Press Enter.
2. When the FUNCTION SELECTION menu displays, select **Advanced Diagnostics**.
3. When the DIAGNOSTIC MODE SELECTION menu displays, select the **System Verification** option.

Note: If the terminal type is not defined, you are prompted to define it. You cannot continue until this is done.

4. On the DIAGNOSTIC SELECTION or ADVANCED DIAGNOSTIC SELECTION menu, look through the list of resources to make sure that all adapters and SCSI devices are listed including any new resources.

Notes:

- a. Resources attached to serial and parallel ports may not appear in the resource list.
- b. ISA adapters cannot be detected by the system. The ISA Adapter Configuration Service Aid in Standalone Diagnostics allows the identification and configuration of ISA adapters.
- c. If running diagnostics in a partition within a partitioned system, resources assigned to other partitions are displayed on the resource list.

Did you find the all the adapters or devices on the list?

No Go to "Step 0420-3" on page 122.

Yes Go to "Step 0420-5" on page 122

Step 0420-3

Is the new device or adapter an exact replacement for a previous one installed at same location?

No Go to "Step 0420-4".

Yes The replacement device or adapter may be defective. If possible, try installing it in an alternate location if one is available; if it works in that location, then suspect that the location where it failed to appear has a defective slot; schedule time to replace the hardware that supports that slot. If it does not work in alternate location, suspect a bad replacement adapter or device. If you are still unable to detect the device or adapter, contact your service support structure.

Step 0420-4

Is the operating system software to support this new adapter or device installed?

No Load the operating system software.

Yes The replacement device or adapter may be defective. If possible, try installing it in an alternate location if one is available; if it works in that location, then suspect that the location where it failed to appear has a defective slot; schedule time to replace the hardware that supports that slot. If it does not work in alternate location, suspect a bad replacement adapter or device. If you are still unable to detect the device or adapter, contact your service support structure.

Step 0420-5

1. The MISSING RESOURCE menu only displays when a resource was removed or moved. If the MISSING RESOURCE menu is displayed, follow the instructions.
2. If the ADVANCED DIAGNOSTIC SELECTION menu displays, select the **System Verification** option, then use the **All Resources** option to test the system or select the individual tests you want to run. If the RESOURCE SELECTION menu is displayed, select the **All Resources** option to test the system or select each test you want to run.

Did the test pass?

NO There is a problem. Go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29.

YES This completes the system checkout.

Chapter 23. Installation Checkout

The installation checkout is used by the service representative to verify system quality after initial installation or after an MES or EC has been installed.

Installation Checkout Procedure

To start the checkout, go to “Step 1. Doing a Visual Check”.

Step 1. Doing a Visual Check

Perform the following actions after initial system installation or system alteration:

1. Be sure the system unit power switch is set to Off.
2. Be sure the power switches on all of the attached devices are set to Off.
3. Visually check the system unit and attached devices to ensure that:
 - All power cables are securely attached to the system unit or devices
 - All signal cables are connected at both ends
 - All power cables are plugged into the customer's outlet
 - All covers are installed and the vent openings are not obstructed
 - All ribbons, guides, and other attachments are in place.
4. Go to “Step 2. Checking the TTY Terminal Attributes”.

Step 2. Checking the TTY Terminal Attributes

Checking the TTY Terminal Attributes usually needs to be accomplished only during the initial installation.

If you have trouble selecting the console display and you are using an attached terminal, check the TTY Terminal Attributes again.

When you run the diagnostic programs from an attached TTY terminal, the attributes for the terminal must be set to match the defaults of the diagnostic programs. The TTY terminal must be attached to the S1 serial port on the system unit.

Are you going to run this procedure on an attached TTY terminal?

- NO** Go to “Step 3. Loading the Diagnostics” on page 124.
- YES** Go to “Running the Diagnostics from a TTY Terminal” on page 145, and check the terminal attributes. Return to Step 3 when you finish checking the attributes.

Step 3. Loading the Diagnostics

The diagnostics can be run from a CD-ROM disc, from a locally attached disk, or from a server if the AIX operating system is installed on the system. If you are not sure whether the AIX operating system is installed, you can check by turning the system unit on. If the System Management Service menu displays, the AIX operating system is not installed.

If the AIX operating system is installed, the diagnostic programs load from a locally attached disk or from a server. If the AIX operating system is not installed, diagnostics can be loaded from the diagnostic CD-ROM disc.

The following procedure attempts to load the diagnostics from a disk or from a server. If they cannot be loaded from a disk or server, the diagnostic CD-ROM disc is used to load and run the checkout.

1. Set the power switches on all of the attached devices to On.
2. Set the power switch on the system unit to On.

Note: After the first icon displays on the system console, press F6 if you are using a directly attached console, or press 6 on a TTY console.

3. If the System Management Services menu displays, the AIX operating system is not installed. Do the following:
 - a. Insert the diagnostic CD-ROM disc into the CD-ROM drive.
 - b. Power off the system unit, wait 45 seconds and then power on the system unit.

Note: After the first icon displays on the system console, press F6 if you are using a directly attached console, or press 6 on a TTY console.

- c. If the system stops with an eight-digit error code displayed or stops with an icon or icons displayed, a problem was detected.
Check for loose cables or cards. If you do not find a problem, go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29.
4. When the diagnostic programs load correctly, the DIAGNOSTIC OPERATING INSTRUCTIONS display.

Did the DIAGNOSTIC OPERATING INSTRUCTIONS display?

- NO** Go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29.
- YES** Go to "Step 4. Checking for the Correct Resources" on page 125.

Step 4. Checking for the Correct Resources

Use the Display or Change System Configuration or VPD service aid to check the resources that are present (memory, SCSI devices, adapters, diskette drives, disk drives, and input devices).

Notes:

1. If the terminal type has not been defined, it must be defined before you can select the service aids. Use the **Initialize Terminal** option on the FUNCTION SELECTION menu to define the terminal.
2. If the Dials and LPFK are attached to serial ports S1 or S2, they are not listed by the service aid unless they have been configured by the user. Refer to the AIX operating system documentation to configure these devices.

Were all the resources listed by the service aid?

NO Check for loose cables or cards. If you do not find a problem, go to “Chapter 4. MAP 0020: Problem Determination Procedure” on page 29.

YES Go to “Step 5. Checking the Hardware”.

Step 5. Checking the Hardware

If you are running Online diagnostics from a disk, the system can be checked by one of the following methods; depending on the version of the diagnostic programs you are using:

1. Select **Advanced Diagnostics** on the FUNCTION SELECTION menu.
2. Select **System Verification** on the DIAGNOSTIC MODE SELECTION menu.
All resources can be checked out by selecting **System Verification** option on the ADVANCED DIAGNOSTIC SELECTION menu, then select the **All Resources** option, or you can select each resource individually.
3. Check each resource.

Did all of resources check out good?

NO Record the SRN; then go to “Chapter 3. Fast Path MAP” on page 17.

YES Go to “Step 6. Completing the Installation” on page 126.

Step 6. Completing the Installation

Some of the following steps only apply to an initial installation. These steps are provided as reminders in completing the installation or finishing an MES or EC activity.

1. If present, remove the CD-ROM diagnostic disc from the appropriate drive, and store it in the binder with the operator guides.
2. Give the keys to the customer and explain the importance of keeping the reorder tag for the keys in a safe place.
3. Keep a copy of the following:
 - SCSI Address Record from Appendix A of the User's Guide.
 - Machine History card for each system unit and device.

Microcode must be installed during system installation or after the AIX operating system is installed. If the system is using the AIX operating system, all microcode is preinstalled on the boot disk for all adapters and devices that were shipped with the system.

Microcode is shipped on microcode diskettes, option diskettes and on the boot disk. For the AIX operating system, runtime microcode maintenance can be selected from the SMIT INSTALLATION AND MAINTENANCE MENU or from the Diagnostic Service Aid. The **adfutil -m** (command and flag) is normally used to install microcode shipped on option diskettes.

If the system is using another type of operating system, that operating system should include microcode installation instructions.

If you have the X.25 Interface Coprocessor, the microcode for them is normally not shipped with the AIX operating system. The microcode for these adapters must be installed before the adapters can be used. The X.25 Interface Coprocessor microcode is shipped on an option diskette.

Contact the person that is going to install the software or turn the system over to the customer.

If needed, go to the AIX operating system Installation Kit to install and configure the AIX operating system.

Chapter 24. General Diagnostic Information

Information in this section is common to all system units. Any service information or diagnostic procedure that is specific to a certain system unit or device is in the operator guide or service guide for that system unit or device.

AIX Operating System Message Files

English is the default language displayed by the diagnostic programs when run from disk. If you want to run the diagnostic programs in a language other than English you must install on the system the AIX operating system message locale fileset for the desired language you want displayed.

Microcode

There are two types of hardware microcode used in system units. The first type is the microcode stored on disk and used by the built-in disk drive controller. The second type is the microcode used by an adapter.

The first type of microcode is written on the disk before the original or replacement disk drive is shipped. This type of microcode only needs updating when there is an applicable Engineering Change (EC) or Miscellaneous Equipment Specification (MES). Use the "Download Microcode" on page 186 to load this type of microcode from diskettes to disk.

The second type of microcode is stored on the disk by the operating system during installation of the operating system. This type of microcode loads to the adapter during the system IPL and must be installed before the diagnostics can be run from disk.

If you are using the AIX operating system, the **installp** and **adfutil** commands are used to load any microcode not shipped on the disk with the AIX operating system. All of the microcode stored on the disk for use with the AIX operating system is in either the `/etc/microcode` or the `/usr/lib/microcode` directory.

If you are using another operating system, refer to the documentation for that operating system to install microcode.

The CD-ROM diagnostic disc contain all of the required microcode for diagnostic purposes.

CEREADME File

A CEREADME (CE read me) file is available on all diagnostic media. This file contains diagnostic and system unit errata not covered in the publications.

You can view the CEREADME file by using the Service Hints service aid after the diagnostics are loaded. Also, you can read the file directly from the disk using the AIX **pg** command to display **/usr/lpp/diagnostics/CEREADME**. The CEREADME file can be copied or printed using the normal commands. For information about using the service hints, refer to “Display Service Hints” on page 183.

Printing the CEREADME File from Disk

You can print the CEREADME file from disk using the **cat** command. The path to this file is as follows: **/usr/lpp/diagnostics/CEREADME**

A copy of this file should be printed and stored with the Service Information. **lp0** is normally the printer attached to the parallel port. If a printer is attached to the parallel port and is considered as **lp0**, the command for printing the file is as follows:

```
cat /usr/lpp/diagnostics/CEREADME > /dev/lp0
```

Printing the CEREADME File from a Source other than Disk

The CEREADME file cannot be printed while diagnostics are being executed from a source other than from the disk. The file can be printed on a system when the AIX operating system is running in a normal user environment. The procedure involves copying the file from the diagnostic media to a temporary file on disk, printing the file, and then deleting the file from disk. Check for directory **/tmp/diag**. To determine if this directory already exists, enter:

```
cd /tmp/diag
```

If the directory does not exist, the message **/tmp/diag: not found** displays. *Do not* attempt to print the CEREADME file if this message is not displayed. To print the CEREADME file, choose the appropriate section below and follow the steps listed.

Printing the CEREADME File from CD-ROM

Insert the diagnostic CD-ROM disc into the CD-ROM drive, and then enter the following commands:

```
mkdir /tmp/diag
mount -o ro -v cdrfs /dev/cd0 /tmp/diag
cd /tmp/diag/usr/lpp/diagnostics
cat CEREADME > /dev/lp0
cd /tmp
umount /dev/cd0
```

The CEREADME file prints on **lp0**, which is the printer normally attached to the parallel port. If this file is not the same as the CEREADME file on the disk, a copy of this file should be printed and stored with the Service Information.

CE Login

CE login enables a user to perform operating system commands that are required to service the system without being logged in as a root user. CE login must have a role of **RunDiagnostics** and a primary group of **system**. This enables the user to:

- Run the diagnostics including the service aids, such as hot plug tasks, certify, format, and so forth.
- Run all the operating system commands run by **system** group users.
- Configure and unconfigure devices that are not busy.

In addition, CE login can have **shutdown** group enabled to allow:

- Use of the Update System Microcode service aid.
- Use of shutdown and reboot operations.

To use CE login, ask the customer to create a unique user name and configure these characteristics for that name. (Refer to the Users and Groups section of the *AIX 5L Version 5.1 System Management Guide: Operating System and Devices*.) After this is set up, you will need to obtain the user name and password from the customer to log in with these capabilities. The recommended CE login user name is **qserv**.

Automatic Diagnostic Tests

All automatic diagnostic tests run after the system unit is turned on and before the AIX operating system is loaded.

The automatic diagnostic tests display event indicators to track test progress. If a test stops, the indicator for that test remains displayed to identify the unsuccessful test.

Built-In Self-Test

Note: This set of programs is not supported on all system units.

The Built-In Self-Test (BIST) programs run first after the system unit is turned on. These programs test the central electronics complex.

Power-On Self-Test

The Power-On Self-Test (POST) programs check the devices needed to accomplish an initial program load. The POST also checks the memory, and portions of the central electronics complex, common interrupt handler, and the direct memory access (DMA) handler.

Configuration Program

The configuration program determines what features, adapters, and devices are present on the system. The configuration program, which is part of the AIX operating system, builds a configuration list that is used by the diagnostic programs to control which tests are run during system checkout.

The configuration program displays numbers between 500 and 999 in the operator panel display. Refer to “Chapter 27. Diagnostics Numbers and Location Codes” on page 211 for a listing of program actions associated with displayed numbers.

Devices attached to serial and parallel ports are not configured. The Dials and Lighted Program Function Keys (LPFKs) can be tested from Online Diagnostics after they are manually configured. No other device attached to the serial and parallel ports is supported by the diagnostics.

CPU and Memory Testing and Error Log Analysis

Except for the floating-point tests, all CPU and memory testing on the system units are done by POST and BIST. Memory is tested entirely by the POST. The POST provides an error-free memory MAP. If POST cannot find enough good memory to boot, it halts and displays an error message. If POST finds enough good memory, the memory problems are logged and the system continues to boot.

If any memory errors were logged, they are reported by the Base System or Memory Diagnostics, which must be run to analyze the POST results. Normally, most memory problems that are detected by the POST are isolated to a single FRU.

The CPU and memory cannot be tested after the AIX based diagnostics are loaded; however, they are monitored for correct operation by various checkers such as Checkstop or Machine Check. If one of these checks intermittently occurs, it is logged into the error log.

Single-bit memory errors are corrected by ECC (Error Checking and Correction) on systems equipped with ECC memory.

Diagnostic Programs

This section provides overview of the various diagnostic programs.

Diagnostic Controller

The diagnostic controller runs as an application program on the AIX operating system. The diagnostic controller carries out the following functions:

- Displays diagnostic menus
- Checks availability of needed resources
- Checks error log entries under certain conditions
- Loads diagnostic application programs
- Loads task and service aid programs
- Displays test results

To test an adapter or device, select the device or adapter from the Diagnostic Selection menu. The diagnostic controller then loads the diagnostic application program for the selected device or adapter.

The diagnostic application program loads and runs test units to check the functions of the device or adapter.

The diagnostic controller checks the results of the tests done by the diagnostic application and determines the action needed to continue the testing.

The amount of testing that the diagnostic application does depends on the mode (service, maintenance, or concurrent) under which the diagnostic programs are running.

Error Log Analysis

When you select **Diagnostics** or **Advanced Diagnostics**, the Diagnostic Selection menu displays (other menus may display before this menu). This menu allows you to select the purpose for running diagnostics.

When you select the **Problem Determination** option, the diagnostic programs read and analyze the contents of the error log.

Note: Most hardware errors in the operating system error log contain *sysplanar0* as the resource name. The resource name identifies the resource that detected the error, it does not indicate that the resource is faulty or should be replaced. Use the resource name to determine the appropriate diagnostic to analyze the error.

If the error log contains recent errors (approximately the last 7 days), the diagnostic programs automatically select the diagnostic application program to test the logged function.

If there are no recent errors logged or the diagnostic application program runs without detecting an error, the Diagnostic Selection menu is displayed. This menu allows you to select a resource for testing.

If an error is detected while the diagnostic application program is running, the A PROBLEM WAS DETECTED screen displays a Service Request Number (SRN).

Note: After a FRU is replaced based on an error log analysis program, the error log entries for the problem device must be removed or the program may continue to indicate a problem with the device. To accomplish this task, run the **errclear** command from the command line, or use System Management Interface Tool (SMIT) to select **Problem Determination / Error Log / Clear the Error Log**. Fill out the appropriate menu items.

Enhanced FRU Isolation

The diagnostics provide enhanced Field Replaceable Unit (FRU) isolation by automatically selecting associated resources. The typical way in which diagnostics select a resource is to present a list of system resources, and you are then asked to select one. Diagnostics begin with that same type of selection.

If the diagnostic application for the selected resource detects a problem with that resource, the diagnostic controller checks for an associated resource. For example, if the test of a disk drive detects a problem, the diagnostic controller tests a sibling device on the same controller to determine if the drive or the controller is failing. This extra FRU isolation is apparent when you test a resource and notice that the diagnostic controller continues to test another resource that you did not select.

Advanced Diagnostics Function

The advanced diagnostics function is normally used by a service representative. These diagnostics may ask you to disconnect a cable and install a wrap plug.

The advanced diagnostics run in the same modes as the diagnostics used for normal hardware problem determination. The advanced diagnostics provide additional testing by allowing the service representative to do the following:

- Use wrap plugs for testing.
- Loop on a test (not available in concurrent mode) and display the results of the testing.

Task and Service Aid Functions

If a device does not show in the Test List or you think a device's Diagnostic Package is not loaded, check by using the Display Configuration and Resource List task. If the device you want to test has a plus (+) sign or a minus (-) sign preceding its name, the Diagnostic Package is loaded. If the device has an asterisk (*) preceding its name, the Diagnostic Package for the device is not loaded or is not available.

Tasks and service aids provide a means to display data, check media, and check functions without being directed by the hardware problem determination procedure. Refer to "Chapter 26. Introduction to Tasks and Service Aids" on page 163 for information and procedures about tasks and service aids.

System Checkout

The system checkout program uses the configuration list generated by the configuration procedure to determine which devices and features to test. These tests run without interaction. To use system checkout, select **All Resources** on the Resource Selection menu.

Periodic Diagnostics

Periodic testing of the processors are enabled by default. The disk diagnostics test any disk drives that are not in use and perform disk error-log analysis on all disks. The battery test does test the real time clock and NV-RAM battery. Problems are reported by a message to the system console and logged in the error log. Diagnostics must be run for an SRN to be reported.

Periodic diagnostics are controlled by the Periodic Diagnostic Service Aid. The Periodic Diagnostic Service Aid allows a hardware resource to be tested once a day. If the resource cannot be tested because it is busy, error log analysis is performed if supported on the resource.

The diagnostics are invoked using the **diag -c -d *Device*** command.

Periodic Diagnostic Reminders

Periodic Diagnostics issues a reminder about detectable deconfigured resources when the system boot completes. The reminder is also issued weekly as long as the resources remain deconfigured. The notification is a message to the system console and either the Service Focal Point for systems with a HMC, or to all system groups.

Currently the detectable deconfigured resources are processors and memory.

The weekly reminder is issued every Tuesday at 8 a.m. The resources in the periodic test list are tested for deconfigured resources. Adding or removing a resource from the periodic test list enables or disables the weekly reminder for deconfigured resources.

The `sysplanar0` resource looks for resources deconfigured at boot-time. Run-time deconfigurations are checked by the diagnostics for the individual resources in the resource list.

Automatic Error Log Analysis (diagela)

Automatic Error Log Analysis (**diagela**) provides the capability to perform error log analysis when a permanent hardware error is logged, by enabling the **diagela** program on all platforms.

The **diagela** program determines if the error should be analyzed by the diagnostics. If the error should be analyzed, a diagnostic application is invoked and the error is analyzed. No testing is done if the diagnostics determine that the error requires a service action. Instead it sends a message to your console, and either the Service Focal Point for systems with a HMC, or to all system groups. The message contains the SRN.

Running diagnostics in this mode is similar to using the **diag -c -e -d Device** command.

Notification can also be customized by adding a stanza to the **PDiagAtt** object class. The following example illustrates how a customer's program can be invoked in place of the normal mail message, or in addition to sending the message to the Service Focal Point when there is a HMC:

```
PDiagAtt:
  DClass = " "
  DSClass = " "
  DType = " "
  attribute = "diag_notify"
  value = "/usr/bin/customer_notify_program $1 $2 $3 $4 $5"
  rep = "s"
```

If DClass, DSClass, and DType are blank, then the `customer_notify_program` applies for *all* devices. Filling in the DClass, DSClass, and DType with specifics causes the `customer_notify_program` to be invoked only for that device type.

After the above stanza is added to the ODM data base, problems are displayed on the system console and the program specified in the value field of the `diag_notify` predefined attribute is invoked. The following keyword is expanded automatically as arguments to the notify program:

- \$1 the keyword `diag_notify`
- \$2 the resource name that reported the problem
- \$3 the Service Request Number
- \$4 the device type
- \$5 the error label from the error log entry

In the case where no diagnostic program is found to analyze the error log entry, or analysis is done but no error was reported, a separate program can be specified to be invoked. This is accomplished by adding a stanza to the **PDiagAtt** object class with an attribute = **diag_analyze**. The following example illustrates how a customer's program can be invoked for this condition:

```
PDiagAtt:
  DClass = " "
  DSClass = " "
  DType= " "
  attribute = "diag_analyze"
  value = "/usr/bin/customer_analyzer_program $1 $2 $3 $4 $5"
  rep = "s"
```

If DClass, DSClass, and DType are blank, then the customer_analyzer_program applies for all devices. Filling in the DClass, DSClass, and DType with specifics causes the customer_analyzer_program to be invoked only for that device type.

After the above stanza is added to the ODM data base, the program specified is invoked if there is no diagnostic program specified for the error, or if analysis was done, but no error found. The following keywords expand automatically as arguments to the analyzer program:

- \$1 the keyword **diag_analyze**
- \$2 the resource name that reported the problem
- \$3 the error label from the error log entry if from ELA, the keyword PERIODIC if from Periodic Diagnostics, or the keyword REMINDER if from a Diagnostic Reminder.
- \$4 the device type
- \$5 the keywords:
 - **no_trouble_found** if the analyzer was run, but no trouble was found.
 - **no_analyzer** if the analyzer is not available.

To activate the Automatic Error Log Analysis feature, log in as root user (or use CE login) and type the following command:

```
/usr/lpp/diagnostics/bin/diagela ENABLE
```

To disable the Automatic Error Log Analysis feature, log in as root user (or use CE login) and type the following command:

```
/usr/lpp/diagnostics/bin/diagela DISABLE
```

The **diagela** program can also be enabled and disabled using the Periodic Diagnostic Service Aid.

Log Repair Action

The diagnostics perform error log analysis on most resources. The default time for error log analysis is seven days; however, this time can be changed from 1 to 60 days using the **Display or Change Diagnostic Run Time Options** task. To prevent false problems from being reported when error log analysis is run, repair actions need to be logged whenever a FRU is replaced. A repair action can be logged by using the **Log Repair Action** task or by running advanced diagnostics in System Verification mode.

The Log Repair Action task lists all resources. Replaced resources can be selected from the list, and when **commit** (F7 key) is selected, a repair action is logged for each selected resource.

System Fault Indicator and System Identify Indicator

Some systems support the System Identify Indicator and/or the System Fault Indicator.

The System Identify Indicator is used to help physically identify a particular system in a room. The System Fault Indicator is used to help physically identify a particular system that has a fault condition.

On a system that supports System Fault Indicator, the indicator is set to Fault condition when a fault is detected. After the problem with the system is fixed, the system fault indicator should be set back to Normal. This is done by using the Log Repair Action task. For additional information, see “Log Repair Action”.

Note: This action keeps the System Fault Indicator from being set to the Fault state due to a previous error, that has already been serviced, in the error log.

Both of these indicator functions can be managed by using the System Identify Indicator and System Fault Indicator Tasks. See “System Fault Indicator” on page 205 or “System Identify Indicator” on page 206 for additional information.

Testing the Line Printer

The following is a simple procedure for determining if a printer attached to your system is responding correctly. The AIX operating system should be up and running in your normal environment.

To determine what printers are available, enter the following:

```
lsdev -C -c printer
```

This command displays a list of printers currently defined on the system. Only those printers that are in the available state can be used (for example, those printers marked as defined cannot be used). Ensure that a printer is actually connected at the location that was specified in the output of the command.

To begin printing, enter the following:

```
cat /usr/lpp/diagnostics/CEREADME > /dev/lpx
```

Note: In the above step, you must substitute for x the value obtained from the **lsdev** command.

In the above example, the contents of the CEREADME file will print.

Chapter 25. Using Standalone and Online Diagnostics

The diagnostics consist of Standalone Diagnostics and Online Diagnostics. The Standalone Diagnostics must be booted before they are run. If booted, they have no access to the AIX Error Log or the AIX Configuration Data.

Online Diagnostics, when installed, are resident with AIX on the disk or server. They can be booted in single user mode (called *service mode*), run in maintenance mode (called *maintenance mode*), or run concurrently (called *concurrent mode*) with other applications. They have access to the AIX Error Log and the AIX Configuration Data.

Attention: If this system unit is attached to another system, be sure you isolate this system unit before stopping the operating system or running diagnostic programs. Some system-cabling changes (such as installing wrap plugs or removing a device from the configuration) may require action by the operator of the attached system before making the cabling changes on this system.

Attention: The AIX operating system must be installed in order to run Online Diagnostics. If the AIX operating system is not installed, use the standalone diagnostic procedures.

Standalone and Online Diagnostics Operating Considerations

Consider the following items before you use the diagnostics:

- Standalone diagnostics can run on systems configured for running either a full machine partition or one or more logical partitions. When running on a logically partitioned system, the device from which you are booting standalone diagnostics must be made available to the partition dedicated to running standalone diagnostics. This may require moving the device from the partition that currently contains the boot device (for example, CD-ROM or network adapter connected to the NIM server that has a standalone diagnostic image) to the partition used to run standalone diagnostics. If you move devices, reboot both partitions. For more information, see “Standalone Diagnostic Operation” on page 149.
- When running diagnostics on an LPAR partition, diagnostics only works with the resources that were assigned to that partition; you should run diagnostics in the partition containing the resource that you wish to test.
- Run Online Diagnostics in Service Mode when possible, unless otherwise directed. The Online Diagnostics perform additional functions, compared to Standalone Diagnostics. The AIX error log and certain SMIT functions are only available when diagnostics are run from the disk drive.
- When running Online Diagnostics, device support for some devices may not have been installed. If this is the case, that device does not appear in the resource list.
- When running Standalone Diagnostics, device support for some devices may be contained on supplemental diagnostic media. If this is the case, the device does not appear in the resource list when running diagnostics unless the supplemental media has been processed.

- Support for some TTY terminals is optionally installed. If you attach a TTY terminal to a system to run diagnostics, it might not work correctly because the AIX support for the terminal might not be installed.

Selecting a Console Display

When you run Standalone Diagnostics and under some conditions, Online Diagnostics, you must select the console display. The diagnostics display instructions on any graphics display and the terminal attached to the S1 serial port.

On systems with an HMC, diagnostics displays on the virtual terminal on the HMC. On an LPAR system, diagnostics displays on the virtual terminal associated with a given partition.

Identifying the Terminal Type to the Diagnostics Programs

Note: This is a different function from selecting a console display.

When you run diagnostics, you must identify what type of terminal you are using. If the terminal type is not known when the FUNCTION SELECTION menu is displayed, the diagnostics do not allow you to continue until a terminal is selected from the DEFINE TERMINAL option menu. Select **LFT** for adapter-attached displays.

If running diagnostics from a virtual terminal on a system with an HMC, select **VT100** when prompted for the type of terminal emulation.

Undefined Terminal Types

If you specify an undefined terminal type from the DEFINE TERMINAL option menu, the menu prompts the user to enter a valid terminal type. The menu is displayed until either a valid type is entered or the user exits the DEFINE TERMINAL option.

Resetting the Terminal

If the user enters a terminal type that is valid (according to the DEFINE TERMINAL option menu) but is not the correct type for the ASCII terminal being used, you may be unable to read the screen, use the function keys or use the Enter key. These difficulties can be bypassed by pressing Ctrl-C to reset the terminal. The screen display which results from this resetting action varies with the mode which the system is being run:

- Online Normal or Maintenance Mode - The command prompt appears.
- Standalone Mode or Online Service Mode - The terminal type is reset to dumb, the Diagnostic Operating Instruction panel displays, and the user is required to go through the DEFINE TERMINAL process again.

Running Standalone Diagnostics from CD-ROM

Consider the following when you run Standalone Diagnostics:

- The diagnostic CD-ROM disc must remain in the CD-ROM drive for the entire time that diagnostics are running.
- The diagnostic CD-ROM disc cannot be ejected from the CD-ROM drive once the diagnostic programs load. The diagnostic CD-ROM disc can only be ejected after the

system has been powered off and then powered on (Standalone mode), or after the diagnostics program has terminated (Online concurrent mode). The diagnostic CD-ROM disc must be ejected before attempts to load the diagnostic programs again.

- The CD-ROM drive from which diagnostics were loaded cannot be tested.
- The SCSI adapter (or circuitry) controlling the CD-ROM drive from which diagnostics were loaded cannot be tested.

Running Standalone Diagnostics from a Network Installation Management (NIM) Server

A *client* system connected to a network with a Network Installation Management (NIM) server, is capable of booting Standalone Diagnostics from the NIM server if the client system is registered on the NIM server, and the NIM boot settings on both the NIM server and the client system are correct.

Notes:

1. For NIM clients that have adapters that would normally require that supplemental media be loaded when standalone diagnostics are run from CD-ROM, the support code for these adapters must be loaded into the directory pointed to by the NIM SPOT from which you wish to boot that client. Before running standalone diagnostics on these clients from the NIM server, the NIM server system administrator must ensure that any needed support for these devices is loaded on the server.
2. The amount of system memory required to run Standalone Diagnostics from a NIM server using the **bos.diag.rte** fileset at level 4.3.3.25, is 64 MB.

To determine the fileset level, run the following AIX command at the NIM server (you must have root authority):

```
nim -o showres SPOTNAME | grep bos.diag.rte
```

(Where SPOTNAME is the name of the SPOT from which you want to do a NIM boot (for example, SPOT433).

Use one of the following methods to determine the amount of available system memory:

- Run the Display Resource Attributes task for resource.
- Use the **Config** option under System Management Services (see the system unit service guide).
- Use the following AIX command:

```
lsattr -E -l mem0
```

3. All operations to configure the NIM server require root authority.
4. If you replace the network adapter in the client, the network adapter hardware address for the client must be updated on the NIM server.
5. The Control state (Cstate) for standalone clients on the NIM server should be kept in the Diagnostic Boot has been Enabled state.
6. On the client system, the NIM server network adapter should be put in the bootlist after the boot disk drive. This allows the system to boot up in Standalone

Diagnostics from the NIM server should there be a problem booting from the disk drive. Refer to the "Multiboot" section under SMS chapter in the service guide for the client system to obtain information about setting the bootlist.

NIM Server Configuration

Refer to the *Network Installation Management Guide and Reference* for information on doing the following:

- Register a client on the NIM server.
- Enable a client to run diagnostics from the NIM server.

To verify that the client system is registered on the NIM server and *diagnostic boot* is enabled; from the command line on the NIM server, run the following command:

```
lsnim -a Cstate -Z ClientName
```

Refer to the following table for system responses.

Note: The ClientName is the name of the system on which you are wanting to run the Standalone Diagnostics.

System Response	Client Status
#name:Cstate: ClientName: diagnostic boot has been enabled:	The client system is registered on the NIM server and enabled to run diagnostics from the NIM server.
#name:Cstate: ClientName:ready for a NIM operation: or #name:Cstate: ClientName:BOS installation has been enabled:	The client system is registered on the NIM server but not enabled to run standalone diagnostics from the NIM server. Note: If the client system is registered on the NIM server but Cstate has not been enabled, no data will be returned.
0042-053 lsnim: there is no NIM object named "ClientName"	The client is not registered on the NIM server.

Client Configuration and Booting Standalone Diagnostics from the NIM Server

To run Standalone Diagnostics on a client system from the NIM server, do the following:

1. Remove all removable media (tape or CD-ROM disc).
2. Stop all programs, including the AIX operating system (get help if needed).
3. If you are running standalone diagnostics in a full machine partition, verify with the system administrator and system users that the system unit may be shutdown. Stop all programs including the operating system (refer to the operating system documentation). Verify with the system administrator and system users using that partition that all applications on that partition must be stopped, and the partition will be rebooted. Stop all programs on that partition including the operating system.
4. If the system is running in a full machine partition, turn on the system unit power. If the system is running on a logically partitioned system, restart the AIX operating system in the partition you wish to run online diagnostics.

5. When the keyboard indicator displays (the word **keyboard** on an ASCII terminal or the Keyboard icon on a graphical display), press the number 1 key on the keyboard to display the SMS menu.
6. Enter any requested passwords.
7. Select **Utilities**.
8. Depending on the console type, select **RIPL** or **Remote Initial Program Load Setup**.
9. Depending on the console type, select **Set Address** or **IP Parameters**.
10. Enter the client address, server address, gateway address (if applicable), and subnet mask into the Remote Initial Program Load (RIPL). If there is no gateway between the NIM server and the client, set the gateway address to 0.0.0.0. To determine if there is a gateway, either ask the system network administrator or compare the first 3 octets of the NIM server address and the client address. If they are the same, (for example, if the NIM server address is 9.3.126.16 and the client address is 9.3.126.42, the first 3 octets (9.3.126) are the same), then set the gateway address in the RIPL field to 0.0.0.0.

Note: RIPL is located under the Utility menu in System Management Services (SMS) and should be referred to for information on setting these parameters.

11. If the NIM server is setup to allow the pinging of the client system, use the **ping** option in the RIPL utility to verify that the client system can ping the NIM server. Under the Ping utility, choose the network adapter that provides the attachment to the NIM server to do the ping operation. If the ping comes back with an *OK* prompt, the client is prepared to boot from the NIM server. If ping returns with a *FAILED* prompt, the client does not proceed with the boot.

Note: If the ping fails, refer to "Boot Problems/Concerns" in the service guide for the system unit. Then follow the steps for network boot problems.

Use the following procedure to temporarily changes the system bootlist so that the network adapter attached to the NIM server network, is first in the bootlist:

1. Exit to the SMS Main screen.
2. Depending on the console type, select **Multiboot** or **Select Boot Devices**.
3. Depending on the console type, select **Boot Sequence** or **Select Boot Devices**.
4. Record the current bootlist settings. (You will have to set the bootlist back to the original settings after running diagnostics from the NIM server.)
5. Change the bootlist so the network adapter attached to the NIM server is first in the bootlist.
6. Exit completely from SMS. The system should start loading packets while doing a bootp from the network.

Follow the instructions on the screen to select the system console.

If Diagnostics Operating Instructions Version x.x.x is displays, Standalone Diagnostics has loaded successfully. If the AIX login prompt displays, Standalone Diagnostics did not load. Check the following items:

- The bootlist on the client might be incorrect.
- Cstate on the NIM server might be incorrect.
- There might be network problems preventing you from connecting to the NIM server.

Verify the settings and the status of the network. If you continue to have problems, refer to "Boot Problems/Concerns" in the service guide for the system unit. Then follow the steps for network boot problems.

After running diagnostics, reboot the system and use SMS to change the bootlist sequence back to the original settings.

Locking and Unlocking the Electronic Service Agent

If the system is setup with a Electronic Service Agent, you must lock out the Electronic Service Agent before running diagnostics. This prevents the Electronic Service Agent from using the diagnostics while you are running them. Use the following commands to lock out the Electronic Service Agent:

```
cd /usr/lpp/servdir
ls /usr/lpp/servdir/servdir.lck
```

If a file named **servdir.lck** is listed, the Electronic Service Agent is already locked out. If it is not listed, use the following command to create the file:

```
/usr/lpp/servdir/servdir.lck
```

Use the following command to check that the **servdir.lck** file was created (if the file is present the Electronic Service Agent is locked out):

```
/usr/lpp/servdir/servdir.lck
```

Use the following commands to unlock the Electronic Service Agent:

```
/usr/lpp/servdir/servdir.analyze reset
rm /usr/lpp/servdir/servdir.lck
```

Use the following command to check that the **servdir.lck** file was deleted (the file should not be present):

```
ls /usr/lpp/servdir/servdir.lck
```

If the file is listed, the Electronic Service Agent is still locked out.

Locking and Unlocking the Service Agent

If the system is setup with a service agent, you must lock out the service agent before running diagnostics.

Note: The system does not report problems while the service agent is locked out. When you complete your service action, be sure to unlock the service agent to allow it to report problems.

Use the following procedure to lock out the service agent:

1. Click the **Administration** folder.
2. Select the **Lockout Machines** option.
3. In the Detail screen, select the system you want to lock out, then click **Lock**.
4. To verify that the system is locked out, click the **Network** folder.
5. Click the Padlock icon to display the lockout status. The system you locked out should have a red X displayed, indicating it is locked out.

Use the following procedure to unlock the service agent:

1. Click the **Administration** folder.
2. Select the **Lockout Machines** option.
3. In the Detail screen, select the system you want to unlock, and click **Unlock**.
4. To verify that the system is unlocked, click the **Network** folder.
5. Click the Padlock icon to display the lockout status. The system you unlocked should not have a red X displayed.

Running Online Diagnostics

Consider the following when you run the Online Diagnostics from a server or a disk:

- The diagnostics cannot be loaded and run from a disk until the AIX operating system has been installed and configured. After the installation of the AIX operating system, all three modes of operation are available.
- The diagnostics cannot be loaded on a system (client) from a server if that system is not set up to IPL from a server over a network, or the server has not been setup to send a service mode IPL of the diagnostics. When the system is set up to IPL from a server, the diagnostics are executed in the same manner as they are from disk.
- When the system is running in a full machine partition, if the diagnostics were loaded from disk or a server, you must shut down the AIX operating system before powering off the system unit to prevent possible damage to disk data. This is done in one of two ways:
 - If the diagnostic programs were loaded in Standalone mode, press the F3 key until DIAGNOSTIC OPERATING INSTRUCTIONS displays; then follow the displayed instructions to shut down the AIX operating system.
 - If the diagnostic programs were loaded in maintenance or concurrent mode, enter the **shutdown -F** command.
- Under some conditions the system may stop, with instructions displayed on attached displays and terminals. Follow the instructions to select a console display.

Running the Diagnostics from a TTY Terminal

Consider the following when you run diagnostics using a TTY-type terminal as the console display:

- See the operator manual for your type of TTY terminal to find the key sequences you need to respond to the diagnostics. For the 3151, refer to the *3151 ASCII Display Station Guide to Operations*, form number GA18-2633. For the 3164, refer to the *3164 ASCII Color Display Station Description*, form number GA18-2617.

- When the diagnostics present display information through the S1 serial port, certain attributes are used. These attributes are set as if the diagnostics were using a 3161 display terminal. Refer to the tables in “Appendix D. General Attributes Required When Using a TTY Terminal” on page 623 for a list of attributes for the 3161 ASCII Display Terminal and for two other ASCII display terminals commonly used with the system.
- If you have a TTY terminal other than a 3151, 3161 or 3164 attached to the S1 serial port, your terminal may have different names for the attributes. Refer to the tables in “Appendix D. General Attributes Required When Using a TTY Terminal” on page 623, and use the attribute descriptions to determine the settings for your terminal.

Online Diagnostics Mode of Operation

The Online diagnostics can be run in three modes:

- *Service Mode* allows checking of most system resources.
- *Concurrent Mode* allows the normal system functions to continue while selected resources are being checked.
- *Maintenance Mode* allows checking of most system resources

Running the Online Diagnostics in Service Mode (Service Mode IPL)

Service mode provides the most complete checkout of the system resources. This mode also requires that no other programs be running on the system. All supported system resources except the SCSI adapter, and the disk drives used for paging can be tested. However, the system memory and the processor are only tested during power-on self-test (POST).

Error log analysis is done in service mode when you select the **Problem Determination** option on the DIAGNOSTIC MODE SELECTION menu.

To run the Online diagnostics in service mode, use the following steps:

1. Stop all programs including the AIX operating system (get help if needed).
2. Remove all tapes, diskettes, and CD-ROM discs.
3. If the system is running in a full machine partition, turn off the system unit power.
4. If the system is running in a full machine partition, turn on the system unit power. If the system is running on a logically partitioned system, restart the AIX operating system in the partition you wish to run online diagnostics.
5. After the first POST indicator appears on the system unit’s console, press F6 on the directly-attached keyboard or 6 on the TTY keyboard to indicate that diagnostics are to load.

Note: The term *POST indicator* refers to the icons (graphic display) or device mnemonics (ASCII terminal) that are displayed while the POST is running.

6. Enter any requested password.
7. Follow any instructions to select a console.
8. After the diagnostic controller loads, DIAGNOSTIC OPERATING INSTRUCTIONS appear on the console display.

9. Follow the displayed instructions to test the desired resources.
10. When testing is complete; use the F3 key to return to the DIAGNOSTIC OPERATING INSTRUCTIONS.
11. Press the F3 key (from a defined terminal) or press 99 (for an undefined terminal) to shut down the diagnostics before turning off the system unit (if running in a full machine partition) or rebooting the partition (if running one or more logical partitions).

Note: Pressing the F3 key (from a defined terminal) produces a Confirm Exit menu which offers two options: continuing with the shut down by pressing F3; or returning to diagnostics by pressing Enter.

For undefined terminals, pressing 99 produces a full screen menu which offers two options: continuing with the shutdown by pressing 99 and then Enter; or returning to diagnostics by pressing Enter.

Running the Online Diagnostics in Concurrent Mode

Use Concurrent mode to run Online diagnostics on some of the system resources while the system is running normal system activity.

Because the system is running in normal operation, the following resources cannot be tested in concurrent mode:

- SCSI adapters connected to paging devices
- Disk drive used for paging
- Any graphics-related device running X, CDE, or windowing environment
- Memory
- Processor.

Three levels of testing exist in concurrent mode:

- The **share-test level** tests a resource while the resource is being shared by programs running in the normal operation. This testing is mostly limited to normal commands that test for the presence of a device or adapter.
- The **sub-test level** tests a portion of a resource while the remaining part of the resource is being used in normal operation. For example, this test could test one port of a multiport device while the other ports are being used in normal operation.
- The **full-test level** requires the device not be assigned to or used by any other operation. This level of testing on a disk drive might require the use of the **varyoff** command. The diagnostics display menus to allow you to vary off the needed resource.

Error log analysis is done in concurrent mode when you select the **Problem Determination** option on the DIAGNOSTIC MODE SELECTION menu.

To run the Online diagnostics in concurrent mode you must be logged onto the AIX operating system and have proper authority to issue the commands (if needed, get help).

The **diag** command loads the diagnostic controller and displays the Online diagnostic menus.

To run Online diagnostics in concurrent mode, use the following steps:

- Log on to the AIX operating system as root or use CE login.
- Enter the **diag** command.
- When the DIAGNOSTIC OPERATING INSTRUCTIONS display, follow the instructions to test the desired resources.
- When testing is complete, use the F3 key to return to the DIAGNOSTIC OPERATING INSTRUCTIONS. Press the F3 key again to return to the operating system prompt. Be sure to vary on any resource you had varied to off.
- Press the Ctrl-D key sequence to log off from root or superuser.

Running the Online Diagnostics in Maintenance Mode

Maintenance mode runs the Online diagnostics using the customer's version of the AIX operating system. This mode requires that all activity on the operating system be stopped so the Online diagnostics have most of the resources available to check. All of the system resources except the SCSI adapters, memory, processor, and the disk drive used for paging can be checked.

Error log analysis is done in maintenance mode when you select the **Problem Determination** option on the DIAGNOSTIC MODE SELECTION menu.

The **shutdown -m** command is used to stop all activity on the AIX operating system and put the operating system into maintenance mode. The **diag** command is then used to invoke the diagnostic controller so you can run the diagnostics. After the diagnostic controller is loaded, follow the normal diagnostic instructions.

To run the Online diagnostics in maintenance mode, you must be logged in to the customer's version of the AIX operating system as *root* or *superuser* and use the **shutdown -m** and **diag** commands. Use the following steps to run the Online diagnostics in maintenance mode:

1. Stop all programs except the AIX operating system (get help if needed).
2. Log in to the AIX operating system as root or superuser.
3. Enter the **shutdown -m** command.
4. When a message indicates the system is in maintenance mode, enter the **diag** command.

Note: It may be necessary to set *TERM* type again.

5. When DIAGNOSTIC OPERATING INSTRUCTIONS display, follow the displayed instructions to test the desired resources.
6. When testing is complete, use the F3 key to return to DIAGNOSTIC OPERATING INSTRUCTIONS. Then press the F3 key again to return to the AIX operating system prompt.
7. Press Ctrl-D to log off from root or superuser.

Standalone Diagnostic Operation

Use Standalone Diagnostics to test the system when the Online Diagnostics are not installed and as a method of testing the disk drives and other resources that can not be tested by the Online Diagnostics.

Note: Error Log Analysis is not done by the Standalone Diagnostics. If running from the diagnostic CD-ROM disc, the CD-ROM drive and the SCSI controller that controls it cannot be tested by the Standalone Diagnostics.

LPAR Considerations for Standalone Diagnostics

- To run standalone diagnostics on an full machine partition, you must reboot the whole system. However, for an LPAR system, you may boot standalone diagnostics in a given partition or on the entire system (which is same procedure as on an full machine partition).
- For an LPAR partition, before running standalone diagnostics on a given partition, the user must move the device from the location where standalone diagnostics is booted (the CD-ROM drive or the network adapter connected to the NIM server in the case of NIM boot of standalone diagnostics), to the partition that will run standalone diagnostics. Devices on an LPAR system are moved on a slot basis. If the CD-ROM drive is moved from one partition to another, all SCSI devices on the same SCSI adapter card to which the CD-ROM drive is attached must also be moved to the same partition. It is recommended that you attach few SCSI devices to the same SCSI controller card to prevent moving them, along with the CD-ROM drive, between partitions.
- A reboot is required on the partition containing this device and on the moved device, but the system itself is not powered off in order to boot standalone diagnostics in an LPAR partition.

Running the Standalone Diagnostics from CD-ROM

To run Standalone Diagnostics in service mode, use the following steps:

1. If you are running standalone diagnostics in a full machine partition, verify with the system administrator and system users that the system unit may be shut down. Stop all programs including the AIX operating system (Refer to the AIX operating system documentation for information on the **shutdown** command). If you are running standalone diagnostics in an LPAR partition, make the CD-ROM drive available to the partition used to run standalone diagnostics (refer to the *Hardware Management Console for pSeries Operations Guide* for more information). Verify with the system administrator and system users using that partition that all applications on that partition must be stopped, and the partition will be rebooted. Stop all programs on that partition, including the operating system.
2. Remove all tapes, diskettes, and CD-ROMs.
3. Turn off the system unit power.
4. If running standalone diagnostics in a full machine partition, power off the system unit.
5. If running standalone diagnostics in a full machine partition, power on the system unit. If running standalone diagnostics in an LPAR partition, reboot that partition.

6. When the keyboard POST indicator appears, press the F5 key on the directly attached keyboard, or the number 5 key on the TTY keyboard.
7. Enter any requested passwords.
8. Follow any instructions to select the console.
9. After the diagnostic controller loads, DIAGNOSTIC OPERATING INSTRUCTIONS appear on the console display.
10. Follow the displayed instructions to test the desired resources.
11. When testing is complete, use the F3 key to return to the DIAGNOSTIC OPERATING INSTRUCTIONS.

General Information about Multiple Systems

This topic presents general information for anyone needing to run the diagnostic programs on a system unit that is attached to another system. This information is intended for use by both the operator of the system and the service representative.

These considerations and actions are not detailed step-by-step instructions, but are used to ensure that you have considered the attached system before you run diagnostics on this system unit.

You are directed to the detailed procedures for the various activities as needed.

These guidelines generally present considerations for the following:

- Starting and stopping the communications with the other system
- Considerations before running diagnostics on the system
- Analyzing the error log information
- Using the wrap plugs with the diagnostics

When this system unit is attached to another system, be sure you isolate this system unit before stopping the operating system or running diagnostic programs. Some system-cabling changes (such as installing wrap plugs or removing a device from the configuration) may require action by the operator of the attached system before making the cabling changes on this system.

Determining System Architecture

Location codes and many of the service aids are restricted by the system model architecture (platform). If location codes or service aids are needed to complete servicing your system, it may be necessary to know which platform your system is using.

This manual deals with the following platforms:

- CHRP (Common Hardware Reference Platform)
- RSPC (PowerPC Reference Platform)

Notes:

1. The service aids in this manual may be identified as being CHRP or RSPC only. Assume the service aid can be accessed on either platform unless a note is included, stating the service aid is CHRP or RSPC only.
2. “Chapter 27. Diagnostics Numbers and Location Codes” on page 211 contains two location code sections. Refer to “Location Codes for RSPC Model Architecture System Units” on page 228 for RSPC location codes and “Location Codes for CHRP Model Architecture System Units” on page 230 for CHRP location codes.

To determine the type of platform on which you are working, enter one of the following commands.

- If you are running AIX 4.2.1 or later; from an AIX shell enter: **lscfg | pg**. A screen displays a message similar to one of the following:

```
Model Architecture: RS6k
Model Implementation: Uniprocessor, MCA bus
```

```
Model Architecture: RSPC
Model Implementation: Uniprocessor, PCI bus
```

```
Model Architecture: CHRP
Model Implementation: Multiple Processor, PCI bus
```

```
Model Architecture: OEM
```

- If you are running AIX 4.2.1 or later diagnostics, select **Display Configuration and Resource List** from the Task Selection Menu.
- On any AIX operating system when you are logged in with root authority, run the **bootinfo -p** command. The system platform type is returned.
- On system units that support the *OK* prompt, and you are running AIX Diagnostics from Standalone or Online mode, after turning on power and the first image appears, but before the audible tone sounds, do the following:
 - Press the F8 key. An *OK* prompt appears.
 - At the prompt, enter the **dev /** command. A menu containing the `device_type` appears. The platform designation (CHRP or RSPC) is identified.

High-Availability SCSI

A high-availability SCSI configuration consists of two system units or CPU drawers connected to a common set of SCSI devices. The configuration provides high availability because either system unit or CPU drawer can continue to access the common devices while the other system is unavailable.

The actions needed to isolate a particular system unit or device from the configuration depends on the software controlling the systems and devices. Therefore, be sure you use the software documentation to prepare the configuration before turning off a system unit or device.

High-Availability Cabling

For additional cabling information, refer to *Adapters, Devices, and Cable Information for Multiple Bus Systems*.

Diagnostic Summary

The following topics provide summary type information about some features of the diagnostics.

Memory and Processor Testing

- Memory and Fixed-Point Processors are only tested during POST.
- A complete memory test is run during POST.
- The POST only halts and reports problems that prevent the system from booting.
- All other problems are logged for later analysis by the Sysplanar and Memory Diagnostics.

Sysplanar and Memory Diagnostics

- Analyzes POST and firmware errors that were detected during IPL, but did not prevent the system from booting.
- Performs error log analysis if the diagnostics are running online in problem determination mode or error log analysis mode.

Error Log Analysis

- Error Log Analysis is analysis of the AIX Error Log entries.
- Error Log Analysis is part of the diagnostic applications. The analysis is started by selecting a device from the DIAGNOSTIC SELECTION menu; then using the **diag** command or selecting the Run Error Log Analysis task.
- Error Log Analysis is only performed when running online diagnostics.
- Error Log Analysis is *not* performed when running diagnostics from removable media.
- Error Log Analysis only reports problems if the errors have reached defined thresholds. Thresholds can be from 1 to 100 depending on the error.
- Permanent errors do not necessarily mean a part should be replaced.
- Automatic Error Log Analysis (**diagela**) provides the capability to do error log analysis whenever a permanent hardware error is logged.

Diagnostic Modes

The Diagnostic Modes consist of Problem Determination Mode and System Verification Mode.

- Problem Determination Mode runs all tests unless the resource is being used. If a resource is being used, a screen appears informing the user that the resource needs to be made available for testing. If a problem is not found, then Error Log Analysis is performed.
- In Problem Determination Mode, Error Log Analysis is performed even if a resource is being used.
- System Verification Mode does not perform Error Log Analysis. Run this mode when you are doing a repair verification.

Diagnostics Tasks and Resources

Tasks are operations that can be performed on a resource. Running Diagnostics, Displaying VPD, or Formatting a Device, are examples of tasks. Service aids are also considered tasks. Tasks and service aids are further described in “Chapter 26. Introduction to Tasks and Service Aids” on page 163.

Resources are devices used by the system unit. Diskette drive and CD-ROM drive are examples of resources.

The FUNCTION SELECTION menu contains two selections allowing either all resources, or all tasks to be displayed. When task selection is made and a task has been selected, a list of supporting resources displays. Alternatively, when resource selection is made, and a resource or group of resources are selected, a list of common tasks displays. Also, to aid with backward compatibility, the FUNCTION SELECTION menu contains Diagnostic routines and Advanced Diagnostic routines selection.

The Display or Change Diagnostic Run Time Options task can be used to set advanced mode diagnostics, looping capability, and error log analysis (ELA) mode when running diagnostics from the Task Selection menu.

diag Command Line Options

The following describe the Version 4.2 and later diagnostic command line options:

```
diag [[-a] | [-s[-c]] [-E Days] [-e] |  
[-d Device] [-v] [-c] [-e] [-A]] |  
[-B[-c]] | [-T taskname] [-S testsuite]
```

Flags

The **diag** command line flags are as follows:

- a Processes any change in the hardware configuration by asking if missing resources have been removed, turned off, and so on.
 - A Specifies Advanced mode. You must also specify a device with the -d flag.
 - B Instructs the diagnostics to run the base system test. Error log analysis is also done on areas in the base system that supports error log analysis.
 - c Indicates that the machine will not be attended. No questions are asked. Results are written to standard output. Must also use an option flag (-d, -B, -s) that specifies a device to be tested.
 - d Device Specifies the device to run diagnostics on.
 - E Days Specifies the number of days to use when searching the error log during Run Error Log Analysis. The flag works with any other flag.
 - e Performs error log analysis if supported on the selected device. No tests are performed. May be used with the -d flag, otherwise the resource selection menu is displayed. If used with the -v flag, the -v flag takes precedence and the -e flag is ignored.
 - S testsuite Indicates a particular Test Suite of devices to test:
 1. Base System
 2. I/O Devices
 3. Async Devices
 4. Graphic Devices
 5. SCSI Devices
 6. Storage Devices
 7. Commo Devices
 8. Multimedia Devices
 - s Runs diagnostics on all resources.
 - T taskname Fastpath to specific task to run. Current fastpath tasks are the following
 - format - Format Media Task
 - certify - Certify Media Task
 - download - Download Microcode Task
 - disp_mcode - Display Microcode Level Task
 - chkspares - Spare Sector Availability Task
 - identify - PCI RAID Physical Disk Identify Task
- Note: Tasks are platform and device dependent. Some tasks may not be available on the system.
- v Runs diagnostics in System Verification Mode, no error log analysis performed. The default is Problem Determination mode that tests the device and runs error log analysis. If used with the -e flag, the -v flag takes precedence and the -e flag is ignored. Must be used with the -d flag to specify a device to run diagnostics on.

Default execution mode is non-advanced mode.

SCSI RAID Descriptions and Diagnostic Procedures

Viewing the Existing Firmware Level Installed on a SCSI RAID Adapter

Below is an example of the steps one might perform to check the microcode level on the RAID adapter:

1. Login as root (if not already root)
2. Type `lsdev -C | grep scraid`. This lists all the SCSI RAID adapters installed or defined to the system.
3. Identify the number (for example, `scraid0`) of the card for which you wish to check the microcode level.
4. Type `lscfg -v1 scraidX` (where *X* is the number of the RAID adapter from above).
5. Look at the Loadable Microcode Level field, compare it to the desired level.

Updating the Firmware on a SCSI RAID Target Adapter

This procedure assumes that you have obtained the SCSI RAID adapter microcode you wish to download, and it is located either on a diskette, or in the `/etc/microcode` directory of the system containing the RAID adapter you want to update. This section describes the method for transferring the new firmware into the target adapter. Each flash update should complete within one minute.

Warning: Do not power off the target server at any time before the flash process completes. If power is removed or the system is reset while `flash_update` is being run, irrecoverable failures may occur. This could require return of the adapter for exchange.

Diagnostic menu procedure:

1. Login as root or use CE Login (if not already logged in)
2. Type `diag`
3. Select **Task Selection -> Download Microcode**
4. When **Resource Selection** menu displays select `scraidX`, (Where *X* is the ID of the desired adapter) and press **F7**.
5. When **Display Microcode Level** menu displays select **Adapter**.
6. When **Install Microcode** menu displays select **Functional Microcode**.
7. If the current microcode level on the adapter is below the level you want to install select **Latest Level** (that is, 4.20.18 is currently on the adapter and you wish to install 4.70.11).

or

If the current microcode level on the adapter is greater than the level you wish to install select **Previous Level** (that is, 3.70.01 is currently on the adapter and you wish to install 3.12.01).

8. Select where the microcode is located either, `/etc/microcode` directory or diskette.

Command Line procedure:

Use one of the two procedures listed, depending on which level of microcode you want to install relative to the existing level it has:

Note: You must be logged in as root¹ or use CE login to perform these commands.

- If the current microcode level on the adapter is below the level you wish to install use the following command:

```
diag -c -d scraidX -T"download"
```

Where X is the ID of the desired adapter, for example, 4.20.18 is currently on the adapter and you wish to install 4.70.11.

- If the current microcode level on the adapter is greater than the level you wish to install use the following command:

```
diag -c -d scraidX -T"download -P"
```

Where X is the ID of the desired adapter, for example 3.70.01 is currently on the adapter and you wish to install 3.12.01.

After following either the **Diagnostic Menu** or the **Command Line** procedure, you should receive a confirmation that microcode has been updated. If you do not, then make sure the adapter is not in use and repeat the appropriate diagnostic step shown above.

To confirm the new installed level of firmware on the adapter, use the "Viewing the Existing Firmware Level Installed on a SCSI RAID Adapter" on page 156 procedure.

Displaying the VPD Information of a Disk Drive in a SCSI RAID Subsystem.

You may use any of 3 ways to display the VPD information of a drive in a SCSI RAID.

Diagnostics VPD Display:

The first way is through diagnostics. However, this cannot be performed concurrently with normal RAID operation. The RAID volume group must be varied off to run from diagnostic menus or diagnostics from the command line. A command the customer (logged in as root) might use to vary off the volume group is: varyoffvg *RAID_volumegroup* (where *RAID_volumegroup* is the volume group containing the RAID drive you wish to test).

Note: The underlying filesystems may need to be unmounted before varying off the volume group can complete successfully.

Diagnostic Menu method:

1. Login as root or use CE Login
2. Type diag
3. Select **Task Selection -> PCI Physical Disk Identify**
4. When the **Resource Selection** menu displays select **scraidX**, (Where X is the ID of the desired adapter) Press **F7**
5. Look at the ROS and RAM code levels. This is drive microcode level.

6. Ask the customer (logged on as root) to type `varyonvg RAID_volume group` where `RAID_volume group` is the name of the volume group you previously varied off. Any filesystem unmounted will have to be remounted.

Command Line method:

Logged in as root or use CE Login, type in the command:

```
diag -cd scraidX -T"identify"
```

Where X is replaced by the number of the desired adapter. A list containing the VPD information of all the drives in the RAID subsystem will be displayed on the screen.

Look at the ROS and RAM code levels. This is drive microcode level. Compare this to the desired level.

When you are done, ask customer (logged on as root) to vary on the volume group using command:

```
varyonvg RAID_volume group
```

where `RAID_volume group` is the name of the volume group you previously varied off. Any filesystem unmounted will have to be remounted.

Note: For either of these two methods, if you see the error message: An adapter configuration error was detected.... Run the Disk Array Manager to resolve the adapter configuration error.

1. Login as root (if not already root)
2. Type `smit pdam`
3. Select **Recovery Options -> Resolve PCI SCSI RAID Adapter Configuration -> Display/Accept Configuration Changes**
4. Select the appropriate SCSI RAID adapter containing the drive.
5. Select **YES** for the **Display only** option.
Warning: The following steps will change the array's configuration, if you have any doubts do not proceed!
6. If the propose changes to the array configuration match what is desired, press **F3** and Select **NO** for **Display Only**.
7. If the propose changes to the array configuration do NOT match what is desired, if not, press **F10** to exit.

SCSI RAID Manager VPD Display method:

The third way to display VPD is through the `scraidmgr`. This can be performed while the RAID array is operational.

From the AIX command prompt, ask the customer to:

1. Login as root (if not already root)
2. Type `smit pdam`

3. Select **Change/Show PCI RAID Drive Status -> Display VPD Information**
4. Select the appropriate RAID adapter
5. Select the drives from that adapter one at a time.
6. Look at the ROS and RAM code levels. This is drive microcode level. Compare this to the level you need on the adapter.

Updating the Microcode on a Disk in a SCSI RAID Subsystem

Once you have downloaded the desired microcode, follow the readme and place the microcode image in the **/etc/microcode** directory or on a diskette. With the RAID volume group varied off, you can flash the drives through the following process:

Note: The underlying filesystems may need to be unmounted before varying off the volume group can complete successfully. Then, the volume group containing the disk must be varied off. A command the customer (logged in as root) might use to vary off the volume group is:

```
varyoffvg RAID_volumegroup
```

Where RAID_volumegroup is the volume group containing the RAID drive you wish to test. When you are done, ask customer (logged on as root) to vary on the volume group using command:

```
varyonvg RAID_volumegroup
```

Where RAID_volumegroup is the name of the volumegroup you previously varied off. Any filesystem unmounted will have to be remounted.

Diagnostic Menu Method

1. Login as root or use CE Login
2. Type diag
3. Select **Task Selection -> Download Microcode**
4. When Resource Selection menu displays select **scraidX**, (Where X is the ID of the desired adapter) and press **F7**
5. When **Install Microcode** menu displays select **Physical Disks**.
6. Select each drive for which microcode is to be flashed by pressing Enter on those drives. Or, select **All drives** to update every drive. Press **F7** to commit.
 - If the current microcode level on the drive is below the level you wish to install select **Latest Level** (for example, S9HA is currently on the drive and you wish to install S9RA).
 - If the current microcode level on the drive is greater than the level you wish to install select **Previous Level** (for example, S9RA is currently on the drive and you wish to install S9HA)

Note: Microcode levels are consecutive going from 0-9 then A-Z. So, level S9HA would be a later level than S96F.

7. Select the location where the microcode image is stored (from above).
 - - On system's **/etc/microcode** directory

- On a diskette
8. A message will be displayed if download was successful or failed.

Command Line Method:

Log in as root or use CE login, then type the command:

```
diag -c -d sraidX -T "download {-l chID | -A} [-D] [-P]"
```

where:

- A** all disk drives
- D** Microcode is on diskette (default to /etc/microcode directory)
- I** RAID disk drive-physical disk channel/ID (example 27)
- P** Download the previous level of microcode (default to latest level)

For example, the command:

```
diag -c -d sraid0 -T"download -l 28"
```

downloads microcode from **/etc/microcode** to the drive with channel/ID 28.

Displaying and Updating the Microcode on an External Enclosure (2104) or Backplane in a SCSI RAID Subsystem

Note: Microcode download for backplanes only works if a 4-Channel PCI SCSI RAID adapter is installed with at least level 50 of the diagnostics device driver (devices.pci.14102e00.diag.4.3.3.50). Obtain microcode for the external enclosure or backplane on a diskette or in the **/etc/microcode** directory on the system.

Note: The RAID volume group must be varied off in order to display and update the backplane microcode.

A command the customer (logged in as root) might use to vary off the volume group is:
varyoffvg RAID_volumegroup

where RAID_volumegroup is the volume group containing the RAID drive you wish to test.

Note: The underlying filesystems may need to be unmounted before varying off the volume group can complete successfully.

Diagnostic Menus

When you are done, ask customer (logged on as root) to vary on the volume group using the command: "

```
varyonvg [RAID_volumegroup]
```

where RAID_volumegroup is the name of the volumegroup you previously varied off.

Any filesystem unmounted will have to be remounted.

To update enclosure microcode using Diagnostic Menus:

1. Login as root or use CE Login
2. Type `diag`.
3. Select **Task Selection -> Download Microcode**
4. Select the appropriate **scraid** adapter attached to the enclosure.
5. Select **Backplanes**.
6. A list of all the backplanes attached to the adapter will be displayed. Press **Enter** to select the appropriate backplane(s) or to select all backplanes. Press **F7** to commit.
7. Select **Latest Level** if updating to a higher level of microcode **Previous Level** if updating to a lower level of microcode.
8. A message will be displayed noting whether the microcode download was successful or it failed.

Chapter 26. Introduction to Tasks and Service Aids

The AIX Diagnostic Package contains programs that are called *Tasks*. Tasks can be thought of as performing a specific function on a resource; for example, running diagnostics or performing a service aid on a resource. This chapter describes the Tasks available in AIX Diagnostics Version 4.2 and later.

Normally, one would run `certify` if after running diagnostics on a drive and its media, no problem is found, but one still suspects that a problem still does exist.

Note: Many of these programs work on all system model architectures. Some programs are only accessible from Online Diagnostics in Service or Concurrent mode, while others might be accessible only from Standalone Diagnostics. Still other programs might only be supported on a particular system architecture, such as CHRP (Common Hardware Reference Platform) or RSPC (PowerPC Reference Platform). Refer to “Determining System Architecture” on page 152 to identify the platform type of your system unit.

Note: If the system is running on a logically partitioned system, the following tasks may only be executed in a partition with service authority:

- Configure Reboot Policy
- Configure Remote Maintenance Policy
- Configure Ring Indicate Power On
- Configure Ring Indicate Power-On Policy
- Update System or Service Processor Flash
- Save or Restore Hardware Management Policies

To perform one of these tasks, use the Task Selection option from the FUNCTION SELECTION menu.

After a task is selected, a resource menu may be presented showing all resources supported by the task.

A fast path method is also available to perform a task by using the **diag** command and the **-T** flag. By using the fast path, the user can bypass most of the introductory menus to access a particular task. The user is presented with a list of resources available to support the specified task. The fast path tasks are as follows:

- `Certify` - Certifies media
- `Chkspares` - Checks for the availability of spare sectors
- `Download` - Downloads microcode to an adapter or device
- `Disp_mcode` - Displays current level of microcode
- `Format` - Formats media
- `Identify` - Identifies the PCI RAID physical disks
- `IdentifyRemove` - Identifies and removes devices (Hot Plug)

To run these tasks directly from the command line, specify the resource and other task-unique flags. Use the descriptions in this chapter to understand which flags are needed for a given task.

Tasks

The following tasks are described in this chapter:

- Add Resource to Resource List
- AIX Shell Prompt
- Analyze Adapter Internal Log
- Backup and Restore Media
- Certify Media
- Change Hardware Vital Product Data
- Configure Dials and LPF Keys
- Configure ISA Adapters
- Configure Reboot Policy
- Configure Remote Maintenance Policy
- Configure Ring Indicate Power On
- Configure Ring Indicate Power-On Policy
- Configure Service Processor (RSPC)
- Configure Surveillance Policy
- Create Customized Configuration Diskette
- Delete Resource from Resource List
- Disk Maintenance
- Display Configuration and Resource List
- Display Firmware Device Node Information
- Display Hardware Error Report
- Display Hardware Vital Product Data
- Display Machine Check Error Log
- Display Microcode Level
- Display or Change Bootlist
- Display or Change Diagnostic Run Time Options
- Display Previous Diagnostic Results
- Display Resource Attributes
- Display Service Hints
- Display Software Product Data
- Display System Environmental Sensors
- Display Test Patterns
- Display USB Devices
- Download Microcode
- Fibre Channel RAID Service Aids
- Flash SK-NET FDDI Firmware
- Format Media
- Gather System Information
- Generic Microcode Download
- Hot Plug Task
- Local Area Network Analyzer
- Log Repair Action
- Periodic Diagnostics
- PCI RAID Physical Disk Identify

- Process Supplemental Media
- Run Diagnostics
- Run Error Log Analysis
- Run Exercisers
- Save or Restore Hardware Management Policies
- Save or Restore Service Processor Configuration
- SCSI Bus Analyzer
- SCSD Tape Drive Service Aid
- Spare Sector Availability
- SSA Service Aid
- System Fault Indicator
- System Identify Indicator
- Update Disk-Based Diagnostics
- Update System or Service Processor Flash
- Update System Flash
- 7135 RAIDiant Array Service Aids
- 7318 Serial Communication Network Server

Add Resource to Resource List

Use this task to add resources back to the resource list.

Note: Only resources that were previously detected by the diagnostics and deleted from the Diagnostic Test List are listed. If no resources are available to be added, then none are listed.

AIX Shell Prompt

Note: Use this service aid in Online Service Mode only.

This service aid allows access to the AIX command line. To use this service aid, the user must know the root password (when a root password has been established).

Note: Do not use this task to install code or to change the configuration of the system. This task is intended to view files, configuration records, and data. Using this service aid to change the system configuration or install code can produce unexplained system problems after exiting the diagnostics.

Analyze Adapter Internal Log

The PCI RAID adapter has an internal log that logs information about the adapter and the disk drives attached to the adapter. Whenever data is logged in the internal log, the device driver copies the entries to the AIX system error log and clears the internal log.

The Analyze Adapter Internal Log service aid analyzes these entries in the AIX system error log. The service aid displays the errors and the associated service actions. Entries that do not require any service actions are ignored.

Backup and Restore Media

This service aid allows verification of backup media and devices. It presents a menu of tape and diskette devices available for testing and prompts for selecting the desired device. It then presents a menu of available backup formats and prompts for selecting the desired format. The supported formats are **tar**, **backup**, and **cpio**. After the device and format are selected, the service aid backs up a known file to the selected device, restores that file to **/tmp**, and compares the original file to the restored file. The restored file remains in **/tmp** to allow for visual comparison. All errors are reported.

Certify Media

This task allows the selection of diskette, DVD-RAM media or hard files to be certified. Normally, this is done for the following two conditions:

- To determine the condition of the drive and media.
- To verify that the media is error free after a Format Service Aid has been run on the media.

Normally, one would run certify if after running diagnostics on a drive and its media, no problem is found, but one still suspects that a problem still does exist.

Hard files can be connected either to a SCSI adapter (non-RAID) or a PCI SCSI RAID adapter. The usage and criteria for a hard file connected to a non-RAID SCSI adapter are different from those for a hard file connected to a PCI SCSI RAID adapter.

Certify may be used in the following ways:

- Certify Diskette

This selection enables you to verify the data written on a diskette. When you select this service aid, a menu asks you to select the type of diskette being verified. The program then reads all of the ID and data fields on the diskette one time and displays the total number of bad sectors found.

- Certify DVD-RAM media

This selection reads all of the ID and data fields. It checks for bad data and counts all errors encountered. If an unrecovered error occurs, or recovered errors exceed the threshold value, the data on the media should be transferred to other media and the original media should be discarded.

The Certify service aid will display the following information:

- Capacity in bytes
- Number of Data Errors Not Recovered
- Number of Equipment Check Errors
- Number of Recovered Errors

If the drive is reset during a certify operation, the operation is restarted.

If the drive is reset again, the certify operation is terminated and the user is asked to run diagnostics on the drive.

This task can be run directly from the AIX command line. See the following command syntax: `diag -c -d -T certify`

Flag	Description
-c	No console mode
-d	Specifies a device
-T	Specifies the certify task

- Certify Hardfile Attached to a Non-RAID SCSI Adapter

This selection reads all of the ID and data fields. It checks for bad data and counts all errors encountered. If there are unrecovered data errors that do not exceed the threshold value, then the hard file needs to be formatted and certified. If the

unrecovered data errors, recovered data errors, recovered and unrecovered equipment errors exceed the threshold values, the disk needs to be replaced.

It also makes 2000 random seeks after the read certify of the surface completes. If a disk timeouts before finishing the random seeks, then the disk needs to be replaced. The random seeks also count all errors encountered.

The Certify service aid will display the following information:

- Drive capacity in megabytes.
- Number of Data Errors Recovered.
- Number of Data Errors Not Recovered.
- Number of Equipment Checks Recovered.
- Number of Equipment Checks Not Recovered.

This task can be run directly from the AIX command line. See the following command syntax: `diag -c -d deviceName -T "certify"`

Flag	Description
-c	No console mode
-d	Specifies a device
-T	Specifies the certify task

- Format and/or Erase Hardfile Attached to a Non-RAID SCSI Adapter

Warning: The following commands WILL change the content of the hardfile. Be sure to backup data prior to running the command, and take care in choosing the hardfile upon which you run this task.

- Hardfile Format

Writes all of the disk. The pattern written on the disk is device-dependant; for example, some drives may write all 0s, while some may write the hexadecimal number 5F. No bad block reassignment occurs.

- Hardfile Format and Certify

Performs the same function as Hardfile Format. After the format is completed, Certify is run. Certify then reassigns all bad blocks encountered.

- Hardfile Erase Disk

This option can be used to overwrite (remove) all data currently stored in user-accessible blocks of the disk. The Erase Disk option writes one or more patterns to the disk. An additional option allows data in a selectable block to be read and displayed on the system console.

To use the Erase Disk option, specify the number (0-3) of patterns to be written. The patterns are written serially; that is, the first pattern is written to all blocks. Then the next pattern is written to all blocks, overlaying the previous pattern. A random pattern is written by selecting the Write Random Pattern option.

Note: The Erase Disk service aid has not been certified as meeting the Department of Defense or any other organization's security guidelines.

Use the following steps to overwrite the data on the drive:

1. Use the Erase Disk selection to overwrite the data on the drive.

2. Do a format without certify.
3. Run a second pass of the Erase Disk selection.

For a newly installed drive, you can ensure that all blocks on the drive are overwritten with your pattern if you use the following procedure:

1. Format the drive.
2. Check the defect MAP by running the Erase Disk selection.

Note: If you use Format and Certify option, there may be some blocks which get placed into the grown defect MAP.

3. If there are bad blocks in the defect MAP, record the information presented and ensure that this information is kept with the drive. This data is used later when the drive is to be overwritten.
4. Use you drive as you would normally.
5. When the drive is no longer needed and is to be erased, run the same version of the Erase Disk selection which was used in step 2.

Note: Using the same version of the service aid is only critical if any bad blocks were found in step 3.

6. Compare the bad blocks which were recorded for the drive in step 3 with those that now appear in the grown defect MAP.

Note: If there are differences between the saved data and the newly obtained data, then all sectors on this drive cannot be overwritten. The new bad blocks are not overwritten.

7. If the bad block list is the same, continue running the service aid to overwrite the disk with the chosen pattern(s).

This task can be run directly from the AIX command line. See the command syntax: `diag -c -d deviceName -T "format [-s* fmtcert | erase -a {read | write}] [-F]*`

Flag	Description
fmtcert	Formats and certifies the disk.
erase	Overwrites the data on the disk.
*	Available in no-console mode only.
-F	Force the disk erasure even if all blocks cannot be erased due to errors accessing the grown defect map.

Note: The Erase Disk option in command line mode uses default values. To selectively read or write, use the **diag** command in console mode.

- Certify Hardfile attached to a PCI SCSI RAID Adapter
This selection is used to certify physical disks attached to a PCI SCSI RAID adapter. Certify reads the entire disk and checks for recovered errors, unrecovered errors, and reassigned errors. If these errors exceed the threshold values, the user is prompted to replace the physical disk.

This task can be run directly from the AIX command line. See the following command syntax: `diag -c -d RAIDadapterName -T "certify {-l chID | -A}"`

Flag	Description
-c	No console mode
-d	Specifies the RAID adapter to which the disk is attached
-T	Specifies the certify task and its parameters
-l	Specifies physical Disk channel/ID (example: -l 27)
-A	All disks

Change Hardware Vital Product Data

Use this service aid to display the Display/Alter VPD Selection Menu. The menu lists all resources installed on the system. When a resource is selected, a menu displays that lists all the VPD for that resource.

Note: The user cannot alter the VPD for a specific resource unless it is not machine-readable.

Configure Dials and LPF Keys

Note: The Dials and LPF Keys service aid is not supported in standalone mode (CD-ROM and NIM) on systems with 32 MB or less memory. If you have problems in standalone mode, use the hardfile-based diagnostics.

This service aid provides a tool for configuring and removing dials and LPF keys to the asynchronous serial ports.

This selection invokes the SMIT utility to allow Dials and LPF keys configuration. A TTY must be in the available state on the async port before the Dials and LPF keys can be configured on the port. The task allows an async adapter to be configured, then a TTY port defined on the adapter. Dials and LPF keys can then be defined on the port.

Before configuring Dials or LPF keys on a serial port, you must remove all defined TTYs. To determine if there are any defined TTYs, select **List All Defined TTYs**. Once all defined TTYs have been removed, then add a new TTY and configure the Dials or LPF keys.

Configure ISA Adapter

This task uses SMIT to identify and configure ISA adapters on systems that have an ISA bus and adapters.

Diagnostic support for ISA adapters not shown in the list may be supported from a supplemental diskette. You can use the Process Supplemental Media task to add ISA adapter support from a supplemental diskette.

Whenever an ISA adapter is installed, this service aid must be run and the adapter configured before the adapter can be tested. You must also run this service aid to remove an ISA adapter from the system whenever an ISA adapter is physically removed from the system.

If diagnostics are run on an ISA adapter that has been removed from the system, the diagnostics fail because the system cannot detect the ISA adapter.

Configure Reboot Policy

Note: This service aid runs on CHRP system units only.

This service aid controls how the system tries to recover from a system crash.

Use this service aid to display and change the following settings for the Reboot Policy.

Note: Because of system capability, some of the following settings might not be displayed by this service aid.

- Maximum Number of Reboot Attempts
Enter a number that is 0 or greater.

Note: A value of 0 indicates 'do not attempt to reboot' to a crashed system.

This number is the maximum number of consecutive attempts to reboot the system. The term *reboot*, in the context of this service aid, is used to describe bringing system hardware back up from scratch; for example, from a system reset or power-on.

When the reboot process completes successfully, the reboot attempts count is reset to 0, and a restart begins. The term *restart*, in the context of this service aid, is used to describe the operating system activation process. Restart always follows a successful reboot.

When a restart fails, and a restart policy is enabled, the system attempts to reboot for the maximum number of attempts.

- Use the O/S Defined Restart Policy (1=Yes, 0=No)
When 'Use the O/S Defined Restart Policy' is set to Yes, the system attempts to reboot from a crash if the operating system has an enabled Defined Restart or Reboot Policy.
When 'Use the O/S Defined Restart Policy' is set to No, or the operating system restart policy is undefined, then the restart policy is determined by the 'Supplemental Restart Policy'.
- Enable Supplemental Restart Policy (1=Yes, 0=No)
The 'Supplemental Restart Policy', if enabled, is used when the O/S Defined Restart Policy is undefined, or is set to False.
When surveillance detects operating system inactivity during restart, an enabled 'Supplemental Restart Policy' causes a system reset and the reboot process begins.
- Call-Out Before Restart (on/off)
When enabled, Call-Out Before Restart allows the system to call out (on a serial port that is enabled for call-out) when an operating system restart is initiated. Such calls can be valuable if the number of these events becomes excessive, thus signalling bigger problems.
- Enable Unattended Start Mode (1=Yes, 0=No)

When enabled, 'Unattended Start Mode' allows the system to recover from the loss of ac power.

If the system was powered-on when the ac loss occurred, the system reboots when power is restored. If the system was powered-off when the ac loss occurred, the system remains off when power is restored.

You can access this service aid directly from the AIX command line, by typing:
`/usr/lpp/diagnostics/bin/uspchrp -b`

Configure Remote Maintenance Policy

Note: This service aid runs on CHRP system units only.

The Remote Maintenance Policy includes modem configurations and phone numbers to use for remote maintenance support.

Use this service aid to display and change the following settings for the Remote Maintenance Policy.

Note: Because of system capability, some of the following settings might not be displayed by this service aid.

- Configuration File for Modem on serial port 1 (S1) Configuration File for Modem on serial port 2 (S2).

Enter the name of a modem configuration file to load on either S1 or S2. The modem configuration files are located in the directory **/usr/share/modems**. If a modem file is already loaded, it is indicated by Modem file currently loaded.

- Modem file currently loaded on S1 Modem file currently loaded on S2
This is the name of the file that is currently loaded on serial port 1 or serial port 2.

Note: These settings are only shown when a modem file is loaded for a serial port.

- Call In Authorized on S1 (on/off) Call In Authorized on S2 (on/off)
Call In allows the Service Processor to receive a call from a remote terminal.
- Call Out Authorized on S1 (on/off) Call Out Authorized on S2 (on/off)
Call Out allows the Service Processor to place calls for maintenance.
- S1 Line Speed S2 Line Speed
A list of line speeds is available by using **List** on the screen.
- Service Center Phone Number
This is the number of the service center computer. The service center usually includes a computer that takes calls from systems with call-out capability. This computer is referred to as "the catcher." The catcher expects messages in a specific format to which the Service Processor conforms. For more information about the format and catcher computers, refer to the README file in the AIX **/usr/samples/syscatch** directory. Contact the service provider for the correct telephone number to enter here.
- Customer Administration Center Phone Number

This is the number of the System Administration Center computer (catcher) that receives problem calls from systems. Contact the system administrator for the correct telephone number to enter here.

- Digital Pager Phone Number In Event of Emergency

This is the number for a pager carried by someone who responds to problem calls from your system.

- Customer Voice Phone Number

This is the number for a telephone near the system, or answered by someone responsible for the system. This is the telephone number left on the pager for callback.

- Customer System Phone Number

This is the number to which your system's modem is connected. The service or administration center representatives need this number to make direct contact with your system for problem investigation. This is also referred to as the Call In phone number.

- Customer Account Number

This number is available for service providers to use for record-keeping and billing.

- Call Out Policy Numbers to call if failure

This is set to either First or All. If the call-out policy is set to First, call out stops at the first successful call to one of the following numbers in the order listed:

1. Service Center
2. Customer Administration Center
3. Pager

If Call Out Policy is set to All, call-out attempts to call all of the following numbers in the order listed:

1. Service Center
2. Customer Administration Center
3. Pager

- Customer RETAIN Login ID Customer RETAIN Login Password

These settings apply to the RETAIN service function.

- Remote Timeout, in seconds Remote Latency, in seconds

These settings are functions of the service provider's catcher computer.

- Number of Retries While Busy

This is the number of times the system should retry calls that resulted in busy signals.

- System Name (System Administrator Aid)

This is the name given to the system and is used when reporting problem messages.

Note: Knowing the system name aids the support team in quickly identifying the location, configuration, history, and so on of your system.

You can access this service aid directly from the AIX command line, by typing:
`/usr/lpp/diagnostics/bin/uspchrp -m`

Configure Ring Indicate Power-On Policy

Note: This service aid runs on CHRP system units only.

This service aid allows the user to power-on a system by telephone from a remote location. If the system is powered off, and Ring Indicate Power On is enabled, the system powers on at a predetermined number of rings. If the system is already on, no action is taken. In either case, the telephone call is not answered, and the caller receives no feedback that the system has powered on.

Use this service aid to display and change the following settings for the Ring Indicate Power-On Policy:

Note: Because of system capability, some of the following settings might not be displayed by this service aid.

- Power On Via Ring Indicate (on/off)
- Number of Rings Before Power On

You can access this service aid directly from the AIX command line, by typing:
`/usr/lpp/diagnostics/bin/uspchrp -r`

Configure Ring Indicate Power On

Note: This service aid runs on RSPC system units only.

This service aid allows the user to display and change the NVRAM settings for the Ring Indicate Power On capability of the service processor.

The settings allows the user to:

- Enable or disable power-on from Ring Indicate
- Read or set the number of rings before power-on

Configure Service Processor

Note: This service aid runs on RSPC system units only.

This service aid allows you to display and change the NVRAM settings for the service processor.

This service aid supports the following functions:

- Surveillance Setup
- Modem Configuration
- Call in or call out Setup
- Site specific call in or call out setup
- Reboot or restart policy setup

Surveillance Setup

Note: Surveillance is only supported for systems running in full machine partition.

This selection allows you to display and change the NVRAM settings for the surveillance capability of the service processor.

The settings allow you to:

- Enable or disable surveillance
- Set the surveillance time interval, in minutes
- Set the surveillance delay, in minutes

The current settings are read from NVRAM and displayed on the screen. Any changes made to the data shown are written to NVRAM.

Modem Configuration

Use this selection when setting the NVRAM for a modem attached to any of the Service Processor's serial ports. The user inputs the file name of a modem configuration file and the serial port number. The formatted modem configuration file is read, converted for NVRAM, and then loaded into NVRAM. Refer to the *Service Processor Installation and User's Guide* for more information.

Call In/Out Setup

This selection allows the user to display and change the NVRAM settings for the Call In/Call Out capability of the service processor.

The settings allow the user to:

- Enable or disable call in on either serial port
- Enable or disable call out on either serial port
- Set the line speed on either serial port

Site Specific Call In/Out Setup

This selection allows you to display and change the NVRAM settings that are site-specific for the call-in or call-out capability of the service processor.

The site-specific NVRAM settings allow you to set the following:

- Phone number for the service center
- Phone number for the customer administration center
- Phone number for a digital pager
- Phone number for the customer system to call in
- Phone number for the customer voice phone
- Customer account number
- Call-out policy
- Customer RETAIN ID
- Customer RETAIN password
- Remote timeout value
- Remote latency value
- Number of retries while busy
- System name

The current settings are read from NVRAM and displayed on the screen. Any changes made to the data shown are written to NVRAM.

Reboot/Restart Policy Setup

This selection controls how the system tries to recover from a system crash.

Use this service aid to display and change the following settings for the Reboot Policy Setup.

- Maximum Number of Reboot Attempts
Enter a number that is 0 or greater.

Note: A value of 0 indicates "do not attempt to reboot" to a crashed system.

This number is the maximum number of consecutive attempts allowed to reboot the system. The term *reboot*, when used in context of this service aid, describes the system hardware being brought back up from scratch. Examples would be a system reset or turning on the power.

When the maximum number of reboot attempts is exceeded, the system calls out if that function has been enabled.

When the reboot process completes successfully, the reboot-attempts count is reset to 0, and a restart begins. The term *restart*, when used in context of this service aid, describes the operating system activation process. Restart always follows a successful reboot.

When a restart fails, and a restart policy is enabled, the system attempts to reboot for the maximum number of reboot attempts.

- Enable Restart Policy (1=Yes, 0=No)
When the service processor detects operating system inactivity, an enabled "Restart Policy" causes a system reset, and the reboot process begins.
- Call-Out Before Restart (on/off)
When enabled, "Call-Out Before Restart" allows the system to call out (on a serial port that is enabled for call-out) when an operating system restart is initiated. Such call-outs can be valuable if the number becomes excessive, thus signalling bigger problems.
- Enable Unattended Start Mode (1=Yes, 0=No)
When enabled, "Unattended Start Mode" allows the system to recover from the loss of ac power.
If the system was powered-on when the ac loss occurred, the system reboots when power is restored. If the system was powered-off when the ac loss occurred, the system remains off when power is restored.

Configure Surveillance Policy

Note: This service aid runs on CHRP system units only. This service aid is only supported for systems running in full machine partition.

This service aid monitors the system for hang conditions; that is, hardware or software failures that cause operating system inactivity. When enabled, and surveillance detects operating system inactivity, a call is placed to report the failure.

Use this service aid to display and change the following settings for the Surveillance Policy:

Note: Because of system capability, some of the following settings might not be displayed by this service aid:

- Surveillance (on/off)
- Surveillance Time Interval

This is the maximum time between heartbeats from the operating system.

- Surveillance Time Delay

This is the time to delay between when the operating system is in control and when to begin operating system surveillance.

- Changes are to Take Effect Immediately

Set this to Yes if the changes made to the settings in this menu are to take place immediately. Otherwise the changes take effect beginning with the next system boot.

You can access this service aid directly from the AIX command line, by typing:
`/usr/lpp/diagnostics/bin/uspchrp -s`

Create Customized Configuration Diskette

This selection invokes the Diagnostic Package Utility Service Aid, which allows the user to create a standalone diagnostic package configuration diskette.

The Standalone Diagnostic Package Configuration Diskette allows the following to be changed from the console:

- Default refresh rate for a low function terminal (LFT)

The refresh rate used by the standalone diagnostic package is 60 Hz. If the display's refresh rate is 77 Hz, set the refresh rate to 77.

- Different async terminal console

You can create a console configuration file that allows a terminal attached to any RS232 or RS422 adapter to be selected as a console device. The default device is an RS232 TTY device attached to the first standard serial port (S1).

Delete Resource from Resource List

Use this task to delete resources from the resource list.

Note: Only resources that were previously detected by the diagnostics and have not been deleted from the Diagnostic Test List are listed. If no resources are available to be deleted, then none are listed.

Disk Maintenance

This service aid provides the following options for the fixed-disk maintenance:

- Disk to Disk Copy
- Display/Alter Sector

Disk to Disk Copy

Notes:

1. This service aid cannot be used to update to a different size drive. The service aid only supports copying from a SCSI drive to another SCSI drive of similar size.
2. Use the **migratepv** command when copying the contents to other disk drive types. This command also works when copying SCSI disk drives or when copying to a different size SCSI disk drive. Refer to *System Management Guide: Operating System and Devices* for a procedure on migrating the contents of a physical volume.

This publication is located on the *AIX Documentation CD*. The documentation information is made accessible by loading the documentation CD onto the hard disk or by mounting the CD in the CD-ROM drive.

This selection allows you to recover data from an old drive when replacing it with a new drive. The service aid recovers all logical volume manager (LVM) software reassigned blocks. To prevent corrupted data from being copied to the new drive, the service aid stops if an unrecoverable read error is detected. To help prevent possible problems with the new drive, the service aid stops if the number of bad blocks being reassigned reaches a threshold.

To use this service aid, both the old and new disks must be installed in or attached to the system with unique SCSI addresses. This requires that the new disk drive SCSI address must be set to an address that is not currently in use and the drive be installed in an empty location. If there are no empty locations, then one of the other drives must be removed. When the copy is complete, only one drive can remain installed. Either remove the target drive to return to the original configuration, or perform the following procedure to complete the replacement of the old drive with the new drive:

1. Remove both drives.
2. Set the SCSI address of the new drive to the SCSI address of the old drive.
3. Install the new drive in the old drive's location.
4. Install any other drives (that were removed) into their original location.

To prevent problems that can occur when running this service aid from disk, it is suggested that this service aid be run, when possible, from the diagnostics that are loaded from removable media.

Display/Alter Sector

Note: Use caution when you use this service aid because inappropriate modification to some disk sectors can result in the total loss of all data on the disk.

This selection allows the user to display and alter information on a disk sector. Sectors are addressed by their decimal sector number. Data is displayed both in hex and in ASCII. To prevent corrupted data from being incorrectly corrected, the service aid does not display information that cannot be read correctly.

Display Configuration and Resource List

If a device is not included in the Test List or if you think a Diagnostic Package for a device is not loaded, check by using the Display Configuration and Resource List task. If the device you want to test has a plus (+) sign or a minus (-) sign preceding its name, the Diagnostic Package is loaded. If the device has an asterisk (*) preceding its name, the Diagnostic Package for the device is not loaded or is not available.

This service aid displays the item header only for all installed resources. Use this service aid when there is no need to see the vital product data (VPD). (No VPD is displayed.)

Display Firmware Device Node Information

Note: This service aid runs on CHRP system units only.

This task displays the firmware device node information that appears on CHRP platforms. This service aid is intended to gather more information about individual or particular devices on the system. The format of the output data may differ depending on which level of the AIX operating system is installed.

Display Hardware Error Report

This service aid uses the **errpt** command to view the hardware error log.

The Display Error Summary and Display Error Detail selection provide the same type of report as the **errpt** command. The Display Error Analysis Summary and Display Error Analysis Detail selection provide additional analysis.

Display Hardware Vital Product Data

This service aid displays all installed resources, along with any VPD for those resources. Use this service aid when you want to look at the VPD for a specific resource.

Display Machine Check Error Log

Note: The Machine Check Error Log Service Aid is available only on Standalone Diagnostics.

When a machine check occurs, information is collected and logged in an NVRAM error log before the system unit shuts down. This information is logged in the AIX error log and cleared from NVRAM when the system is rebooted from the hard disk, LAN, or standalone media. When booting from Standalone Diagnostics, this service aid converts the logged information into a readable format that can be used to isolate the problem. When booting from the hard disk or LAN, the information can be viewed from the AIX error log using the Hardware Error Report Service Aid. In either case, the information is analyzed when the **sysplanar0** diagnostics are running in Problem Determination Mode.

Display Microcode Level

This task is used to display the microcode or firmware levels of currently installed resources. When the **sys0** resource is selected, the task displays the levels of both the system firmware and service processor firmware. **sys0** may not be available in all cases.

You can display the current level of the microcode on an adapter, the system, or a device by using the AIX **diag** command. See the following command syntax: `diag -c -d device -T "disp_mcode"`

Flag	Description
-c	No console mode.
-d	Used to specify a device.
-T	Use the disp_mcode option to display microcode.

Display or Change Bootlist

This service aid allows the bootlist to be displayed, altered, or erased.

The system attempts to perform an IPL from the first device in the list. If the device is not a valid IPL device or if the IPL fails, the system proceeds in turn to the other devices in the list to attempt an IPL.

Display or Change Diagnostic Run-Time Options

The Display or Change Diagnostic Run-Time Options task allows the diagnostic run-time options to be set.

Note: The run-time options are used only when selecting the Run Diagnostic task.

The run-time options are:

- Display Diagnostic Mode Selection Menus
This option allows the user to turn on or off displaying the DIAGNOSTIC MODE SELECTION MENU (the default is on).
- Run Tests Multiple Times
This option allows the user to turn on or off running the diagnostic in loop mode (the default is off).

Note: This option is only displayed when you run the Online Diagnostics in Service Mode.

- Include Advanced Diagnostics
This option allows the user to turn on or off including the Advanced Diagnostics (the default is off).
- Include Error Log Analysis
This option allows the user to turn on or off including the Error Log Analysis (ELA) (the default is off).
- Number of Days Used to Search Error Log
This option allows the user to select the number of days for which to search the AIX error log for errors when running the Error Log Analysis. The default is seven days, but it can be changed from one to sixty days.
- Display Progress Indicators
This option allows the user to turn on or off the progress indicators when running the Diagnostic Applications. The progress indicators are in a popup box at the bottom of the screen which indicate that the test being run (the default is on).
- Diagnostic Event Logging
This option allows the user to turn on or off logging information to the Diagnostic Event Log (the default is on).
- Diagnostic Event Log File Size
This option allows the user to select the maximum size of the Diagnostic Event Log. The default size for the Diagnostic Event Log is 100 KB. The size can be increased in 100 KB increments to a maximum of 1 MB.

Display Previous Diagnostic Results

Note: This service aid is not available when you load the diagnostics from a source other than a hard disk drive or a network.

This service aid allows a service representative to display results from a previous diagnostic session. When the Display Previous Diagnostic Results option is selected, the user can view up to 25 no trouble found (NTF) and service request number (SRN) results.

This service aid displays Diagnostic Event Log information. You can display the Diagnostic Event Log in a short version or a long version. The Diagnostic Event Log contains information about events logged by a diagnostic session.

This service aid displays the information in reverse chronological order. If more information is available than can be displayed on one screen, use the Page Down and Page Up keys to scroll through the information.

This information is not from the AIX operating system error log. This information is stored in the `/var/adm/ras` directory.

You can run the command from the AIX command line by typing:
`/usr/lpp/diagnostics/bin/diagrpt [[-o] | [-s mmddyy] | [-a] | [-r]]`

Flag	Description
<code>-o</code>	Displays the last diagnostic results file stored in the <code>/etc/lpp/diagnostics/data</code> directory
<code>-s mmddyy</code>	Displays all diagnostic result files logged since the date specified
<code>-a</code>	Displays the long version of the Diagnostic Event Log
<code>-r</code>	Displays the short version of the Diagnostic Event Log

Display Resource Attributes

This task displays the Customized Device Attributes associated with a selected resource. This task is similar to running the `lsattr -E -l resource` command.

Display Service Hints

This service aid reads and displays the information in the CEREADE file from the diagnostics media. This file contains information that is not contained in the publications for this version of the diagnostics. The file also contains information about using this particular version of diagnostics.

Use the arrow keys to scroll through the information in the file.

Display Software Product Data

This task uses SMIT to display information about the installed software and provides the following functions:

- List Installed Software
- List Applied but Not Committed Software Updates
- Show Software Installation History
- Show Fix (APAR) Installation Status
- List Fileset Requisites
- List Fileset Dependents
- List Files Included in a Fileset
- List File Owner by Fileset

Display System Environmental Sensors

Note: This service aid runs on CHRP system units only.

This service aid displays the environmental sensors implemented on a CHRP system. The information displayed is the sensor name, physical location code, literal value of the sensor status, and the literal value of the sensor reading.

The sensor status can be any one of the following:

- **Normal** - The sensor reading is within the normal operating range.
- **Critical High** - The sensor reading indicates a serious problem with the device. Run diagnostics on sysplanar0 to determine what repair action is needed.
- **Critical Low** - The sensor reading indicates a serious problem with the device. Run diagnostics on sysplanar0 to determine what repair action is needed.
- **Warning High** - The sensor reading indicates a problem with the device. This could become a critical problem if action is not taken. Run diagnostics on sysplanar0 to determine what repair action is needed.
- **Warning Low** - The sensor reading indicates a problem with the device. This could become a critical problem if action is not taken. Run diagnostics on sysplanar0 to determine what repair action is needed.
- **Hardware Error** - The sensor could not be read because of a hardware error. Run diagnostics on sysplanar0 in problem-determination mode to determine what repair action is needed.
- **Hardware Busy** - The system has repeatedly returned a busy indication, and a reading is not available. Try the service aid again. If the problem continues, run diagnostics on sysplanar0 in problem-determination mode to determine what repair action is needed.

This service aid can also be run as a command. You can use the command to list the sensors and their values in a text format, list the sensors and their values in numerical format, or a specific sensor can be queried to return either the sensor status or sensor value.

Run the command by entering one of the following:

```
/usr/lpp/diagnostics/bin/uesensor -l | -a /usr/lpp/diagnostics/bin/uesensor -t  
token -i index [-v]
```

Flag	Description
------	-------------

- | | |
|----------|---|
| -l | List the sensors and their values in a text format. |
| -a | List the sensors and their values in a numerical format. For each sensor, the following numerical values are displayed as: <i>token index status measured value location code</i> |
| -t token | Specifies the sensor token to query. |
| -i index | Specifies the sensor index to query. |
| -v | Indicates to return the sensor measured value. The sensor status is returned by default. |

Examples

The following are examples from this command:

1. Display a list of the environmental sensors: `/usr/lpp/diagnostics/bin/uesensor -l`

```
Sensor = Fan Speed  
Status = Normal  
Value = 2436 RPM  
Location Code = F1  
Sensor = Power Supply  
Status = Normal  
Value = Present and operational  
Location Code = V1  
Sensor = Power Supply  
Status = Critical low  
Value = Present and not operational  
Location Code = V2
```

2. Display a list of the environmental sensors in a numerical list:

```
/usr/lpp/diagnostics/bin/uesensor -a
```

```
3 0 11 87 P1  
9001 0 11 2345 F1  
9004 0 11 2 V1  
9004 1 9 2 V2
```

3. Return the status of sensor 9004, index 1: `/usr/lpp/diagnostics/bin/uesensor -t 9004 -i 1`

```
9
```

4. Return the value of sensor 9004, index 1: `/usr/lpp/diagnostics/bin/uesensor -t 9004 -i 1 -v`

```
2
```

Display Test Patterns

This service aid provides a means of adjusting system display units by providing displayable test patterns. The user works through a series of menus to select the display type and test pattern. After the selections are made, the test pattern displays.

Display USB Devices

The following are the main functions of this service aid:

- Display a list of USB controllers on an adapter.
- Display a list of USB devices that are connected to the selected controller.

To run the USB devices service aid, go to the diagnostics "TASKS SELECTION" menu, select "*Display USB Devices*". From the controller list that displayed on the screen, select one of the items that begins with "OHCDX", where "X" is a number. A list of devices attached to the controller displays.

Download Microcode

This service aid provides a way to copy microcode to an adapter or device. The service aid presents a list of adapters and devices that use microcode. After the adapter or device is selected, the service aid provides menus to guide you in checking the current level and downloading the needed microcode.

This task can be run directly from the AIX command line. See the following sections for instructions on downloading to a particular type adapter or device.

Download Microcode to PCI SCSI RAID Adapter

See the following command syntax for a PCI SCSI RAID Adapter:

```
diag -c -d RAIDadapterName -T "download [-B] [-D] [-P]"
```

Flag	Description
-B	Download boot block microcode (default to functional microcode)
-D	Microcode is on diskette (default to /etc/microcode directory)
-P	Download the previous level of microcode (default to latest level)

Download Microcode to Disk Drive Attached to a PCI SCSI RAID Adapter

See the following command syntax for a disk drive attached to a PCI SCSI RAID Adapter:

```
diag -c -d RAIDadapterName -T "download {-I chID | -A} [-D] [-P]"
```

Flag	Description
-A	All disk drives
-D	Microcode is on diskette (default to /etc/microcode directory)
-I	RAID disk drive-physical disk channel/ID (example 27)
-P	Download the previous level of microcode (default to latest level)

Download Microcode to a PCI FC-AL Adapter

Microcode installation occurs while the adapter and attached drives are available for use. It is recommended that a current backup be available and the installation be scheduled during a non-peak production time period.

Note: If the source is diskette, the diskette must be in a backup format and the image stored in the **/etc/microcode** directory.

See the following command syntax for a PCI FC-AL Adapter.

```
diag -c -d device_name -T "download [-s {/etc/microcode|diskette}] [-l {latest|previous}] [-f]"
```

Flag	Description
-c	No console mode. Run without user interaction.
-d	Device name is the name of the adapter.
-T	Use the download option to download microcode.
-s	Source of the new microcode image. Default is /etc/microcode .
-l	Level of microcode to install. The default is latest.
-f	Force the installation even if the current level of microcode is not on the source.

Download Microcode to DVD-RAM Attached to a PCI SCSI Adapter

See the following command syntax for a DVD-RAM attached to a PCI SCSI Adapter:

```
diag [-c] -d cdX -T "download [-s {/etc/microcode|diskette}] [-l {latest|previous}] [-f]"
```

Flag	Description
-c	No console mode. Run without user interaction
cdX	Device selected, for example, cd0 .
-s	Source of the new microcode. The default is /etc/microcode .
-l	Level of microcode image to be installed. Latest in default
-f	Install the microcode on the device even if the current level is unavailable on the source.

Download Microcode to Disk Attached to PCI SCSI Adapter

See following command syntax for a disk drive attached to a PCI SCSI adapter:

```
diag [-c] -d hdiskX -T "download [-s {/etc/microcode|diskette}] [-l {latest|previous}] [-f]"
```

Flag	Description
-c	No console mode. Run without user interaction
-d <i>hdiskX</i>	Selected device, for example, hdisk0 .
-T <i>download</i>	Download microcode task.
-s	Source of the new microcode. The default is /etc/microcode .
-l	Level of microcode image to be installed. Latest in default
-f	Install the microcode on the device even if the current level is unavailable on the source.

Download Microcode to Other Devices

See the following command syntax:

```
diag -c -d device_name -T "download [-s diskette] [-l previous] [-F]"
```

Flag	Description
-F	Force the download microcode even if the current level is unavailable on the source.
-l	Microcode level. Latest is default.
-s	Source of the new microcode. The default is /etc/microcode . Default source device is disk.

Fibre Channel RAID Service Aids

The Fibre Channel RAID service aids contain the following functions:

Certify LUN

This selection reads and checks each block of data in the logical unit number (LUN). If excessive errors are encountered, the user is notified.

You can run this task from the AIX command line. Use the following fastpath command: `diag -T "certify"`

Certify Spare Physical Disk

This selection allows the user to certify (check integrity of the data) drives that are designated as spares.

You can run this task from the AIX command line. Use the following fastpath command: `diag -T "certify"`

Format Physical Disk

This selection is used to format a selected disk drive.

You can run this task from the AIX command line. Use the following fastpath command: `diag -T "format"`

Array Controller Microcode Download

This selection allows the microcode on the Fibre Channel RAID controller to be updated when required.

You can run this task from the AIX command line. Use the following fastpath command: `diag -T "download"`

Physical Disk Microcode Download

This selection is used to update the microcode on any of the disk drives in the array.

You can run this task from the AIX command line. Use the following fastpath command: `diag -T "download"`

Update EEPROM

This selection is used to update the contents of the electronically erasable programmable read-only memory (EEPROM) on a selected controller.

Replace Controller

Use this selection when it is necessary to replace a controller in the array.

Flash SK-NET FDDI Firmware

This task allows the Flash firmware on the SysKconnect SK-NET FDDI adapter to be updated.

Format Media

This task allows the selection of diskettes, hardfiles, or optical media to be formatted. Each selection is described below.

Hardfile Attached to SCSI Adapter (non-RAID)

- **Hardfile Format**
Writes all of the disk. The pattern written on the disk is device-dependent; for example some drives may write all 0s, while some may write the hexadecimal number 5F. No bad block reassignment occurs
- **Hardfile Format and Certify**
Performs the same function as Hardfile Format. After the format is completed, Certify is run. Certify then reassigns all bad blocks encountered.
- **Hardfile Erase Disk**
This option can be used to overwrite (remove) all data currently stored in user-accessible blocks of the disk. The **Erase Disk** option writes one or more patterns to the disk. An additional option allows data in a selectable block to be read and displayed on the system console.
To use the **Erase Disk** option, specify the number (0-3) of patterns to be written. The patterns are written serially; that is, the first pattern is written to all blocks. Then the next pattern is written to all blocks, overlaying the previous pattern. A random pattern is written by selecting the **Write Random Pattern?** option.

Note: The Erase Disk service aid has not been certified as meeting the Department of Defense or any other organization's security guidelines.

Use the following steps to overwrite the data on the drive:

1. Use the **Erase Disk** selection to overwrite the data on the drive.
2. Do a format without certify.
3. Run a second pass of the **Erase Disk** selection.

For a newly installed drive, you can ensure that all blocks on the drive are overwritten with your pattern if you use the following procedure:

1. Format the drive.
2. Check the defect MAP by running the **Erase Disk** selection.

Note: If you use the **Format and Certify** option, there may be some blocks which get placed into the grown defect MAP.

3. If there are bad blocks in the defect MAP, record the information presented and ensure that this information is kept with the drive. This data is used later when the drive is to be overwritten.
4. Use the drive as you would normally.

- When the drive is no longer needed and is to be erased, run the same version of the **Erase Disk** selection which was used in step 2.

Note: Using the same version of the service aid is only critical if any bad blocks were found in step 3.

- Compare the bad blocks which were recorded for the drive in step 3 with those that now appear in the grown defect MAP.

Note: If there are differences between the saved data and the newly obtained data, then all sectors on this drive cannot be overwritten. The new bad blocks are not overwritten.

- If the bad block list is the same, continue running the service aid to overwrite the disk with the chosen pattern(s).

This task can be run directly from the AIX command line. See the command syntax:
`diag -c -d deviceName -T "format [-s* fmtcert | erase -a {read | write}] [-F]"`

Flag	Description
------	-------------

fmtcert	Formats and certifies the disk.
----------------	---------------------------------

*	Available in no-console mode only.
---	------------------------------------

-F	Force the disk erasure even if all blocks cannot be erased due to errors accessing grown defect map.
-----------	--

Note: The Erase Disk option in command line mode uses default values. To selectively read or write, use the **diag** command in console mode.

Hardfile Attached to PCI SCSI RAID Adapter

This function formats the physical disks attached to a PCI SCSI RAID adapter. This task can be run directly from the AIX command line. See the following command syntax: `diag -c -d RAIDadapterName -T "format {-l chld | -A }"`

Flag	Description
------	-------------

-l	Physical disk channel/ID (An example of a physical disk channel/ID is 27, where the channel is 2 and the ID is 7.)
-----------	--

-A	All disks
-----------	-----------

Optical Media

Use the following functions to check and verify optical media:

- Optical Media Initialize

Formats the media without certifying. This function does not reassign the defective blocks or erase the data on the media. This option provides a quick way of formatting the media and cleaning the disk.

Note: It takes approximately one minute to format the media.

- Optical Media Format and Certify

Formats and certifies the media. This function reassigns the defective blocks and erases all data on the media.

This task can be run directly from the AIX command line. See the following command syntax: `diag -c -d deviceName -T "format [-s {initialize | fmtcert}]"`

Option	Description
--------	-------------

initialize	Formats media without certifying
fmtcert	Formats and certifies the media

Diskette Format

This selection formats a diskette by writing patterns to it.

Gather System Information

This service aid uses the AIX `snap` command to collect configuration information on networks, filesystems, security, the kernel, the ODM, and other system components. You can also choose to collect SSA adapter and disk drive configuration data, or AIX trace information for software debugging.

The output of the SNAP service aid can be used by field service personnel or it can be put on removable media and transferred to remote locations for more extensive analysis.

To use the SNAP task, select Gather System Information from the task list. You can select which components you want to collect information for, and where to store the data (hard disk or removable media).

Generic Microcode Download

The Generic Microcode Download service aid provides a means of executing a genucode script from a diskette or tape. The purpose of this generic script is to load microcode to a supported resource.

The genucode program should be downloaded onto diskette or tape in **tar** format while the microcode image itself goes onto another one in **restore** format. Running the Generic Microcode Download task will search for the genucode script on diskette or tape and execute it. It will ask for a Genucode media to be inserted into the drive. The service aid moves the genucode script file to the **/tmp** directory and runs the program that downloads the microcode to the adapter or device.

This service aid is supported in both concurrent and standalone modes from disk, LAN, or loadable media.

Hot Plug Task

The Hot Plug Task provides software function for those devices that support hot-plug or hot-swap capability. This includes PCI adapters, SCSI devices, and some RAID devices. This task was previously known as "SCSI Device Identification and Removal" or "Identify and Remove Resource."

The Hot Plug Task has a restriction when running in Standalone or Online Service mode; new devices may not be added to the system unless there is already a device with the same FRU part number installed in the system. This restriction is in place because the device software package for the new device cannot be installed in Standalone or Online Service mode.

Depending on the environment and the software packages installed, selecting this task displays the following three subtasks:

- PCI Hot Plug Manager
- SCSI Hot Swap Manager
- RAID Hot Plug Devices

To run the Hot Plug Task directly from the command line, type the following: `diag -T"identifyRemove"`

If you are running the diagnostics in Online Concurrent mode, run the Missing Options Resolution Procedure immediately after adding, removing or replacing any device. Start the Missing Options Resolution Procedure is by running the **diag -a** command.

If the Missing Options Resolution Procedure runs with no menus or prompts, then device configuration is complete. Otherwise, work through each menu to complete device configuration.

PCI Hot Plug Manager

The PCI Hot Plug Manager task is a SMIT menu that allows you to identify, add, remove, or replace PCI adapters that are hot-pluggable. The following functions are available under this task:

- List PCI Hot Plug Slots
- Add a PCI Hot Plug Adapter
- Replace/Remove a PCI Hot Plug Adapter
- Identify a PCI Hot Plug Slot
- Unconfigure Devices
- Configure Devices
- Install/Configure Devices Added After IPL

The **List PCI Hot Plug Slots** function lists all PCI hot-plug slots. Empty slots and populated slots are listed. Populated slot information includes the connected logical device. The slot name consists of the physical location code and the description of the physical characteristics for the slot.

The **Add a PCI Hot Plug Adapter** function is used to prepare a slot for the addition of a new adapter. The function lists all the empty slots that support hot plug. When a slot is selected, the visual indicator for the slot blinks at the Identify rate. After the slot location is confirmed, the visual indicator for the specified PCI slot is set to the Action state. This means the power for the PCI slot is off and the new adapter can be plugged in.

The **Replace/Remove a PCI Hot Plug Adapter** function is used to prepare a slot for adapter exchange. The function lists all the PCI slots that support hot plug and are

occupied. The list includes the slot's physical location code and the device name of the resource installed in the slot. The adapter must be in the Defined state before it can be prepared for hot-plug removal. When a slot is selected, the visual indicator for the slot is set to the Identify state. After the slot location is confirmed, the visual indicator for the specified PCI slot is set to the Action state. This means the power for the PCI slot, is off and the adapter can be removed or replaced.

The **Identify a PCI Hot Plug Slot** function is used to help identify the location of a PCI hot-plug adapter. The function lists all the PCI slots that are occupied or empty and support hot plug. When a slot is selected for identification, the visual indicator for the slot is set to the Identify state.

The **Unconfigure Devices** function attempts to put the selected device, in the PCI hot-plug slot, into the Defined state. This action must be done before any attempted hot-plug function. If the unconfigure function fails, it is possible that the device is still in use by another application. In this case, the customer or system administrator must be notified to quiesce the device.

The **Configure Devices** function allows a newly added adapter to be configured into the system for use. This function should also be done when a new adapter is added to the system.

The **Install/Configure Devices Added After IPL** function attempts to install the necessary software packages for any newly added devices. The software installation media or packages are required for this function.

Standalone Diagnostics has restrictions on using the PCI Hot-Plug Manager. For example:

- Adapters that are replaced must be exactly the same FRU part number as the adapter being replaced.
- New adapters cannot be added unless a device of the same FRU part number already exists in the system, because the configuration information for the new adapter is not known after the Standalone Diagnostics are booted.
- The following functions are not available from the Standalone Diagnostics and will not display in the list:
 - Add a PCI Hot Plug Adapter
 - Configure Devices
 - Install/Configure Devices Added After IPL

You can run this task directly from the command line by typing the following command:
`diag -d device -T"identifyRemove"`

However, note that some devices support both the PCI Hot-Plug task and the RAID Hot-Plug Devices task. If this is the case for the *device* specified, then the Hot Plug Task displays instead of the PCI Hot Plug Manager menu.

More detailed information concerning PCI Hot-Plug Manager can be found in the AIX Operating System, System Management Guide.

SCSI Hot Swap Manager

This task was known as "SCSI Device Identification and Removal" or "Identify and Remove Resources" in previous releases. This task allows the user to identify, add, remove, and replace a SCSI device in a system unit that uses a SCSI Enclosure Services (SES) device. The following functions are available:

- List the SES Devices
- Identify a Device Attached to an SES Device
- Attach a Device to an SES Device
- Replace/Remove a Device Attached to an SES Device
- Configure Added/Replaced Devices

The **List the SES Devices** function lists all the SCSI hot-swap slots and their contents. Status information about each slot is also available. The status information available includes the slot number, device name, whether the slot is populated and configured, and location.

The **Identify a Device Attached to an SES Device** function is used to help identify the location of a device attached to a SES device. This function lists all the slots that support hot swap that are occupied or empty. When a slot is selected for identification, the visual indicator for the slot is set to the Identify state.

The **Attach a Device to an SES Device** function lists all empty hot-swap slots that are available for the insertion of a new device. After a slot is selected, the power is removed. If available, the visual indicator for the selected slot is set to the Remove state. After the device is added, the visual indicator for the selected slot is set to the Normal state, and power is restored.

The **Replace/Remove a Device Attached to an SES Device** function lists all populated hot-swap slots that are available for removal or replacement of the devices. After a slot is selected, the device populating that slot is Unconfigured; then the power is removed from that slot. If the Unconfigure operation fails, it is possible that the device is in use by another application. In this case, the customer or system administrator must be notified to quiesce the device. If the Unconfigure operation is successful, the visual indicator for the selected slot is set to the Remove state. After the device is removed or replaced, the visual indicator, if available for the selected slot, is set to the Normal state, and power is restored.

Note: Be sure that no other host is using the device before you remove it.

The **Configure Added/Replaced Devices** function runs the configuration manager on the parent adapters that had child devices added or removed. This function ensures that the devices in the configuration database are configured correctly.

Standalone Diagnostics has restrictions on using the SCSI Hot Plug Manager. For example:

- Devices being used as replacement devices must be exactly the same type of device as the device being replaced.
- New devices may not be added unless a device of the same FRU part number already exists in the system, because the configuration information for the new device is not known after the Standalone Diagnostics are booted.

You can run this task directly from the command line. See the following command syntax:

```
diag -d device-T"identifyRemove"  
OR  
diag [-c] -d device -T"identifyRemove -a [identify|remove]"
```

Flag	Description
------	-------------

- | | |
|----|--|
| -a | Specifies the option under the task. |
| -c | Run the task without displaying menus. Only command line prompts are used. This flag is only applicable when running an option such as identify or remove. |
| -d | Indicates the SCSI device. |
| -T | Specifies the task to run. |

RAID Hot Plug Devices

This selection starts the PCI SCSI-2 F/W RAID Adapter Service Aid.

Local Area Network Analyzer

This selection is used to exercise the LAN communications adapters (Token-Ring, Ethernet, and (FDDI) Fiber Distributed Data Interface). The following services are available:

- Connectivity testing between two network stations. Data is transferred between the two stations, requiring the user to provide the Internet addresses of both stations.
- Monitoring ring (Token-Ring only). The ring is monitored for a specified period of time. Soft and hard errors are analyzed.

Log Repair Action

The Log Repair Action task logs a repair action in the AIX Error Log. A Repair Action log indicates that a FRU has been replaced, and error log analysis should not be done for any errors logged before the repair action. The Log Repair Action task lists all resources. Replaced resources can be selected from the list, and when **commit** (F7 key) is selected, a repair action is logged for each selected resource. For more information see, "Log Repair Action" on page 136.

Periodic Diagnostics

This selection provides a tool for configuring periodic diagnostics and automatic error log analysis. You can select a hardware resource to be tested once a day, at a user-specified time. If the resource cannot be tested because it is busy, error log analysis is performed.

Hardware errors logged against a resource can also be monitored by enabling Automatic Error Log Analysis. This allows error log analysis to be performed every time a hardware error is put into the error log. If a problem is detected, a message is posted to the system console and either sent to the Service Focal Point when there is an attached HMC, or a mail message to the users belonging to the system group containing information about the failure, such as the service request number.

The service aid provides the following functions:

- Add or delete a resource to the periodic test list
- Modify the time to test a resource
- Display the periodic test list
- Modify the error notification mailing list
- Disable or Enable Automatic Error Log Analysis

PCI RAID Physical Disk Identify

This selection identifies physical disks connected to a PCI SCSI-2 F/W RAID adapter.

You can run this task directly from the AIX command line. See the following command syntax: `diag -c -d pci RAID adapter -T identify`

Process Supplemental Media

Diagnostic Supplemental Media contains all the necessary diagnostic programs and files required to test a particular resource. The supplemental media is normally released and shipped with the resource as indicated on the diskette label. Diagnostic Supplemental Media must be used when the device support has not been incorporated into the latest diagnostic CD-ROM.

This task processes the Diagnostic Supplemental Media. Insert the supplemental media when you are prompted; then press Enter. After processing has completed, go to the Resource Selection list to find the resource to test.

Notes:

1. This task is supported in Standalone Diagnostics only.
2. Process and test one resource at a time. Run diagnostics after each supplemental media is processed. (for example; If you need to process two supplemental media you need to run diagnostic twice. Once after each supplement media is processed.)

Run Diagnostics

The Run Diagnostics task invokes the Resource Selection List menu. When the commit key is pressed, diagnostics are run on all selected resources.

The procedures for running the diagnostics depends on the state of the diagnostics run-time options. See “Display or Change Diagnostic Run-Time Options” on page 182.

Run Error Log Analysis

The Run Error Log Analysis task invokes the Resource Selection List menu. When the commit key is pressed, Error Log Analysis is run on all selected resources.

Run Exercisers

The Run Exercisers task provides a tool to troubleshoot intermittent system problems in AIX 4.3.2 or later, to test hardware, and to verify replacement parts. When AIX error logging is enabled, the Run Error Log Analysis task can be used to analyze errors after the exerciser completes. Hardware errors are logged in the AIX Error Log. Miscompares and recoverable errors are not reported, however, they may be logged in the AIX Error Log when logging thresholds are exceeded.

The diagnostic supervisor typically sets up temporary work files in **/tmp** to log messages and device statistics. These files are deleted before an exerciser session begins. In addition to individual exerciser requirements, the following requirements pertain to all exercisers:

- Only supported on CHRP platforms
- Only supported in concurrent or service modes
- Not supported from standalone diagnostics
- System performance will be degraded while running the exerciser, so it is recommended that customer applications be shut down before it is run.
- At least 1 MB of free storage in **/tmp** is available

From the TASK SELECTION LIST menu select **Run Exercisers** then the RESOURCES SELECTION LIST menu displays. From this menu choose the resources you want to exercise and then select **commit** to start the **Run Exerciser** task. An intermediate popup may appear stating system performance will be degraded. (The popup does not appear if the task had previously been selected). Press **Enter** and the EXERCISER OPTIONS menu prompts for the type of test to run.

The EXERCISER OPTIONS menu displays two options (1) **Short Exercise** and (2) **Extended Exercise**. The **Short Exercise** option exercises the resources within a relatively short time and exits. The **Extended Exercise** option allows greater flexibility and control over resources and test duration.

After choosing the **Short Exercise** option, additional menus, pop-ups and prompts may appear for each resource. Please read any text and carefully fill out any prompts before committing. Next, the exercisers start, and the **Device Status Screen** displays. The exercisers runs 5 to 10 minutes depending on the number of processors, processor

speed, memory size, and I/O configuration. After choosing the **Extended Exercise** option, additional menus, pop-ups and prompts may appear for each resource. Please read any text and carefully fill out any prompts before committing. Following, the **System Exerciser Main Menu** displays. From this menu the exercisers can be activated through option 1 where they will continuously run until halted (option 2) or exited (option x). See also the help text for information on how to use other available options.

When the task completes any errors that were encountered are displayed for review. Finally, an **Exerciser Complete** popup displays. To continue, press the **Enter** key. Following, you will be taken back to the TASK SELECTION LIST menu. If miscompare errors were encountered, run diagnostics on the resource. If the problem is not reported then contact your service support structure. If any other errors were encountered, select and run the Error Log Analysis task. If Error Log Analysis does not report a problem then contact your service support structure.

Exerciser Commands (CMD)

Use the following commands as needed in the exerciser menus and reports. Not all commands are available in each menu or report.

CMD	Description
a	Acknowledge an error
b	Back one page
c	Toggle between cycle count and last error
e	View the AIX error log
f	Page forward one page
q	Return to Main Menu
r	Refresh screen
s	Enable or disable beep on error
x	Exit system exerciser

Abbreviations

The following list describes abbreviations used in the exerciser reports.

Acronym	Description
COE	Continue on error (use number to select).
CP	Device has run the specified number of cycles and is not running.
DD	The exerciser has been terminated by a signal.
ER	Device has stopped with an error.
HG	The device is hung.
HOE	Halt on error (use number to select).
RN	Device is running.
ST	Device is stopped.

Memory Exerciser

The memory exercisers are labeled memx, where x is a number for the exerciser. Multiple exercisers can be active.

The memory exerciser requests as many memory buffers as possible from AIX. The exerciser then fills the memory buffers with specified bit patterns, then reads and compares the memory buffers to the specified bit patterns.

On systems with multiple processors, a process is started for each processor. The free memory space is split evenly between the available processors, thus reducing the time required to exercise all of the memory.

The following items must be available to run this service aid:

- Online diagnostics loaded in maintenance mode
- 128 KB of free space in **/etc/lpp/diagnostics/data**
- The following commands must be available:
 - **bootinfo**
 - **lsps**
 - **vmstat**

Tape Exerciser

The tape exerciser is labeled rmtx, where x is the number of a specific device. The exerciser performs read, write, and compare operations using known data patterns. A tape device and Test Diagnostic Cartridge are required to run this exerciser. The actual Test Diagnostics Cartridge depends upon the specific tape device being tested. The exerciser automatically rewinds the tape. Test Requirements are:

- Tape device
- Test Diagnostic Cartridge; (P/N depends upon tape device)

Diskette Exerciser

The diskette exerciser is labeled fdx, where x is the number of a specific device. The exerciser performs read, write, and compare operations using known data patterns. A scratch diskette is required to run this exerciser, data on the scratch diskette is destroyed. Test requirements are:

- Diskette device
- Scratch diskette (data on diskette is destroyed)

CD-ROM Exerciser

The CD-ROM exerciser is labeled cdx, where x is the number of a specific device. The exerciser performs read and compare operations using known data patterns. A CD-ROM device and a Test Disc is required to run this exerciser. Test requirements are:

- CD-ROM device
- Test Disc P/N 81F8902

Save or Restore Hardware Management Policies

Note: This service aid runs on CHRP system units only.

Use this service aid to save or restore the settings from Ring Indicate Power-On Policy, Surveillance Policy, Remote Maintenance Policy and Reboot Policy. The following options are available:

- Save Hardware Management Policies

This selection writes all of the settings for the hardware-management policies to the following file: **/etc/lpp/diagnostics/data/hmpolicies**

- Restore Hardware Management Policies

This selection restores all of the settings for the hardware-management policies from the contents of the following file: **/etc/lpp/diagnostics/data/hmpolicies**

You can access this service aid directly from the AIX command line, by typing:
`/usr/lpp/diagnostics/bin/uspchrp -a`

Save or Restore Service Processor Configuration

Note: This service aid runs on RSPC system units only.

Use this service aid to save or restore the Service Processor Configuration to or from a file. The Service Processor Configuration includes the Ring Indicator Power-On Configuration. The following options are available:

- Save Service Processor Configuration

This selection writes all of the settings for the Ring Indicate Power On and the Service Processor to the following file: **/etc/lpp/diagnostics/data/spconfig**

- Restore Service Processor Configuration

This selection restores all of the settings for the Ring Indicate Power On and the Service Processor from the following file: **/etc/lpp/diagnostics/data/spconfig**

SCSI Bus Analyzer

This service aid allows you to diagnose a SCSI bus problem in a freelance mode.

To use this service aid, the user should understand how a SCSI bus works. Use this service aid when the diagnostics cannot communicate with anything on the SCSI bus and cannot isolate the problem. Normally the procedure for finding a problem on the SCSI bus with this service aid is to start with a single device attached, ensure that it is working, then start adding additional devices and cables to the bus, ensuring that each one works. This service aid works with any valid SCSI bus configuration.

The SCSI Bus Service Aid transmits a SCSI Inquiry command to a selectable SCSI Address. The service aid then waits for a response. If no response is received within a defined amount of time, the service aid displays a timeout message. If an error occurs or a response is received, the service aid then displays one of the following messages:

- The service aid transmitted a SCSI Inquiry Command and received a valid response back without any errors being detected.
- The service aid transmitted a SCSI Inquiry Command and did not receive any response or error status back.
- The service aid transmitted a SCSI Inquiry Command and the adapter indicated a SCSI bus error.
- The service aid transmitted a SCSI Inquiry Command and an adapter error occurred.
- The service aid transmitted a SCSI Inquiry Command and a check condition occur.

When the SCSI Bus Service Aid is started a description of the service aid displays.

Pressing the Enter key displays the Adapter Selection menu. Use this menu to enter the address to transmit the SCSI Inquiry Command.

When the adapter is selected, the SCSI Bus Address Selection menu displays. Use this menu to enter the address to transmit the SCSI Inquiry Command.

After the address is selected, the SCSI Bus Test Run menu displays. Use this menu to transmit the SCSI Inquiry Command by pressing Enter. The service aid then indicates the status of the transmission. When the transmission is completed, the results of the transmission displays.

Notes:

1. A Check Condition can be returned when the bus or device is working correctly.
2. AIX does not allow the command to be sent if the device is in use by another process.

SCSD Tape Drive Service Aid

This service aid allows you to obtain the status or maintenance information from a SCSD tape drive. Not all models of SCSD tape drive are supported.

The service aid provides the following options:

- Display time since a tape drive was last cleaned. The time since the drive was last cleaned displays on the screen, as well as a message regarding whether the drive is recommended to be cleaned.
- Copy a tape drive's trace table. The trace table of the tape drive is written to diskettes or a file. The diskettes must be formatted for DOS. Writing the trace table may require several diskettes. The actual number of diskettes is determined by the size of the trace table. Label the diskettes as follows:

TRACE*x*.DAT (where *x* is a sequential diskette number). The complete trace table consists of the sequential concatenation of all the diskette data files.

When the trace table is written to a disk file, the service aid prompts for a file name. The default name is: **/tmp/TRACE.x**, where *x* is the AIX name of the SCSD tape drive being tested.

- Display or copy a tape drive's log sense information. The service aid provides options to display the log sense information to the screen, to copy it to a DOS formatted diskette, or to copy it to a file. The file name **LOGSENSE.DAT** is used when the log sense data is written to the diskette. The service aid prompts for a file name when you have selected that the log sense data is to be copied to a file.

This service aid can be run directly from the AIX command line. See the following command syntax (path is **/usr/lpp/diagnostics/bin/utape**):

```
utape [-h | -?] [-d device] [-n | -l | -t]
OR
utape -c -d device [-v] {-n | {-l | -t} { -D | -f [filename]}}
```

Flag Description

- | | |
|---------------|---|
| -c | Run the service aid without displaying menus. The return code indicates success or failure. The output is suppressed except for the usage statement and the numeric value for hours since cleaning (if -n and -D flags are used). |
| -D | Copy data to diskette. |
| -f | Copy data to the file name given after this flag or to a default file name if no name is specified. |
| -h, -? | Display a usage statement and/or return code. If the -c flag is present, only the return code displays to indicate the service aid did not run. If the -c is not used, a usage statement displays and the service aid exits. |
| -l | Display or copy log sense information. |
| -n | Display time since drive was last cleaned. |
| -t | Copy trace table. |
| -v | Verbose mode. If the -c flag is present, the information displays on the screen. If the -n flag is present, the information about tape-head cleaning is printed. |

Spare Sector Availability

This selection checks the number of spare sectors available on the optical disk. The spare sectors are used to reassign when defective sectors are encountered during normal usage or during a format and certify operation. Low availability of spare sectors indicates that the disk needs to be backed up and replaced. Formatting the disk does not improve the availability of spare sectors.

You can run this task directly from the AIX command line. See the following command syntax: `diag -c -d deviceName -T chkspares`

SSA Service Aid

This service aid provides tools for diagnosing and resolving problems on SSA-attached devices. The following tools are provided:

- Set Service Mode
- Link Verification
- Configuration Verification
- Format and Certify Disk

System Fault Indicator

This task is used to display or reset the system fault indicator on systems that support this function. This task is also used to set the system fault indicator for testing purposes, but the system fault indicator is set back to Normal when you exit this task.

The system fault indicator is used to identify a fault with the system. This indicator is set automatically by hardware firmware, or diagnostics when a fault is detected in the system.

The system fault indicator is turned off when a Log Repair Action is performed. After a serviceable event is complete, do a System Verification to verify the fix. At this time, also do a Log Repair Action if the test on the resource was good and that resource had an entry in the error log.

If the serviceable event was not the result of an error log entry, use the Log Repair Action task to turn off the system fault indicator.

Refer to the system unit service guide for additional information concerning the use of this indicator.

Note: The AIX command does not allow you to set the system fault indicator to the Fault state.

Use the following example to run this task directly from the AIX command line:

```
/usr/lpp/diagnostics/bin/usysfault [-s normal]
```

Flag	Description
-------------	--------------------

-s	Normal, sets the system fault indicator to the Normal state.
-----------	--

When this command is used without the -s flag, the current state of the indicator displays.

System Identify Indicator

This task is used to display or set the system identify indicator on systems that support this function.

The system identify indicator is used to help physically identify a particular system in group of systems. Refer to the system unit service guide for additional information concerning the use of this indicator.

Use the following example to run this task directly from the AIX command line:

```
/usr/lpp/diagnostics/bin/usysident [-s {normal | identify}]
```

Flag	Description
-s {normal identify}	Sets the state of the System Identify Indicator to either Normal or Identify.

When this command is used without the -s flag, the current state of the indicator displays.

Update Disk-Based Diagnostics

This service aid allows fixes (APARs) to be applied.

This task invokes the SMIT Update Software by Fix (APAR) task. The task allows the input device and APARs to be selected. You can install any APAR using this task.

Update System or Service Processor Flash

Attention: If the system is running on a logically partitioned system, ask the customer or system administrator if a service partition has been designated.

- If it has, ask the customer or system administrator to shut down all of the partitions except the one with service authority. The firmware update can then be done using the service aid or the AIX command line in that partition.
- If a service partition has not been designated, the system must be shut down. If the firmware update image is available on backup diskettes, the firmware update can then be done from the service processor menus as a privileged user. If the firmware update image is in a file on the system, reboot the system in a full machine partition and use the following normal firmware update procedures.

If the system is already in a full machine partition, use the following normal firmware update procedures:

Note: This service aid runs on CHRP system units only.

This selection updates the system or service processor flash for CHRP system units. Some systems may have separate images for system and service processor firmware; newer systems have a combined image that contains both in one image.

Look for additional update and recovery instructions with the update kit. You need to know the fully qualified path and file name of the flash update image file provided in the kit. If the update image file is on a diskette, the service aid can list the files on the diskette for selection. The diskette must be a valid backup format diskette.

Refer to the update instructions with the kit, or the service guide for the system unit to determine the current level of the system unit or service processor flash memory.

When this service aid is run from online diagnostics, the flash update image file is copied to the */var* file system. It is recommended that the source of the microcode that you want to download be put into the */etc/microcode* directory on the system. If there is not enough space in the */var* file system for the new flash update image file, an error is reported. If this error occurs, exit the service aid, increase the size of the */var* file system, and retry the service aid. After the file is copied, a screen requests confirmation before continuing with the flash update. When you continue the update flash, the system reboots using the **shutdown -u** command. The system does not return to the diagnostics, and the current flash image is not saved. After the reboot, you can remove the */var/update_flash_image* file.

When this service aid is run from standalone diagnostics, the flash update image file is copied to the file system from diskette or from the NIM server. Using a diskette, the user must provide the image on backup format diskette because the user does not have access to remote file systems or any other files that are on the system. If using the NIM server, the microcode image must first be copied onto the NIM server in the */usr/lib/microcode* directory pointed to the NIM SPOT (from which you plan to have the NIM client boot standalone diagnostics) prior to performing the NIM boot of diagnostics. After performing the NIM boot of diagnostics one can use this service aid to update the microcode from the NIM server by choosing the */usr/lib/microcode* directory when prompted for the source of the microcode that you want to update. If not enough space is available, an error is reported, stating additional system memory is needed. After the file is copied, a screen requests confirmation before continuing with the flash update. When you continue with the update, the system reboots using the **reboot -u** command. You may receive a Caution: some process(es) wouldn't die message during the reboot process, you can ignore this message. The current flash image is not saved.

You can use the **update_flash** command in place of this service aid. The command is located in the */usr/lpp/diagnostics/bin* directory. The command syntax is as follows:

```
update_flash [-q] -f file_name
update_flash [-q] -D device_name -f file_name
update_flash [-q] -D update_flash [-q] -D device_name -l
```

Flag	Description
------	-------------

- | | |
|-----------|--|
| -D | Specifies that the flash update image file is on diskette. The <i>device_name</i> variable specifies the diskette drive. The default <i>device_name</i> is <i>/dev/fd0</i> . |
| -f | Flash update image file source. The <i>file_name</i> variable specifies the fully qualified path of the flash update image file. |
| -l | Lists the files on a diskette, from which the user can choose a flash update image file. |

-q Forces the **update_flash** command to update the flash EPROM and reboot the system without asking for confirmation.

Attention: The **update_flash** command reboots the entire system. Do not use this command if more than one user is logged on to the system.

Update System Flash

Note: This service aid runs on RSPC system units only.

This selection updates the system flash for RSPC systems. The user provides a valid binary image either on a diskette or with a qualified path name. The diskettes can be in DOS or backup format.

The flash update image is copied to the **/var** file system. If not enough space is available in the file system for the flash update image file, an error is reported. If this error occurs, increase the file size of the **/var** file system. The current flash image is not saved. The command automatically removes the **/var/update_flash_image** file.

After user confirmation, the command reboots the system twice to complete the flash update.

7135 RAIDiant Array Service Aid

The 7135 RAIDiant Array service aids contain the following functions:

- Certify LUN
Reads and checks each block of data in the logical unit number (LUN). If excessive errors are encountered, the user is notified.
- Certify Spare Physical Disk
Allows the user to certify (check the integrity of the data) on drives designated as spares.
- Format Physical Disk
Formats a selected disk drive.
- Array Controller Microcode Download
Allows the microcode on the 7135 controller to be updated when required.
- Physical Disk Microcode Download
Updates the microcode on any of the disk drives in the array.
- Update EEPROM
Updates the contents of the EEPROM on a selected controller.
- Replace Controller
Replaces a controller in the array.

Command Examples

Use this command syntax to download the adapter microcode:

```
diag -c -d deviceName -T "download [-B] [-D] [-P]"
```

Flag	Description
------	-------------

- | | |
|-----------|---|
| -B | Download boot block microcode (default to functional microcode) |
| -D | Microcode is on diskette (default to /etc/microcode directory) |
| -P | Download the previous level of microcode (default to latest level) |

Use this command syntax to download physical disk microcode:

```
diag -c -d deviceName -T "download -l Chld [-D] [-P]"
```

Flag	Description
------	-------------

- | | |
|-----------|---|
| -D | Microcode is on diskette (default to /etc/microcode directory) |
| -l | Physical disk channel/ID (for example, 27) |
| -P | Download the previous level of microcode (default to latest level) |

Use this command syntax to format a physical disk:

```
diag -c -d deviceName -T "format -l Chld"
```

Flag	Description
------	-------------

- | | |
|-----------|--|
| -l | Physical disk channel/ID (for example, 27) |
|-----------|--|

Use this command syntax to certify a physical disk:

```
diag -c -d deviceName -T "certify -l Chld"
```

Flag	Description
------	-------------

- | | |
|-----------|--|
| -l | Physical disk channel/ID (for example, 23) |
|-----------|--|

Use this command syntax to identify a physical disk:

```
diag -c -d deviceName -T "identify"
```

7318 Serial Communications Network Server Service Aid

This service aid provides a tool for diagnosing terminal server problems.

Chapter 27. Diagnostics Numbers and Location Codes

This chapter provides descriptions for the numbers and characters that display on the operator panel and descriptions of the location codes used to identify a particular item.

Operator Panel Display Numbers

This section contains a list of the various numbers and characters that display in the operator panel display. There are three categories of numbers and characters. The first group tracks the progress of the configuration program. The second group tracks the progress of the diagnostics. The third group provides information about messages that follow an 888 sequence

For more detailed explanations of operator panel display numbers, refer to the *Messages Guide and Reference*.

Configuration Program Indicators

The numbers in this list display on the operator panel as the system loads the operating system and prepares the hardware by loading software drivers.

Note: Some systems may produce 4-digit codes. If the leftmost digit of a 4-digit code is 0, use the three rightmost digits.

- 2E6** The PCI Differential Ultra SCSI adapter or the Universal PCI Differential Ultra SCSI adapter being configured.
- 2E7** Configuration method unable to determine if the SCSI adapter type is SE or DE type.
- 440** 9.1GB Ultra SCSI Disk Drive being identified or configured.
- 441** 18.2GB Ultra SCSI Disk Drive being identified or configured.
- 444** 2-Port Multiprotocol PCI Adapter (ASIC) being identified or configured.
- 447** PCI 64-bit Fibre Channel Arbitrated Loop Adapter being configured.
- 500** Querying Standard I/O slot.
- 501** Querying card in Slot 1.
- 502** Querying card in Slot 2.
- 503** Querying card in Slot 3.
- 504** Querying card in Slot 4.
- 505** Querying card in Slot 5.
- 506** Querying card in Slot 6.
- 507** Querying card in Slot 7.
- 508** Querying card in Slot 8.

- 510 Starting device configuration.
- 511 Device configuration completed.
- 512 Restoring device configuration files from media.
- 513 Restoring basic operating system installation files from media.
- 516 Contacting server during network boot.
- 517 Mounting client remote file system during network IPL.
- 518 Remote mount of the **root (/)** and **/usr** file systems failed during network boot.
- 520 Bus configuration running.
- 521 **/etc/init** invoked **cfgmgr** with invalid options; **/etc/init** has been corrupted or incorrectly modified (irrecoverable error).
- 522 The configuration manager has been invoked with conflicting options (irrecoverable error).
- 523 The configuration manager is unable to access the ODM database (irrecoverable error).
- 524 The configuration manager is unable to access the config.rules object in the ODM database (irrecoverable error).
- 525 The configuration manager is unable to get data from a customized device object in the ODM database (irrecoverable error).
- 526 The configuration manager is unable to get data from a customized device driver object in the ODM database (irrecoverable error).
- 527 The configuration manager was invoked with the phase 1 flag; running phase 1 at this point is not permitted (irrecoverable error).
- 528 The configuration manager cannot find sequence rule, or no program name was specified in the ODM database (irrecoverable error).
- 529 The configuration manager is unable to update ODM data (irrecoverable error).
- 530 The program **savebase** returned an error.
- 531 The configuration manager is unable to access the **PdAt** object class (irrecoverable error).
- 532 There is not enough memory to continue (malloc failure); irrecoverable error.
- 533 The configuration manager could not find a configuration method for a device.
- 534 The configuration manager is unable to acquire database lock (irrecoverable error).
- 535 HIPPI diagnostics interface driver being configured.
- 536 The configuration manager encountered more than one sequence rule specified in the same phase (irrecoverable error).
- 537 The configuration manager encountered an error when invoking the program in the sequence rule.

- 538** The configuration manager is going to invoke a configuration method.
- 539** The configuration method has terminated, and control has returned to the configuration manager.
- 541** A DLT tape device is being configured.
- 549** Console could not be configured for the Copy a System Dump Menu.
- 551** IPL vary-on is running.
- 552** IPL vary-on failed.
- 553** IPL phase 1 is complete.
- 554** The boot device could not be opened or read, or unable to define NFS swap device during network boot.
- 555** An ODM error occurred when trying to vary-on the rootvg, or unable to create an NFS swap device during network boot.
- 556** Logical Volume Manager encountered error during IPL vary-on.
- 557** The root filesystem does not mount.
- 558** There is not enough memory to continue the system IPL.
- 559** Less than 2 M bytes of good memory are available to load the AIX kernel.
- 569** FCS SCSI protocol device is being configured.
- 570** Virtual SCSI devices being configured.
- 571** HIPPI common function device driver being configured.
- 572** HIPPI IPI-3 master transport driver being configured.
- 573** HIPPI IPI-3 slave transport driver being configured.
- 574** HIPPI IPI-3 transport services user interface device driver being configured.
- 575** A 9570 disk-array driver being configured.
- 576** Generic async device driver being configured.
- 577** Generic SCSI device driver being configured.
- 578** Generic commo device driver being configured.
- 579** Device driver being configured for a generic device.
- 580** HIPPI TCPIP network interface driver being configured.
- 581** Configuring TCP/IP.
- 582** Configuring Token-Ring data link control.
- 583** Configuring an Ethernet data link control.
- 584** Configuring an IEEE Ethernet data link control.
- 585** Configuring an SDLC MPQP data link control.
- 586** Configuring a QLLC X.25 data link control.

- 587 Configuring a NETBIOS.
- 588 Configuring a Bisync Read-Write (BSCRW).
- 589 SCSI target mode device being configured.
- 590 Diskless remote paging device being configured.
- 591 Configuring an LVM device driver.
- 592 Configuring an HFT device driver.
- 593 Configuring SNA device drivers.
- 594 Asynchronous I/O being defined or configured.
- 595 X.31 pseudo-device being configured.
- 596 SNA DLC/LAPE pseudo-device being configured.
- 597 OCS software being configured.
- 598 OCS hosts being configured during system reboot.
- 599 Configuring FDDI data link control.
- 5C0 Streams-based hardware drive being configured.
- 5C1 Streams-based X.25 protocol being configured.
- 5C2 Streams-based X.25 COMIO emulator driver being configured
- 5C3 Streams-based X.25 TCP/IP interface driver being configured.
- 5C4 FCS adapter device driver being configured.
- 5C5 SCB network device driver for FCS being configured.
- 5C6 AIX SNA channel being configured
- 600 Starting network boot portion of **/sbin/rc.boot**.
- 602 Configuring network parent devices.
- 603 **/usr/lib/methods/defsys**, **/usr/lib/methods/cfgsys**, or **/usr/lib/methods/cfgbus** failed.
- 604 Configuring physical network boot device.
- 605 Configuration of physical network boot device failed.
- 606 Running **/usr/sbin/ifconfig** on logical network boot device.
- 607 **/usr/sbin/ifconfig** failed.
- 608 Attempting to retrieve the **client.info** file with **tftp**. Note that a flashing 608 indicates multiple attempt(s) to retrieve the **client_info** file are occurring.
- 609 The **client.info** file does not exist or it is zero length.
- 60B 18.2GB 68-pin LVD SCSI Disk Drive being configured.
- 610 Attempting remote mount of NFS file system.

- 611** Remote mount of the NFS file system failed.
- 612** Accessing remote files; unconfiguring network boot device.
- 614** Configuring local paging devices.
- 615** Configuration of a local paging device failed.
- 616** Converting from diskless to dataless configuration.
- 617** Diskless to dataless configuration failed.
- 618** Configuring remote (NFS) paging devices.
- 619** Configuration of a remote (NFS) paging device failed.
- 61B** 36.4GB 80-pin LVD SCSI Disk Drive being configured.
- 61D** 36.4GB 80-pin LVD SCSI Disk Drive being configured.
- 61E** 18.2GB 68-pin LVD SCSI Disk Drive being configured.
- 620** Updating special device files and ODM in permanent filesystem with data from boot RAM filesystem.
- 621** 9.1 GB LVD 80-pin SCSI Drive being configured.
- 622** Boot process configuring for operating system installation.
- 62D** 9.1GB 68-pin LVD SCSI Disk Drive being configured.
- 62E** 9.1GB 68-pin LVD SCSI Disk Drive being configured.
- 636** TURBROWAYS 622 Mbps PCI MMF ATM Adapter.
- 637** Dual Channel PCI-2 Ultra2 SCSI Adapter being configured.
- 638** 4.5GB Ultra SCSI Single Ended Disk Drive being configured.
- 639** 9.1GB 10K RPM Ultra SCSI Disk Drive (68-pin).
- 63A** See 62D.
- 63B** 9.1GB 80-pin LVD SCSI Disk Drive being configured.
- 63C** See 60B.
- 63D** 18.2GB 80-pin LVD SCSI Disk Drive being configured.
- 63E** 36.4GB 68-pin LVD SCSI Disk Drive being configured.
- 63F** See 61B.
- 640** 9.1GB 10K RPM Ultra SCSI Disk Drive (80-pin).
- 646** High-Speed Token-Ring PCI Adapter being configured.
- 64A** See 62E.
- 64B** 9.1GB 80-pin LVD SCSI Disk Drive being configured.
- 64C** See 61E.
- 64D** 18.2 GB LVD 80-pin Drive/Carrier being configured.

- 64E** 36.4GB 68-pin LVD SCSI Disk Drive being configured.
- 64F** See 61D.
- 650** IBM SCSD disk drive being configured.
- 653** 18.2GB Ultra-SCSI 16-bit Disk Drive being configured.
- 655** GXT130P Graphics adapter being configured.
- 657** GXT2000P graphics adapter being configured.
- 658** PCI Fibre Channel Disk Subsystem Controller being identified or configured.
- 659** 2102 Fibre Channel Disk Subsystem Controller Drawer being identified or configured.
- 660** 2102 Fibre Channel Disk Array being identified or configured.
- 662** Ultra2 Integrated SCSI controller.
- 663** The ARTIC960RxD Digital Trunk Quad PCI Adapter or the ARTIC960RxF Digital Trunk Resource Adapter being configured.
- 664** 32x (MAX) SCSI-2 CD-ROM drive being configured.
- 667** PCI 3-Channel Ultra2 SCSI RAID Adapter being configured.
- 669** PCI Gigabit Ethernet Adapter being configured.
- 66C** 10/100/1000 Base-T EthernetPCI Adapter.
- 66D** PCI 4-Channel Ultra-3 SCSI RAID Adapter.
- 66E** 4.7 GB DVD-RAM drive
- 674** ESCON[®] Channel PCI Adapter being configured.
- 677** PCI 32-bit Fibre Channel Arbitrated Loop Adapter being configured.
- 67B** PCI Cryptographic Coprocessor being configured.
- 682** 20x (MAX) SCSI-2 CD-ROM Drive being configured.
- 689** 4.5GB Ultra SCSI Single Ended Disk Drive being configured.
- 68C** 20 GB 4-mm Tape Drive being configured.
- 68E** POWER GXT6000P PCI Graphics Adapter.
- 690** 9.1GB Ultra SCSI Single Ended Disk Drive being configured.
- 69b** 64-bit/66MHz PCI ATM 155 MMF PCI adapter being configured.
- 69d** 64-bit/66MHz PCI ATM 155 UTP PCI adapter being configured.
- 6CC** SSA disk drive being configured.
- 700** A 1.1 GB 8-bit SCSI disk drive being identified or configured.
- 701** A 1.1 GB 16-bit SCSI disk drive being identified or configured.
- 702** A 1.1 GB 16-bit differential SCSI disk drive being identified or configured.

- 703** A 2.2 GB 8-bit SCSI disk drive being identified or configured.
- 704** A 2.2 GB 16-bit SCSI disk drive being identified or configured.
- 705** The configuration method for the 2.2 GB 16-bit differential SCSI disk drive is being run. If an irrecoverable error occurs, the system halts.
- 706** A 4.5 GB 16-bit SCSI disk drive being identified or configured.
- 707** A 4.5 GB 16-bit differential SCSI disk drive being identified or configured.
- 708** A L2 cache being identified or configured.
- 710** POWER GXT150M graphics adapter being identified or configured.
- 711** Unknown adapter being identified or configured.
- 712** Graphics slot bus configuration is executing.
- 713** The IBM ARTIC960 device being configured.
- 714** A video capture adapter being configured.
- 715** The Ultramedia Services audio adapter being configured. (this number displays briefly on the panel)
- 717** TP Ethernet Adapter being configured.
- 718** GXT500 Graphics Adapter being configured.
- 720** Unknown read/write optical drive type being configured.
- 721** Unknown disk or SCSI device being identified or configured.
- 722** Unknown disk being identified or configured.
- 723** Unknown CD-ROM being identified or configured.
- 724** Unknown tape drive being identified or configured.
- 725** Unknown display adapter being identified or configured.
- 726** Unknown input device being identified or configured.
- 727** Unknown async device being identified or configured.
- 728** Parallel printer being identified or configured.
- 729** Unknown parallel device being identified or configured.
- 730** Unknown diskette drive being identified or configured.
- 731** PTY being identified or configured.
- 732** Unknown SCSI initiator type being configured.
- 733** 7GB 8 mm tape drive being configured.
- 734** 4x SCSI-2 640 MB CD-ROM Drive being configured.
- 736** Quiet Touch keyboard and speaker cable being configured.
- 741** 1080 MB SCSI Disk Drive being configured.

- 745** 16GB 4 mm Tape Auto Loader being configured.
- 746** SCSI-2 Fast/Wide PCI Adapter being configured.
- 747** SCSI-2 Differential Fast/Wide PCI Adapter being configured.
- 749** 7331 Model 205 Tape Library being configured.
- 751** SCSI 32-bit SE F/W RAID Adapter being configured.
- 754** 1.1GB 16-bit SCSI disk drive being configured.
- 755** 2.2GB 16-bit SCSI disk drive being configured.
- 756** 4.5GB 16-bit SCSI disk drive being configured.
- 757** External 13GB 1.5M/s 1/4 inch tape being configured.
- 763** SP Switch MX Adapter being configured.
- 764** SP System Attachment Adapter being configured.
- 772** 4.5GB SCSI F/W Disk Drive being configured.
- 773** 9.1GB SCSI F/W Disk Drive being configured.
- 774** 9.1GB External SCSI Disk Drive being configured.
- 776** PCI Token-Ring Adapter being identified or configured.
- 777** 10/100 Ethernet Tx PCI Adapter being identified or configured.
- 778** POWER GXT3000P 3D PCI Graphics adapter being configured.
- 77B** 4-Port 10/100 Ethernet Tx PCI Adapter being identified or configured.
- 77c** A 1.0 GB 16-bit SCSI disk drive being identified or configured.
- 783** 4 mm DDS-2 Tape Autoloader being configured.
- 789** 2.6 GB External Optical Drive being configured.
- 78B** POWER GXT4000P PCI Graphics Adapter.
- 78C** PCI bus configuration executing.
- 78D** GXT300P 2D Graphics adapter being configured.
- 790** Multi-bus Integrated Ethernet Adapter being identified or configured.
- 797** TURBOWAYS[®] 155 UTP/STP ATM Adapter being identified or configured.
- 798** Video streamer adapter being identified or configured.
- 799** 2-Port Multiprotocol PCI adapter being identified or configured.
- 79c** ISA bus configuration executing.
- 7C0** CPU/System Interface being configured.
- 7C1** Business Audio Subsystem being identified or configured.
- 7cc** PCMCIA bus configuration executing.
- 800** TURBOWAYS 155 MMF ATM Adapter being identified or configured.

- 803** 7336 Tape Library robotics being configured.
- 804** 8x Speed SCSI-2 CD-ROM Drive being configured.
- 806** POWER GXT800 PCI Graphics adapter being configured.
- 807** SCSI Device Enclosure being configured.
- 80c** SSA 4-Port Adapter being identified or configured.
- 811** Processor complex being identified or configured.
- 812** Memory being identified or configured.
- 813** Battery for time-of-day, NVRAM, and so on being identified or configured, or system I/O control logic being identified or configured.
- 814** NVRAM being identified or configured.
- 815** Floating-point processor test.
- 816** Operator panel logic being identified or configured.
- 817** Time-of-day logic being identified or configured.
- 819** Graphics input device adapter being identified or configured.
- 821** Standard keyboard adapter being identified or configured.
- 823** Standard mouse adapter being identified or configured.
- 824** Standard tablet adapter being identified or configured.
- 825** Standard speaker adapter being identified or configured.
- 826** Serial Port 1 adapter being identified or configured.
- 827** Parallel port adapter being identified or configured.
- 828** Standard diskette adapter being identified or configured.
- 831** 3151 adapter being identified or configured, or Serial Port 2 being identified or configured.
- 834** 64-port async controller being identified or configured.
- 835** 16-port async concentrator being identified or configured.
- 836** 128-port async controller being identified or configured.
- 837** 16-port remote async node being identified or configured.
- 838** Network Terminal Accelerator Adapter being identified or configured.
- 839** 7318 Serial Communications Server being configured.
- 840** PCI Single-Ended Ultra SCSI Adapter being configured.
- 841** 8-port async adapter (EIA-232) being identified or configured.
- 842** 8-port async adapter (EIA-422A) being identified or configured.
- 843** 8-port async adapter (MIL-STD 188) being identified or configured.

- 844** 7135 RAIDiant Array disk drive subsystem controller being identified or configured.
- 845** 7135 RAIDiant Array disk drive subsystem drawer being identified or configured.
- 846** RAIDiant Array SCSI 1.3GB Disk Drive being configured.
- 847** 16-port serial adapter (EIA-232) being identified or configured.
- 848** 16-port serial adapter (EIA-422) being identified or configured.
- 849** X.25 Interface Coprocessor/2 adapter being identified or configured.
- 850** Token-Ring network adapter being identified or configured.
- 851** T1/J1 Portmaster[®] adapter being identified or configured.
- 852** Ethernet adapter being identified or configured.
- 854** 3270 Host Connection Program/6000 connection being identified or configured.
- 855** Portmaster Adapter/A being identified or configured.
- 857** FSLA adapter being identified or configured.
- 858** 5085/5086/5088 adapter being identified or configured.
- 859** FDDI adapter being identified or configured.
- 85c** Token-Ring High-Performance LAN adapter being identified or configured.
- 861** Optical adapter being identified or configured.
- 862** Block Multiplexer Channel Adapter being identified or configured.
- 865** ESCON Channel Adapter or emulator being identified or configured.
- 866** SCSI adapter being identified or configured.
- 867** Async expansion adapter being identified or configured.
- 868** SCSI adapter being identified or configured.
- 869** SCSI adapter being identified or configured.
- 870** Serial disk drive adapter being identified or configured.
- 871** Graphics subsystem adapter being identified or configured.
- 872** Grayscale graphics adapter being identified or configured.
- 874** Color graphics adapter being identified or configured.
- 875** Vendor generic communication adapter being configured.
- 876** 8-bit color graphics processor being identified or configured.
- 877** POWER Gt3[™]/POWER Gt4[™] being identified or configured.
- 878** POWER Gt4 graphics processor card being configured.
- 879** 24-bit color graphics card, MEV2 being configured.

- 880** POWER Gt1™ adapter being identified or configured.
- 887** Integrated Ethernet adapter being identified or configured.
- 889** SCSI adapter being identified or configured.
- 890** SCSI-2 Differential Fast/Wide and Single-Ended Fast/Wide Adapter/A being configured.
- 891** Vendor SCSI adapter being identified or configured.
- 892** Vendor display adapter being identified or configured.
- 893** Vendor LAN adapter being identified or configured.
- 894** Vendor async/communications adapter being identified or configured.
- 895** Vendor IEEE 488 adapter being identified or configured.
- 896** Vendor VME bus adapter being identified or configured.
- 897** S/370™ Channel Emulator adapter being identified or configured.
- 898** POWER Gt1x™ graphics adapter being identified or configured.
- 899** 3490 attached tape drive being identified or configured.
- 89c** A multimedia SCSI CD-ROM being identified or configured.
- 900** GXT110P Graphics Adapter being identified or configured.
- 901** Vendor SCSI device being identified or configured.
- 902** Vendor display device being identified or configured.
- 903** Vendor async device being identified or configured.
- 904** Vendor parallel device being identified or configured.
- 905** Vendor other device being identified or configured.
- 908** POWER GXT1000 Graphics subsystem being identified or configured.
- 910** 1/4GB Fiber Channel/266 Standard Adapter being identified or configured.
- 911** Fiber Channel/1063 Adapter Short Wave being configured.
- 912** 2.0GB SCSI-2 differential disk drive being identified or configured.
- 913** 1.0GB differential disk drive being identified or configured.
- 914** 5GB 8 mm differential tape drive being identified or configured.
- 915** 4GB 4 mm tape drive being identified or configured.
- 916** Non-SCSI vendor tape adapter being identified or configured.
- 917** A 2.0 GB 16-bit differential SCSI disk drive being identified or configured.
- 918** A 2 GB 16-bit single-ended SCSI disk drive being identified or configured.
- 920** Bridge Box being identified or configured.
- 921** 101 keyboard being identified or configured.

- 922 102 keyboard being identified or configured.
- 923 Kanji keyboard being identified or configured.
- 924 Two-button mouse being identified or configured.
- 925 Three-button mouse being identified or configured.
- 926 5083 tablet being identified or configured.
- 927 5083 tablet being identified or configured.
- 928 Standard speaker being identified or configured.
- 929 Dials being identified or configured.
- 930 Lighted program function keys (LPFK) being identified or configured.
- 931 IP router being identified or configured.
- 933 Async planar being identified or configured.
- 934 Async expansion drawer being identified or configured.
- 935 3.5-inch diskette drive being identified or configured.
- 936 5.25-inch diskette drive being identified or configured.
- 937 An HIPPI adapter being configured.
- 938 Serial HIPPI PCI adapter being configured.
- 942 POWER GXT 100 graphics adapter being identified or configured.
- 943 A 3480 or 3490 control unit attached to a System/370 Channel Emulator/A adapter are being identified or configured.
- 944 100MB ATM adapter being identified or configured.
- 945 1.0GB SCSI differential disk drive being identified or configured.
- 946 Serial port 3 adapter being identified or configured.
- 947 A 730MB SCSI disk drive being configured.
- 948 Portable disk drive being identified or configured.
- 949 Unknown direct bus-attach device being identified or configured.
- 950 Missing SCSI device being identified or configured.
- 951 670MB SCSI disk drive being identified or configured.
- 952 355MB SCSI disk drive being identified or configured.
- 953 320MB SCSI disk drive being identified or configured.
- 954 400MB SCSI disk drive being identified or configured.
- 955 857MB SCSI disk drive being identified or configured.
- 956 670MB SCSI disk drive electronics card being identified or configured.
- 957 120 MB DBA disk drive being identified or configured.

- 958** 160 MB DBA disk drive being identified or configured.
- 959** 160 MB SCSI disk drive being identified or configured.
- 960** 1.37GB SCSI disk drive being identified or configured.
- 964** Internal 20 GB 8 mm tape drive identified or configured.
- 968** 1.0 GB SCSI disk drive being identified or configured.
- 970** Half-inch, 9-track tape drive being identified or configured.
- 971** 150 MB 1/4-inch tape drive being identified or configured.
- 972** 2.3 GB 8 mm SCSI tape drive being identified or configured.
- 973** Other SCSI tape drive being identified or configured.
- 974** CD-ROM drive being identified or configured.
- 975** An optical disk drive being identified or configured.
- 977** M-Audio Capture and Playback Adapter being identified or configured.
- 981** 540MB SCSI-2 single-ended disk drive being identified or configured.
- 984** 1GB 8-bit disk drive being identified or configured.
- 985** M-Video Capture Adapter being identified or configured.
- 986** 2.4GB SCSI disk drive being identified or configured.
- 987** An Enhanced SCSI CD-ROM drive being identified or configured.
- 989** 200MB SCSI disk drive being identified or configured.
- 990** 2.0GB SCSI-2 single-ended disk drive being identified or configured.
- 991** 525MB 1/4-inch cartridge tape drive being identified or configured.
- 994** 5 GB 8 mm tape drive being identified or configured.
- 995** 1.2GB 1/4 inch cartridge tape drive being identified or configured.
- 996** A single-port, multiprotocol communications adapter being identified or configured.
- 997** FDDI adapter being identified or configured.
- 998** 2.0 GB 4 mm tape drive being identified or configured.
- 999** 7137 or 3514 Disk Array Subsystem being configured.
- D46** Token-Ring cable
- D81** T2 Ethernet Adapter being configured.
- 2530** 10/100 Mbps Ethernet PCI Adapter II being configured.

Diagnostic Load Progress Indicators

Note: Some systems may produce 4-digit codes. If the leftmost digit of a 4-digit code is 0, use the three rightmost digits.

- c00** AIX Install/Maintenance loaded successfully.
- c01** Insert the first diagnostic diskette.
- c02** Diskettes inserted out of sequence.
- c03** The wrong diskette is in diskette drive.
- c04** The loading stopped with an irrecoverable error.
- c05** A diskette error occurred.
- c06** The **rc.boot** configuration shell script is unable to determine type of boot.
- c07** Insert the next diagnostic diskette.
- c08** RAM file system started incorrectly.
- c09** The diskette drive is reading or writing a diskette.
- c20** An unexpected halt occurred, and the system is configured to enter the kernel debug program instead of entering a system dump.
- c21** The **ifconfig** command was unable to configure the network for the client network host.
- c22** The **tftp** command was unable to read client's *ClientHostName* **info** file during a client network boot.
- c24** Unable to read client's *ClientHostName.info* file during a client network boot.
- c25** Client did not mount remote miniroot during network install.
- c26** Client did not mount the /usr file system during the network boot.
- c29** The system was unable to configure the network device.
- c31** Select the console display for the diagnostics. To select No console display, set the key mode switch to Normal then to Service. The diagnostic programs then load and run the diagnostics automatically. If you continue to get the message, check the cables and make sure you are using the serial port.
- c32** A directly attached display (HFT) was selected.
- c33** A TTY terminal attached to serial ports S1 or S2 was selected.
- c34** A file was selected. The console messages store in a file.
- c35** No console found.
- c40** Configuration files are being restored.
- c41** Could not determine the boot type or device.
- c42** Extracting data files from diskette.

- c43** Cannot access the boot/install tape.
- c44** Initializing installation database with target disk information.
- c45** Cannot configure the console.
- c46** Normal installation processing.
- c47** Could not create a physical volume identifier (PVID) on disk.
- c48** Prompting you for input.
- c49** Could not create or form the JFS log.
- c50** Creating root volume group on target disks.
- c51** No paging devices were found.
- c52** Changing from RAM environment to disk environment.
- c53** Not enough space in the **/tmp** directory to do a preservation installation.
- c54** Installing either BOS or additional packages.
- c55** Could not remove the specified logical volume in a preservation installation.
- c56** Running user-defined customization.
- c57** Failure to restore BOS.
- c58** Displaying message to turn the key.
- c59** Could not copy either device special files, device ODM, or volume group information from RAM to disk.
- c61** Failed to create the boot image.
- c62** Loading platform dependent debug files.
- c63** Loading platform dependent data files.
- c64** Failed to load platform dependent data files.
- c70** Problem Mounting diagnostic CD-ROM disc.
- c99** Diagnostics have completed. This code is only used when there is no console.
- Fxx** (xx is any number) Refer to Firmware chapter of the service manual.

Dump Progress Indicators (Dump Status Codes)

The following dump progress indicators, or dump status codes, are part of a Type 102 message.

Note: When a lowercase c is listed, it displays in the lower half of the character position. Some systems produce 4-digit codes, the two leftmost positions can have a blanks or zeros. Use the two rightmost digits.

- 0c0** The dump completed successfully.
- 0c1** The dump failed due to an I/O error.
- 0c2** A dump, requested by the user, is started.

- 0c3** The dump is inhibited.
- 0c4** The dump device is not large enough.
- 0c5** The dump did not start, or the dump crashed.
- 0c6** Dumping to a secondary dump device.
- 0c7** Reserved.
- 0c8** The dump function is disabled.
- 0c9** A dump is in progress.
- 0cc** Unknown dump failure

Crash Codes

Note: Some systems may produce 4-digit codes. If the leftmost digit of a 4-digit code is 0, use the three rightmost digits.

The crash codes that follow are part of a Type 102 message. These crash codes are grouped into three categories:

- Category 1** Dump analysis is the appropriate first action in Problem Determination, begin the Problem Determination process with software support.
- Category 2** Dump analysis most likely will not aid in Problem Determination, begin the Problem Determination process with hardware support.
- Category 3** Both software and hardware support may be needed in Problem Determination, go to "Chapter 9. MAP 0070: 888 Sequence in Operator Panel Display" on page 61 to assist in problem isolation.

Category 1

- 300** Data storage interrupt from the processor.
- 32x** Data storage interrupt because of an I/O exception from IOCC.
- 38x** Data storage interrupt because of an I/O exception from SLA.
- 400** Instruction storage interrupt.
- 700** Program interrupt.

Category 2

- 200** Machine check because of a memory bus error.
- 201** Machine check because of a memory timeout.
- 202** Machine check because of a memory card failure.
- 203** Machine check because of a out of range address.
- 204** Machine check because of an attempt to write to ROS.

- 205** Machine check because of an uncorrectable address parity.
- 206** Machine check because of an uncorrectable ECC error.
- 207** Machine check because of an unidentified error.
- 208** Machine check due to an L2 uncorrectable ECC.
- 500** External interrupt because of a scrub memory bus error.
- 501** External interrupt because of an unidentified error.
- 51x** External interrupt because of a DMA memory bus error.
- 52x** External interrupt because of an IOCC channel check.
- 53x** External interrupt from an IOCC bus timeout; x represents the IOCC number.
- 54x** External interrupt because of an IOCC keyboard check.
- 800** Floating point is not available.

Category 3

- 000** Unexpected system interrupt.
- 558** There is not enough memory to continue the IPL.
- 600** AIX 4.3.3.3 and above: Alignment Interrupt. If pre-AIX 4.3.3.3: AIX has crashed because the Portability Assist Layer (PAL) for this machine type has detected a problem.
- 605** AIX has crashed because the Portability Assist Layer (PAL) for this machine type has detected a problem (AIX 4.3.3.3 and above).

Location Codes for RSPC Model Architecture System Units

Note: You need to know which system architecture the system unit on which you are working uses. If you are working with a CHRP model, use the . If you do not know which model you have, refer to “Determining System Architecture” on page 152 before proceeding.

Because the same diagnostic programs are used on all system units, a location code is used to physically locate a failing device or unit. The location code is displayed along with the service request number (SRN) when the diagnostic programs isolate a failure. If the location code is not known, you can run the Display Previous Diagnostic Results service aid to display the results of the last time the diagnostic programs were run.

The basic format of the system unit’s location code is:

AB-CD-EF-GH non-SCSI
AB-CD-EF-G,H SCSI

For planars, cards, and non-SCSI devices, the location code is defined as follows:

AB-CD-EF-GH
| | | Device/FRU/Port ID
| | Connector ID
| Slot or Adapter Number
Bus Type


- AB identifies a bus type.
- CD identifies a slot or adapter number.
- EF is the connector identifier, used to identify the adapter connector to which a resource is attached.
- GH identifies a port, address, memory module, device, or FRU. GH has several meanings depending upon the resource type, they are as follows:
 - For memory cards, GH defines a memory module. Values for GH are 1 through 16.

For systems that have memory modules that plug directly into the system planar, the location code is 00-00-00-GH where GH is the memory module slot. For systems that have memory cards with memory modules, the location code is 00-CD-EF-GH, where CD is the card slot and GH is the memory module slot.

- For L2 caches, GH defines the cache. Values for GH are 1 through 16.
- For PCMCIA devices, GH defines the PCMCIA. Values for GH are 1 through 16.
- For async devices, GH defines the port on the fanout box. Values are 00 to 15.
- For a diskette drive, H defines which diskette drive 1 or 2. G is always 0.
- For all other devices, GH is equal to 00.

For integrated adapters, EF-GH is the same as the definition for a pluggable adapter. For example, the location code for a diskette drive is 01-A0-00-00. A second diskette drive is 01-A0-00-01.

For SCSI, the location code is defined as follows:

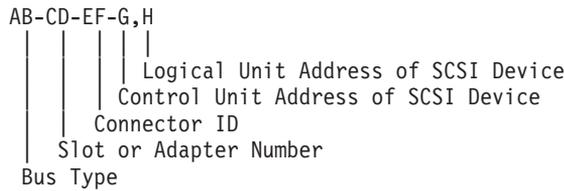

Where:

- AB-CD-EF are the same as non-SCSI devices.
- G defines the control unit address of the device. Values of 0 to 15 are valid.
- H defines the logical unit address of the device. Values of 0 to 255 are valid.

Adapters and cards are identified with only AB-CD. The possible values for AB are as follows:

- 00 for processor bus
- 01 for ISA buses
- 04 for PCI buses
- 05 for PCMCIA buses (not supported on 7024)

The possible values for CD depend on the adapter or card.

For pluggable adapters or cards, this is a two-digit slot number in the range from 01 to 99. However, in the case of ISA cards these numbers do not actually correspond to the physical slot numbers. They simply are based on the order in which the ISA cards are defined or configured, either by SMIT or the ISA Adapter Configuration Service Aid.

For integrated adapters, the first character (C) is a letter in the range from A to Z. This letter is based on the order in which the integrated adapters are defined in residual data. This ensures unique location codes for the integrated adapters. The second character (D) is set to 0.

Refer to the following examples:

RSPC Location Code Examples

Processor-PCI bus
00-00 PCI bus

Memory module in system planar
00-00-00-01

Memory module in card
00-0A-00-01

Integrated PCI adapters
04-A0 ISA bus (Integrated PCI-ISA bridge)
04-B0 Secondary PCI bus (Integrated PCI-PCI bridge)
04-C0 Integrated PCI SCSI controller

Non-integrated PCI adapters
04-01 Any PCI card in slot 1
04-02 Any PCI card in slot 2

Integrated ISA adapters

01-A0 Diskette adapter
01-B0 Parallel port adapter
01-C0 Serial port 1 adapter
01-D0 Serial port 2 adapter
01-E0 Keyboard adapter
01-F0 Mouse adapter
Non-integrated ISA adapters
01-01 First ISA card defined/configured
01-02 Second ISA card defined/configured
01-03 Third ISA card defined/configured
01-04 Fourth ISA card defined/configured
Device attached to SCSI controller
04-C0-01-4,0 Device attached to Integrated PCI SCSI controller

Location Codes for CHRP Model Architecture System Units

Note: You need to know which system architecture the system unit on which you are working uses. If you are working with a RSPC model use the “Location Codes for RSPC Model Architecture System Units” on page 228. If you do not know which model you have, refer to “Determining System Architecture” on page 152 before proceeding.

The (CHRP) system unit uses Physical Location Codes in conjunction with AIX Location Codes to provide mapping of the failing field replaceable units. The location codes are produced by the system unit’s firmware and the AIX operating system.

Physical Location Codes

Physical location codes provide a mapping of logical functions in a platform (or expansion sites for logical functions, such as connectors or ports) to their specific locations within the physical structure of the platform.

Location Code Format

The format for the location code is a string of alphanumeric characters separated by a dash (-), slash (/), pound sign (#), or period (.). The base location is all of the information before the slash (/) or pound sign (#). It identifies a device that is connected or plugged into the parent. Extended location information follows the slash (/). It identifies a device that is part of the parent, a connector, or a cable. Cable information follows the pound sign (#). It identifies a cable that is connected to the parent. The following are examples:

- P1-C1 identifies a CPU card C1 plugged into planar P1.
- P1-M1 identifies a memory card M1 plugged into planar P1.
- P1-K1 identifies a keyboard attached to connector K1 on planar P1.
- P1/S1 identifies serial port 1 controller on planar P1, the connector for serial port 1, or the cable attached to connector S1.
- P1-I2/E3 identifies; Ethernet controller 3 on the card plugged into slot 2 (I2) on planar P1, the connector for Ethernet controller 3, or the cable attached to Ethernet controller 3.

- P1-I2#E3 identifies; the cable attached to Ethernet controller 3 plugged into slot 2 (I2) on planar P1.

The period (.) is used to identify sublocations such as memory DIMMs on a base memory card or a specific SCSI address. The following are examples:

- P1-M1.4 identifies DIMM 4 on memory card 1 on planar 1.
- P1-C1.1 identifies CPU 1 on CPU card 1 on planar 1.
- P2/Z1-A3.1 identifies a SCSI device with a SCSI address of LUN 1 at SCSI ID 3 attached to SCSI bus 1 from planar 2.
- P1-I2#E3.2 identifies the second cable in a series of cables attached to Ethernet controller 3 in slot 2 (I2) on planar 1.

Depending on the AIX and firmware levels, AIX Diagnostics may include extended location information when identifying a planar or card. The extended location information or cable information is always included when identifying a cable or connector. Location codes with extended location information that display without a description identifying the devices, always identify the cable attached to the port.

Physical Location Code Standard Prefixes

Table 1 lists the assigned values for the location type prefixes. In most cases, the prefix value assignments were chosen to provide some mnemonic characteristic, so that they would be easier to remember. The underlined characters in the description field are intended to illustrate this mnemonic relationship.

Table 1. Location Code Prefix Values

Description	Prefix Value (n=instance #)
Rack or non-drawer enclosure <u>u</u> n	Un
Drawer <u>u</u> n mounted in a rack	Un.n (U0.n if rack cannot be sensed by firmware)
Single enclosure platform	(No enclosure location code)
<u>P</u> lanar (backplane, system, I/O)	Pn
<u>P</u> lanar riser card, extender	Pn.n
Power/ <u>v</u> oltage supply, <u>v</u> oltage regulator, backup battery	Vn
<u>F</u> an/sensor	Fn
<u>L</u> ED/ <u>L</u> CD operator panel	Ln
<u>C</u> PU/cache card (or pluggable module if on planar)	Cn
<u>C</u> PU/cache module on CPU card (if pluggable)	Cn.n
<u>M</u> emory card or SIMM/DIMM on planar	Mn
<u>M</u> emory SIMM/DIMM on memory card	Mn.n
Other <u>e</u> xtra-function base system cards (for example, service processor)	Xn

Table 1. Location Code Prefix Values (continued)

Description	Prefix Value (n=instance #)
I/O adapter	In
Pluggable modules or daughter cards on I/O adapter	In.n
Diskette drive	Dn
Ports/Connectors:	
Graphics/video connector	Gn
Keyboard/keyboard connector	Kn
Mouse/mouse connector	On
Serial port	Sn
Parallel port	Rn
Ethernet connector	En
Token Ring connector	Tn
SCSI (pronounced scuzzy) connector	Zn
Other I/O ports or connectors	Qn
SCSI device addresses (including SSA (Serial Storage Architecture))	
Primary address (SCSI control unit ID)	An
Primary and secondary address (SCSI ID and LUN (Logical Unit Number))	An.n
SCSI device location in SCSI Enclosure Services (SES)	
SCSI bank	Bn
SCSI bank and bay	Bn.n
Undefined prefixes (reserved)	H, J, N, W, Y

AIX Location Codes

The basic formats of the AIX location codes are as follows:

- For non-SCSI devices/drives:
AB-CD-EF-GH
- For SCSI devices/drives:
AB-CD-EF-G,H

For planars, cards, and non-SCSI devices, the location code is defined as follows:

AB-CD-EF-GH
| | | |
| | | Device/FRU/Port ID
| | Connector ID
| devfunc Number, Adapter Number or Physical Location
Bus Type or PCI Parent Bus

- The AB value identifies a bus type or PCI parent bus as assigned by the firmware.
- The CD value identifies adapter number, adapter's devfunc number, or physical location. The devfunc number is defined as the PCI device number times 8, plus the function number.
- The EF value identifies a connector.
- The GH value identifies a port, address, device, or FRU.

Adapters and cards are identified only with AB-CD. The possible values for AB are:

00	Processor bus
01	ISA bus
02	EISA bus
03	MCA bus
04	PCI bus used in the case where the PCI bus cannot be identified
05	PCMCIA buses
xy	For PCI adapters where x is equal to or greater than 1. The x and y are characters in the range of 0-9, A-H, J-N, P-Z (O, I, and lower case are omitted) and are equal to the parent bus's ibm, aix-loc Open Firmware Property.

The possible values for CD depend on the adapter or card are as follows:

- For pluggable PCI adapters/cards, CD is the device's **devfunc** number (PCI device number times 8, plus the function number). The C and D are characters in the range of 0-9, and A-F (hex numbers). This allows the location code to uniquely identify multiple adapters on individual PCI cards.

For pluggable ISA adapters, CD is equal to the order in which the ISA cards defined or configured, either by SMIT or the ISA Adapter Configuration Service Aid.

For integrated ISA adapters, CD is equal to a unique code identifying the ISA adapter. In most cases, this is equal to the adapter's physical location code. In cases where a physical location code is not available, CD is FF.

- EF is the connector ID. It is used to identify a connector on the adapter to which a resource is attached.
- GH is used to identify a port, device, or FRU. For example:
 - For async devices, GH defines the port on the fanout box. The values are 00 to 15.
 - For a diskette drive, H defines either diskette drive 1 or 2. G is always 0.
 - For all other devices, GH is equal to 00.

For the integrated adapters, EF-GH is the same as the definition for the pluggable adapters. For example, the location code for a diskette drive is 01-D1-00-00. A second diskette drive is 01-D1-00-01.

For SCSI devices, the location code is defined as:

AB-CD-EF-G,H
| | | | |
| | | | | Logical Unit address of the SCSI Device
| | | | | Control Unit Address of the SCSI Device
| | | | | Connector ID
| | | | | devfunc Number, Adapter Number or Physical Location
| | | | | Bus Type or PCI Parent Bus

Where:

- AB-CD-EF are the same as non-SCSI devices.
- G defines the control unit address of the device. Values of 0 to 15 are valid.
- H defines the logical unit address of the device. Values of 0 to 255 are valid.

There is also a bus location code that is generated as '00-xxxxxxx' where xxxxxxxx is equivalent to the node's unit address. Refer to the system unit service guide for additional information.

Location Code Examples

Table 2 provides several examples of location codes for elements of typical platforms. Because different platforms come in different packaging, the specific meaning and actual physical location of a location code might vary, but the representation is intended to be applied consistently.

Table 2. Location Code Examples

Descriptions of Example Locations	Location Code
Locations in a single enclosure platform	
System planar	P1
CPU card in slot 1 (or pluggable CPU module in module socket 1)	P1-C1
Memory SIMM in slot 2 on the planar	P1-M2
I/O planar (including all integrated I/O devices)	P2
Card in I/O slot 4	P2-I4
Serial port 2 controller (with connector)	P2/S2
Keyboard port controller (with connector)	P2/K1
Keyboard (connected to keyboard port)	P2-K1
Power Supply	V1
Fan 2	F2
Op panel	L1
Integrated SCSI controller (with connector)	P2/Z1
Locations in a multi-enclosure platform	
System planar	U1-P1
Memory DIMM 12 on memory card in slot 2 on the system planar	U1-P1-M2.12
Connector/cable from system planar to remote I/O expansion planar	U1-P1-Q1
Adapter in slot 4 of an I/O expansion planar in a second enclosure	U2-P1-I4

Chapter 28. Using the SRN List

The service request number (SRN) list is in numerical sequence.

The SRNs listed in the following chapters are for all systems and devices for which this version of the diagnostic programs can produce an SRN. Use the table on page Service Request Number Lists to select the correct chapter for your SRN.

The columns in the table are defined as follows:

Service Request Number

Usually a six-digit number (9333 uses four digits) representing a specific failure of a specific function.

Source of SRN (SRN Src.)

SRN source codes identify the program or procedure that produced the SRN:

- A** The SRN is from a steady number in the operator panel display.
- B** The SRN is from a MAP callout.
- C** The SRN was due to a missing resource at configuration time.
- D** The SRN is from a diagnostic test after complete isolation testing.
- E** The SRN is from a POST failure.
- F** The SRN is from a diagnostic test after partial isolation testing.
- G** The SRN is from the Error Log Analysis program.
- H** The SRN is from a diagnostic message after an 888 sequence
- J** The SRN is from built-in ROM diagnostics.
- K** The SRN is from off-line diagnostics.

Failing Function Codes

These numbers represent functional areas of the system unit. The “Failing Function Code List” on page 534 identifies the FRU that contains this function for each specific system unit.

Description and Action

This column lists a brief description of the failure that this SRN represents. It also contains instructions as to what to do to continue the problem analysis.

Note: If you are servicing an SP system, *do not* do the Action listed. Instead, always return to the *RS6000 SP System Service Guide*.

If you are servicing a clustered @server, *do not* do the Action listed. Instead, always return to the *Clustered @server Installation and Service Guide*.

Using the Service Request Number List

The service request number list is in numerical sequence by the SRN. Use the list as follows:

1. Find your SRN in the table.
2. Record the code letter for the Source of SRN (the SRN Src. column).
3. Record the failing function codes in the order listed.
4. Perform the action shown in the Description and Action column.

Notes:

- a. If you cannot find SRN information in the "Service Request Number List," check for the existence of supplemental material supporting the device for which the SRN was generated.
- b. x in an SRN represents any digit or character.
- c. If your SRN is not listed, check to see if xxx or xxxx has been used. The -xxx or -xxxx should always be the last SRN identified within a specific prefix. An example would be 950-xxxx. The xxxx is the last digit within the 950 prefix.
- d. If you are servicing a SP system, *do not* do the Action listed. Instead, always return to the *RS6000 SP Hardware Manual*.
- e. If you are servicing a clustered @server, *do not* do the Action listed. Instead, always return to the *Clustered @server Installation and Service Guide*.

Service Request Number Lists

The following five chapters contain the Service Request Number (SRN) Lists. The chapters are divided into number ranges.

Note: There may be 7 or 8 digit SRNs within each range. If the SRN contains 3 digits before the dash, then select the chapter that contains the first 3 digits, followed by the dash, of the SRN you wish to locate. For example, if the SRN is 802-xxxx, you would go to Chapter 31. SRNs 700-102 through 89c-302, because this SRN falls between the number range of 700-102 and 89c-302. However, if your SRN contains 4 digits before the dash, then select the chapter that contains the first 4 digits, followed by the dash, of the SRN you wish to locate. For example, if the SRN is 2570-603, you would go to Chapter 34. SRNs 2520-212 through 2590-(x)xxx, because this SRN falls between the number range of 2520-(x)xxx and 2590-(x)xxx.

The following table identifies each SRN chapter range and the page number on which it begins:

Chapter Title	Page Number
Chapter 29. Five-Digit SRNs 10112 through DFFFF	241
Chapter 30. SRNs 101-000 through 699-120	253
Chapter 31. SRNs 700-102 through 89c-302	357
Chapter 32. SRNs 900-001 through xxxxxx	439

Chapter Title	Page Number
Chapter 33. SRNs A01-(x)xxx through A1D-(x)xxx	509
Chapter 34. SRNs 2520-212 through 2590-(x)xxx	527

Chapter 29. Five-Digit SRNs 10112 through DFFFF

Service Request Number List

Replace FRU parts in the order by which the "Failing Function Codes" are listed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
10104			Description: Format in progress. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
10112			Description: Format Degraded. A format operation ended before it completed. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
1xxxx			Description: Disk drive module error. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive. Note: In this SRN, an x represents a digit 0 through F.
20PAA			Description: An open SSA loop was detected. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
21PAA to 29PAA			Description: An SSA Threshold Exceeded link error was detected. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
2A002			Description: Async code 02 was received. Probably, a software error occurred. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
2A003			Description: Async code 03 was received. Probably, a software error occurred. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
2A004			Description: Async code 04 was received. Probably, a software error occurred. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
2A005			Description: Async code 05 was received. This code indicates that a disk drive module detected the loss of redundant power or cooling. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
2A006			Description: Async code 06 was received. This code indicates that a disk drive module detected the loss of redundant power or cooling. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
2A106			Description: Async code 06 was received. This code indicates that multiple disk drive modules detected loss of redundant power or cooling. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
2A206			Description: A disk drive module detected that one of its SSA links failed the POST. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
2FFFF			Description: An async code that is not valid was received. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
300C0			Description: A disk drive module detected the loss of redundant power or cooling. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
301C0			Description: Multiple disk drive modules detected the loss of redundant power or cooling. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
303FE			Description: A disk drive Microcode Error was detected. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
303FF			Description: An SCSI status that is not valid was received. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
31000			Description: The disk drive was reset by the adapter. The disk drive might be going to fail. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
33PAA			Description: Excessive link reconfigurations were detected. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
40000			Description: The SSA adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
40004			Description: A module on the adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
40008			Description: A module on the adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
40016			Description: A module on the adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
40032			Description: A module on the adapter failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
40064			Description: A module on the adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
40128			Description: A module on the adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
41004			Description: A module on the adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
41008			Description: A module on the adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
41016			Description: A module on the adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
41032			Description: A module on the adapter failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
41064			Description: A module on the adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
41128			Description: A module on the adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42000			Description: A module on the adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42200			Description: Other adapters on the SSA loop are using levels of microcode that are not compatible. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
42500			Description: An SSA adapter detected a failure in its fast-write cache. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42510			Description: Not enough DRAM available to run an SSA fast-write cache. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42515			Description: An SSA adapter is attempting to use its fast-write cache, but a fast-write cache card is not installed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42520			Description: An SSA fast-write cache failure was detected. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42521			Description: An SSA fast-write cache option card failure was detected. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42522			Description: An SSA fast-write cache option card failure was detected. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42523			Description: A incorrect version number was detected in the fast-write cache option card. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42524			Description: A fast-write disk drive (or drives) contains unsynchronized data, but the fast-write cache option card cannot be detected. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42525			Description: A fast-write problem occurred. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42526			Description: This adapter does not support the SSA Fast-Write Cache Option. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42527			Description: A dormant SSA fast-write cache entry exists. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
42528			Description: A fast-write SSA disk drive has been detected that was previously unsynchronized, but has since been configured on a different adapter. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42529			Description: The fast-write cache is disabled. The battery is charging. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
4252A			Description: The supply voltage to the fast-write cache option card is low. The card has switched to Self-Refresh mode. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
4252B			Description: The battery to the fast-write cache option card no longer has the power to maintain data. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
4252C			Description: The battery to the fast-write cache option card needs to be exchanged for a new one. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
42540			Description: Two-way fast-write cache is configured to operate only when both caches are available. One cache, however, is not available. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
43PAA			Description: An SSA device on the loop is preventing the completion of the loop configuration. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and to the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
44PAA			Description: A disk drive module has a Failed status. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and to the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
45PAA			Description: The SSA adapter has detected an open SSA loop. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and to the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
46000			Description: A RAID array is in the Off-Line state because more than one disk drive is not available. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
46500			Description: A member disk drive is missing from a SSA array or the original SSA adapter is not available. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
47000			Description: An attempt was made to store in the SSA adapter the details of more than 32 RAID arrays. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
47500			Description: Part of the RAID array data might have been lost. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
48000			Description: The SSA adapter detected a link configuration that is not valid. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
48500			Description: The array filter detected a link configuration that is not valid. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
48600			Description: One member disk drive of an array is not on the SSA loop that contains the other member disk drives of the array. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
48700			Description: Two or more member disk drives of an SSA array are on different loops. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
48750			Description: An array is in the Off-Line state because the primary or secondary half of the array is not present. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
48755			Description: The SSA adapter is unknown to the array. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
48760			Description: An array is in the Off-Line state because the split/join procedure was not performed correctly. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
48800			Description: The Invalid-Strip table is full. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
48900			Description: An SSA array is not available; a multiple-device error occurred. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
48950			Description: A disk drive caused an Array-Build operation to fail. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
49000			Description: A RAID array is in the Degraded state. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
49100			Description: A RAID array is in the Exposed state. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
49500			Description: No hot-spare disk drives are available for an array that is configured for hot-spare disk drives. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
49510			Description: Hot-spare configuration is not synchronized. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
49520			Description: Hot-spare tuning has been lost. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
49530			Description: The number of disk drives that remain in a hot-spare pool is less than the specified number. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
49540			Description: Adapters that do not support hot-spare pools were detected. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
49700			Description: The parity for the RAID array is not complete. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
49800			Description: A different adapter was detected on each loop. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
4A100			Description: The adapter cannot initialize an SSA disk drive. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
4BPAA			Description: An SSA disk drive at PAA cannot be configured, because its UID cannot be read. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50000			Description: The SSA adapter failed to respond to the device driver. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
50001			Description: A Data Parity error occurred. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50002			Description: An SSA adapter DMA error occurred. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50004			Description: A Channel Check occurred. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50005			Description: A software error occurred. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50006			Description: A Channel Check occurred. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50007			Description: The IOCC detected an internal error. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50008			Description: Unable to read or write the POS registers or PCI configuration space. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50010			Description: An SSA adapter or device-driver protocol error occurred. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50012			Description: The SSA adapter microcode hung. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50013			Description: The SSA adapter card failed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50100			Description: An attempt was made to log an error against a pdisk that is not available to the using system. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50200			Description: Duplicate SSA cluster number detected. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50411			Description: SSA adapter detected a SS_SIC_CLASS1 error. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
50422			Description: SSA adapter detected a SS_TIMEOUT error. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
50425			Description: SSA adapter detected a SS_LINK_CONFIG_FAILED error. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
504xx			Description: The SSA adapter microcode hung. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
60000			Description: The SSA adapter is missing from the expected configuration. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
60200			Description: The SSA unit cannot be turned on. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
60210			Description: A disk drive module has its Check light On. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
60220			Description: A fan-and-power-supply assembly has its Check light On. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
60230			Description: The SSA unit has an unexpected Check light On. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
60240			Description: An SSA configuration problem occurred. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
7xxxx			Description: An SSA disk drive is missing from the expected configuration of the SSA loop. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and to the <i>User's Guide and Maintenance Information</i> for the SSA adapter. Note: In this SRN, an x represents a digit 0 through F.
8xxxx			Description: A Configuration Error occurred. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive. Note: In this SRN, an x represents a digit 0 through F.
D0000			Description: The using system cannot configure the disk drive module. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
D0100			Description: Unable to clear a disk drive module reservation. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
D0101			Description: The disk drive module has been reserved since the diagnostics started. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
D0200			Description: The disk drive module timed out while the diagnostics were running. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
D0300			Description: The disk drive module failed the diagnostic test. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
D0400			Description: The disk drive module is Not Ready while the diagnostics are running. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
D0450			Description: The Format operation that was started on this disk drive module has not finished. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
D0460			Description: A Format operation was degraded. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive.
D4000			Description: The diagnostics cannot configure the SSA adapter. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
D4100			Description: The diagnostics cannot open the SSA adapter. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
D4300			Description: The diagnostics have detected an SSA adapter POST failure. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.
D44xx			Description: The diagnostics detected that the SSA adapter has corrupted microcode, but cannot download a new version of the microcode. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter. Note: In this SRN, an X represents a digit 0 through F.
D6PAA			Description: A high-speed SSA link is running at low speed. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
DFFFF			<p>Note: The description and action for this SRN are valid only if you ran the diagnostics on the SSA attachment. Description: A command or parameter that was sent or received is not valid. Action: Refer to the SRN table in the <i>Service Guide</i> for the unit containing the disk drive and to the <i>User's Guide and Maintenance Information</i> for the SSA adapter.</p>
SSA01			<p>Description: There is not enough using-system memory available for this service aid to continue. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.</p>
SSA02			<p>Description: An unknown error occurred. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.</p>
SSA03			<p>Description: The service aid was unable to open a hdisk. Action: Refer to the SRN table in the <i>User's Guide and Maintenance Information</i> for the SSA adapter.</p>

Chapter 30. SRNs 101-000 through 699-120

Replace FRU parts in the order by which the "Failing Function Codes" are listed.

Note: Some SRNs in this chapter may have 4 rather than 3 digits after the dash (-).

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
101-000	A		Description: The system hung while attempting to configure a device. Action: Use MAP 1540.
101-185	A		Description: A checkstop occurred. Action: Use MAP 1540 in the system unit service guide to isolate the cause.
101-517	A		Description: The system unit failed to IPL. Action: Use MAP 1540.
101-518	A		Description: CD-ROM read problems after boot. Note: The boot record was read from the CD-ROM disk. However, errors occurred when trying to mount the CD-ROM file system. This problem can be caused by SCSI device addressing, SCSI terminator, open PTC, SCSI cable, etc. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53
101-521 to 101-538	A		Description: The configuration manager detected an error. Action: If you are running the diagnostics from a disk, try running the diagnostics from a CD-ROM. If the diagnostics run correctly from CD-ROM, the problem may be damaged data on the disk. Contact your software support facility. If a different problem occurs when you run the diagnostics from CD ROM, correct that problem. If you were running from a CD ROM at first, have the same problem on CD ROM that you had when running diagnostics from disk, or these actions did not resolve the problem, go to MAP 1540, in either the service guide or the installation and service guide for this system unit.
101-544	A		Description: Disk read problems occurred after booting. Note: The boot record was read from the disk. However, errors occurred when trying to open the disk drive. This problem can be caused by SCSI device addressing, SCSI terminator, open PTC, SCSI cable, etc. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
101-551 to 101-557	A		Description: The system hung while loading the software. This can be caused by a hardware or software problem. Action: Run the standalone diagnostics. If the standalone diagnostics run correctly, the problem may be a damaged disk data. Consider having the customer contact Software Support before reinstalling the operating system on the disk. Otherwise, go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29. If the standalone diagnostics still produces the same SRN, go to MAP 1540 in either the service guide or the installation and service guide for this system unit.
101-558	A		Description: There is not enough memory to execute diagnostics. Action: There must be a minimum of 16 MB of installed memory. If the system has 16 MB or more of memory installed, suspect a problem with a memory card.
101-559 to 101-599	A		Description: The system halted while software was loading. This problem may be attributed to either hardware or software. Action: Use the CD ROM based diagnostics if not yet used. If the same SRN is generated from the CD ROM diagnostics, go to MAP 1540 in the system unit service guide for problem isolation. If the SRN is not generated when using the CD ROM, suspect a problem with the system's software.
101-662	A		Description: An unexpected system interrupt. Action: Go to MAP 1540 in either the service guide or the installation and service guide for this system unit.
101-711 to 101-726	A	xxx	Description: The system hung while trying to configure an unknown resource. Action: Run diagnostics from CD-ROM. Start at "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29, Step 14. If you still get the same SRN, refer to "Failing Function Code List" on page 534 and find the FFC that matches the last three digits of the SRN. Suspect the device adapter or device itself. If more than one adapter or device is installed, isolate the failing resource by removing the adapters or devices one at a time and checking if the system stops with the same value in the three-digit display. Note: xxx corresponds to the last three digits of the SRN.
101-727	A		Description: The system hung while trying to configure an asynchronous adapter. Action: Use MAP 1540 in the installation and service guide for this system unit. Suspect a problem with one of the async adapters.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
101-7C1	A	7C1	Description: The system unit halted while configuring an audio subsystem.
101-80c	A	80c	Description: A potential problem with an SSA device exists. If the system has external SSA devices refer to the <i>SSA Adapters User's Guide and Maintenance Information</i> . If the system has internal SSA devices, go to the SSA MAP in either the system unit's service guide or user's guide.
101-840	A		Description: An unexpected system interrupt. Action: Go to MAP 1540 in either the service guide or the installation and service guide for this system unit. Suspect either a SCSI adapter or integrated SCSI if so equipped.
101-888	A	210 227 E10	Description: The system does not IPL.
101-c32	D		Description: The system hung while indicating that a direct-attached display was selected as the console. Action: Go to MAP 1540 in either the service guide or the installation and service guide for this system unit. Suspect the graphics adapter being used for the display console first.
101-c33	D		Description: The system hung while indicating that a TTY terminal is the system console. Action: Go to MAP 1540 in either the service guide or the installation and service guide for this system unit. Suspect the graphics adapter being used for the display console first.
101-c70	A		Description: A problem was encountered mounting the CD-ROM. Action: Use MAP 1540 in the service guide or the installation and service guide for the system unit.
101-xxxx	A	xxxx E10	Description: The system hung while configuring a resource. The last three or four digits after the dash (-) identify the failing function code for the resource being configured. Action: Use “Chapter 16. MAP 0260: System Hangs During Resource Configuration” on page 97.
103-151	D	151	Description: The time-of-day battery failed.
109-200	B		Description: The system crashed while being run by the customer. Action: Use “Chapter 4. MAP 0020: Problem Determination Procedure” on page 29, and get a new SRN.
110-101	C		Description: The diagnostics did not detect an installed resource. Action: If this SRN appeared when running concurrent diagnostics, then run concurrent using the diag -a command, otherwise use “Chapter 19. MAP 0290: Missing Resource Problem Resolution” on page 111.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
110-908	D	908 C33 C36	Description: The system halted while diagnostics were executing.
110-921 to 110-926	D	xxx 812	Description: The system halted while diagnostics were executing. Note: xxx corresponds to the last three digits of the SRN.
110-935	D	935 812	Description: The system halted while diagnostics were executing.
110-946	D	946 221	Description: The system halted while diagnostics were executing.
110-xxxx	D	xxxx 221	Description: The system halted while diagnostics were executing. Note: xxxx corresponds to the last three or four digits of the SRN following the dash (-). If your 110 SRN is not listed, substitute the last three or four digits of the SRN for xxxx, then proceed to the FFC table using the substituted digits as your FFC.
111-107	B		Description: A machine check occurred. Action: Go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29
111-108	B		Description: An encoded SRN was displayed. Action: Go to "Chapter 4. MAP 0020: Problem Determination Procedure" on page 29
111-121	B		Description: There is a display problem. Action: Do problem determination on the display.
111-259	B		Description: Cannot display readable information on the terminal. Action: Use "Chapter 18. MAP 0280: Boot Problem Resolution" on page 109 Entry 3.
111-725	B	725	Description: Cannot display readable information on the display. Note: Suspect the display adapter attached to the console display. Action: Use "Chapter 18. MAP 0280: Boot Problem Resolution" on page 109
111-736	B	736 821	Description: The keyboard does not respond. Action: Use "Chapter 18. MAP 0280: Boot Problem Resolution" on page 109 Entry 1.
111-78C	B	PCI adapter 227 E10	Description: I/O bus problem. Action: Use MAP 210. Note: PCI adapter refers to the adapters you made note of when using "Chapter 10. MAP 0080: System Bus Problem Isolation" on page 65.
111-82C	B		Description: Cannot display readable information on the display. Action: Go to "Chapter 18. MAP 0280: Boot Problem Resolution" on page 109 Entry 2.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
111-921	B	921 821	Description: The keyboard does not respond. Action: Use “Chapter 18. MAP 0280: Boot Problem Resolution” on page 109 Entry 1.
111-922	B	922 821	Description: The keyboard does not respond. Action: Use “Chapter 18. MAP 0280: Boot Problem Resolution” on page 109 Entry 1.
111-923	B	923 821	Description: The keyboard does not respond. Action: Use “Chapter 18. MAP 0280: Boot Problem Resolution” on page 109 Entry 1.
111-947	B	221	Description: System beeper not functioning correctly.
111-999	D	210	Description: System does not perform a soft reset.
2E6-101	D	2E6 221	Description: Enhanced error handling failure on the bus.
2E6-102	D	2E6 221	Description: Enhanced error handling failure on a chip.
2E6-103	D	2E6	Description: Enhanced error handling failure on the adapter.
2E6-212	D	2E6	Description: FIFO empty bit set.
2E6-213	D	2E6	Description: FIFO empty bit clear.
2E6-214	D	2E6	Description: FIFO full bit set.
2E6-215	D	2E6	Description: FIFO full bit clear.
2E6-216	D	2E6	Description: FIFO data miscompare.
2E6-217	D	2E6	Description: SCSI FIFO data miscompare.
2E6-218	D	2E6	Description: SCSI FIFO underflow.
2E6-219	D	2E6	Description: SCSI parity error.
2E6-220	D	2E6	Description: SCSI FIFO flags error.
2E6-221	D	2E6 221	Description: Miscompare during the write/read of the configuration register.
2E6-222	D	2E6	Description: Error during the write/read of the memory register.
2E6-223	D	2E6	Description: Miscompare during the write/read of the memory I/O register. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
2E6-224	D	2E6 221	Description: SCSI configuration register read or write error.
2E6-225	D	2E6	Description: Adapter POST failed.
2E6-226	D		Description: SCSI wrap or PTC failure. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
2E6-227	D	2E6 221	Description: SCSI adapter test failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
2E6-230	D		Description: Arbitration test failed. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E6-231	D		Description: Function could not complete. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E6-232	D		Description: SCSI bus data miscompare. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E6-240	D		Description: No terminal power. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E6-242	D		Description: SCSI bus problem. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E6-301	D	2E6 221	Description: The parent device open failed.
2E6-600	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-601	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-602	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-603	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-604	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-605	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-606	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-607	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-701	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-702	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-703	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-704	G	2E6	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E6-800	G		Description: Error log analysis indicates a PCI SCSI adapter PTC failure. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
2E6-801	G		Description: Error log analysis indicates a terminator problem. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.
2E6-802	G		Description: Error log analysis indicates that multiple attempts to reset the SCSI bus have timed out. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.
2E6-803	G		Description: Error log analysis indicates that multiple SCSI bus errors have occurred. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.
2E7-101	D	2E7 221	Description: Enhanced error handling failure on the bus.
2E7-102	D	2E7 221	Description: Enhanced error handling failure on a chip.
2E7-103	D	2E7	Description: Enhanced error handling failure on the adapter.
2E7-212	D	2E7	Description: FIFO empty bit set.
2E7-213	D	2E7	Description: FIFO empty bit clear.
2E7-214	D	2E7	Description: FIFO full bit set.
2E7-215	D	2E7	Description: FIFO full bit clear.
2E7-216	D	2E7	Description: FIFO data miscompare.
2E7-217	D	2E7	Description: SCSI FIFO data miscompare.
2E7-218	D	2E7	Description: SCSI FIFO underflow.
2E7-219	D	2E7	Description: SCSI parity error.
2E7-220	D	2E7	Description: SCSI FIFO flags error.
2E7-221	D	2E7 221	Description: Miscompare during the write/read of the configuration register.
2E7-222	D	2E7	Description: Error during the write/read of the memory register.
2E7-223	D	2E7	Description: Miscompare during the write/read of the memory I/O register. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
2E7-224	D	2E7 221	Description: SCSI configuration register read or write error.
2E7-225	D	2E7	Description: Adapter POST failed.
2E7-226	D		Description: SCSI wrap or PTC failure. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E7-227	D	2E7 221	Description: SCSI adapter test failure.
2E7-230	D		Description: Arbitration test failed. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E7-231	D		Description: Function could not complete. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E7-232	D		Description: SCSI bus data miscompare. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E7-240	D		Description: No terminal power. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E7-242	D		Description: SCSI bus problem. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E7-301	D	2E7	Description: Configuration open failed for parent bus.
2E7-700	G	2E7 221	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E7-701	G	2E7	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E7-702	G	2E7	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E7-703	G	2E7	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E7-704	G	2E7	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E7-705	G	2E7	Description: Error log analysis indicates a PCI SCSI adapter failure.
2E7-800	G		Description: Error log analysis indicates a PCI SCSI adapter PTC failure. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2E7-801	G		Description: Error log analysis indicates a terminator problem. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
2E7-802	G		Description: Error log analysis indicates that multiple attempts to reset the SCSI bus have timed out. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.
2E7-803	G		Description: Error log analysis indicates that multiple SCSI bus errors have occurred. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.
2EF-101	E	751	Description: Post indicates an adapter failure.
440-102	D	440	Description: An unrecoverable media error occurred.
440-104	D	440	Description: The motor failed to restart.
440-105	D	440	Description: The drive did not become ready.
440-106	D	440	Description: The electronics card test failed.
440-108	D	440	Description: The bus test failed.
440-110	D	440	Description: The media format is corrupted.
440-112	D	440	Description: The diagnostic test failed.
440-114	D	440	Description: An unrecoverable hardware error.
440-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
440-117	D	440	Description: A write-protect error occurred.
440-118	D	440 B88	Description: A SCSI command time-out occurred.
440-120	D	440	Description: A SCSI busy or command error.
440-122	D	440	Description: A SCSI reservation conflict error.
440-124	D	440	Description: A SCSI check condition error occurred.
440-126	D	440 B88	Description: A software error was caused by a hardware failure.
440-128	G	440	Description: The error log analysis indicates a hardware failure.
440-129	G	190 440 B88 software	Description: Error log analysis indicates a SCSI bus problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
440-130	G	440	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
440-132	D	440	Description: A disk drive hardware error occurred.
440-134	D	B88 software	Description: The adapter failed to configure.
440-135	D	440 B88 software	Description: The device failed to configure.
440-136	D	440	Description: The certify operation failed.
440-137	D	440 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
440-138	D	440	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
441-102	D	441	Description: An unrecoverable media error occurred.
441-104	D	441	Description: The motor failed to restart.
441-105	D	441	Description: The drive did not become ready.
441-106	D	441	Description: The electronics card test failed.
441-108	D	441	Description: The bus test failed.
441-110	D	441	Description: The media format is corrupted.
441-112	D	441	Description: The diagnostic test failed.
441-114	D	441	Description: An unrecoverable hardware error.
441-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
441-117	D	441	Description: A write-protect error occurred.
441-118	D	441 B88	Description: A SCSI command time-out occurred.
441-120	D	441	Description: A SCSI busy or command error.
441-122	D	441	Description: A SCSI reservation conflict error.
441-124	D	441	Description: A SCSI check condition error occurred.
441-126	D	441 B88	Description: A software error was caused by a hardware failure.
441-128	G	441	Description: The error log analysis indicates a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
441-129	G	190 441 B88 software	Description: Error log analysis indicates a SCSI bus problem.
441-130	G	441	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
441-132	D	441	Description: A disk drive hardware error occurred.
441-134	D	B88 software	Description: The adapter failed to configure.
441-135	D	441 B88 software	Description: The device failed to configure.
441-136	D	441	Description: The certify operation failed.
441-137	D	441 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
441-138	D	441	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
442-102	D	442	Description: An unrecoverable media error occurred.
442-104	D	442	Description: The motor failed to restart.
442-105	D	442	Description: The drive did not become ready.
442-106	D	442	Description: The electronics card test failed.
442-108	D	442	Description: The bus test failed.
442-110	D	442	Description: The media format is corrupted.
442-112	D	442	Description: The diagnostic test failed.
442-114	D	442	Description: An unrecoverable hardware error.
442-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
442-117	D	442	Description: A write-protect error occurred.
442-118	D	442 B88	Description: A SCSI command time-out occurred.
442-120	D	442	Description: A SCSI busy or command error.
442-122	D	442	Description: A SCSI reservation conflict error.
442-124	D	442	Description: A SCSI check condition error occurred.
442-126	D	442 B88	Description: A software error was caused by a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
442-128	G	442	Description: The error log analysis indicates a hardware failure.
442-129	G	190 442 B88 software	Description: Error log analysis indicates a SCSI bus problem.
442-130	G	442	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
442-132	D	442	Description: A disk drive hardware error occurred.
442-134	D	B88 software	Description: The adapter failed to configure.
442-135	D	442 B88 software	Description: The device failed to configure.
442-136	D	442	Description: The certify operation failed.
442-137	D	442 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
443-102	D	443	Description: An unrecoverable media error occurred.
443-104	D	443	Description: The motor failed to restart.
443-105	D	443	Description: The drive did not become ready.
443-106	D	443	Description: The electronics card test failed.
443-108	D	443	Description: The bus test failed.
443-110	D	443	Description: The media format is corrupted.
443-112	D	443	Description: The diagnostic test failed.
443-114	D	443	Description: An unrecoverable hardware error.
443-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
443-117	D	443	Description: A write-protect error occurred.
443-118	D	443 B88	Description: A SCSI command time-out occurred.
443-120	D	443	Description: A SCSI busy or command error.
443-122	D	443	Description: A SCSI reservation conflict error.
443-124	D	443	Description: A SCSI check condition error occurred.
443-126	D	443 B88	Description: A software error was caused by a hardware failure.
443-128	G	443	Description: The error log analysis indicates a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
443-129	G	190 443 B88 software	Description: Error log analysis indicates a SCSI bus problem.
443-130	G	443	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
443-132	D	443	Description: A disk drive hardware error occurred.
443-134	D	B88 software	Description: The adapter failed to configure.
443-135	D	443 B88 software	Description: The device failed to configure.
443-136	D	443	Description: The certify operation failed.
443-137	D	443 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
444-101	D	2C3 444	Description: External wrap test failed on port 0.
444-102	D	2C3 444	Description: External wrap test failed on port 1.
444-103	D	227	Description: Enhanced error handling failure on bus.
444-104	D	227	Description: Enhanced error handling failure on Eads chip.
444-105	D	444	Description: Enhanced error handling failure on adapter.
444-106	D	776 646	Description: Enhanced error handling failure on bus.
444-107	D	776 646	Description: EEH failure on Eads chip.
444-108	D	776 646	Description: Enhanced error handling failure on adapter.
444-201	D	444 227	Description: Internal adapter test failed.
444-202	D	444 227	Description: External wrap test failed on port 0.
444-203	D	444 227	Description: External wrap test failed on port 1.
444-204	D	2C3 444	Description: External wrap test failed on port 0.
444-205	D	2C3 444	Description: External wrap test failed on port 1.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
444-206	D	2C3 444 software	Description: External wrap test failed on port 0.
444-207	D	2C3 444 software	Description: External wrap test failed on port 1.
444-208	D	444 227	Description: Enhanced error handling failure opening the adapter.
444-301	D	444 227 software	Description: Internal adapter test failed.
444-302	D	444 227 software	Description: External wrap test failed on port 0.
444-303	D	444 227 software	Description: External wrap test failed on port 1.
444-304	D	2C3 444 software	Description: External wrap test failed on port 0.
444-305	D	2C3 444 software	Description: External wrap test failed on port 1.
444-700	D	444 software	Description: Error log analysis indicates a hardware problem.
444-701	D	444 227	Description: Error log analysis indicates that this adapter has failed to initialize due to EEH errors.
447-101	D	447	Description: The Fibre Channel Adapter configuration failed.
447-102	D	447	Description: The Reset test failed.
447-103	D	447	Description: The Register test failed.
447-104	D	447	Description: The SRAM test failed.
447-105	D	447	Description: The Internal Wrap test failed.
447-106	D	447	Description: The Gigabaud Link Module (GLM) Wrap Test Failure.
447-107	D	447	Description: The External Wrap test failed.
447-108	D	221	Description: Enhanced Error Handling Failure on bus.
447-109	D	221	Description: Enhanced Error Handling Failure on EADs chip.
447-110	D	447	Description: Enhanced Error Handling Failure on adapter.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
447-201	D	447 221	Description: The Configuration Register test failed.
447-202	D	447 221	Description: The Interrupt test failed.
447-203	D	447 221	Description: The PCI Wrap test failed.
447-204	D	447 221	Description: The DMA test failed.
447-205	D	447 221	Description: I/O error on a read/write operation.
447-701	G	447 221	Description: Error log analysis indicates that an error has occurred with the adapter.
447-703	G	447	Description: Error log analysis indicates that an unknown adapter error has occurred.
447-704	G	447	Description: Error log analysis indicates that an adapter error has occurred.
541-xxx	D	541	Description: A DLT tape device problem has occurred. Action: Refer to the DLT tape device documentation.
542-xxx	D	542	Description: An 8mm 60GB tape device problem has occurred. Action: Refer to the 8mm 60GB tape device documentation.
58D-102	D	58D	Description: An unrecoverable media error.
58D-104	D	58D	Description: The motor failed to restart.
58D-105	D	58D	Description: The drive did not become ready.
58D-106	D	58D	Description: The electronics card test failed.
58D-108	D	58D	Description: The bus test failed.
58D-110	D	58D	Description: The media format is corrupted.
58D-112	D	58D	Description: The diagnostic test failed.
58D-114	D	58D	Description: An unrecoverable hardware error.
58D-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
58D-117	D	58D	Description: A write-protect error occurred.
58D-118	D	58D B88	Description: A SCSI command time-out.
58D-120	D	58D	Description: A SCSI busy or command error.
58D-122	D	58D	Description: A SCSI reservation conflict error.
58D-124	D	58D	Description: A SCSI check condition error.
58D-126	D	58D B88	Description: A software error was caused by a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
58D-128	G	58D	Description: The error log analysis indicates a hardware failure.
58D-129	G	190 58D B88 software	Description: Error log analysis indicates a SCSI bus problem.
58D-130	G	58D	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
58D-132	D	58D	Description: A disk drive hardware error occurred.
58D-134	D	B88 software	Description: The adapter failed to configure.
58D-135	D	58D B88 software	Description: The device failed to configure.
58D-136	D	58D	Description: The certify operation failed.
58D-137	D	58D B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
58D-138	D	58D	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
59B-102	D	59B	Description: An unrecoverable media error.
59B-104	D	59B	Description: The motor failed to restart.
59B-105	D	59B	Description: The drive did not become ready.
59B-106	D	59B	Description: The electronics card test failed.
59B-108	D	59B	Description: The bus test failed.
59B-110	D	59B	Description: The media format is corrupted.
59B-112	D	59B	Description: The diagnostic test failed.
59B-114	D	59B	Description: An unrecoverable hardware error.
59B-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
59B-117	D	59B	Description: A write-protect error occurred.
59B-118	D	59B B88	Description: A SCSI command time-out.
59B-120	D	59B	Description: A SCSI busy or command error.
59B-122	D	59B	Description: A SCSI reservation conflict error.
59B-124	D	59B	Description: A SCSI check condition error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
59B-126	D	59B B88	Description: A software error was caused by a hardware failure.
59B-128	G	59B	Description: The error log analysis indicates a hardware failure.
59B-129	G	190 59B B88 software	Description: Error log analysis indicates a SCSI bus problem.
59B-130	G	59B	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
59B-132	D	59B	Description: A disk drive hardware error occurred.
59B-134	D	B88 software	Description: The adapter failed to configure.
59B-135	D	59B B88 software	Description: The device failed to configure.
59B-136	D	59B	Description: The certify operation failed.
59B-137	D	59B B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
59B-138	D	59B	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
60B-102	D	60B	Description: An unrecoverable media error.
60B-104	D	60B	Description: The motor failed to restart.
60B-105	D	60B	Description: The drive did not become ready.
60B-106	D	60B	Description: The electronics card test failed.
60B-108	D	60B	Description: The bus test failed.
60B-110	D	60B	Description: The media format is corrupted.
60B-112	D	60B	Description: The diagnostic test failed.
60B-114	D	60B	Description: An unrecoverable hardware error.
60B-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
60B-117	D	60B	Description: A write-protect error occurred.
60B-118	D	60B B88	Description: A SCSI command time-out.
60B-120	D	60B	Description: A SCSI busy or command error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
60B-122	D	60B	Description: A SCSI reservation conflict error.
60B-124	D	60B	Description: A SCSI check condition error.
60B-126	D	60B B88	Description: A software error was caused by a hardware failure.
60B-128	G	60B	Description: The error log analysis indicates a hardware failure.
60B-129	G	190 60B B88 software	Description: Error log analysis indicates a SCSI bus problem.
60B-130	G	60B	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
60B-132	D	60B	Description: A disk drive hardware error occurred.
60B-134	D	B88 software	Description: The adapter failed to configure.
60B-135	D	60B B88 software	Description: The device failed to configure.
60B-136	D	60B	Description: The certify operation failed.
60B-137	D	60B B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
60B-138	D	60B	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
601-102	D	601	Description: An unrecoverable media error.
601-104	D	601	Description: The motor failed to restart.
601-105	D	601	Description: The drive did not become ready.
601-106	D	601	Description: The electronics card test failed.
601-108	D	601	Description: The bus test failed.
601-110	D	601	Description: The media format is corrupted.
601-112	D	601	Description: The diagnostic test failed.
601-114	D	601	Description: An unrecoverable hardware error.
601-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
601-117	D	601	Description: A write-protect error occurred.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
601-118	D	601 B88	Description: A SCSI command time-out.
601-120	D	601	Description: A SCSI busy or command error.
601-122	D	601	Description: A SCSI reservation conflict error.
601-124	D	601	Description: A SCSI check condition error.
601-126	D	601 B88	Description: A software error was caused by a hardware failure.
601-128	G	601	Description: The error log analysis indicates a hardware failure.
601-129	G	190 601 B88 software	Description: Error log analysis indicates a SCSI bus problem.
601-130	G	601	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
601-132	D	601	Description: A disk drive hardware error occurred.
601-134	D	B88 software	Description: The adapter failed to configure.
601-135	D	601 B88 software	Description: The device failed to configure.
601-136	D	601	Description: The certify operation failed.
601-137	D	601 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
601-138	D	601	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
61B-102	D	61B	Description: An unrecoverable media error.
61B-104	D	61B	Description: The motor failed to restart.
61B-105	D	61B	Description: The drive did not become ready.
61B-106	D	61B	Description: The electronics card test failed.
61B-108	D	61B	Description: The bus test failed.
61B-110	D	61B	Description: The media format is corrupted.
61B-112	D	61B	Description: The diagnostic test failed.
61B-114	D	61B	Description: An unrecoverable hardware error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
61B-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
61B-117	D	61B	Description: A write-protect error occurred.
61B-118	D	61B B88	Description: A SCSI command time-out.
61B-120	D	61B	Description: A SCSI busy or command error.
61B-122	D	61B	Description: A SCSI reservation conflict error.
61B-124	D	61B	Description: A SCSI check condition error.
61B-126	D	61B B88	Description: A software error was caused by a hardware failure.
61B-128	G	61B	Description: The error log analysis indicates a hardware failure.
61B-129	G	190 61B B88 software	Description: Error log analysis indicates a SCSI bus problem.
61B-130	G	61B	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
61B-132	D	61B	Description: A disk drive hardware error occurred.
61B-134	D	B88 software	Description: The adapter failed to configure.
61B-135	D	61B B88 software	Description: The device failed to configure.
61B-136	D	61B	Description: The certify operation failed.
61B-137	D	61B B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
61B-138	D	61B	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
61D-098	J	61D B88	Description: Disk drive indicates an error.
61D-099	J	61D B88	Description: Disk drive not found.
61D-102	D	61D	Description: An unrecoverable media error.
61D-104	D	61D	Description: The motor failed to restart.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
61D-105	D	61D	Description: The drive did not become ready.
61D-106	D	61D	Description: The electronics card test failed.
61D-108	D	61D	Description: The bus test failed.
61D-110	D	61D	Description: The media format is corrupted.
61D-112	D	61D	Description: The diagnostic test failed.
61D-114	D	61D	Description: An unrecoverable hardware error.
61D-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
61D-117	D	61D	Description: A write-protect error occurred.
61D-118	D	61D B88	Description: A SCSI command time-out.
61D-120	D	61D	Description: A SCSI busy or command error.
61D-122	D	61D	Description: A SCSI reservation conflict error.
61D-124	D	61D	Description: A SCSI check condition error.
61D-126	D	61D B88	Description: A software error was caused by a hardware failure.
61D-128	G	61D	Description: The error log analysis indicates a hardware failure.
61D-129	G	190 61D B88 software	Description: Error log analysis indicates a SCSI bus problem.
61D-130	G	61D	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
61D-132	D	61D	Description: A disk drive hardware error occurred.
61D-134	D	B88 software	Description: The adapter failed to configure.
61D-135	D	61D B88 software	Description: The device failed to configure.
61D-136	D	61D	Description: The certify operation failed.
61D-137	D	61D B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
61D-138	D	61D	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
61E-102	D	61E	Description: An unrecoverable media error.
61E-104	D	61E	Description: The motor failed to restart.
61E-105	D	61E	Description: The drive did not become ready.
61E-106	D	61E	Description: The electronics card test failed.
61E-108	D	61E	Description: The bus test failed.
61E-110	D	61E	Description: The media format is corrupted.
61E-112	D	61E	Description: The diagnostic test failed.
61E-114	D	61E	Description: An unrecoverable hardware error.
61E-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
61E-117	D	61E	Description: A write-protect error occurred.
61E-118	D	61E B88	Description: A SCSI command time-out.
61E-120	D	61E	Description: A SCSI busy or command error.
61E-122	D	61E	Description: A SCSI reservation conflict error.
61E-124	D	61E	Description: A SCSI check condition error.
61E-126	D	61E B88	Description: A software error was caused by a hardware failure.
61E-128	G	61E	Description: The error log analysis indicates a hardware failure.
61E-129	G	190 61E B88 software	Description: Error log analysis indicates a SCSI bus problem.
61E-130	G	61E	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
61E-132	D	61E	Description: A disk drive hardware error occurred.
61E-134	D	B88 software	Description: The adapter failed to configure.
61E-135	D	61E B88 software	Description: The device failed to configure.
61E-136	D	61E	Description: The certify operation failed.
61E-137	D	61E B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
61E-138	D	61E	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
621-102	D	621	Description: An unrecoverable media error.
621-104	D	621	Description: The motor failed to restart.
621-105	D	621	Description: The drive did not become ready.
621-106	D	621	Description: The electronics card test failed.
621-108	D	621	Description: The bus test failed.
621-110	D	621	Description: The media format is corrupted.
621-112	D	621	Description: The diagnostic test failed.
621-114	D	621	Description: An unrecoverable hardware error.
621-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
621-117	D	621	Description: A write-protect error occurred.
621-118	D	621 B88	Description: A SCSI command time-out.
621-120	D	621	Description: A SCSI busy or command error.
621-122	D	621	Description: A SCSI reservation conflict error.
621-124	D	621	Description: A SCSI check condition error.
621-126	D	621 B88	Description: A software error was caused by a hardware failure.
621-128	G	621	Description: The error log analysis indicates a hardware failure.
621-129	G	190 621 B88 software	Description: Error log analysis indicates a SCSI bus problem.
621-130	G	621	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
621-132	D	621	Description: A disk drive hardware error occurred.
621-134	D	B88 software	Description: The adapter failed to configure.
621-135	D	621 B88 software	Description: The device failed to configure.
621-136	D	621	Description: The certify operation failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
621-137	D	621 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
621-138	D	621	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
623-102	D	623	Description: An unrecoverable media error.
623-104	D	623	Description: The motor failed to restart.
623-105	D	623	Description: The drive did not become ready.
623-106	D	623	Description: The electronics card test failed.
623-108	D	623	Description: The bus test failed.
623-110	D	623	Description: The media format is corrupted.
623-112	D	623	Description: The diagnostic test failed.
623-114	D	623	Description: An unrecoverable hardware error.
623-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
623-117	D	623	Description: A write-protect error occurred.
623-118	D	623 B88	Description: A SCSI command time-out.
623-120	D	623	Description: A SCSI busy or command error.
623-122	D	623	Description: A SCSI reservation conflict error.
623-124	D	623	Description: A SCSI check condition error.
623-126	D	623 B88	Description: A software error was caused by a hardware failure.
623-128	G	623	Description: The error log analysis indicates a hardware failure.
623-129	G	190 623 B88 software	Description: Error log analysis indicates a SCSI bus problem.
623-130	G	623	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
623-132	D	623	Description: A disk drive hardware error occurred.
623-134	D	B88 software	Description: The adapter failed to configure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
623-135	D	623 B88 software	Description: The device failed to configure.
623-136	D	623	Description: The certify operation failed.
623-137	D	623 -B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
623-138	D	623	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
624-102	D	624	Description: An unrecoverable media error.
624-104	D	624	Description: The motor failed to restart.
624-105	D	624	Description: The drive did not become ready.
624-106	D	624	Description: The electronics card test failed.
624-108	D	624	Description: The bus test failed.
624-110	D	624	Description: The media format is corrupted.
624-112	D	624	Description: The diagnostic test failed.
624-114	D	624	Description: An unrecoverable hardware error.
624-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
624-117	D	624	Description: A write-protect error occurred.
624-118	D	624 B88	Description: A SCSI command time-out.
624-120	D	624	Description: A SCSI busy or command error.
624-122	D	624	Description: A SCSI reservation conflict error.
624-124	D	624	Description: A SCSI check condition error.
624-126	D	624 B88	Description: A software error was caused by a hardware failure.
624-128	G	624	Description: The error log analysis indicates a hardware failure.
624-129	G	190 624 B88 software	Description: Error log analysis indicates a SCSI bus problem.
624-130	G	624	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
624-132	D	624	Description: A disk drive hardware error occurred.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
624-134	D	B88 software	Description: The adapter failed to configure.
624-135	D	624 B88 software	Description: The device failed to configure.
624-136	D	624	Description: The certify operation failed.
624-137	D	624 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
624-138	D	624	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
62D-102	D	62D	Description: An unrecoverable media error.
62D-104	D	62D	Description: The motor failed to restart.
62D-105	D	62D	Description: The drive did not become ready.
62D-106	D	62D	Description: The electronics card test failed.
62D-108	D	62D	Description: The bus test failed.
62D-110	D	62D	Description: The media format is corrupted.
62D-112	D	62D	Description: The diagnostic test failed.
62D-114	D	62D	Description: An unrecoverable hardware error.
62D-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
62D-117	D	62D	Description: A write-protect error occurred.
62D-118	D	62D B88	Description: A SCSI command time-out.
62D-120	D	62D	Description: A SCSI busy or command error.
62D-122	D	62D	Description: A SCSI reservation conflict error.
62D-124	D	62D	Description: A SCSI check condition error.
62D-126	D	62D B88	Description: A software error was caused by a hardware failure.
62D-128	G	62D	Description: The error log analysis indicates a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
62D-129	G	190 62D B88 software	Description: Error log analysis indicates a SCSI bus problem.
62D-130	G	62D	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
62D-132	D	62D	Description: A disk drive hardware error occurred.
62D-134	D	B88 software	Description: The adapter failed to configure.
62D-135	D	62D B88 software	Description: The device failed to configure.
62D-136	D	62D	Description: The certify operation failed.
62D-137	D	62D B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
62D-138	D	62D	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
62E-102	D	62E	Description: An unrecoverable media error.
62E-104	D	62E	Description: The motor failed to restart.
62E-105	D	62E	Description: The drive did not become ready.
62E-106	D	62E	Description: The electronics card test failed.
62E-108	D	62E	Description: The bus test failed.
62E-110	D	62E	Description: The media format is corrupted.
62E-112	D	62E	Description: The diagnostic test failed.
62E-114	D	62E	Description: An unrecoverable hardware error.
62E-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
62E-117	D	62E	Description: A write-protect error occurred.
62E-118	D	62E B88	Description: A SCSI command time-out.
62E-120	D	62E	Description: A SCSI busy or command error.
62E-122	D	62E	Description: A SCSI reservation conflict error.
62E-124	D	62E	Description: A SCSI check condition error.
62E-126	D	62E B88	Description: A software error was caused by a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
62E-128	G	62E	Description: The error log analysis indicates a hardware failure.
62E-129	G	190 62E B88 software	Description: Error log analysis indicates a SCSI bus problem.
62E-130	G	62E	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
62E-132	D	62E	Description: A disk drive hardware error occurred.
62E-134	D	B88 software	Description: The adapter failed to configure.
62E-135	D	62E B88 software	Description: The device failed to configure.
62E-136	D	62E	Description: The certify operation failed.
62E-137	D	62E B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
62E-138	D	62E	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
636-101	D	636	Description: EPROM test failure.
636-102	D	636	Description: Adapter SDRAM failure.
636-103	D	636	Description: Adapter checksum failure.
636-104	D	636	Description: Adapter memory test failure.
636-105	D	636	Description: Adapter buffer test failure.
636-106	D	636	Description: Adapter cache test failure.
636-107	D	636	Description: Internal loop-back test failure.
636-108	D	636	Description: External wrap test failure.
636-109	D	221	Description: Enhanced error handling failure on the bus.
636-110	D	221	Description: Enhanced error handling failure on the Eads chip.
636-111	D	636	Description: Enhanced error handling failure on the adapter.
636-201	D	636 221	Description: Hardware failure opening adapter.
636-202	D	636 221	Description: Interrupt test failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
636-203	D	636 221	Description: Adapter DMA test failure.
636-204	D	636 221	Description: Enhanced error handling failure opening the adapter.
636-701	G	636	Description: ELA indicates an I/O failure on the adapter.
637-101	D	637 221	Description: Enhanced error handling failure on the bus.
637-102	D	637 221	Description: Enhanced error handling failure on a chip.
637-103	D	637	Description: Enhanced error handling failure on the adapter.
637-212	D	637	Description: FIFO empty bit set.
637-213	D	637	Description: FIFO empty bit clear.
637-214	D	637	Description: FIFO full bit set.
637-215	D	637	Description: FIFO full bit clear.
637-216	D	637	Description: FIFO data miscompare.
637-217	D	637	Description: SCSI FIFO data miscompare.
637-218	D	637	Description: SCSI FIFO underflow.
637-219	D	637	Description: SCSI parity error.
637-220	D	637	Description: SCSI FIFO flags error.
637-221	D	637 221	Description: Miscompare during the write/read of the configuration register.
637-222	D	637	Description: Error during the write/read of the memory register.
637-223	D	637	Description: Miscompare during the write/read of the memory I/O register. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
637-224	D	637 221	Description: SCSI configuration register read or write error.
637-225	D	637	Description: Adapter POST failed.
637-226	D		Description: SCSI wrap or PTC failure. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
637-227	D	637 221	Description: SCSI adapter test failure.
637-230	D		Description: Arbitration test failed. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
637-231	D		Description: Function could not complete. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
637-232	D		Description: SCSI bus data miscompare. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
637-240	D		Description: No terminal power. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
637-242	D		Description: SCSI bus problem. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
637-301	D	637 221	Description: The parent device open failed.
637-600	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-601	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-602	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-603	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-604	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-605	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-606	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-607	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-701	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-702	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-703	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-704	G	637	Description: Error log analysis indicates a PCI SCSI adapter failure.
637-800	G		Description: Error log analysis indicates a PCI SCSI adapter PTC failure. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
637-801	G		Description: Error log analysis indicates a terminator problem. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
637-802	G		Description: Error log analysis indicates that multiple attempts to reset the SCSI bus have timed out. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.
637-803	G		Description: Error log analysis indicates that multiple SCSI bus errors have occurred. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.
638-102	D	638	Description: An unrecoverable media error occurred.
638-104	D	638	Description: The motor failed to restart.
638-105	D	638	Description: The drive did not become ready.
638-106	D	638	Description: The electronics card test failed.
638-108	D	638	Description: The bus test failed.
638-110	D	638	Description: The media format is corrupted.
638-112	D	638	Description: The diagnostic test failed.
638-114	D	638	Description: An unrecoverable hardware error.
638-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
638-117	D	638	Description: A write-protect error occurred.
638-118	D	638 B88	Description: A SCSI command time-out occurred.
638-120	D	638	Description: A SCSI busy or command error.
638-122	D	638	Description: A SCSI reservation conflict error.
638-124	D	638	Description: A SCSI check condition error occurred.
638-126	D	638 B88	Description: A software error was caused by a hardware failure.
638-128	G	638	Description: The error log analysis indicates a hardware failure.
638-129	G	190 638 B88 software	Description: Error log analysis indicates a SCSI bus problem.
638-130	G	638	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
638-132	D	638	Description: A disk drive hardware error occurred.
638-134	D	B88 software	Description: The adapter failed to configure.
638-135	D	638 B88 software	Description: The device failed to configure.
638-136	D	638	Description: The certify operation failed.
638-137	D	638 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
639-102	D	639	Description: An unrecoverable media error occurred.
639-104	D	639	Description: The motor failed to restart.
639-105	D	639	Description: The drive did not become ready.
639-106	D	639	Description: The electronics card test failed.
639-108	D	639	Description: The bus test failed.
639-110	D	639	Description: The media format is corrupted.
639-112	D	639	Description: The diagnostic test failed.
639-114	D	639	Description: An unrecoverable hardware error.
639-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
639-117	D	639	Description: A write-protect error occurred.
639-118	D	639 B88	Description: A SCSI command time-out occurred.
639-120	D	639	Description: A SCSI busy or command error.
639-122	D	639	Description: A SCSI reservation conflict error.
639-124	D	639	Description: A SCSI check condition error occurred.
639-126	D	639 B88	Description: A software error was caused by a hardware failure.
639-128	G	639	Description: The error log analysis indicates a hardware failure.
639-129	G	190 639 B88 software	Description: Error log analysis indicates a SCSI bus problem.
639-130	G	639	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
639-132	D	639	Description: A disk drive hardware error occurred.
639-134	D	B88 software	Description: The adapter failed to configure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
639-135	D	639 B88 software	Description: The device failed to configure.
639-136	D	639	Description: The certify operation failed.
639-137	D	639 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
639-138	D	639	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
63A-xxx	D		Description: Use the SRN value 62D-xxx.
63B-102	D	63B	Description: An unrecoverable media error.
63B-104	D	63B	Description: The motor failed to restart.
63B-105	D	63B	Description: The drive did not become ready.
63B-106	D	63B	Description: The electronics card test failed.
63B-108	D	63B	Description: The bus test failed.
63B-110	D	63B	Description: The media format is corrupted.
63B-112	D	63B	Description: The diagnostic test failed.
63B-114	D	63B	Description: An unrecoverable hardware error.
63B-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
63B-117	D	63B	Description: A write-protect error occurred.
63B-118	D	63B B88	Description: A SCSI command time-out.
63B-120	D	63B	Description: A SCSI busy or command error.
63B-122	D	63B	Description: A SCSI reservation conflict error.
63B-124	D	63B	Description: A SCSI check condition error.
63B-126	D	63B B88	Description: A software error was caused by a hardware failure.
63B-128	G	63B	Description: The error log analysis indicates a hardware failure.
63B-129	G	190 63B B88 software	Description: Error log analysis indicates a SCSI bus problem.
63B-130	G	63B	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
63B-132	D	63B	Description: A disk drive hardware error occurred.
63B-134	D	B88 software	Description: The adapter failed to configure.
63B-135	D	63B B88 software	Description: The device failed to configure.
63B-136	D	63B	Description: The certify operation failed.
63B-137	D	63B B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
63C-xxx	D		Description: Use the SRN value 60B-xxx.
63D-102	D	63D	Description: An unrecoverable media error.
63D-104	D	63D	Description: The motor failed to restart.
63D-105	D	63D	Description: The drive did not become ready.
63D-106	D	63D	Description: The electronics card test failed.
63D-108	D	63D	Description: The bus test failed.
63D-110	D	63D	Description: The media format is corrupted.
63D-112	D	63D	Description: The diagnostic test failed.
63D-114	D	63D	Description: An unrecoverable hardware error.
63D-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
63D-117	D	63D	Description: A write-protect error occurred.
63D-118	D	63D B88	Description: A SCSI command time-out.
63D-120	D	63D	Description: A SCSI busy or command error.
63D-122	D	63D	Description: A SCSI reservation conflict error.
63D-124	D	63D	Description: A SCSI check condition error.
63D-126	D	63D B88	Description: A software error was caused by a hardware failure.
63D-128	G	63D	Description: The error log analysis indicates a hardware failure.
63D-129	G	190 63D B88 software	Description: Error log analysis indicates a SCSI bus problem.
63D-130	G	63D	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
63D-132	D	63D	Description: A disk drive hardware error occurred.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
63D-134	D	B88 software	Description: The adapter failed to configure.
63D-135	D	63D B88 software	Description: The device failed to configure.
63D-136	D	63D	Description: The certify operation failed.
63D-137	D	63D B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
63D-138	D	63D	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
63E-102	D	63E	Description: An unrecoverable media error.
63E-104	D	63E	Description: The motor failed to restart.
63E-105	D	63E	Description: The drive did not become ready.
63E-106	D	63E	Description: The electronics card test failed.
63E-108	D	63E	Description: The bus test failed.
63E-110	D	63E	Description: The media format is corrupted.
63E-112	D	63E	Description: The diagnostic test failed.
63E-114	D	63E	Description: An unrecoverable hardware error.
63E-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
63E-117	D	63E	Description: A write-protect error occurred.
63E-118	D	63E B88	Description: A SCSI command time-out.
63E-120	D	63E	Description: A SCSI busy or command error.
63E-122	D	63E	Description: A SCSI reservation conflict error.
63E-124	D	63E	Description: A SCSI check condition error.
63E-126	D	63E B88	Description: A software error was caused by a hardware failure.
63E-128	G	63E	Description: The error log analysis indicates a hardware failure.
63E-129	G	190 63E B88 software	Description: Error log analysis indicates a SCSI bus problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
63E-130	G	63E	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
63E-132	D	63E	Description: A disk drive hardware error occurred.
63E-134	D	B88 software	Description: The adapter failed to configure.
63E-135	D	63E B88 software	Description: The device failed to configure.
63E-136	D	63E	Description: The certify operation failed.
63E-137	D	63E B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
63E-138	D	63E	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
63F-xxx	D		Description: Use the SRN value 61B-xxx.
640-102	D	640	Description: An unrecoverable media error occurred.
640-104	D	640	Description: The motor failed to restart.
640-105	D	640	Description: The drive did not become ready.
640-106	D	640	Description: The electronics card test failed.
640-108	D	640	Description: The bus test failed.
640-110	D	640	Description: The media format is corrupted.
640-112	D	640	Description: The diagnostic test failed.
640-114	D	640	Description: An unrecoverable hardware error.
640-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
640-117	D	640	Description: A write-protect error occurred.
640-118	D	640 B88	Description: A SCSI command time-out occurred.
640-120	D	640	Description: A SCSI busy or command error.
640-122	D	640	Description: A SCSI reservation conflict error.
640-124	D	640	Description: A SCSI check condition error occurred.
640-126	D	640 B88	Description: A software error was caused by a hardware failure.
640-128	G	640	Description: The error log analysis indicates a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
640-129	G	190 640 B88 software	Description: Error log analysis indicates a SCSI bus problem.
640-130	G	640	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
640-132	D	640	Description: A disk drive hardware error occurred.
640-134	D	B88 software	Description: The adapter failed to configure.
640-135	D	640 B88 software	Description: The device failed to configure.
640-136	D	640	Description: The certify operation failed.
640-137	D	640 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
640-138	D	640	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
643-102	D	643	Description: An unrecoverable media error occurred.
643-104	D	643	Description: The motor failed to restart.
643-105	D	643	Description: The drive did not become ready.
643-106	D	643	Description: The electronics card test failed.
643-108	D	643	Description: The bus test failed.
643-110	D	643	Description: The media format is corrupted.
643-112	D	643	Description: The diagnostic test failed.
643-114	D	643	Description: An unrecoverable hardware error.
643-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
643-117	D	643	Description: A write-protect error occurred.
643-118	D	643 B88	Description: A SCSI command time-out occurred.
643-120	D	643	Description: A SCSI busy or command error.
643-122	D	643	Description: A SCSI reservation conflict error.
643-124	D	643	Description: A SCSI check condition error occurred.
643-126	D	643 B88	Description: A software error was caused by a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
643-128	G	643	Description: The error log analysis indicates a hardware failure.
643-129	G	190 643 B88 software	Description: Error log analysis indicates a SCSI bus problem.
643-130	G	643	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
643-132	D	643	Description: A disk drive hardware error occurred.
643-134	D	B88 software	Description: The adapter failed to configure.
643-135	D	643 B88 software	Description: The device failed to configure.
643-136	D	643	Description: The certify operation failed.
643-137	D	643 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
644-102	D	644	Description: An unrecoverable media error occurred.
644-104	D	644	Description: The motor failed to restart.
644-105	D	644	Description: The drive did not become ready.
644-106	D	644	Description: The electronics card test failed.
644-108	D	644	Description: The bus test failed.
644-110	D	644	Description: The media format is corrupted.
644-112	D	644	Description: The diagnostic test failed.
644-114	D	644	Description: An unrecoverable hardware error.
644-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
644-117	D	644	Description: A write-protect error occurred.
644-118	D	644 B88	Description: A SCSI command time-out occurred.
644-120	D	644	Description: A SCSI busy or command error.
644-122	D	644	Description: A SCSI reservation conflict error.
644-124	D	644	Description: A SCSI check condition error occurred.
644-126	D	644 B88	Description: A software error was caused by a hardware failure.
644-128	G	644	Description: The error log analysis indicates a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
644-129	G	190 644 B88 software	Description: Error log analysis indicates a SCSI bus problem.
644-130	G	644	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
644-132	D	644	Description: A disk drive hardware error occurred.
644-134	D	B88 software	Description: The adapter failed to configure.
644-135	D	644 B88 software	Description: The device failed to configure.
644-136	D	644	Description: The certify operation failed.
644-137	D	644 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
646-101	D	D46	Description: External Test Failure.
646-102	D	240	Description: External Test Failure.
646-103	D	646	Description: I/O Test Failure.
646-104	D	646 221	Description: Adapter On-card Test Failure.
646-105	D	646	Description: Wrap Test Failure.
646-106	D	646	Description: Enhanced Error Handling failure on bus.
646-107	D	646	Description: EEH failure on Eads chip.
646-108	D	646	Description: Enhanced Error Handling failure on adapter.
646-201	D	646 221	Description: Configuration Register Test Failure.
646-202	D	646 221	Description: Wrap Test Failure.
646-204	F	D46 240	Description: External Test Failure.
646-205	F	D46 646	Description: External Test Failure. Action: Run advanced diagnostics with wrap test for this resource to obtain a correct problem resolution.
646-206	F	240 646	Description: External Test Failure. Action: Run advanced diagnostics with wrap test for this resource to obtain a correct problem resolution.
646-302	F	240 D46 221	Description: External Test Failure. Action: Run advanced diagnostics with wrap test for this resource to obtain a correct problem resolution.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
646-303	F	D46 646 221	Description: External Test Failure. Action: Run advanced diagnostics with wrap test for this resource to obtain a correct problem resolution.
646-401	F	240 D46 646 221	Description: External Test Failure. Action: Run advanced diagnostics with wrap test for this resource to obtain a correct problem resolution.
646-701	G	646	Description: Error log analysis indicates that an adapter error has occurred.
646-702	G	646	Description: Error log analysis indicates that an adapter check has occurred.
646-703	G	646 221	Description: Error log analysis indicates that a DMA failure has occurred.
646-704	G	646 221	Description: Error log analysis indicates that a PCI Bus error has occurred.
646-705	G	646 221	Description: Error log analysis indicates that a Programmed I/O error has occurred.
646-706	G	646	Description: ELA indicates a command write failure occurred.
646-707	G	646	Description: ELA indicates an internal adapter error has occurred.
64A-xxx	D		Description: Use the SRN value 62E-xxx.
64B-102	D	64B	Description: An unrecoverable media error.
64B-104	D	64B	Description: The motor failed to restart.
64B-105	D	64B	Description: The drive did not become ready.
64B-106	D	64B	Description: The electronics card test failed.
64B-108	D	64B	Description: The bus test failed.
64B-110	D	64B	Description: The media format is corrupted.
64B-112	D	64B	Description: The diagnostic test failed.
64B-114	D	64B	Description: An unrecoverable hardware error.
64B-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
64B-117	D	64B	Description: A write-protect error occurred.
64B-118	D	64B B88	Description: A SCSI command time-out.
64B-120	D	64B	Description: A SCSI busy or command error.
64B-122	D	64B	Description: A SCSI reservation conflict error.
64B-124	D	64B	Description: A SCSI check condition error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
64B-126	D	64B B88	Description: A software error was caused by a hardware failure.
64B-128	G	64B	Description: The error log analysis indicates a hardware failure.
64B-129	G	190 64B B88 software	Description: Error log analysis indicates a SCSI bus problem.
64B-130	G	64B	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
64B-132	D	64B	Description: A disk drive hardware error occurred.
64B-134	D	B88 software	Description: The adapter failed to configure.
64B-135	D	64B B88 software	Description: The device failed to configure.
64B-136	D	64B	Description: The certify operation failed.
64B-137	D	64B B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
64B-138	D	64B	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
64C-xxx	D		Description: Use the SRN value 61E-xxx.
64D-102	D	64D	Description: An unrecoverable media error.
64D-104	D	64D	Description: The motor failed to restart.
64D-105	D	64D	Description: The drive did not become ready.
64D-106	D	64D	Description: The electronics card test failed.
64D-108	D	64D	Description: The bus test failed.
64D-110	D	64D	Description: The media format is corrupted.
64D-112	D	64D	Description: The diagnostic test failed.
64D-114	D	64D	Description: An unrecoverable hardware error.
64D-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
64D-117	D	64D	Description: A write-protect error occurred.
64D-118	D	64D B88	Description: A SCSI command time-out.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
64D-120	D	64D	Description: A SCSI busy or command error.
64D-122	D	64D	Description: A SCSI reservation conflict error.
64D-124	D	64D	Description: A SCSI check condition error.
64D-126	D	64D B88	Description: A software error was caused by a hardware failure.
64D-128	G	64D	Description: The error log analysis indicates a hardware failure.
64D-129	G	190 64D B88 software	Description: Error log analysis indicates a SCSI bus problem.
64D-130	G	64D	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
64D-132	D	64D	Description: A disk drive hardware error occurred.
64D-134	D	B88 software	Description: The adapter failed to configure.
64D-135	D	64D B88 software	Description: The device failed to configure.
64D-136	D	64D	Description: The certify operation failed.
64D-137	D	64D B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
64D-138	D	64D	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
64E-102	D	64E	Description: An unrecoverable media error.
64E-104	D	64E	Description: The motor failed to restart.
64E-105	D	64E	Description: The drive did not become ready.
64E-106	D	64E	Description: The electronics card test failed.
64E-108	D	64E	Description: The bus test failed.
64E-110	D	64E	Description: The media format is corrupted.
64E-112	D	64E	Description: The diagnostic test failed.
64E-114	D	64E	Description: An unrecoverable hardware error.
64E-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
64E-117	D	64E	Description: A write-protect error occurred.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
64E-118	D	64E B88	Description: A SCSI command time-out.
64E-120	D	64E	Description: A SCSI busy or command error.
64E-122	D	64E	Description: A SCSI reservation conflict error.
64E-124	D	64E	Description: A SCSI check condition error.
64E-126	D	64E B88	Description: A software error was caused by a hardware failure.
64E-128	G	64E	Description: The error log analysis indicates a hardware failure.
64E-129	G	190 64E B88 software	Description: Error log analysis indicates a SCSI bus problem.
64E-130	G	64E	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
64E-132	D	64E	Description: A disk drive hardware error occurred.
64E-134	D	B88 software	Description: The adapter failed to configure.
64E-135	D	64E B88 software	Description: The device failed to configure.
64E-136	D	64E	Description: The certify operation failed.
64E-137	D	64E B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
64E-138	D	64E	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, go to MAP 210.
64F-xxx	D		Description: Use the SRN value 61D-xxx.
650-xxx	D	650	Description: Disk drive configuration failed.
651-140	D	165 221	Description: Display Character test failed
651-150	D	166 2E0	Description: Sensor indicates a fan has failed. Action: Use "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.
651-151	D	152 2E2	Description: Sensor indicates a voltage is outside the normal range. Action: Use MAP 1520.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
651-152	D	2E1	Description: Sensor indicates an abnormally high internal temperature. Action: Verify that: <ol style="list-style-type: none"> 1. The room ambient temperature is within the system operating environment. 2. There is unrestricted air flow around the system. 3. All system covers are closed. 4. There are no fan failures. <p>If none of these problems exist, then proceed with "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.</p>
651-153	D	152 E19	Description: Sensor indicates a power supply has failed. Action: Use "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.
651-159	D		Description: Sensor indicates a FRU has failed. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs.
651-160	D	166 2E0	Description: Sensor indicates a fan is turning too slowly. Action: Use "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.
651-161	D	152 2E2	Description: Sensor indicates a voltage is outside the normal range. Action: Use MAP 1520.
651-162	D	2E1	Description: Sensor indicates an abnormally high internal temperature. Action: Verify that: <ol style="list-style-type: none"> 1. The room ambient temperature is within the system operating environment. 2. There is unrestricted air flow around the system. 3. All system covers are closed. 4. There are no fan failures. <p>If none of these problems exist, then proceed with "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.</p>
651-163	D	152 E19	Description: Sensor indicates a power supply has failed. Action: Use "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.
651-169	D		Description: Sensor indicates a FRU has failed. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs.
651-170	D		Description: Sensor status not available. Action: Contact your support person.
651-171	D		Description: Sensor status not available Action: Contact your support person.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
651-600	G		Description: Uncorrectable memory or unsupported memory. Action: Examine the memory modules and determine if they are supported types. If the modules are supported, then replace the appropriate memory module(s).
651-601	G		Description: Missing or bad memory Action: If the installed memory matches the reported memory size, then replace the memory: otherwise, add the missing memory.
651-602	G	2C5 2C7	Description: Failed memory module. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-603	G	2C6 2C7	Description: Failed memory module. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-604	G	2C5	Description: Memory module has no matched pair. Action: The most probable failure is the memory module paired with the memory module identified by the location code. Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91 to identify the paired module.
651-605	G	2C6	Description: Memory module has no matched pair. Action: The most probable failure is the memory module paired with the memory module identified by the location code. Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91 to identify the paired module.
651-608	G	D01	Description: Bad L2 Cache. Note: Disregard this SRN if the processor for this cache was manually deconfigured. Refer to the Service Processor menus to determine if the processor was manually deconfigured. If the processor was manually deconfigured and you got this SRN, you need to apply AIX APAR IY01637 (4.2) or IY01606 (4.3). Contact your support center to determine if a newer level of firmware is available for your system.
651-609	G	D01	Description: Missing L2 Cache
651-610	G	210	Description: CPU internal error
651-611	G	210	Description: CPU internal cache controller error
651-612	G	D01	Description: External cache parity or multi-bit ECC error
651-613	G	D01	Description: External cache ECC single-bit error
651-614	G	214	Description: System bus time-out error
651-615	G	292	Description: Time-out error waiting for I/O

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
651-619	G		Description: Error log analysis indicates an error detected by the CPU. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs.
651-620	G	2C5	Description: ECC correctable error Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-621	G	2C6	Description: ECC correctable error Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-622	G	2C5	Description: Correctable error threshold exceeded Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-623	G	2C6	Description: Correctable error threshold exceeded Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-624	G	214	Description: Memory Control Subsystem internal error
651-625	G	214	Description: Memory address error (invalid address or access attempt)
651-626	G	214	Description: Memory Data error (Bad data going to memory)
651-627	G	214	Description: System bus time-out error
651-628	G	210	Description: System bus protocol/transfer error
651-629	G		Description: Error log analysis indicates an error detected by the memory controller. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs.
651-630	G	307	Description: I/O Expansion Bus Parity Error.
651-631	G	307	Description: I/O Expansion Bus Time-out Error.
651-632	G	306 307 308	Description: Internal Device Error.
651-633	G	307 306	Description: I/O Expansion Unit not in an operating state.
651-634	G	307	Description: Internal Device Error.
651-639	G		Description: Error log analysis indicates an error detected by the I/O. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs.
651-640	G	2D5	Description: I/O general bus error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
651-641	G	2D6	Description: Secondary I/O general bus error
651-642	G	2D3	Description: Internal Service Processor memory error.
651-643	G	2D3	Description: Internal Service Processor firmware error.
651-644	G	2D3	Description: Other internal Service Processor hardware error.
651-650	G	E17	Description: ECC correctable error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-651	G	E18	Description: ECC correctable error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-653	G	301	Description: ECC correctable error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-654	G	302	Description: ECC correctable error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-655	G	303	Description: ECC correctable error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-656	G	304	Description: ECC correctable error. action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-657	G	305	Description: ECC correctable error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-658	G	30A	Description: ECC correctable error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-659	G	2CD	Description: ECC correctable error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-65A	G	2CE	Description: ECC correctable error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-65B	G	2CC	Description: ECC correctable error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-660	G	E17	Description: Correctable error threshold exceeded. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-661	G	E18	Description: Correctable error threshold exceeded. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
651-663	G	301	Description: Correctable error threshold exceeded. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-664	G	302	Description: Correctable error threshold exceeded. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-665	G	303	Description: Correctable error threshold exceeded. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-666	G	304	Description: Correctable error threshold exceeded. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-667	G	305	Description: Correctable error threshold exceeded. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-668	G	30A	Description: Correctable error threshold exceeded. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-669	G	2CD	Description: Correctable error threshold exceeded. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-66A	G	2CE	Description: Correctable error threshold exceeded. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-66B	G	2CC	Description: Correctable error threshold exceeded. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-670	G	E17 2C7	Description: Failed memory module. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-671	G	E18 2C7	Description: Failed memory module. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-673	G	301	Description: Failed memory module. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-674	G	302	Description: Failed memory module. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-675	G	303	Description: Failed memory module. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-676	G	304	Description: Failed memory module. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
651-677	G	305	Description: Failed memory module. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-678	G	30A	Description: Failed memory module. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-679	G	2CD	Description: Failed memory module. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-67A	G	2CE	Description: Failed memory module. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-67B	G	2CC	Description: Failed memory module. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-680	G	E17	Description: Memory module has no matched pair. Action: The most probable failure is the memory module paired with the memory module identified by the location code. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91 to identify the paired module.
651-681	G	E18	Description: Memory module has no matched pair. Action: The most probable failure is the memory module paired with the memory module identified by the location code. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91 to identify the paired module.
651-683	G	301	Description: Memory module has no matched pair. Action: The most probable failure is the memory module paired with the memory module identified by the location code. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91 to identify the paired module.
651-684	G	302	Description: Memory module has no matched pair. Action: The most probable failure is the memory module paired with the memory module identified by the location code. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91 to identify the paired module.
651-685	G	303	Description: Memory module has no matched pair. Action: The most probable failure is the memory module paired with the memory module identified by the location code. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91 to identify the paired module.
651-686	G	304	Description: Memory module has no matched pair. Action: The most probable failure is the memory module paired with the memory module identified by the location code. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91 to identify the paired module.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
651-687	G	305	Description: Memory module has no matched pair. Action: The most probable failure is the memory module paired with the memory module identified by the location code. Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91 to identify the paired module.
651-688	G	30A	Description: Memory card has no matched pair. Action: The most probable failure is the memory card paired with the memory card identified by the location code. Use the system <i>Service Guide</i> to determine how the memory cards are grouped, then use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91 to replace the paired card.
651-689	G	2CD	Description: Memory card has no matched pair. Action: The most probable failure is the memory card paired with the memory card identified by the location code. Use the system <i>Service Guide</i> to determine how the memory cards are grouped, then use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91 to replace the paired card.
651-68A	G	2CE	Description: Memory card has no matched pair. Action: The most probable failure is the memory card paired with the memory card identified by the location code. Use the system <i>Service Guide</i> to determine how the memory cards are grouped, then use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91 to replace the paired card.
651-710	G	214 2C4	Description: System bus parity error
651-711	G	214 210 2C4	Description: System bus parity error
651-712	G	214 210 210 2C4	Description: System bus parity error
651-713	G	214 2C4	Description: System bus protocol/transfer error
651-714	G	214 210 2C4	Description: System bus protocol/transfer error
651-715	G	214 210 210 2C4	Description: System bus protocol/transfer error
651-720	G	2C5 2C7 214	Description: Uncorrectable Memory Error Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
651-721	G	2C6 2C7 214	Description: Uncorrectable Memory Error Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-722	G	210 2C4 214	Description: System bus parity error
651-723	G	210 2C4 214	Description: System bus protocol/transfer error
651-724	G	292 2C8 214 763	Description: I/O Host Bridge time-out error
651-725	G	292 2C8 214 763	Description: I/O Host Bridge address/data parity error
651-726	G	Software	Description: I/O Host Bridge timeout caused by software. Action: This error is caused by a software or operating system attempt to access an invalid memory address. Contact software support for assistance.
651-730	G		Description: I/O error on the ISA bus. Action: Refer to the Error Code to FRU Index in the system unit's service guide.
651-731	G	2C8 292 763	Description: Intermediate or System Bus Address Parity Error.
651-732	G	2C8 292 763	Description: Intermediate or System Bus Data Parity Error.
651-733	G	214 2C8 292	Description: Intermediate or System Bus Address Parity Error.
651-734	G	214 2C8 292	Description: Intermediate or System Bus Data Parity Error.
651-735	G	2D2 292	Description: Intermediate or System Bus Time-out Error.
651-736	G	2D2 292 214	Description: Intermediate or System Bus Time-out Error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
651-740	G	2D3 2D4	Note: Ensure that the system IPLROS and Service Processor are at the latest firmware level before removing any parts from the system. Description: Time-out on communication response from Service Processor
651-741	G	2D3 2D4	Description: Service Processor error accessing special registers
651-742	G	2D3 2D4	Description: Service Processor reports unknown communication error
651-743	G	2D7 2D5	Description: Service Processor error accessing Vital Product Data EEPROM
651-744	G	165 2D5 2D3	Description: Service Processor error accessing Operator Panel
651-745	G	2D9 2D5	Description: Service Processor error accessing Power Controller
651-746	G	2E0 2D4	Description: Service Processor error accessing Fan Sensor
651-747	G	2E1 2D5	Description: Service Processor error accessing Thermal Sensor
651-748	G	2E2 2D5	Description: Service Processor error accessing Voltage Sensor
651-749	G	2E3 2D4	Description: Service Processor error accessing Serial Port
651-750	G	814 2D4	Description: Service Processor detected NVRAM error
651-751	G	817 2D4	Description: Service Processor error accessing Real-Time Clock/Time-of-Day Clock
651-752	G	2E4 2D4	Description: Service Processor error accessing JTAG/COP controller/hardware
651-753	G	151 2D4	Description: Service Processor detects loss of voltage from the Time-of-Day Clock backup battery
651-754	G		Description: Power Control Network general connection failure. Action: If a location code is present, check the cable connections at that location. If there is no location code, check all the power distribution cable connections starting at the processor drawer then through each I/O drawer.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
651-760	G	software hardware	Description: Service Processor detected a surveillance time-out. Action: A surveillance time-out is caused by lack of response from the operating system. The most likely cause is a software or operating system failure. Verify that the problem is not related to hardware by running diagnostics, in Problem Determination Mode, on all resources which have not already been run. Also, the system administrator should look for other symptoms that would indicate a software or operating system problem. Contact the software support structure for assistance in needed.
651-770	G	2C8 292 306	Description: Intermediate or System Bus Address Parity Error.
651-771	G	2C8 292 306	Description: Intermediate or System Bus Data Parity Error.
651-772	G	2D2 292 306	Description: Intermediate or System Bus Time-out Error.
651-773	G	227	Description: Intermediate or System Bus Data Parity Error.
651-780	G	E17 2C7 214	Description: Uncorrectable Memory Error. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-781	G	E18 2C7 214	Description: Uncorrectable Memory Error. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-783	G	301 214	Description: Uncorrectable Memory Error. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-784	G	302 214	Description: Uncorrectable Memory Error. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-785	G	303 214	Description: Uncorrectable Memory Error. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-786	G	304 214	Description: Uncorrectable Memory Error. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-787	G	305 214	Description: Uncorrectable Memory Error. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
651-788	G	30A 214	Description: Uncorrectable Memory Error. Action: Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
651-789	G	2CD 214	Description: Uncorrectable Memory Error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-78A	G	2CE 214	Description: Uncorrectable Memory Error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-78B	G	2CC 214	Description: Uncorrectable Memory Error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
651-800	G	166 2E0	Description: Fan is turning slower than expected.
651-801	G	166 2E0	Description: Fan stop was detected. Action: Verify the following: <ul style="list-style-type: none"> • nothing is obstructing the fan rotation • the fan power connection is tight • the fan speed sensing cable is tight <p>If the fan still is not turning replace the fan. If the fan is turning, replace the fan sensor FRU.</p>
651-802	G		Description: Fan failure. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs.
651-809	G		Description: Power fault warning due to unspecified cause. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs.
651-810	G	152 2E2	Description: Over voltage condition was detected Action: Shut the system down and do the following before replacing any FRUs. <ol style="list-style-type: none"> 1. Visually inspect the power cables and reseat the connectors. 2. Run the following command <code>diag -Avd sysplanar0</code>. When the Resource Repair Action menu displays, select <code>sysplanar0</code>.
651-811	G	152 2E2	Description: Under voltage condition was detected Action: Shut the system down and do the following before replacing any FRUs. <ol style="list-style-type: none"> 1. Visually inspect the power cables and reseat the connectors. 2. Run the following command <code>diag -Avd sysplanar0</code>. When the Resource Repair Action menu displays, select <code>sysplanar0</code>.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
651-812	G	152	<p>Description: System shutdown due to:</p> <ol style="list-style-type: none"> 1. Loss of AC power 2. Power button was pushed without proper system shutdown 3. Power supply failure. <p>Action: If reasons 1 and 2 can be ruled out than replace the power supply FRU.</p>
651-813	G		<p>Description: System shutdown due to loss of AC Power to the site. Action: System resumed normal operation, no action required.</p>
651-814	G	152	<p>Description: CEC Rack shutdown due to one of the following:</p> <ol style="list-style-type: none"> 1. Loss of AC power to the CEC Rack 2. Open or disconnected SPCN cable between racks 3. AC module, Bulk power, regulator or SPCN card failure. <p>Action: If 1 and 2 can be ruled out and the problem can be recreated, try the power supply related FRUs one at a time to isolate the problem.</p>
651-815	G	287 289	<p>Description: I/O Rack shutdown due to one of the following:</p> <ol style="list-style-type: none"> 1. Loss of AC power to the I/O Rack 2. Open or disconnected SPCN cable between racks 3. Power supply failure. <p>Action: If 1 and 2 can be ruled out, then replace the power supply FRU.</p>
651-816	G	287	<p>Description: Power fault due to internal power supply failure.</p>
651-817	G	289	<p>Description: Power fault due to internal power supply failure.</p>
651-818	G		<p>Description: Power fault due to manual activation of power-off request. Action: Resume normal operation.</p>
651-819	G	152	<p>Description: Power fault due to internal power supply failure.</p>

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
651-820	G	2E1	<p>Description: An over temperature condition was detected Action: Verify the following:</p> <ul style="list-style-type: none"> • the room ambient temperature is within the system operating environment • there is unrestricted air flow around the system • all system covers are closed <p>If all conditions are met, then replace the temperature sensor FRU.</p>
651-821	G	2E1	<p>Description: System shutdown due to an over maximum temperature condition being reached. Action: Verify the following:</p> <ul style="list-style-type: none"> • The room ambient temperature is within the system operating environment. • There is unrestricted air flow around the system. • All system covers are closed. <p>If all conditions are met, then replace the temperature sensor FRU.</p>
651-822	G	166 2E1	<p>Description: System shutdown due to over temperature condition and fan failure. Use the physical FRU location(s) as the probable cause(s). Action: Use the physical location codes to replace the FRUs that are identified on the diagnostics problem report screen.</p>
651-823	G		<p>Description: System shutdown due to fan failure. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs.</p>
651-824	G		<p>Description: System shutdown due to power fault warning with an unspecified cause. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs. If no physical location codes are reported, the shutdown was caused by using the power off button or there was a loss of power to the system.</p>
651-830	G	166 2E0	<p>Description: Sensor detected a fan failure. Action: Use “Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution” on page 79.</p>
651-831	G	152 2E2	<p>Description: Sensor detected a voltage outside of the normal range. Action: Use MAP 1520.</p>

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
651-832	G	2E1	<p>Description: Sensor detected an abnormally high internal temperature. Action: Verify that:</p> <ol style="list-style-type: none"> 1. The room ambient temperature is within the system operating environment. 2. There is unrestricted air flow around the system. 3. All system covers are closed. 4. There are no fan failures. <p>If none of these problems exist, then proceed with "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.</p>
651-833	G	152 E19	<p>Description: Sensor detected a power supply failure. Action: Use "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.</p>
651-839	G		<p>Description: Sensor detected a FRU that has failed. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs.</p>
651-840	G	166 2E0	<p>Description: Sensor detected a fan failure. Action: Use "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.</p>
651-841	G	152 2E2	<p>Description: Sensor detected a voltage outside of the normal range. Action: Use MAP 1520.</p>
651-842	G	2E1	<p>Description: Sensor detected an abnormally high internal temperature. Action: Verify that:</p> <ol style="list-style-type: none"> 1. The room ambient temperature is within the system operating environment. 2. There is unrestricted air flow around the system. 3. All system covers are closed. 4. There are no fan failures. <p>If none of these problems exist, then proceed with "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.</p>
651-843	G	152 E19	<p>Description: Sensor detected a power supply failure. Action: Use "Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution" on page 79.</p>
651-849	G		<p>Description: Sensor detected a FRU that has failed. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs.</p>

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
651-88x	G		Description: The CEC or SPCN reported an error. Action: If reference and location codes were reported with this SRN, refer to this system unit’s system service guide with the reference and location codes for the necessary repair action. If the reference and location codes were not reported, then run Diagnostics in Problem Determination mode and record and report the reference and location codes for this SRN.
651-89x	G		Description: The CEC or SPCN reported an error. Action: Refer to the this system unit’s system service guide, with the reference and location codes, for the necessary repair action. If the reference and location codes were NOT reported, then run Advanced Diagnostics in Problem Determination mode and record and report the reference and location codes for this SRN.
651-90x	G		Description: Platform specific error Action: Call your support center.
652-600	G		Description: A non-critical error has been detected: Uncorrectable memory or unsupported memory. Action: Schedule deferred maintenance. Examine the memory modules and determine if they are supported types. If the modules are supported, then replace the appropriate memory module(s).
652-610	G	210	Description: A non-critical error has been detected: CPU internal error. Action: Schedule deferred maintenance. Use MAP 210.
652-611	G	210	Description: A non-critical error has been detected: CPU internal cache or cache controller error. Action: Schedule deferred maintenance. Use MAP 210.
652-612	G	D01	Description: A non-critical error has been detected: External cache parity or multi-bit ECC error. Action: Schedule deferred maintenance. Use MAP 210.
652-613	G	D01	Description: A non-critical error has been detected: External cache ECC single-bit error. Action: Schedule deferred maintenance. Use MAP 210.
652-622	G	2C5	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
652-623	G	2C6	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
652-630	G	307	Description: A non-critical error has been detected: I/O Expansion Bus Parity Error. Action: Schedule deferred maintenance. Use MAP 210.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
652-631	G	307	Description: A non-critical error has been detected: I/O Expansion Bus Time-out Error. Action: Schedule deferred maintenance. Use MAP 210.
652-632	G	306 307 308	Description: A non-critical error has been detected: I/O Expansion Bus Connection Failure. Action: Schedule deferred maintenance. Use MAP 210.
652-633	G	307 306	Description: A non-critical error has been detected: I/O Expansion Unit not in an operating state. Action: Schedule deferred maintenance. Use MAP 210.
652-634	G	307	Description: A non-critical error has been detected: Internal Device Error. Action: Schedule deferred maintenance. Use MAP 210.
652-660	G	E17	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
652-661	G	E18	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
652-663	G	301	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
652-664	G	302	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
652-665	G	303	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
652-666	G	304	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
652-667	G	305	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
652-668	G	30A	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
652-669	G	2CD	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
652-66A	G	2CE	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
652-66B	G	2CC	Description: A non-critical error has been detected: Correctable error threshold exceeded. Action: Schedule deferred maintenance. Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
652-731	G	2C8 292	Description: A non-critical error has been detected: Intermediate or System Bus Address Parity Error. Action: Schedule deferred maintenance. Use MAP 210.
652-732	G	2C8 292	Description: A non-critical error has been detected: Intermediate or System Bus Data Parity Error. Action: Schedule deferred maintenance. Use MAP 210.
652-733	G	214 2C8 292	Description: A non-critical error has been detected: Intermediate or System Bus Address Parity Error. Action: Schedule deferred maintenance. Use MAP 210.
652-734	G	214 2C8 292	Description: A non-critical error has been detected: Intermediate or System Bus Data Parity Error. Action: Schedule deferred maintenance. Use MAP 210.
652-735	G	2D2 292	Description: A non-critical error has been detected: Intermediate or System Bus Time-out Error. Action: Schedule deferred maintenance. Use MAP 210.
652-736	G	2D2 292 214	Description: A non-critical error has been detected: Intermediate or System Bus Time-out Error. Action: Schedule deferred maintenance. Use MAP 210.
652-770	G	2C8 292 306	Description: A non-critical error has been detected: Intermediate System Bus Address Parity Error. Action: Schedule deferred maintenance. Use MAP 210.
652-771	G	2C8 292 306	Description: A non-critical error has been detected: Intermediate or System Bus Data Parity Error. Action: Schedule deferred maintenance. Use MAP 210.
652-772	G	2D2 292 306	Description: A non-critical error has been detected: Intermediate or System Bus Time-out Error. Action: Schedule deferred maintenance. Use MAP 210.
652-773	G	227	Description: A non-critical error has been detected: Intermediate or System Bus Data Parity Error. Action: Schedule deferred maintenance. Use MAP 210.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
652-810	G	152	Description: Non-critical power problem, loss of redundant supply. Use the physical FRU location(s) as the probable cause(s). Action: Schedule maintenance. Use the physical location codes to replace the FRUs that are identified on the diagnostics problem report screen.
652-819	G		Description: Power fault due to internal redundant power supply failure.
652-820	G	166	Description: Non-critical cooling problem, loss of redundant fan. Use the physical FRU location(s) as the probable cause(s). Action: Schedule maintenance. Use the physical location codes to replace the FRUs that are identified on the diagnostics problem report screen.
652-830	G	166 2E0	Description: Sensor detected a redundant fan failure. Action: Use “Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution” on page 79.
652-833	G	152 E19	Description: Sensor detected a redundant power supply failure. Action: Use “Chapter 12. MAP 0220: Hot-Swap FRU Problem Resolution” on page 79.
652-839	G		Description: Sensor detected a redundant FRU failure. Action: Use MAP 210. Instead of failing function codes, use the physical location code(s) from the diagnostic problem report screen to determine the FRUs.
652-88x	G		Description: The CEC or SPCN reported a non-critical error. Action: Schedule deferred maintenance. If reference and location codes were reported with this SRN, refer to this system unit’s system service guide with the reference and location codes for the necessary repair action. If the reference and location codes were NOT reported, then run Diagnostics in Problem Determination mode and record and report the reference and location codes for this SRN.
652-89x	G		Description: The CEC or SPCN reported a non-critical error. Action: Schedule deferred maintenance. Refer to the this system unit’s system service guide, with the reference and location codes, for the necessary repair action. If the reference and location codes were NOT reported, then run Advanced Diagnostics in Problem Determination mode and record and report the reference and location codes for this SRN.
653-102	D	653	Description: An unrecoverable media error occurred.
653-104	D	653	Description: The motor failed to restart.
653-105	D	653	Description: The drive did not become ready.
653-106	D	653	Description: The electronics card test failed.
653-108	D	653	Description: The bus test failed.
653-110	D	653	Description: The media format is corrupted.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
653-112	D	653	Description: The diagnostic test failed.
653-114	D	653	Description: An unrecoverable hardware error.
653-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
653-117	D	653	Description: A write-protect error occurred.
653-118	D	653 B88	Description: A SCSI command time-out occurred.
653-120	D	653	Description: A SCSI busy or command error.
653-122	D	653	Description: A SCSI reservation conflict error.
653-124	D	653	Description: A SCSI check condition error occurred.
653-126	D	653 B88	Description: A software error was caused by a hardware failure.
653-128	G	653	Description: The error log analysis indicates a hardware failure.
653-129	G	190 653 B88 software	Description: Error log analysis indicates a SCSI bus problem.
653-130	G	653	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
653-132	D	653	Description: A disk drive hardware error occurred.
653-134	D	B88 software	Description: The adapter failed to configure.
653-135	D	653 B88 software	Description: The device failed to configure.
653-136	D	653	Description: The certify operation failed.
653-137	D	653 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
655-001	D	655 221 Monitor/ Cable	Description: Adapter problem
655-002	D	655 Monitor/ Cable	Description: Display problem
655-003	D	software 655	Description: Software error

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
657-001	D	software 657	Description: Software error.
657-002	D	657 software	Description: Adapter failure.
657-003	D	657 227	Description: Adapter failure.
657-004	D	657 Monitor/ Cable	Description: Display failure.
657-005	D	657 227 Monitor/ Cable	Description: Adapter failure.
662-101	D	662 221	Description: Enhanced error handling failure on the bus.
662-102	D	662 221	Description: Enhanced error handling failure on a chip.
662-103	D	662	Description: Enhanced error handling failure on the adapter.
662-212	D	662	Description: FIFO empty bit set.
662-213	D	662	Description: FIFO empty bit clear.
662-214	D	662	Description: FIFO full bit set.
662-215	D	662	Description: FIFO full bit clear.
662-216	D	662	Description: FIFO data miscompare.
662-217	D	662	Description: SCSI FIFO data miscompare.
662-218	D	662	Description: SCSI FIFO underflow.
662-219	D	662	Description: SCSI parity error.
662-220	D	662	Description: SCSI FIFO flags error.
662-221	D	662 221	Description: Miscompare during the write/read of the configuration register.
662-222	D	662	Description: Error during the write/read of the memory register.
662-223	D	662	Description: Miscompare during the write/read of the memory I/O register. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
662-224	D	662 221	Description: SCSI configuration register read or write error.
662-225	D	662	Description: Adapter POST failed.
662-226	D		Description: SCSI wrap or PTC failure. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
662-227	D	662 221	Description: SCSI adapter test failure.
662-230	D		Description: Arbitration test failed. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
662-231	D		Description: Function could not complete. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
662-232	D		Description: SCSI bus data miscompare. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
662-240	D		Description: No terminal power. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
662-242	D		Description: SCSI bus problem. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
662-301	D	662 221	Description: The parent device open failed.
662-600	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-601	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-602	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-603	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-604	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-605	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-606	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-607	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-701	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-702	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-703	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-704	G	662	Description: Error log analysis indicates a PCI SCSI adapter failure.
662-800	G		Description: Error log analysis indicates a PCI SCSI adapter PTC failure. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
662-801	G		Description: Error log analysis indicates a terminator problem. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.
662-802	G		Description: Error log analysis indicates that multiple attempts to reset the SCSI bus have timed out. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.
662-803	G		Description: Error log analysis indicates that multiple SCSI bus errors have occurred. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.
663-101	D	663 C94 C95	Description: IBM ARTIC960RxD or RxF PCI Adapter Central Processing Unit test failure.
663-102	D	663 C94 C95	Description: IBM ARTIC960RxD or RxF PCI Adapter Timer test failure.
663-103	D	663 C94 C95	Description: IBM ARTIC960RxD or RxF PCI Adapter Bus Interface test failure.
663-104	D	C94 663 C95	Description: IBM ARTIC960RxD or RxF PCI Adapter Dynamic Random Access Memory test failure.
663-105	D	663 C94 C95	Description: IBM ARTIC960RxD or RxF PCI Adapter Memory Protection test failure.
663-106	D	663 C94 C95	Description: IBM ARTIC960RxD PCI Adapter Debug Port test failure.
663-107	D	C95 66 C97	Description: Interface board wrap test failure.
663-110	D	C94 663 C95	Description: IBM ARTIC960RxD or RxF PCI Adapter Download Diagnostics test failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
663-123	D	C95 663 C94	Description: Interface board non-wrap test failure.
663-150	D	663 software 227	Description: Device configuration failure.
663-151	D	663 software 227	Description: Device driver indicates a hardware failure.
663-152	D	663	Description: Failure and error in determining which type of IBM ARTIC960RxD PCI Adapter.
663-153	D	663 227 C94 software	Description: Error log analysis indicates a IBM ARTIC960RxD or RxF PCI Adapter failure. Action: Use the errpt command to check error log.
663-154	D	C94 663 C95	Description: IBM ARTIC960RxD or RxF PCI Adapter initialization failure.
663-155	D	663 C94 C95	Description: IBM ARTIC960RxD or RxF PCI Adapter initialization failure.
663-156	D	C95 663 C94	Description: IBM ARTIC960RxD or RxF PCI Adapter initialization failure.
663-157	D	C98 C97 C95	Description: Cable wrap test failure.
664-111	D	664 B88	Description: Unable to reserve device.
664-112	D	664 B88	Description: Unable to do configuration.
664-113	D	664 B88	Description: Unable to open the device driver.
664-121	D	664	Description: The CD-ROM drive indicates an error.
664-122	D	664	Description: The CD-ROM drive indicates an error.
664-123	D	664	Description: The CD-ROM drive indicates an error.
664-125	D	664 B88	Description: The CD-ROM drive indicates an error.
664-126	D	664	Description: The CD-ROM drive indicates an error.
664-127	D	664	Description: The CD-ROM drive indicates an error.
664-128	D	664	Description: The CD-ROM drive indicates an error.
664-129	D	664	Description: The CD-ROM drive indicates an error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
664-150	D	Test Disc 664	Description: A media error was detected.
664-151	D	664 B88	Description: A command timeout was detected.
664-152	D	664	Description: A command reservation conflict was detected.
664-162	D	664	Description: The CD-ROM drive indicates an error.
664-171	D	664	Description: Unable to reserve device.
664-172	D	664	Description: Unable to do configuration.
664-173	D	664	Description: Unable to open device driver.
664-175	D	664	Description: The CD-ROM drive indicates an error.
664-198	D	664 B88	Description: Undefined error detected.
664-199	D	664	Description: Undefined error detected.
664-211	D	664	Description: The LED test failed.
664-281	D	664	Description: No tone during audio test.
664-301	G	664	Description: Errors found during ELA.
664-302	G	664 B88	Description: Errors found during ELA.
667-101	D	667 227	Description: The PCI wrap test failed. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
667-102	D	667	Description: The POST indicates an adapter failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
667-103	D	667	Description: The POST indicates an adapter channel failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
667-104	D	190	Description: The POST indicates a defective cable.
667-105	D	B3A	Description: The POST indicates a defective backplane or external enclosure.
667-106	D	722	Description: The POST indicates the last disk drive reconnected caused a channel failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
667-108	D	221	Description: Enhanced error handling failure on bus.
667-109	D	667	Description: The NVRAM test indicates an adapter failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
667-110	D	722	Description: The disk reported a Predictive Failure Analysis error (PFA). Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-111	D	722	Description: The disk drive has been failed by the adapter. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-112	G	722	Description: ELA indicates that the disk reported a hard data error. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-113	G	722	Description: ELA indicates that the disk reported a hard equipment error. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-114	G	E29	Description: ELA indicates a cache failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-115	G	E30	Description: ELA indicates that the cache battery is either low on power or has failed. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-116	D	667	Description: Failed to disable data scrub. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-117	D	E29	Description: POST indicates cache failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-118	D	E29	Description: NVRAM test indicates cache failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-119	D	E29	Description: NVRAM test indicates that write cache is missing. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-120	D	E29	Description: NVRAM test indicates that cache size is invalid. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-121	D	E30	Description: Adapter test indicates that the cache battery is low on power. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
667-122	D	E30	Description: Adapter test indicates cache battery failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
667-123	D	667	Description: ELA indicates an adapter failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
667-400	F	667 190 B3A 722	Description: POST indicates a channel failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
669-101	D	221	Description: Enhanced error handling failure on bus.
669-102	D	221	Description: Enhanced error handling failure on Eads chip.
669-103	D	669	Description: Enhanced error handling failure on adapter.
669-201	D	669 221	Description: Configuration register test failure. Action: Before going to MAP 210, look at the label on the adapter. If the label is A-A, use SRN 66C-201 instead.
669-202	D	669	Description: I/O register test failure.
669-203	D	669	Description: Adapter memory test failure.
669-204	D	669	Description: Adapter initialization test failure.
669-205	D	669	Description: Internal loopback test failure.
669-206	D	669	Description: External wrap test failure (1000 Mbps).
669-701	G	669	Description: Error Log Analysis indicates that this device failed to initialize because it is not the IBM version of this adapter. AIX operating system cannot configure this non-IBM version of the adapter.
669-702	G	669	Description: Error Log Analysis indicates that this device failed to initialize due to a problem with the EEPROM on the adapter.
669-703	G	669	Description: Error Log Analysis indicates that this device has failed to initialize due to a self-test failure.
669-704	G	669	Description: Error Log Analysis indicates that this device has failed to initialize due to firmware download error.
66C-101	D	221	Description: Enhanced error handling failure on bus.
66C-102	D	221	Description: Enhanced error handling failure on Eads chip.
66C-103	D	66C	Description: Enhanced error handling failure on adapter.
66C-201	D	66C 221	Description: Configuration register test failure.
66C-202	D	66C	Description: I/O register test failure.
66C-203	D	66C	Description: Adapter memory test failure.
66C-204	D	66C	Description: Adapter initialization test failure.
66C-205	D	66C	Description: Internal loopback test failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
66C-206	D	66C	Description: External wrap test failure (1000 Mbps).
66C-207	D	66C	Description: External wrap test failure (10 Mbps).
66C-208	D	66C	Description: External wrap test failure (100 Mbps).
66C-702	G	66C	Description: Error Log Analysis indicates that this device failed to initialize due to a problem with the EEPROM on the adapter.
66C-703	G	66C	Description: Error Log Analysis indicates that this device has failed to initialize due to a self-test failure.
66C-704	G	66C	Description: Error Log Analysis indicates that this device has failed to initialize due to firmware download error.
66D-101	D	66D 227	Description: The PCI wrap test failed. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
66D-102	D	66D E2A	Description: The POST indicates an adapter failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
66D-103	D	66D	Description: The POST indicates an adapter channel failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
66D-104	D	190	Description: The POST indicates a defective cable.
66D-105	D	B3A	Description: The POST indicates a defective backplane or external enclosure.
66D-106	D	722	Description: The POST indicates the last disk drive reconnected caused a channel failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
66D-108	D	221	Description: Enhanced error handling failure on bus.
66D-109	D	66D	Description: The test indicates an adapter failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
66D-110	D	722	Description: The disk reported a Predictive Failure Analysis error (PFA). Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
66D-111	D	722	Description: The disk drive has been failed by the adapter. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
66D-112	G	722	Description: ELA indicates that the disk reported a hard data error. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
66D-113	G	722	Description: ELA indicates that the disk reported a hard equipment error. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
66D-114	G	E2A	Description: ELA indicates a cache failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
66D-115	G	E3A	Description: ELA indicates that the cache battery is either low on power or has failed. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
66D-116	D	66D	Description: Failed to disable data scrub. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
66D-117	D	E2A	Description: POST indicates cache failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
66D-118	D	E2A	Description: Adapter test indicates a cache failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
66D-119	D	E2A	Description: Adapter test indicates that write cache is missing. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
66D-120	D	E2A	Description: Adapter test indicates that cache size is invalid. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
66D-121	D	E3A	Description: Adapter test indicates that the cache battery is low on power. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
66D-122	D	E3A	Description: Adapter test indicates cache battery failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
66D-123	D	66D	Description: ELA indicates an adapter failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
66D-400	F	66D 190 B3A 722	Description: The POST test indicates a channel failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
66E-100	D	66E	Description: Unable to configure the parent device.
66E-102	D	66E	Description: SCSI command Inquiry has failed. Unable to get Additional Vital Product Data.
66E-103	D	66E	Description: SCSI command Reserve has failed.
66E-104	D	66E	Description: SCSI command Mode Sense has failed.
66E-105	D	66E	Description: SCSI command Mode Select has failed.
66E-106	D	66E	Description: SCSI command Allow Media Removal has failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
66E-107	D	66E	Description: SCSI command Prevent Media Removal has failed.
66E-108	D	66E	Description: SCSI command Start Stop Unit has failed.
66E-109	D	66E	Description: SCSI command Test Unit Ready has failed.
66E-10A	D	66E	Description: SCSI command Send Diagnostic has failed.
66E-10B	D	66E	Description: SCSI command Release has failed.
66E-10F	D	66E	Description: Undetermined hardware error has occurred.
66E-200	D	66E B88	Description: Unable to configure the device.
66E-201	D	media 66E	Description: DVD-RAM drive is unable to eject the tray. Action: Verify that no external object prevents the drive from ejecting the tray. Verify that no media is stuck inside the drive. Otherwise Use MAP-0210.
66E-202	D	media 66E	Description: DVD-RAM drive is unable to load the tray. Action: Verify that no external object prevents the drive from loading the tray. Verify that the Test Media is inserted properly in the tray. Otherwise Use MAP-0210.
66E-203	D	media 66E	Description: DVD-RAM drive is unable to detect the Test Media. Action: Verify that the Test Media is inserted properly. Clean the drive. Run the test with another Test Media. Otherwise Use MAP-0210.
66E-204	D	66E B88	Description: A SCSI reservation conflict has occurred.
66E-205	D	media 66E	Description: The Random Write/Read/Compare Test has detected a medium error while testing the DVD-RAM Test Media. Action: Run Diagnostic on this drive with another DVD-RAM Test Media. Use MAP-0210.
66E-206	D	66E media	Description: The Random Write/Read/Compare Test has detected a hardware error while testing the DVD-RAM Test Media. Action: Run Diagnostic on this drive with another DVD-RAM Test Media. Use MAP-0210.
66E-207	D	media 66E	Description: The Random Read Test has detected a medium error while testing the CD-ROM Test Media. Action: Run Diagnostic on this drive with another CD-ROM Test Media. Use MAP-0210.
66E-208	D	66E media	Description: The Random Read Test has detected a hardware error while testing the CD-ROM Test Media. Action: Run Diagnostic on this drive with another CD-ROM Test Media. Use MAP-0210.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
66E-209	D	media 66E	Description: DVD-RAM drive is unable to determine the media type. Action: Verify that the proper Test Media is inserted. Clean the drive. Run Diagnostic on this drive with another Test Media. Use MAP-0210.
66E-20A	D	media 66E	Description: DVD-RAM drive has faulty write-protect-detection mechanism. Action: Verify that the DVD-RAM Test Media is not write-protected. Run Diagnostic on this drive with another DVD-RAM Test Media. Use MAP-0210.
66E-20B	D	media 66E	Description: DVD-RAM drive has detected a media error. Action: Verify that the DVD-RAM Test Media is inserted properly. Run Diagnostic on this drive with another DVD-RAM Test Media. Use MAP-0210.
66E-300	D	66E B88 190	Description: SCSI command timeout has occurred.
66E-301	D	B88 190 66E	Description: Description: Unit Attention has occurred.
66E-700	G	66E	Description: ELA indicates an irrecoverable hardware error.
66E-701	G	66E	Description: ELA indicates an undetermined hardware error.
670-102 to 670-114	D	670	Description: 18.2GB Differential SCSI disk drive problem.
670-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
670-117	D	670	Description: A write-protect error occurred.
670-118	D	670 B88	Description: A SCSI command time-out.
670-120 to 670-124	D	670	Description: A SCSI error.
670-126	D	670B88	Description: A software error was caused by a hardware failure.
670-128	G	670	Description: The error log analysis indicates a hardware failure.
670-129	G	190 670 B88 software	Description: Error log analysis indicates a SCSI bus problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
670-130	G	670	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
670-132	D	670	Description: A disk drive hardware error occurred.
670-134	D	B88 software	Description: The adapter failed to configure.
670-135	D	670 B88 software	Description: The device failed to configure.
670-136	D	670	Description: The certify operation failed.
670-137	D	670 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
671-102 to 671-114	D	671	Description: 18.2GB Differential SCSI disk drive problem.
671-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
671-117	D	671	Description: A write-protect error occurred.
671-118	D	671 B88	Description: A SCSI command time-out.
671-120 to 671-124	D	671	Description: A SCSI error.
671-126	D	671B88	Description: A software error was caused by a hardware failure.
671-128	G	671	Description: The error log analysis indicates a hardware failure.
671-129	G	190 671 B88 software	Description: Error log analysis indicates a SCSI bus problem.
671-130	G	671	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
671-132	D	671	Description: A disk drive hardware error occurred.
671-134	D	B88 software	Description: The adapter failed to configure.
671-135	D	671 B88 software	Description: The device failed to configure.
671-136	D	671	Description: The certify operation failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
671-137	D	671 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
672-102 to 672-114	D	672	Description: 18.2GB Differential SCSI disk drive problem.
672-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
672-117	D	672	Description: A write-protect error occurred.
672-118	D	672 B88	Description: A SCSI command time-out.
672-120 to 672-124	D	672	Description: A SCSI error.
672-126	D	672B88	Description: A software error was caused by a hardware failure.
672-128	G	672	Description: The error log analysis indicates a hardware failure.
672-129	G	190 672 B88 software	Description: Error log analysis indicates a SCSI bus problem.
672-130	G	672	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
672-132	D	672	Description: A disk drive hardware error occurred.
672-134	D	B88 software	Description: The adapter failed to configure.
672-135	D	672 B88 software	Description: The device failed to configure.
672-136	D	672	Description: The certify operation failed.
672-137	D	672 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
673-102 to 673-114	D	673	Description: 18.2GB Differential SCSI disk drive problem.
673-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
673-117	D	673	Description: A write-protect error occurred.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
673-118	D	673 B88	Description: A SCSI command time-out.
673-120 to 673-124	D	673	Description: A SCSI error.
673-126	D	673B88	Description: A software error was caused by a hardware failure.
673-128	G	673	Description: The error log analysis indicates a hardware failure.
673-129	G	190 673 B88 software	Description: Error log analysis indicates a SCSI bus problem.
673-130	G	673	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
673-132	D	673	Description: A disk drive hardware error occurred.
673-134	D	B88 software	Description: The adapter failed to configure.
673-135	D	673 B88 software	Description: The device failed to configure.
673-136	D	673	Description: The certify operation failed.
673-137	D	673 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
674-101	D	674 C94 C95	Description: IBM ARTIC960Rx PCI Adapter Central Processing Unit (CPU) test failure.
674-102	D	674 C94 C95	Description: IBM ARTIC960Rx PCI Adapter Timer test failure.
674-103	D	674 C94 C95	Description: IBM ARTIC960Rx PCI Adapter Bus Interface test failure.
674-104	D	C94 674 C95	Description: IBM ARTIC960Rx PCI Adapter Dynamic Random Access Memory (DRAM) test failure.
674-105	D	674 C94 C95	Description: IBM ARTIC960Rx PCI Adapter Memory Protection test failure.
674-106	D	674 C94 C95	Description: IBM ARTIC960Rx PCI Adapter Debug Port test failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
674-107	D	C95 674 C97	Description: Interface board wrap test failure.
674-110	D	C94 674 C95	Description: IBM ARTIC960Rx PCI Adapter Download Diagnostics test failure.
674-123	D	C95 C97	Description: Interface board non-wrap test failure.
674-150	D	674 software 227	Description: Device configuration failure.
674-151	D	674 software 227	Description: Device driver indicates a hardware failure.
674-152	D	674	Description: Failure and error in determining which type of IBM ARTIC960Rx PCI Adapter.
674-153	D	674 227 C94 software	Description: Error log analysis indicates a IBM ARTIC960Rx PCI Adapter failure. Action: Use the errpt command to check error log.
674-154	D	C94 674 C95	Description: IBM ARTIC960Rx PCI Adapter initialization failure.
674-155	D	674 C94 C95	Description: IBM ARTIC960Rx PCI Adapter initialization failure.
674-156	D	C95 674 C94	Description: IBM ARTIC960Rx PCI Adapter initialization failure.
674-157	D	C97 C95	Description: Cable wrap test failure.
675-101	D	675 C94 C95	Description: IBM ARTIC960Hx Adapter Central Processing Unit (CPU) test failure.
675-102	D	675 C94 C95	Description: IBM ARTIC960Hx Adapter Timer test failure.
675-103	D	675 C94 C95	Description: IBM ARTIC960Hx Adapter Bus Interface test failure.
675-104	D	C94 675 C95	Description: IBM ARTIC960Hx Adapter Dynamic Random Access Memory (DRAM) test failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
675-105	D	675 C94 C95	Description: IBM ARTIC960Hx Adapter Memory Protection test failure.
675-106	D	675 C94 C95	Description: IBM ARTIC960Hx Adapter Debug Port test failure.
675-107	D	C95 675 C97	Description: Interface board wrap test failure.
675-110	D	C94 675 C95	Description: IBM ARTIC960Hx Adapter Download Diagnostics test failure.
675-123	D	C95 675 C94	Description: Interface board non-wrap test failure.
675-150	D	675 software 227	Description: Device configuration failure.
675-151	D	675 software 227	Description: Device driver indicates a hardware failure.
675-152	D	675	Description: Failure and error in determining which type of IBM ARTIC960Hx Adapter.
675-153	D	675 227 C94 software	Description: Error log analysis indicates a IBM ARTIC960Hx Adapter failure. Action: Use the errpt command to check error log.
675-154	D	C94 675 C95	Description: IBM ARTIC960Hx Adapter initialization failure.
675-155	D	675 C94 C95	Description: IBM ARTIC960Hx Adapter initialization failure.
675-156	D	C95 675 C94	Description: IBM ARTIC960Hx Adapter initialization failure.
675-157	D	C98 C97 C95	Description: Cable wrap test failure.
677-101	D	677	Description: The Fibre Channel Adapter configuration failed.
677-102	D	677	Description: The Reset test failed.
677-103	D	677	Description: The Register test failed.
677-104	D	677	Description: The SRAM test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
677-105	D	677	Description: The Internal Wrap test failed.
677-106	D	677	Description: The Gigabaud Link Module (GLM) Wrap Test Failure.
677-107	D	677	Description: The External Wrap test failed.
677-108	D	221	Description: Enhanced Error Handling Failure on bus.
677-109	D	221	Description: Enhanced Error Handling Failure on EADs chip.
677-110	D	677	Description: Enhanced Error Handling Failure on adapter.
677-201	D	677 221	Description: The Configuration Register test failed.
677-202	D	677 221	Description: The Interrupt test failed.
677-203	D	677 221	Description: The PCI Wrap test failed.
677-204	D	677 221	Description: The DMA test failed.
677-205	D	677 221	Description: I/O error on a read/write operation.
677-701	G	677 221	Description: Error log analysis indicates that an error has occurred with the adapter.
677-703	G	677	Description: Error log analysis indicates that an unknown adapter error has occurred.
677-704	G	677	Description: Error log analysis indicates that an adapter error has occurred.
678-098	J	678	Description: Tape drive indicates an error.
678-099	J	678 B88	Description: Tape drive not found.
678-101	D	678	Description: Timeout while attempting to communicate with SCSI device.
678-102	D	678	Description: The SCSI device indicates busy.
678-103	D	678	Description: The SCSI device indicates a reservation conflict.
678-104	D	678	Description: The SCSI device indicates a check condition.
678-105	D	678	Description: An error is detected in request sense data.
678-107	D	678	Description: Sense data from the SCSI drive has unexpected data.
678-110	D	678	Description: The Reserve command failed.
678-111	D	678	Description: Invalid condition from the drive after a reserve.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
678-112	D	678	Description: The write-protect sensor test failed.
678-113	D	678	Description: Invalid condition from drive after a request sense.
678-114	D	678	Description: Timeout while attempting to communicate with the SCSI device.
678-120	D	678	Description: The Inquiry command failed.
678-130	D	678 media	Description: The Load command failed.
678-134	D	B88 software	Description: The adapter failed to configure.
678-135	D	678 media	Description: The Unload command failed.
678-140	D	678	Description: The Mode Select command failed.
678-150	D	678 media	Description: The Test Unit Ready command failed.
678-160	D	678 media	Description: The Send Diagnostic command failed.
678-161	D	678 B88	Description: Invalid condition from the drive after a reserve.
678-163	D	678 B88	Description: Invalid condition from the drive after a request sense.
678-164	D	678 B88	Description: Timeout while attempting to communicate with the SCSI device.
678-165	D	678 B88 276	Description: Write, Read and Compare Test failed.
678-166	D	678 B88 software	Description: Unable to configure the device.
678-167	D	678 B88	Description: An unexpected SCSI error occurred.
678-168	D	B88 software	Description: The adapter failed to configure.
678-169	D	678 media	Description: The Send Diagnostic command failed.
678-170	D	678 B88 media	Description: The Read, Write and Compare test failed.
678-180	D	678 media	Description: The Load command failed.
678-185	D	678 media	Description: The Unload command failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
678-190	D	678	Description: The Mode Select command failed.
678-200	D	678 media	Description: The Test Unit Ready command failed.
678-201	G	678 B88	Description: Error diagnosed from error log analysis.
678-210	D	678 B88	Description: The device configuration failed.
678-211	D	678 B88	Description: The device open failed.
678-220	D	678	Description: The Release command failed.
678-230	D	678	Description: The Request Sense command failed.
678-240	D	678	Description: The Openx command failed.
678-260	D	678	Description: The device configuration failed.
678-261	D	678	Description: The device open failed.
678-300	D	678 software	Description: The device configuration failed.
678-310	D	B88 678 software	Description: SCSI adapter configuration failed.
678-320	G	678 media	Description: Error log analysis indicates a failure.
678-411 to 678-423	D	678 B88 software	Description: A reservation conflict occurred.
678-511 to 678-523	D	678 B88	Description: The drive returned bad or non-extended sense data.
678-611 to 678-623	D	678 B88 software	Description: An adapter or bus I/O error occurred.
678-711 to 678-723	D	678 B88 software	Description: A device timeout error occurred.
679-102	D	679	Description: An unrecoverable media error occurred.
679-104	D	679	Description: The motor failed to restart.
679-105	D	679	Description: The drive did not become ready.
679-106	D	679	Description: The electronics card test failed.
679-108	D	679	Description: The bus test failed.
679-110	D	679	Description: The media format is corrupted.
679-112	D	679	Description: The diagnostic test failed.
679-114	D	679	Description: An unrecoverable hardware error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
679-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
679-117	D	679	Description: A write-protect error occurred.
679-118	D	679 B88	Description: A SCSI command time-out occurred.
679-120	D	679	Description: A SCSI busy or command error.
679-122	D	679	Description: A SCSI reservation conflict error.
679-124	D	679	Description: A SCSI check condition error occurred.
679-126	D	679 B88	Description: A software error was caused by a hardware failure.
679-128	G	679	Description: The error log analysis indicates a hardware failure.
679-129	G	190 679 B88 software	Description: Error log analysis indicates a SCSI bus problem.
679-130	G	679	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
679-132	D	679	Description: A disk drive hardware error occurred.
679-134	D	B88 software	Description: The adapter failed to configure.
679-135	D	679 B88 software	Description: The device failed to configure.
679-136	D	679	Description: The certify operation failed.
679-137	D	679 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
67B-100	D	67B	Description: POST failed: Catastrophic error detected.
67B-601	G	11A	Description: ELA indicates a low battery warning.
67B-602	G	67B	Description: ELA indicates a mesh violation - tamper.
67B-603	G	67B	Description: ELA indicates the coprocessor is held in a reset condition.
67B-604	G	67B	Description: ELA indicates a +3, +5, or +12 V over-voltage condition.
67B-605	G	67B	Description: ELA indicates an out-of-temperature specification.
67B-606	G	67B	Description: ELA indicates a X-ray or dead battery condition.
67B-607	G	67B	Description: The disk drive indicates an error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
67E-001	D	67E 221 Monitor/ Cable	Description: Adapter problem
67E-002	D	67E Monitor/ Cable	Description: Display problem
67E-003	D	software 67E	Description: Software error
67E-004	D	67E Monitor/ Cable	Description: The monitor test failed.
681-102	D	681	Description: An unrecoverable media error occurred.
681-104	D	681	Description: The motor failed to restart.
681-105	D	681	Description: The drive did not become ready.
681-106	D	681	Description: The electronics card test failed.
681-108	D	681	Description: The bus test failed.
681-110	D	681	Description: The media format is corrupted.
681-112	D	681	Description: The diagnostic test failed.
681-114	D	681	Description: An unrecoverable hardware error.
681-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
681-117	D	681	Description: A write-protect error occurred.
681-118	D	681 B88	Description: A SCSI command time-out occurred.
681-120	D	681	Description: A SCSI busy or command error.
681-122	D	681	Description: A SCSI reservation conflict error.
681-124	D	681	Description: A SCSI check condition error occurred.
681-126	D	681 B88	Description: A software error was caused by a hardware failure.
681-128	G	681	Description: The error log analysis indicates a hardware failure.
681-129	G	190 681 B88 software	Description: Error log analysis indicates a SCSI bus problem.
681-130	G	681	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
681-132	D	681	Description: A disk drive hardware error occurred.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
681-134	D	B88 software	Description: The adapter failed to configure.
681-135	D	681 B88 software	Description: The device failed to configure.
681-136	D	681	Description: The certify operation failed.
681-137	D	681 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
681-138	D	681	Description: Error log analysis indicates that the disk drive is operating at a higher than recommended temperature. Action: Check to be sure none of the air passages in the system covers are blocked, that no other system environmental warnings are occurring. Otherwise, use MAP 210.
682-111	D	682 B88	Description: Unable to reserve device.
682-112	D	682 B88	Description: Unable to do configuration.
682-113	D	682 B88	Description: Unable to open the device driver.
682-121	D	682	Description: The CD-ROM drive indicates an error.
682-122	D	682	Description: The CD-ROM drive indicates an error.
682-123	D	682	Description: The CD-ROM drive indicates an error.
682-125	D	682 B88	Description: The CD-ROM drive indicates an error.
682-126	D	682	Description: The CD-ROM drive indicates an error.
682-127	D	682	Description: The CD-ROM drive indicates an error.
682-128	D	682	Description: The CD-ROM drive indicates an error.
682-129	D	682	Description: The CD-ROM drive indicates an error.
682-150	D	Test Disc 682	Description: A media error was detected.
682-151	D	682 B88	Description: A command timeout was detected.
682-152	D	682	Description: A command reservation conflict was detected.
682-162	D	682	Description: The CD-ROM drive indicates an error.
682-171	D	682	Description: Unable to reserve device.
682-172	D	682	Description: Unable to do configuration.
682-173	D	682	Description: Unable to open device driver.
682-175	D	682	Description: The CD-ROM drive indicates an error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
682-198	D	682 B88	Description: Undefined error detected.
682-199	D	682	Description: Undefined error detected.
682-211	D	682	Description: The LED test failed.
682-281	D	682	Description: No tone during audio test.
682-301	G	682	Description: Errors found during ELA.
682-302	G	682 B88	Description: Errors found during ELA.
683-128	G	683	Description: Error Log Analysis Indicates hardware failure VSS2105 Model B09.
685-001	D	685 Monitor/ cable	Description: RGB_SCREEN_USER_FAIL
685-040	D	685 227 Monitor/ cable	Description: STATUS_POLL_TIMEOUT_ERROR
685-041	D	685 227 Monitor/ cable	Description: CRC_POLL_TIMEOUT_ERROR
685-060	D	software 685	Description: SVC_AIDS_INPUT_ERROR
685-081	D	software 685	Description: LOOP_COUNT_WAS_ZERO
685-082	D	software 685	Description: INVALID_TU_NUMBER
685-0B0	D	software 685	Description: ROM test failed
685-0B1	D	software 685	Description: ROM test failed
685-0D0	D	softwar 685	Description: INTERNAL_ERROR_DATA_SIZE_0
685-0D1	D	software 685	Description: INTERNAL_ERROR_DATA_SIZE_1
685-0D2	D	software 685	Description: INTERNAL_ERROR_DATA_SIZE_2
685-0D3	D	software 685	Description: INTERNAL_ERROR_DATA_SIZE_3
685-0D5	D	software 685	Description: ODM INIT FAILED

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
685-0D6	D	software 685	Description: ODM_OBJECT_SEARCH_FAILED
685-0D8	D	software 685	Description: ODM_GET_OBJECT_FAILED
685-0D9	D	software 685	Description: ODM_TERM_FAILED
685-0DB	D	software 685	Description: ILLEGAL_RESOLUTION_SPECIFIED
685-0E5	D	software 685	Description: AIXGSC_MGA_START_INTERRUPT_FAILED
685-0E6	D	software 685	Description: AIXGSC_MGA_STOP_INTERRUPT_FAILED
685-0E7	D	software 685	Description: MDD_OPEN_BUS_FAILED
685-0E8	D	software 685	Description: MDD_IOCTL_ERROR
685-0E9	D	software 685	Description: OPEN_RCM_ERROR
685-0EA	D	software 685	Description: IOCTL_GSC_HANDLE_FAILED
685-0EB	D	software 685	Description: AIXGSC_MAKE_GP_FAILED
685-0EC	D	software 685	Description: AIXGSC_UNMAKE_GP_FAILED
685-0ED	D	software 685	Description: DEVICE_BUSY_ERROR
685-0EE	D	software 685	Description: AIXGSC_MGA_SET_DISPLAY_FAILED
685-100	D	685 227 Monitor/ cable	Description: REG_32_BIT_PRTN_ERROR
685-101	D	685 227 Monitor/ cable	Description: REG_32_BIT_ADDR_UNIQ_ERROR
685-102	D	685 227 Monitor/ cable	Description: REG_8_BIT_PTRN_ERROR
685-103	D	685 227 Monitor/ cable	Description: REG_8_BIT_ADDR_UNIQ_ERROR

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
685-104	D	685 227 Monitor/ cable	Description: CRTC_REGS_PTRN_ERROR
685-105	D	685 227 Monitor/ cable	Description: CRTC_REGS_ADDR_UNIQ_ERROR
685-106	D	685 227 Monitor/ cable	Description: CRTCEXT_REGS_PTRN_ERROR
685-107	D	685 227 Monitor/ cable	Description: CRTCEXT_REGS_ADDR_UNIQ_ERROR
685-108	D	685 227 Monitor/ cable	Description: RAMDAC_REGS_PTRN_ERROR
685-109	D	685 227 Monitor/ cable	Description: RAMDAC_REGS_ADDR_UNIQ_ERROR
685-10A	D	685 227 Monitor/ cable	Description: PALETTE_REGS_PTRN_ERROR
685-10B	D	685 227 Monitor/ cable	Description: PALETTE_REGS_ADDR_UNIQ_ERROR
685-200	D	685 227	Description: ROM test failed
685-201	D	685 227	Description: ROM test failed
685-202	D	685 227	Description: ROM test failed
685-203	D	685 227	Description: ROM test failed
685-204	D	685 227	Description: ROM test failed
685-205	D	685 227	Description: ROM test failed

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
685-206	D	685 227	Description: ROM test failed
685-207	D	685 227	Description: ROM test failed
685-208	D	685 227	Description: ROM test failed
685-209	D	685 227	Description: ROM test failed
685-20B	D	685 227	Description: ROM test failed
685-400	D	685 227 Monitor/ cable	Description: SGRAM_RED_SCREEN_ERROR
685-401	D	685 227 Monitor/ cable	Description: SGRAM_GREEN_SCREEN_ERROR
685-402	D	685 227 Monitor/ cable	Description: SGRAM_BLUE_SCREEN_ERROR
685-403	D	685 227 Monitor/ cable	Description: SGRAM_WHITE_SCREEN_ERROR
685-404	D	685 227 Monitor/ cable	Description: SGRAM_INCREMENTING_SCREEN_ERROR
685-500	D	685 227 Monitor/ cable	Description: BLIT_TEST_ERROR_640 x 480
685-501	D	685 227 Monitor/ cable	Description: BLIT_TEST_ERROR_800 x 600
685-502	D	685 227 Monitor/ cable	Description: BLIT_TEST_ERROR_1024 x 768

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
685-503	D	685 227 Monitor/ cable	Description: BLIT_TEST_ERROR_1280 x 1024
685-504	D	software 685	Description: INTERNAL_ERROR_DATA_SIZE_4
685-600	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_640 x 480_A
685-601	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_800 x 600_A
685-602	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_1024 x 768_A
685-603	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_1280 x 1024_A
685-604	D	685 227 Monitor/ cable	Description: INTERNAL_ERROR_DATA_SIZE_5
685-605	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_640 x 480_B
685-606	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_800 x 600_B
685-607	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_1024 x 768_B
685-608	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_1280 x 1024_B
685-609	D	software 685	Description: INTERNAL_ERROR_DATA_SIZE_6

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
685-60A	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_640 x 480_C
685-60B	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_800 x 600_C
685-60C	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_1024 x 768_C
685-60D	D	685 227 Monitor/ cable	Description: DRAW_TEST_ERROR_1280 x 1024_C
685-60E	D	software 685	Description: INTERNAL_ERROR_DATA_SIZE_7
686-114	D	686	Description: The register verification test failed.
686-124	D	686	Description: The adapter RAM verification test failed.
686-152	D	686 D57	Description: The data wrap communication test failed.
686-153	D	686	Description: The modem control line test failed.
686-252	D	686	Description: The data wrap communication test failed.
686-253	D	686	Description: The modem control line test failed.
686-501	D	686	Description: Adapter Reset failed
686-511	D	686	Description: Adapter to host memory test failed (byte tag test)
686-512	D	686	Description: Adapter to host memory test failed (word tag test)
686-513	D	686	Description: Adapter to host memory test failed (byte pattern test)
686-514	D	686	Description: Adapter to host memory test failed (word pattern test)
686-521	D	686	Description: Adapter BIOS POST CPU failed
686-522	D	686	Description: Adapter BIOS POST Checksum failed
686-523	D	686	Description: Adapter BIOS POST Timer failed
686-524	D	686	Description: Adapter BIOS POST RAM failed
686-526	D	686	Description: Adapter BIOS POST Async Ports failed
686-527	D	686	Description: Adapter BIOS test failed
686-528	D	686	Description: Adapter BIOS Reset failed

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
686-529	D	686	Description: Adapter BIOS Download failed
686-531	D	686	Description: Adapter BIOS Command failed
686-533	D	686	Description: Adapter BIOS Timer test failed
686-534	D	686	Description: Adapter BIOS RAM test failed
686-541	D	686	Description: Port async internal loopback test failed (general)
686-542	D	686	Description: Port async internal loopback test failed (no response from the port)
686-551	D	686	Description: Port async external loopback test failed (general)
686-552	D	686	Description: Port async external loopback test failed (data signals)
686-553	D	686	Description: Port async external loopback test failed (control signals)
686-554	D	686	Description: Port async external loopback test failed (modem signals)
686-555	D	686	Description: Port async external loopback test failed (no response from port).
686-901 to 686-920	D	software 686	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 686; otherwise, suspect a software problem.
686-921	D	686 software	Description: The adapter failed to configure.
686-922 to 686-924	D	software 686	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 686; otherwise, suspect a software problem.
686-925	D	686	Description: The adapter failed to configure. software
686-926 to 686-950	D	software 686	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 686; otherwise, suspect a software problem.
687-111	D	687	Description: The controller register test failed.
687-114	D	687	Description: The register verification test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
687-124	D	687	Description: The adapter RAM verification test failed.
687-144	D	687	Description: The sync line test failed.
687-152	D	837 684 687 152	Description: The data wrap communication test failed.
687-153	D	687	Description: The modem control line test failed.
687-244	D	687	Description: The sync line test failed.
687-252	D	687	Description: The data wrap communication test failed.
687-253	D	687	Description: The modem control line test failed.
687-501	D	687	Description: Adapter Reset failed.
687-502	D	687	Description: Adapter Fuse failed.
687-511	D	687	Description: Adapter to host memory test failed (byte tag test).
687-512	D	687	Description: Adapter to host memory test failed (word tag test).
687-513	D	687	Description: Adapter to host memory test failed (byte pattern test).
687-514	D	687	Description: Adapter to host memory test failed (word pattern test).
687-521	D	687	Description: Adapter BIOS POST CPU failed.
687-522	D	687	Description: Adapter BIOS POST Checksum failed.
687-523	D	687	Description: Adapter BIOS POST Timer failed.
687-524	D	687	Description: Adapter BIOS POST RAM failed.
687-525	D	687	Description: Adapter BIOS POST Sync Line failed.
687-527	D	687	Description: Adapter BIOS test failed.
687-528	D	687	Description: Adapter BIOS Reset failed.
687-529	D	687	Description: Adapter BIOS Download failed.
687-531	D	687	Description: Adapter BIOS Command failed.
687-533	D	687	Description: Adapter BIOS Timer test failed.
687-534	D	687	Description: Adapter BIOS RAM test failed.
687-541	D	687	Description: Port sync internal loopback test failed.
687-551	D	687	Description: Port sync external loopback test failed.
687-600	D	837	Description: 232RAN status test failed.
687-700	D	684	Description: 422RAN status test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
687-901 to 687-920	D	software 687	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 687; otherwise, suspect a software problem.
687-921	D	software 687	Description: The adapter failed to configure.
687-922 to 687-924	D	software 687	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 687; otherwise, suspect a software problem.
687-925	D	687 software	Description: The adapter failed to configure.
687-926 to 687-950	D	software 687	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 687; otherwise, suspect a software problem.
689-102	D	689	Description: An unrecoverable media error occurred.
689-104	D	689	Description: The motor failed to restart.
689-105	D	689	Description: The drive did not become ready.
689-106	D	689	Description: The electronics card test failed.
689-108	D	689	Description: The bus test failed.
689-110	D	689	Description: The media format is corrupted.
689-112	D	689	Description: The diagnostic test failed.
689-114	D	689	Description: An unrecoverable hardware error.
689-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
689-117	D	689	Description: A write-protect error occurred.
689-118	D	689 B88	Description: A SCSI command time-out occurred.
689-120	D	689	Description: A SCSI busy or command error.
689-122	D	689	Description: A SCSI reservation conflict error.
689-124	D	689	Description: A SCSI check condition error occurred.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
689-126	D	689 B88	Description: A software error was caused by a hardware failure.
689-128	G	689	Description: The error log analysis indicates a hardware failure.
689-129	G	190 689 B88 software	Description: Error log analysis indicates a SCSI bus problem.
689-130	G	689	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
689-132	D	689	Description: A disk drive hardware error occurred.
689-134	D	B88 software	Description: The adapter failed to configure.
689-135	D	689 B88 software	Description: The device failed to configure.
689-136	D	689	Description: The certify operation failed.
689-137	D	689 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
68C-101	D	68C	Description: Timeout while attempting to communicate with SCSI device.
68C-102	D	68C	Description: The SCSI device indicates busy.
68C-103	D	68C	Description: The SCSI device indicates a reservation conflict.
68C-104	D	68C	Description: The SCSI device indicates a check condition.
68C-105	D	68C	Description: An error is detected in request sense data.
68C-107	D	68C	Description: Sense data from the SCSI drive has unexpected data.
68C-110	D	68C	Description: The Reserve command failed.
68C-111	D	68C	Description: Invalid condition from the drive after a reserve.
68C-112	D	68C	Description: The write-protect sensor test failed.
68C-113	D	68C	Description: Invalid condition from drive after a request sense.
68C-114	D	68C	Description: Timeout while attempting to communicate with the SCSI device.
68C-120	D	68C	Description: The Inquiry command failed.
68C-130	D	68C media	Description: The Load command failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
68C-134	D	B88 software	Description: The adapter failed to configure.
68C-135	D	68C media	Description: The Unload command failed.
68C-140	D	68C	Description: The Mode Select command failed.
68C-150	D	68C media	Description: The Test Unit Ready command failed.
68C-160	D	68C media	Description: The Send Diagnostic command failed.
68C-161	D	68C B88	Description: Invalid condition from the drive after a reserve.
68C-163	D	68C B88	Description: Invalid condition from the drive after a request sense.
68C-164	D	68C B88	Description: Timeout while attempting to communicate with the SCSI device.
68C-165	D	68C B88 276	Description: Write, Read and Compare Test failed.
68C-166	D	68C B88 software	Description: Unable to configure the device.
68C-167	D	68C B88	Description: An unexpected SCSI error occurred.
68C-168	D	B88 software	Description: The adapter failed to configure.
68C-169	D	68C media	Description: The Send Diagnostic command failed.
68C-170	D	68C B88 media	Description: The Read, Write and Compare test failed.
68C-180	D	68C media	Description: The Load command failed.
68C-185	D	68C media	Description: The Unload command failed.
68C-190	D	68C	Description: The Mode Select command failed.
68C-200	D	68C media	Description: The Test Unit Ready command failed.
68C-201	G	68C B88	Description: Error diagnosed from error log analysis.
68C-210	D	68C B88	Description: The device configuration failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
68C-211	D	68C B88	Description: The device open failed.
68C-220	D	68C	Description: The Release command failed.
68C-230	D	68C	Description: The Request Sense command failed.
68C-240	D	68C	Description: The Openx command failed.
68C-260	D	68C	Description: The device configuration failed.
68C-261	D	68C	Description: The device open failed.
68C-300	D	68C software	Description: The device configuration failed.
68C-310	D	B88 68C software	Description: SCSI adapter configuration failed.
68C-320	G	68C media	Description: Error log analysis indicates a failure.
68C-411 to 68C-423	D	68C B88 software	Description: A reservation conflict occurred.
68C-511 to 68C-523	D	68C B88	Description: The drive returned bad or non-extended sense data.
68C-611 to 68C-623	D	68C B88 software	Description: An adapter or bus I/O error occurred.
68C-711 to 68C-723	D	68C B88 software	Description: A device timeout error occurred.
68E-001	D	Software 68E	Description: Software error.
68E-002	D	68E Software	Description: Adapter failure.
68E-003	D	68E 227	Description: Adapter failure.
68E-004	D	68E Monitor/ Cable	Description: Display failure.
68E-005	D	68E 227 Monitor/ Cable	Description: Adapter failure.
690-102	D	690	Description: An unrecoverable media error occurred.
690-104	D	690	Description: The motor failed to restart.
690-105	D	690	Description: The drive did not become ready.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
690-106	D	690	Description: The electronics card test failed.
690-108	D	690	Description: The bus test failed.
690-110	D	690	Description: The media format is corrupted.
690-112	D	690	Description: The diagnostic test failed.
690-114	D	690	Description: An unrecoverable hardware error.
690-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
690-117	D	690	Description: A write-protect error occurred.
690-118	D	690 B88	Description: A SCSI command time-out occurred.
690-120	D	690	Description: A SCSI busy or command error.
690-122	D	690	Description: A SCSI reservation conflict error.
690-124	D	690	Description: A SCSI check condition error occurred.
690-126	D	690 B88	Description: A software error was caused by a hardware failure.
690-128	G	690	Description: The error log analysis indicates a hardware failure.
690-129	G	190 690 B88 software	Description: Error log analysis indicates a SCSI bus problem.
690-130	G	690	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
690-132	D	690	Description: A disk drive hardware error occurred.
690-134	D	B88 software	Description: The adapter failed to configure.
690-135	D	690 B88 software	Description: The device failed to configure.
690-136	D	690	Description: The certify operation failed.
690-137	D	690 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
691-200	D	691 227	Description: The ATM 25Mbps Adapter open test failed.
691-202	D	691 227	Description: The ATM 25Mbps Adapter register test failed.
691-203	D	691 227	Description: The ATM 25Mbps Adapter memory test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
691-204	D	691 227	Description: The ATM 25Mbps Adapter NVRAM test failed.
691-205	D	691 227	Description: The ATM 25Mbps Adapter interrupt test failed.
691-206	D	691 227	Description: The ATM 25Mbps Adapter wrap test failed.
691-210	D	691 227	Description: The ATM 25Mbps Adapter close test failed.
691-220	D	691 227	Description: The ATM 25Mbps Adapter was not found. Action: Re-install the ATM 25Mbps Adapter and re-run the test. If the error continues, use MAP 210.
691-300	D	Wrap Plug 691 227	Description: The ATM 25Mbps Adapter wrap test failed. Action: Re-install the wrap plug and re-run the test. If the error continues, use MAP 210.
691-700	G	691 227	Description: Error log analysis reported a hardware error.
692-110	D	692	Description: The Reserve command failed.
692-120	D	692	Description: The Inquiry command failed.
692-130	D	692 media	Description: The Load command failed.
692-135	D	692 media	Description: The Unload command failed.
692-140	D	692	Description: The Mode Select command failed.
692-150	D	692 media	Description: The Test Unit Ready command failed.
692-160	D	692 media	Description: The Send Diagnostic command failed.
692-169	D	692 media	Description: The Send Diagnostic command failed.
692-170	D	692 B88 media	Description: The Read, Write and Compare test failed.
692-180	D	692 media	Description: The Load command failed.
692-185	D	692 media	Description: The Unload command failed.
692-190	D	692	Description: The Mode Select command failed.
692-200	D	692 media	Description: The Test Unit Ready command failed.
692-210	D	692 B88	Description: The device configuration failed.
692-220	D	692	Description: The Release command failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
692-230	D	692	Description: The Request Sense command failed.
692-240	D	692	Description: The Openx command failed.
692-300	D	692 software	Description: The device configuration failed.
692-310	D	B88 692 software	Description: SCSI adapter configuration failed.
692-320	G	692 media	Description: Error log analysis indicates a failure.
692-411 to 692-423	D	692 B88 software	Description: A reservation conflict occurred.
692-511 to 692-523	D	692 B88	Description: The drive returned bad or non-extended sense data.
692-611 to 692-623	D	692 B88 software	Description: An adapter or bus I/O error occurred.
692-711 to 692-723	D	692 B88 software	Description: A device timeout error occurred.
693-100	D	693 227	Description: Adapter open failed.
693-101	D	693 227	Description: Adapter config register test failed.
693-102	D	693 227	Description: Adapter reset failed.
693-103	D	693 227	Description: Adapter I/O register test failed.
693-104	D	693 227	Description: Adapter microcode download test failed.
693-105	D	693 227	Description: Adapter internal wrap test failed.
693-106	D	693 227	Description: Adapter close failed.
697-100	D	697 software 227	Description: Charm memory write failure.
697-101	D	697 software 227	Description: Charm memory read failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
697-102	D	697 software 227	Description: PCI configuration register write failure.
697-103	D	697 software 227	Description: Charm software reset failure.
697-104	D	697 software 227	Description: Packet memory error.
697-105	D	697 software 227	Description: Control memory failure.
697-106	D	697	Description: Link-R detected bad parity.
697-107	D	697	Description: Suni detected bad parity.
697-108	D	697	Description: Suni initialization failure.
697-109	D	Wrap Plug 697	Description: Loss of light detected in Link test. Action: Check wrap plug installation.
697-10B	D	Wrap Plug 697	Description: External Loopback failed Action: Check wrap plug installation.
697-10C	D	697 software 227	Description: Internal Loopback failed
697-10D	D	697 227 software	Description: DMS failed
697-121	D	697	Description: Adapter memory test failure
697-122	D	697	Description: Adapter checksum failure
697-123	D	697	Description: Internal wrap test failure
697-124	D	697	Description: External wrap test failure
697-125	D	221	Description: Enhanced Error Handling failure on bus
697-126	D	221	Description: Enhanced Error Handling failure on EADS chip
697-127	D	697	Description: Enhanced Error Handling failure on adapter
697-1FF	D	697 software 227	Description: EPROM checksum failed
697-200	D	software 697 227	Description: Klog error
697-201	D	software 697 227	Description: ASL error

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
697-202	D	software 697 227	Description: ODM Initialization error
697-203	D	software 697 227	Description: Diagnostic configuration failure.
697-205	D	software 697 227	Description: Error in diag open.
697-206	D	software 697 227	Description: Error in releasing adapter
697-221	D	697 221	Description: Hardware failure opening the adapter
697-222	D	697 221	Description: Enhanced Error Handling failure opening the adapter
697-223	D	697 221	Description: Interrupt test failure
697-224	D	697 221	Description: Adapter DMA test failure
697-701	G	697 221	Description: Error Log Analysis indicates an I/O failure on the adapter.
697-702	G	697	Description: Error Log Analysis indicates an unrecovered interrupt error.
698-100	D	698 software 227	Description: Charm memory write failure.
698-101	D	698 software 227	Description: Charm memory read failure.
698-102	D	698 software 227	Description: PCI configuration register write failure.
698-103	D	698 software 227	Description: Charm software reset failure.
698-104	D	698 software 227	Description: Packet memory error
698-105	D	698 software 227	Description: Control memory failure.
698-106	D	698	Description: Link-R detected bad parity.
698-107	D	698	Description: Suni detected bad parity.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
698-108	D	698	Description: Suni initialization failure.
698-109	D	Wrap Plug 698	Description: Loss of light detected in Link test. Action: Check wrap plug installation.
698-10B	D	Wrap Plug 698	Description: External Loopback failed Action: Check wrap plug installation.
698-10C	D	698 software 227	Description: Internal Loopback failed
698-10D	D	698 227 software	Description: DMS failed
698-121	D	698	Description: Adapter memory test failure
698-122	D	698	Description: Adapter checksum failure
698-123	D	698	Description: Internal wrap test failure
698-124	D	698	Description: External wrap test failure
698-125	D	221	Description: Enhanced Error Handling failure on bus
698-126	D	221	Description: Enhanced Error Handling failure on EADS chip
698-127	D	698	Description: Enhanced Error Handling failure on adapter
698-1FF	D	698 software 227	Description: EPROM checksum failed
698-200	D	software 698 227	Description: Klog error
698-201	D	software 698 227	Description: ASL error
698-202	D	software 698 227	Description: ODM Initialization error
698-203	D	software 698 227	Description: Diagnostic configuration failure.
698-205	D	software 698 227	Description: Error in diag open.
698-206	D	software 698 227	Description: Error in releasing adapter
698-221	D	698 221	Description: Hardware failure opening the adapter

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
698-222	D	698 221	Description: Enhanced Error Handling failure opening the adapter
698-223	D	698 221	Description: Interrupt test failure
698-224	D	698 221	Description: Adapter DMA test failure
698-701	G	698 221	Description: Error Log Analysis indicates an I/O failure on the adapter.
698-702	G	698	Description: Error Log Analysis indicates an unrecovered interrupt error.
699-100	D	699	Description: An error was found on the adapter
699-110	G	699	Description: Error Log analysis indicates a hardware error.
699-120	D	699	Description: Adapter hardware has caused a software failure.
69b-101	D	69b	Description: EPROM test failure.
69b-102	D	69b	Description: Adapter SDRAM failure.
69b-103	D	69b	Description: Adapter checksum failure.
69b-104	D	69b	Description: Adapter memory test failure.
69b-105	D	69b	Description: Adapter buffer test failure.
69b-106	D	69b	Description: Adapter cache test failure.
69b-107	D	69b	Description: Internal loopback test failure.
69b-108	D	69b	Description: External wrap test failure.
69b-109	D	221	Description: Enhanced Error Handling failure on bus.
69b-110	D	221	Description: Enhanced Error Handling failure on Eads chip.
69b-111	D	69b	Description: Enhanced Error Handling failure on adapter.
69b-201	D	69b 221	Description: Hardware failure opening adapter.
69b-202	D	69b 221	Description: Interrupt test failure.
69b-203	D	69b 221	Description: Adapter DMA test failure.
69b-204	D	69b 221	Description: Enhanced error handling failure opening the adapter.
69b-701	G	69b	Description: Error Log Analysis indicates an I/O failure on the adapter.
69d-101	D	69d	Description: EPROM test failure.
69d-102	D	69d	Description: Adapter SDRAM failure.
69d-103	D	69d	Description: Adapter checksum failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
69d-104	D	69d	Description: Adapter memory test failure.
69d-105	D	69d	Description: Adapter buffer test failure.
69d-106	D	69d	Description: Adapter cache test failure.
69d-107	D	69d	Description: Internal loopback test failure.
69d-108	D	69d	Description: External wrap test failure.
69d-109	D	221	Description: Enhanced Error Handling failure on bus.
69d-110	D	221	Description: Enhanced Error Handling failure on Eads chip.
69d-111	D	69d	Description: Enhanced Error Handling failure on adapter.
69d-201	D	69d 221	Description: Hardware failure opening adapter.
69d-202	D	69d 221	Description: Interrupt test failure.
69d-203	D	69d 221	Description: Adapter DMA test failure.
69d-204	D	69d 221	Description: Enhanced error handling failure opening the adapter.
69d-701	G	69d	Description: Error Log Analysis indicates an I/O failure on the adapter.

Chapter 31. SRNs 700-102 through 89c-302

Note: Some SRNs in this chapter may have 4 rather than 3 digits after the dash (-).

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
700-102 to 700-114	D	700	Description: 1.1 GB single-ended disk drive problem.
700-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
700-117	D	700	Description: A write-protect error occurred.
700-118	D	700 B88	Description: A SCSI command time-out.
700-120 to 700-124	D	700	Description: A SCSI error.
700-126	D	700 B88	Description: A software error was caused by a hardware failure.
700-128	G	700	Description: The error log analysis indicates a hardware failure.
700-129	G	190 700 B88 software	Description: Error log analysis indicates a SCSI bus problem.
700-130	G	700	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
700-132	D	700	Description: A disk drive hardware error occurred.
700-134	D	B88 software	Description: The adapter failed to configure.
700-135	D	700 B88 software	Description: The device failed to configure.
700-136	D	700	Description: The certify operation failed.
700-137	D	700 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
701-102 to 701-114	D	701	Description: 1.1 GB 16-bit single-ended disk drive problem.
701-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
701-117	D	701	Description: A write-protect error occurred.
701-118	D	701 B88	Description: A SCSI command time-out.
701-120 to 701-124	D	701	Description: A SCSI error.
701-126	D	701 B88	Description: A software error was caused by a hardware failure.
701-128	G	701	Description: The error log analysis indicates a hardware failure.
701-129	G	190 701 B88 software	Description: Error log analysis indicates a SCSI bus problem.
701-130	G	701	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
701-132	D	701	Description: A disk drive hardware error occurred.
701-134	D	B88 software	Description: The adapter failed to configure.
701-135	D	701 B88 software	Description: The device failed to configure.
701-136	D	701	Description: The certify operation failed.
701-137	D	701 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
702-102 to 702-114	D	702	Description: 1.1 GB 16-bit differential disk drive problem.
702-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
702-117	D	702	Description: A write-protect error occurred.
702-118	D	702 B88	Description: A SCSI command time-out.
702-120 to 702-124	D	702	Description: A SCSI error.
702-126	D	702B88	Description: A software error was caused by a hardware failure.
702-128	G	702	Description: The error log analysis indicates a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
702-129	G	190 702 B88 software	Description: Error log analysis indicates a SCSI bus problem.
702-130	G	702	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
702-132	D	702	Description: A disk drive hardware error occurred.
702-134	D	B88 software	Description: The adapter failed to configure.
702-135	D	702 B88 software	Description: The device failed to configure.
702-136	D	702	Description: The certify operation failed.
702-137	D	702 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
703-102 to 703-114	D	703	Description: 2.2 GB single-ended disk drive problem.
703-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
703-117	D	703	Description: A write-protect error occurred.
703-118	D	703 B88	Description: A SCSI command time-out.
703-120 to 703-124	D	703	Description: A SCSI error.
703-126	D	703 B88	Description: A software error was caused by a hardware failure.
703-128	G	703	Description: The error log analysis indicates a hardware failure.
703-129	G	190 703 B88 software	Description: Error log analysis indicates a SCSI bus problem.
703-130	G	703	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
703-132	D	703	Description: A disk drive hardware error occurred.
703-134	D	B88 software	Description: The adapter failed to configure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
703-135	D	703 B88 software	Description: The device failed to configure.
703-136	D	703	Description: The certify operation failed.
703-137	D	703 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
704-102 to 704-114	D	704	Description: 2.2 GB 16-bit single-ended disk drive problem.
704-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
704-117	D	704	Description: A write-protect error occurred.
704-118	D	704 B88	Description: A SCSI command time-out.
704-120 to 704-124	D	704	Description: A SCSI error.
704-126	D	704 B88	Description: A software error was caused by a hardware failure.
704-128	G	704	Description: The error log analysis indicates a hardware failure.
704-129	G	190 704 B88 software	Description: Error log analysis indicates a SCSI bus problem.
704-130	G	704	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
704-132	D	704	Description: A disk drive hardware error occurred.
704-134	D	B88 software	Description: The adapter failed to configure.
704-135	D	704 B88 software	Description: The device failed to configure.
704-136	D	704	Description: The certify operation failed.
704-137	D	704 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
705-102 to 705-114	D	705	Description: 2.2 GB 16-bit differential disk drive problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
705-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
705-117	D	705	Description: A write-protect error occurred.
705-118	D	705 B88	Description: A SCSI command time-out.
705-120 to 705-124	D	705	Description: A SCSI error.
705-126	D	705 B88	Description: A software error was caused by a hardware failure.
705-128	G	705	Description: The error log analysis indicates a hardware failure.
705-129	G	190 705 B88 software	Description: Error log analysis indicates a SCSI bus problem.
705-130	G	705	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
705-132	D	705	Description: A disk drive hardware error occurred.
705-134	D	B88 software	Description: The adapter failed to configure.
705-135	D	705 B88 software	Description: The device failed to configure.
705-136	D	705	Description: The certify operation failed.
705-137	D	705 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
706-102 to 706-114	D	706	Description: 4.5 GB 16-bit single-ended disk drive problem.
706-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
706-117	D	706	Description: A write-protect error occurred.
706-118	D	706 B88	Description: A SCSI command time-out.
706-120 to 706-124	D	706	Description: A SCSI error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
706-126	D	706 B88	Description: A software error was caused by a hardware failure.
706-128	G	706	Description: The error log analysis indicates a hardware failure.
706-129	G	190 706 B88 software	Description: Error log analysis indicates a SCSI bus problem.
706-130	G	706	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
706-132	D	706	Description: A disk drive hardware error occurred.
706-134	D	B88 software	Description: The adapter failed to configure.
706-135	D	706 B88 software	Description: The device failed to configure.
706-136	D	706	Description: The certify operation failed.
706-137	D	706 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
707-102 to 707-114	D	707	Description: Any of the following may have occurred: an unrecoverable media error, motor failed to restart, the drive did not become ready, electronics card test failed, bus test failed, media format failed, or diagnostic test failed.
707-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
707-117	D	707	Description: A write-protect error occurred.
707-118	D	707 B88	Description: A SCSI command time-out.
707-120 to 707-124	D	707	Description: A SCSI error.
707-126	D	707 B88	Description: A software error was caused by a hardware failure.
707-128	G	707	Description: The error log analysis indicates a hardware failure.
707-129	G	190 707 B88 software	Description: Error log analysis indicates a SCSI bus problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
707-130	G	707	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
707-132	D	707	Description: A disk drive hardware error occurred.
707-134	D	B88 software	Description: The adapter failed to configure.
707-135	D	707 B88 software	Description: The device failed to configure.
707-136	D	707	Description: The certify operation failed.
707-137	D	707 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
709-101	D	709	Description: Cannot run the test because the device driver detected a hardware error.
709-111	D	709 221	Description: Could not do the test because the device driver detected a hardware error.
709-112	D	709 221	Description: Unable to determine the type of adapter from the VPD.
709-113	D	709	Description: The VPD verification test failed.
709-114	D	709	Description: The register verification test failed.
709-115	D	709	Description: The VPD verification test failed.
709-116	D	D57 709	Description: The 128-port controller line test failed.
709-117	D	684	Diagnostics: Remote Async Node test failed.
709-118	D	837	Description: Remote async node test failed.
709-119	F	709	Description: Sync line termination test failed.
709-151	D	837	Description: Could not perform because the device driver detected a hardware error.
709-152	D	837 836	Description: The data wrap communication test failed.
709-153	D	837	Description: The modem control line test failed.
709-154	D	684 709	Diagnostics: Cannot run the test because the device driver detected a hardware error.
709-155	D	684 709 152	Diagnostics: The data wrap communications test failed.
709-161	D	266	Description: Could not perform because the device driver detected a hardware error.
709-162	D	266	Description: The data wrap communication test failed.
709-163	D	266	Description: The modem control line test failed.
709-164	D	D06	Description: The data wrap communication test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
709-171	D	259	Description: Could not perform because the device driver detected a hardware error.
709-172	D	259	Description: The data wrap communication test failed.
709-173	D	259	Description: The modem control line test failed.
709-174	D	263	Description: Cannot run the test because the device driver detected a hardware error.
709-175	D	263	Description: The data wrap communications test failed.
709-181	D	261	Description: Could not perform because the device driver detected a hardware error.
709-182	D	261	Description: The data wrap communication test failed.
709-183	D	261	Description: The modem control line test failed.
709-251	D	709 837	Description: Could not perform because the device driver detected a hardware error.
709-252	D	709 837	Description: The data wrap communication test failed.
709-253	D	709 837	Description: The modem control line test failed.
709-254	D	709 684	Diagnostics: Cannot run the test because the device driver detected a hardware error while running the Remote Async Node wrap test.
709-255	D	709 684	Diagnostics: The data wrap communications test failed while running the Remote Async Node wrap test.
709-271	D	709 837	Description: Could not perform because the device driver detected a hardware error.
709-272	D	709 837	Description: The data wrap communication test failed.
709-273	D	709 837	Description: The modem control line test failed.
709-274	D	709 684	Diagnostics: Cannot run the test because the device driver detected a hardware error while running the Printer/Terminal cable wrap test.
709-275	D	709 684	Diagnostics: The data wrap communications test failed while running the Printer/Terminal cable wrap test.
709-281	D	709 837	Description: Could not perform because the device driver detected a hardware error.
709-282	D	709 837	Description: The data wrap communication test failed.
709-283	D	709 837	Description: The modem control line test failed.
709-481	D	D56	Description: Could not do the test because the device driver detected a hardware error.
709-482	D	D56	Description: The data wrap communication test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
709-483	D	D56	Description: The modem control line test failed.
709-901 to 709-920	D	software 709	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 709; otherwise, suspect a software problem.
709-921	D	709 software	Description: The adapter failed to configure
709-922 to 709-924	D	software 709	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 709; otherwise, suspect a software problem.
709-925	D	709 software	Description: The adapter failed to configure
709-926 to 709-943	D	software 709	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 709; otherwise, suspect a software problem.
721-102	D	721	Description: An unrecoverable media error occurred.
721-104	D	721	Description: The motor failed to restart.
721-105	D	721	Description: The drive did not become ready.
721-106	D	721	Description: The electronics card test failed.
721-108	D	721	Description: The bus test failed.
721-110	D	721	Description: The media format is corrupted.
721-112	D	721	Description: The diagnostic test failed.
721-114	D	721	Description: An unrecoverable hardware error.
721-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
721-117	D	721	Description: A write-protect error occurred.
721-118	D	721 B88	Description: A SCSI command time-out occurred.
721-120	D	721	Description: A SCSI busy or command error.
721-122	D	721	Description: A SCSI reservation conflict error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
721-124	D	721	Description: A SCSI check condition error occurred.
721-126	D	721 B88	Description: A software error was caused by a hardware failure.
721-128	G	721	Description: The error log analysis indicates a hardware failure.
721-129	G	190 721 B88 software	Description: Error log analysis indicates a SCSI bus problem.
721-130	G	721	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
721-132	D	721	Description: A disk drive hardware error occurred.
721-134	D	B88 software	Description: The adapter failed to configure.
721-135	D	721 B88 software	Description: The device failed to configure.
721-136	D	721	Description: The certify operation failed.
721-137	D	721 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
722-xxx	D	722	Description: Unknown disk drive type is failing.
723-xxx	D	723	Description: Unknown CD-ROM type is failing.
724-xxx	D	724	Description: Unknown tape drive failure.
733-110 to 733-120	D	733	Description: The Reserve command failed, or the Inquiry command failed.
733-130 to 733-135	D	733 media	Description: The Load command failed, or the Unload command failed.
733-140	D	733	Description: The Mode Select command failed.
733-150 to 733-169	D	733 media	Description: The Test Unit Ready command failed, or the Send Diagnostic command failed.
733-170	D	733 B88 media	Description: The Read, Write and Compare test failed.
733-180 to 733-185	D	733 media	Description: The Load command failed, or the Unload command failed.
733-190	D	733	Description: The Mode Select command failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
733-200	D	733 media	Description: The Test Unit Ready command failed.
733-210	D	733 B88	Description: The device configuration failed.
733-220 to 733-240	D	733	Description: 140 GB 8 mm tape drive failed.
733-300	D	733 software	Description: The device configuration failed.
733-310	D	B88 733 software	Description: SCSI adapter configuration failed.
733-320	G	733 media	Description: Error log analysis indicates a failure.
733-411 to 733-423	D	733 B88 software	Description: A reservation conflict occurred.
733-511 to 733-523	D	733 B88	Description: The drive returned bad or non-extended sense data.
733-611 to 733-723	D	733 B88 software	Description: An adapter, device, or bus I/O error occurred.
734-111	D	734 B88	Description: Unable to reserve device.
734-112	D	734 B88	Description: Unable to do configuration.
734-113	D	734 B88	Description: Unable to open the device driver.
734-121	D	734	Description: The CD-ROM drive indicates an error.
734-122	D	734	Description: The CD-ROM drive indicates an error.
734-123	D	734	Description: The CD-ROM drive indicates an error.
734-125	D	734 B88	Description: The CD-ROM drive indicates an error.
734-126	D	734	Description: The CD-ROM drive indicates an error.
734-127	D	734	Description: The CD-ROM drive indicates an error.
734-128	D	734	Description: The CD-ROM drive indicates an error.
734-129	D	734	Description: The CD-ROM drive indicates an error.
734-150	D	Test Disc 734	Description: A media error was detected.
734-151	D	734 B88	Description: A command timeout was detected.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
734-152	D	734	Description: A command reservation conflict was detected.
734-162	D	734	Description: The CD-ROM drive indicates an error.
734-171	D	734	Description: Unable to reserve device.
734-172	D	734	Description: Unable to do configuration.
734-173	D	734	Description: Unable to open device driver.
734-175	D	734	Description: The CD-ROM drive indicates an error.
734-198	D	734 B88	Description: Undefined error detected.
734-199	D	734	Description: Undefined error detected.
734-211	D	734	Description: The LED test failed.
734-281	D	734	Description: No tone during audio test.
734-301	G	734	Description: Errors found during ELA.
734-302	G	734 B88	Description: Errors found during ELA.
736-101	D	821	Description: An unexpected adapter error occurred.
736-102	D	736 821	Description: An unexpected device or adapter error occurred.
736-103	D	736 821	Description: The keyboard reset failed.
736-104	D	736	Description: Unknown keyboard.
736-105	D	736 821	Description: The keyboard light-on test failed.
736-106	D	736 821	Description: The keyboard light-off test failed.
736-201	D	821	Description: An unexpected adapter error occurred.
736-202	D	736 821	Description: An unexpected device or adapter error occurred.
736-203	D	736 821	Description: The read keyboard ID test failed.
736-204	D	736	Description: The keyboard layout ID test failed.
736-205	D	736 821	Description: The keyboard echo test failed.
736-206	D	736 821	Description: The select scan code set test failed.
736-301	D	821	Description: An unexpected adapter error occurred.
736-302	D	736 821	Description: An unexpected device or adapter error occurred.
736-303	D	736	Description: An error occurred in turning on the lamps.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
736-304	D	736	Description: An error occurred in turning off the lamps.
736-401	D	821	Description: An unexpected adapter error occurred.
736-402	D	736 821	Description: An unexpected device or adapter error occurred.
736-403	D	736	Description: Unable to recognize the keyboard.
736-404	D	736 821	Description: The keyboard is failing.
736-701	D	736 821	Description: Error configuring the device.
736-901	G	821	Description: The error log analysis indicates an adapter failure.
736-902	G	736 821	Description: The error log analysis indicates a device failure.
736-903	G	736 821	Description: The error log analysis indicates an unknown failure.
741-102 to 741-114	D	741	Description: SCSI disk drive problems.
741-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
741-117	D	741	Description: A write-protect error occurred.
741-118	D	741 B88	Description: A SCSI command timeout.
741-120 to 741-124	D	741	Description: SCSI disk drive problems.
741-126	D	741 B88	Description: A software error was caused by a hardware failure.
741-128	G	741	Description: The error log analysis indicates a hardware failure.
741-129	G	190 741 B88 software	Description: Error log analysis indicates a SCSI bus problem.
741-130	G	741	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
741-132	D	741	Description: A disk drive hardware error occurred.
741-134	D	B88 software	Description: The adapter failed to configure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
741-135	D	741 B88 software	Description: The device failed to configure.
741-137	D	741 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
742-101	D	742	Description: Configuration register test failed
742-102	D	742	Description: I/O register test failed
742-104	D	742	Description: Internal loopback test failed
742-105	D	742	Description: Internal loopback test failed
742-106	D	742	Description: External loopback test failed
742-121	D	D59	Description: Configuration register test failed
742-122	D	D59	Description: I/O register test failed
742-124	D	D59	Description: Internal loopback test failed
742-125	D	D59	Description: Internal loopback test failed
742-126	D	D59	Description: External loopback test failed
742-141	D	D60	Description: Configuration register test failed
742-142	D	D60	Description: I/O register test failed
742-144	D	D60	Description: Internal loopback test failed
742-145	D	D60	Description: Internal loopback test failed
742-160	D	B08	Description: 10Base-T transceiver test failed
742-161	D	B09	Description: 10Base-2 transceiver test failed
742-203	D	742 software	Description: Device configuration failed
742-223	D	D59 software	Description: Device configuration failed
742-224	D	B08 D59	Description: 10 Base-T transceiver test failed
742-225	D	B09 D59	Description: 10 Base-2 transceiver test failed
742-243	D	D60 software	Description: Device configuration failed
742-700	G	742 software	Description: Error log analysis indicates a hardware problem
742-720	G	D59 software	Description: Error log analysis indicates a hardware problem
742-740	G	D60 software	Description: Error log analysis indicates a hardware problem
745-100	D	media 745	Description: Recovered error. Action: No action required.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
745-200	D	media 745	Description: Drive Not Ready. Action: Install media, refer to the tape autoloader service guide.
745-300 to 745-350	D	media 745	Description: 4mm Tape Auto Loader problem. Action: Replace media, clean drive, refer to the tape autoloader service guide.
745-400	D	745 magazine media	Description: General Hardware Failure. Action: Replace media, clean drive, refer to the tape autoloader service guide.
745-410 to 745-435	D	745 media	Description: Internal Hardware Failure Action: Replace drive, refer to the tape autoloader service guide.
745-440	D	745 SCSI Adapter	Description: SCSI Hardware Failure. Action: Replace drive, refer to the tape autoloader service guide.
745-441 to 745-443	D	745 media	Description: 4mm Tape Auto Loader problem. Action: Replace drive, refer to the tape autoloader service guide.
745-444	D	745 environ- ment media	Description: Humidity too High Action: Lower humidity, replace media, refer to the tape autoloader service guide.
745-445	D	clean media drive	Description: Drive Requires Cleaning Action: Clean drive, replace media, refer to the tape autoloader service guide.
745-460 to 745-465	D	745 magazine media	Description: Magazine Movement Failure Action: Check magazine and media, clean rollers, refer to the tape autoloader service guide.
745-470 to 745-475	D	745 magazine media	Description: Media Insert/Eject Failure Action: Check clean magazine and media, clean rollers, refer to the tape autoloader service guide.
745-480 to 745-485	D	745 magazine media	Description: Drawer Open/Close Failure Action: Check magazine and media, refer to the tape autoloader service guide.
745-500	D	745 system	Description: Illegal request to drive Action: Software conflict, refer to the tape autoloader service guide.
745-600	D	745 system	Description: Unit Attention Action: Software conflict, media changed, refer to the tape autoloader service guide.
745-700	D	745 media	Description: Not Writeable Action: Check media for write-protect, refer to the tape autoloader service guide.
745-800	D	745 media	Description: Blank Media Action: Check media, refer to the tape autoloader service guide.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
745-B00	D	745 SCSI Adapter	Description: SCSI Interface Failure Action: Check SCSI interface, refer to the tape autoloader service guide.
745-D00	D	745 media	Description: Tape Full Action: Check replace media, refer to the tape autoloader service guide.
746-101	D	746 221	Description: Enhanced error handling failure on the bus.
746-102	D	746 221	Description: Enhanced error handling failure on a chip.
746-103	D	746	Description: Enhanced error handling failure on the adapter.
746-212	D	746	Description: FIFO empty bit set.
746-213	D	746	Description: FIFO empty bit clear.
746-214	D	746	Description: FIFO full bit set.
746-215	D	746	Description: FIFO full bit clear.
746-216	D	746	Description: FIFO data miscompare.
746-217	D	746	Description: SCSI FIFO data miscompare.
746-218	D	746	Description: SCSI FIFO underflow.
746-219	D	746	Description: SCSI parity error.
746-220	D	746	Description: SCSI FIFO flags error.
746-221	D	746 221	Description: Miscompare during the write/read of the configuration register.
746-222	D	746	Description: Error during the write/read of the memory register.
746-223	D	746	Description: Miscompare during the write/read of the memory I/O register. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
746-224	D	746 221	Description: SCSI configuration register read or write error.
746-225	D	746	Description: Adapter POST failed.
746-226	D		Description: SCSI wrap or PTC failure. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
746-227	D	746 221	Description: SCSI adapter test failure.
746-230	D		Description: Arbitration test failed. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
746-231	D		Description: Function could not complete. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
746-232	D		Description: SCSI bus data miscompare. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
746-240	D		Description: No terminal power. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
746-242	D		Description: SCSI bus error. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
746-301	D	746 221	Description: The parent device open failed.
746-600	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-601	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-602	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-603	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-604	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-605	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-606	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-607	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-701	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-702	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-703	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-704	G	746	Description: Error log analysis indicates a PCI SCSI adapter failure.
746-800	G		Description: Error log analysis indicates a PCI SCSI adapter PTC failure. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
746-801	G		Description: Error log analysis indicates a terminator problem. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
746-802	G		Description: Error log analysis indicates that multiple attempts to reset the SCSI bus have timed out. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.
746-803	G		Description: Error log analysis indicates that multiple SCSI bus errors have occurred. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.
747-101	D	747 221	Description: Enhanced error handling failure on the bus.
747-102	D	747 221	Description: Enhanced error handling failure on a chip.
747-103	D	747	Description: Enhanced error handling failure on the adapter.
747-212	D	747	Description: FIFO empty bit set.
747-213	D	747	Description: FIFO empty bit clear.
747-214	D	747	Description: FIFO full bit set.
747-215	D	747	Description: FIFO full bit clear.
747-216	D	747	Description: FIFO data miscompare.
747-217	D	747	Description: SCSI FIFO data miscompare.
747-218	D	747	Description: SCSI FIFO underflow.
747-219	D	747	Description: SCSI parity error.
747-220	D	747	Description: SCSI FIFO flags error.
747-221	D	747 221	Description: Miscompare during the write/read of the configuration register.
747-222	D	747	Description: Error during the write/read of the memory register.
747-223	D	747	Description: Miscompare during the write/read of the memory I/O register. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
747-224	D	747 221	Description: SCSI configuration register read or write error.
747-225	D	747	Description: Adapter POST failed.
747-226	D		Description: SCSI wrap or PTC failure. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
747-227	D	747 221	Description: SCSI adapter test failure.
747-230	D		Description: Arbitration test failed. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
747-231	D		Description: Function could not complete. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
747-232	D		Description: SCSI bus data miscompare. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
747-240	D		Description: No terminal power. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
747-242	D		Description: SCSI bus error. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
747-301	D	747 221	Description: The parent device open failed.
747-600	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-601	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-602	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-603	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-604	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-605	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-606	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-607	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-701	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-702	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-703	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-704	G	747	Description: Error log analysis indicates a PCI SCSI adapter failure.
747-800	G		Description: Error log analysis indicates a PCI SCSI adapter PTC failure. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
747-801	G		Description: Error log analysis indicates a terminator problem. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.
747-802	G		Description: Error log analysis indicates that multiple attempts to reset the SCSI bus have timed out. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.
747-803	G		Description: Error log analysis indicates that multiple SCSI bus errors have occurred. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.
749-xxx	D	749	Description: 7331 Model 205 Tape Library. Refer to service documentation for this device.
750-100	D	750	Description: The adapter open test failed.
750-200	D	750 221	Description: Config register test failed.
750-201	D	750 221	Description: I/O register test failed.
750-202	D	750 221	Description: Adapter self-test failed.
750-300	D	256 750 221	Description: The connect test failed.
750-301	D	256 750 221	Description: Token-ring internal wrap test failure.
750-302	D	256 750 221	Description: Token-ring external wrap failure
750-303	D	256 750 221	Description: Token-ring initialization test failure.
750-400	D	240 256 750 221	Description: The connect test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
750-401	D	240 256 750 221	Token-ring internal wrap test failure.
750-402	D	240 256 750 221	Token-ring external wrap test failure.
750-403	D	240 256 750 221	Token-ring initialization test failure.
750-700	G	750 221	Description: Error Log analysis indicated a hardware failure.
751-101	D	751 227	Description: The PCI wrap test failed. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
751-102	D	751	Description: The POST indicates an adapter failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
751-103	D	751	Description: The POST indicates an adapter channel failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
751-104	D	190	Description: The POST indicates a defective cable.
751-105	D	B3A	Description: The POST indicates a defective backplane or external enclosure.
751-106	D	722	Description: The POST indicates a disk failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
751-108	D	221	Description: Enhanced error handling failure on the bus.
751-109	D	751	Description: The NVRAM test indicates an adapter failure. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
751-110	D	722	Description: The disk reported a Predictive Failure Analysis error (PFA). Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
751-111	D	722	Description: The disk drive has been failed by the adapter. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.
751-112	G	722	Description: ELA indicates that the disk reported a hard data error. Action: Go to “Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification” on page 101.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
751-113	G	722	Description: ELA indicates that the disk reported a hard equipment error. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
751-114	G	E29	Description: ELA indicates a cache failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
751-115	G	E30	Description: ELA indicates that the cache battery is either low on power or has failed. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
751-116	D	751	Description: Failed to disable data scrub.
751-117	D	E29	Description: POST indicates cache failure
751-118	D	E29	Description: NVRAM test indicates cache failure.
751-119	D	E29	Description: NVRAM test indicates that write cache is missing. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
751-120	D	E29	Description: NVRAM test indicates that cache size is invalid. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
751-121	D	E30	Description: NVRAM test indicates that the cache battery is low on power. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
751-122	D	E30	Description: NVRAM test indicates cache battery failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
751-123	D	751	Description: ELA indicates an adapter failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
751-400	F	751 190 B3A 722	Description: POST indicates a channel failure. Action: Go to "Chapter 17. MAP 0270: SCSI RAID Problem Resolution and Verification" on page 101.
757-110	D	757	Description: The Reserve command failed.
757-120	D	757	Description: The Inquiry command failed.
757-130	D	757 media	Description: The Load command failed.
757-135	D	757 media	Description: The Unload command failed.
757-140	D	757	Description: The Mode Select command failed.
757-150	D	757 media	Description: The Test Unit Ready command failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
757-160	D	757 media	Description: The Send Diagnostic command failed.
757-169	D	757 media	Description: The Send Diagnostic command failed.
757-170	D	757 B88 media	Description: The Read, Write and Compare test failed.
757-180	D	757 media	Description: The Load command failed.
757-185	D	757 media	Description: The Unload command failed.
757-190	D	757	Description: The Mode Select command failed.
757-200	D	757 media	Description: The Test Unit Ready command failed.
757-210	D	757 B88	Description: The device configuration failed.
757-220	D	757	Description: The Release command failed.
757-230	D	757	Description: The Request Sense command failed.
757-240	D	757	Description: The Openx command failed.
757-300	D	757 software	Description: The device configuration failed.
757-310	D	B88 757 software	Description: SCSI adapter configuration failed.
757-320	D	757 media	Description: Error log analysis indicates a failure.
757-411 to 757-423	D	757 B88 software	Description: A reservation conflict occurred.
757-511 to 757-523	D	757 B88	Description: The drive returned bad or non-extended sense data.
757-611 to 757-623	D	757 B88 software	Description: An adapter or bus I/O error occurred.
757-711 to 757-723	D	757 B88 software	Description: A device timeout error occurred.
763-1xx	D	763 software 221	Description: Problem detected with a device or device data corrupted. Note: You may need to reinstall ssp.css software.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
763-200 to 763-299	D	ext clock 763 wrap plug	Description: Problem detected with the external clock (SP switch). Notes: 1. Refer to your <i>SP Maintenance Information</i> manual for the external clock FRU part number. 2. The wrap plug FRU part number is listed under the 763 FFC.
763-2A0 to 763-2A9	D	763	Description: Problem detected with the internal clock.
763-3xx	D	763 221	Description: Problem detected with the POS registers.
763-4xx	D	763 software	Description: TBIC test failed.
763-5xx	D	763	Description: SRAM test failed.
763-6xx	D	763	Description: Microprocessor test failed.
763-7xx	D	763	Description: Interrupt test failed.
763-8xx	D	763	Description: FIFO test failed.
763-9xx	D	763 221 Switch-cable	Description: DMA engine test failed. Note: Refer to your <i>SP Maintenance Information</i> manual for the switch cable FRU part number.
763-Ax3	D	763 terminator	Description: Card wrap test failed. Note: The terminator FRU part number is listed under the 763 FFC.
763-Ax4	D	Switch-cable wrap plug	Description: Card wrap test failed. Notes: 1. Refer to your <i>SP Maintenance Information</i> manual for the switch cable FRU part number. 2. The wrap plug FRU part number is listed under the 763 FFC.
763-xx2	D	763	Description: Bad adapter card. (except for SRN 763-282) Action: Replace the SP Switch MX Adapter.
764-1xx	D	764 software 221	Description: Problem detected with a device or device data corrupted. Note: You may need to reinstall ssp.css software.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
764-200 to 764-299	D	ext clock 764 wrap plug	Description: Problem detected with the external clock (SP switch). Notes: 1. Refer to your <i>SP Maintenance Information</i> manual for the external clock FRU part number. 2. The wrap plug FRU part number is listed under the 763 FFC.
764-2A0 to 764-2A9	D	764	Description: Problem detected with the internal clock.
764-3xx	D	764 221	Description: Problem detected with the POS registers.
764-4xx	D	764 software	Description: TBIC test failed.
764-5xx	D	764	Description: SRAM test failed.
764-6xx	D	764	Description: Microprocessor test failed.
764-7xx	D	764	Description: Interrupt test failed.
764-8xx	D	764	Description: FIFO test failed.
764-9xx	D	764 221 switch-cable	Description: DMA engine test failed. Note: Refer to your <i>SP Maintenance Information</i> manual for the switch cable FRU part number.
764-Ax3	D	764 terminator	Description: Card wrap test failed. Note: The terminator FRU part number is listed under the 763 FFC.
764-Ax4	D	Switch-cable wrap plug	Description: Card wrap test failed. Notes: 1. Refer to your <i>SP Maintenance Information</i> manual for the switch cable FRU part number. 2. The wrap plug FRU part number is listed under the 763 FFC.
764-xx2	D	764	Description: Bad adapter card. (except for SRN 764-282) Action: Replace the SP Switch MX Adapter.
772-102	D	772	Description: An unrecoverable media error.
772-104	D	772	Description: The motor failed to restart.
772-105	D	772	Description: The drive did not become ready.
772-106	D	772	Description: The electronics card test failed.
772-108	D	772	Description: The bus test failed.
772-110	D	772	Description: The media format is corrupted.
772-112	D	772	Description: The diagnostic test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
772-114	D	772	Description: An unrecoverable hardware error.
772-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
772-117	D	772	Description: A write-protect error occurred.
772-118	D	772 B88	Description: A SCSI command time-out.
772-120	D	772	Description: A SCSI busy or command error.
772-122	D	772	Description: A SCSI reservation conflict error.
772-124	D	772	Description: A SCSI check condition error.
772-126	D	772 B88	Description: A software error was caused by a hardware failure.
772-128	G	772	Description: The error log analysis indicates a hardware failure.
772-129	G	190 772 B88 software	Description: Error log analysis indicates a SCSI bus problem.
772-130	G	772	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
772-132	D	772	Description: A disk drive hardware error occurred.
772-134	D	B88 software	Description: The adapter failed to configure.
772-135	D	772 B88 software	Description: The device failed to configure.
772-136	D	772	Description: The certify operation failed.
772-137	D	772 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
773-102	D	773	Description: An unrecoverable media error.
773-104	D	773	Description: The motor failed to restart.
773-105	D	773	Description: The drive did not become ready.
773-106	D	773	Description: The electronics card test failed.
773-108	D	773	Description: The bus test failed.
773-110	D	773	Description: The media format is corrupted.
773-112	D	773	Description: The diagnostic test failed.
773-114	D	773	Description: An unrecoverable hardware error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
773-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
773-117	D	773	Description: A write-protect error occurred.
773-118	D	773 B88	Description: A SCSI command time-out.
773-120	D	773	Description: A SCSI busy or command error.
773-122	D	773	Description: A SCSI reservation conflict error.
773-124	D	773	Description: A SCSI check condition error.
773-126	D	773 B88	Description: A software error was caused by a hardware failure.
773-128	G	773	Description: The error log analysis indicates a hardware failure.
773-129	G	190 773 B88 software	Description: Error log analysis indicates a SCSI bus problem.
773-130	G	773	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
773-132	D	773	Description: A disk drive hardware error occurred.
773-134	D	B88 software	Description: The adapter failed to configure.
773-135	D	773 B88 software	Description: The device failed to configure.
773-136	D	773	Description: The certify operation failed.
773-137	D	773 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
774-102	D	774	Description: An unrecoverable media error.
774-104	D	774	Description: The motor failed to restart.
774-105	D	774	Description: The drive did not become ready.
774-106	D	774	Description: The electronics card test failed.
774-108	D	774	Description: The bus test failed.
774-110	D	774	Description: The media format is corrupted.
774-112	D	774	Description: The diagnostic test failed.
774-114	D	774	Description: An unrecoverable hardware error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
774-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
774-117	D	774	Description: A write-protect error occurred.
774-118	D	774 B88	Description: A SCSI command time-out.
774-120	D	774	Description: A SCSI busy or command error.
774-122	D	774	Description: A SCSI reservation conflict error.
774-124	D	774	Description: A SCSI check condition error.
774-126	D	774 B88	Description: A software error was caused by a hardware failure.
774-128	G	774	Description: The error log analysis indicates a hardware failure.
774-129	G	190 774 B88 software	Description: Error log analysis indicates a SCSI bus problem.
774-130	G	774	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
774-132	D	774	Description: A disk drive hardware error occurred.
774-134	D	B88 software	Description: The adapter failed to configure.
774-135	D	774 B88 software	Description: The device failed to configure.
774-136	D	774	Description: The certify operation failed.
774-137	D	774 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
775-001	D	775 227 Monitor	Description: “NO” to color panel
775-002	D	775 Monitor	Description: “NO” to cursor panel
775-007	D	Info code	Description: The EMC_SCROLLING_17_H_TEST failed
775-009	D	Info code	Description: The EMC_SCROLLING_21_H_TEST failed
775-064	D	775 227	Description: TRIO64V+_TIMEOUT
775-101	D	775 227	Description: Color miscompare

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
775-102	D	775 227	Description: Clipping error
775-103	D	775 227	Description: Rectangle fill test failed
775-128	D	software 775	Description: MALLOC_ERROR
775-161	D	software	Description: Loop count value in rules file is zero
775-191	D	775 227	Description: Red screen error
775-193	D	775 227	Description: Green screen error
775-1FF	D	775 227	Description: Rectangle fill test failed
775-201	D	775 227	Description: Color miscompare
775-202	D	775 227	Description: Clipping error
775-203	D	775 227	Description: Image transfer across Plane Test failed
775-211	D	software	Description: INTERNAL_ERROR_DATA_SIZE
775-212	D	software	Description: INTERNAL_ERROR_NO_ACCESS
775-215	D	775 227	Description: Black screen error
775-217	D	775 227	Description: 9 x 7 Cross hatch grid failed.
775-233	D	software	Description: OPEN_RCM_ERROR
775-234	D	software	Description: IOCTL_GSC_HANDLE_FAILED
775-235	D	software	Description: AIXGSC_MAKE_GP_FAILED
775-236	D	software	Description: AIXGSC_UNMAKE_GP_FAILED
775-237	D	software	Description: DEVICE_BUSY_ERROR
775-241	D	Info code	Description: The SCROLLING_17_H_TEST failed.
775-263	D	Info code	Description: The EMC_SCROLLING_21_H_TEST failed
775-2FF	D	775 227	Description: Image transfer across Plane Test failed
775-301	D	775 227	Description: A write of "0x00" to the palette register failed
775-302	D	775 227	Description: A write of "0x15" to the palette register failed
775-303	D	775 227	Description: A write of "0x2A" to the palette register failed

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
775-304	D	775 227	Description: A write of "0x3F" to the palette register failed
775-305	D	775 227	Description: The test of the palette registers failed
775-3FF	D	775 227	Description: The test of the palette registers failed
775-401	D	775 227	Description: Frame buffer base address inconsistent
775-402	D	775 227	Description: VRAM inaccessible
775-403	D	775 227	Description: Miscompare found in VRAM
775-404	D	775 227	Description: The test of the VRAM failed
775-447	D	775 227	Description: Green screen error
775-449	D	775 227	Description: Blue Screen error
775-471	D	775 227	Description: 9 x 7 Cross hatch grid failed.
775-473	D	775 227	Description: 11 x 9 Cross hatch grid failed.
775-495	D	Info code	Description: The SCROLLING_17_H_TEST failed.
775-497	D	Info code	Description: The SCROLLING_21_H_TEST failed.
775-4FF	D	775 227	Description: The test of the VRAM failed
775-501	D	775 227	Description: Color miscompare
775-502	D	775 227	Description: Clipping error
775-503	D	775 227	Description: Direct Frame Buffer test failed
775-5FF	D	775 227	Description: Direct Frame Buffer test failed
775-601	D	775 227	Description: Video Stream Register test failed
775-602	D	775 227	Description: Video Stream hardware test failed
775-6FF	D	775 227	Description: Video Stream hardware test failed
775-701	D	775 227	Description: 0 Degree Short Stroke Draw failed

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
775-702	D	775 227	Description: 45 Degree Short Stroke Draw failed
775-703	D	775 227	Description: Blue Screen error, or 90 Degree Short Stroke Draw failed
775-704	D	775 227	Description: 135 Degree Short Stroke Draw failed
775-705	D	775 227	Description: White screen error, or 180 Degree Short Stroke Draw failed
775-706	D	775 227	Description: 225 Degree Short Stroke Draw failed
775-707	D	775 227	Description: 270 Degree Short Stroke Draw failed
775-708	D	775 227	Description: 315 Degree Short Stroke Draw failed
775-709	D	775 227	Description: Short Stroke Vector Function test failed
775-727	D	775 227	Description: 11 x 9 Cross hatch grid failed.
775-750	D	Info code	Description: The SCROLLING_21_H_TEST failed.
775-753	D	Info code	Description: The EMC_SCROLLING_17_H_TEST failed
775-7FE	D	775 227	Description: Short Stroke Vector Function test failed
775-7FF	D	software 775 227	Description: Bad vector detected
775-801	D	775 227	Description: Color for PatBlt thru screen failed
775-802	D	775 227	Description: Clipping for PatBlt thru screen failed
775-803	D	775 227	Description: Color for PatBlt Across screen failed
775-804	D	775 227	Description: Clipping for PatBlt Across screen failed
775-805	D	775 227	Description: Pattern Fill Across the Plane test failed
775-8FF	D	775 227	Description: Pattern Fill Across the Plane test failed
775-901	D	775 227	Description: Color miscompare of white boxes detected
775-902	D	775 227	Description: Clipping error of white boxes detected

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
775-903	D	775 227	Description: Color miscompare of color bars detected
775-904	D	775 227	Description: Clipping error of white boxes detected
775-905	D	775 227	Description: Color miscompare of white boxes detected
775-906	D	775 227	Description: Clipping error of white boxes detected
775-907	D	775 227	Description: Color miscompare of white boxes detected
775-908	D	775 227	Description: Clipping miscompare of white boxes detected
775-909	D	775 227	Description: The Area fill test (color bars) failed
775-937	D	775 227	Description: Red screen error
775-959	D	775 227	Description: White screen error
775-961	D	775 227	Description: Black screen error
775-9FF	D	775 227	Description: The Area fill test (color bars) failed
775-A01	D	775 227	Description: Color miscompare of horizontal top line
775-A02	D	775 227	Description: Clipping error of horizontal top line
775-A03	D	775 227	Description: Color miscompare of vertical right line
775-A04	D	775 227	Description: Clipping error of vertical right line
775-A05	D	775 227	Description: Color miscompare of horizontal bottom line
775-A06	D	775 227	Description: Clipping error of horizontal bottom line
775-A07	D	775 227	Description: Color miscompare of vertical left line
775-A08	D	775 227	Description: Clipping error of vertical left line
775-A09	D	775 227	Description: Color miscompare of horizontal center line
775-A0A	D	775 227	Description: Clipping error of horizontal center line

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
775-A0B	D	775 227	Description: Color miscompare of vertical center line
775-A0C	D	775 227	Description: Clipping error of vertical center line
775-A0D	D	775 227	Description: Reserved
775-A0F	D	775 227	Description: Reserved
775-A10	D	775 227	Description: Color miscompare of textured top line
775-A11	D	775 227	Description: Clipping error of textured top line
775-A12	D	775 227	Description: Line Drawing Function test failed
775-AFF	D	775 227	Description: Line Drawing Function test failed
775-B01	D	775 227	Description: Rectangle Area Color miscompare detected
775-B02	D	775 227	Description: Rectangle Area Clip error detected
775-B03	D	775 227	Description: Clipped Area Horizontal color miscompare (background line color wrong)
775-B04	D	775 227	Description: Clipped Area Horizontal clip miscompare (clip of background line wrong)
775-B05	D	775 227	Description: Clipped Area Vertical color miscompare (background line color wrong)
775-B06	D	775 227	Description: Clipped Area Vertical clip error (clip of background line wrong)
775-B07	D	775 227	Description: The clipping function test failed.
775-BFF	D	775 227	Description: The clipping function test failed.
775-C01	D	775 227	Description: The BIOS read failed.
775-C02	D	775 227	Description: The BIOS function test failed.
775-CFF	D	775 227	Description: The BIOS function test failed.
775-D01	D	775 227	Description: The HW cursor function test failed.
775-DFD	D	775 227	Description: The HW cursor function test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
776-101	D	D46	Description: External Test Failure.
776-102	D	240	Description: External Test Failure.
776-103	D	776	Description: I/O Test Failure.
776-104	D	776 221	Description: Adapter On-card Test Failure.
776-105	D	776	Description: Wrap Test Failure.
776-106	D	D46	Description: Wrap Test Failure.
776-106	D	776	Description: Enhanced Error Handling failure on bus.
776-107	D	776	Description: EEH failure on Eads chip.
776-108	D	776	Description: Enhanced Error Handling failure on adapter.
776-201	D	776 221	Description: Configuration Register Test Failure.
776-202	D	776 221	Description: Wrap Test Failure.
776-203	D	D46 776	Description: Wrap Test Failure.
776-204	D	776 221	Description: Connect Test Failure.
776-205	F	D46 776	Description: External Test Failure. Action: Run advanced diagnostics with wrap test for this resource to obtain correct problem isolation.
776-206	D	776 221	Description: Wrap Test Failure.
776-301	D	D46 240 776	Description: External Test Failure.
776-302	F	D46 776 221	Description: External Test Failure. Action: Run advanced diagnostics with wrap test for this resource to obtain correct problem isolation.
776-303	F	240 D46 776	Description: External Test Failure. Action: Run advanced diagnostics with wrap test for this resource to obtain correct problem isolation.
776-304	D	D46 776 221	Description: Connect Wrap Test Failure.
776-305	D	D46 776 221	Description: Wrap Test Failure.
776-306	D	D46 776 221	Description: Wrap Test Failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
776-401	F	240 D46 776 221	Description: External Test Failure. Action: Run advanced diagnostics with wrap test for this resource to obtain correct problem isolation.
776-404	D	240 D46 776 221	Description: Connect Test Failure.
776-405	D	240 D46 776 221	Description: Wrap Test Failure.
776-406	D	240 D46 776 221	Description: Wrap Test Failure.
776-414	F	240 D46 776 221	Description: Connect Test Failure. This failure occurs if not connected to a functional Token-Ring network. Action: Run advanced diagnostics for this resource to obtain correct problem isolation.
776-415	F	240 D46 776 221	Description: Wrap Test Failure. This failure occurs if not connected to a functional Token-Ring network. Action: Run advanced diagnostics for this resource to obtain correct problem isolation.
776-416	F	240 D46 776 221	Description: Wrap Test Failure. This failure occurs if not connected to a functional Token-Ring network. Action: Run advanced diagnostics for this resource to obtain correct problem isolation.
776-701	G	776	Description: ELA indicates an adapter error occurred.
776-702	G	776 221	Description: ELA indicates an adapter check occurred.
776-703	G	776 221	Description: ELA indicates a DMA failure occurred.
776-704	G	776 221	Description: ELA indicates a PCI bus failure occurred.
776-705	G	776 221	Description: ELA indicates a Programmed I/O failure occurred.
776-706	G	776	Description: ELA indicates a command write failure occurred.
776-707	G	776	Description: ELA indicates an internal adapter error has occurred.
777-101	D	777	Description: Configuration Register Test Failure.
777-102	D	777	Description: I/O Test Failure.
777-103	D	777	Description: Adapter initialization test failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
777-104	D	777	Description: Internal wrap test failure.
777-105	D	777	Description: External wrap (10 Mbps) test failure.
777-106	D	777	Description: External wrap (100 Mbps) test failure.
777-107	D	221	Description: Enhanced Error Handling failure on bus.
777-108	D	221	Description: Enhanced Error Handling logic failure.
777-110	D	777	Description: Enhanced Error Handling failure on adapter.
777-201	D	777 221	Description: Configuration Register Test Failure.
777-202	D	777 221	Description: I/O Test Failure.
777-203	D	777 221	Description: Adapter initialization test failure.
777-204	D	777 221	Description: Internal wrap test failure.
777-205	D	777 221	Description: Internal wrap test failure.
777-206	D	777 221	Description: External wrap (10 Mbps) test failure.
777-207	D	777 221	Description: Internal wrap test failure.
777-208	D	777 221	Description: External wrap (100 Mbps) test failure.
777-701	G	777 221	Description: Error log analysis indicates that the adapter is not responding to initialization commands.
777-702	G	777 221	Description: Error Log Analysis indicates that the device driver has detected a PIO error which it was unable to correct.
777-703	G	777 221	Description: Error log analysis indicates that the adapter has been shut down due to an unrecoverable error.
777-704	G	777 221	Description: Error Log Analysis indicates a problem with the EEPROM on the adapter
777-707	G	777 221	Description: Error Log Analysis indicates that this adapter has failed to initialize due to EEH errors.
778-002	D	software 778	Description: Software error
778-004	D	software 778	Description: Software error
778-009	D	software 778	Description: Software error
778-011	D	software 778	Description: Software error

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
778-017	D	software 778	Description: Software error
778-019	D	778 software	Description: Adapter failure
778-030	D	778 221	Description: Adapter failure
778-032	D	software 778	Description: Software error
778-033	D	software 778	Description: Software error
778-035	D	778 software	Description: Adapter failure
778-036 to 778-072	D	software 778	Description: Software error
778-073	D	778 221	Description: Adapter failure
778-075	D	software 778	Description: Software error
778-076	D	778 software	Description: Software error.
778-301 to 778-D02	D	778 221	Description: Adapter failure
778-E01	D	software 778	Description: Software error
778-E02 to 778-1401	D	778 221	Description: Adapter failure
778-1402	D	software 778	Description: Software error
778-1403 to 778-1405	D	778 221	Description: Adapter failure
778-1500	D	778 software	Description: Adapter failure
778-1600 to 778-1604	D	778 902	Description: Adapter failure
778-2501 to 778-2508	D	778 221	Description: Adapter error

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
778-2509 to 778-2511	D	software 778	Description: Software error
778-2601 to 778-2602	D	778 221	Description: Adapter error
778-2603	D	software 778	Description: Software error
77B-101	D	77B	Description: Configuration Register Test Failure.
77B-102	D	77B	Description: I/O Test Failure.
77B-103	D	77B	Description: Adapter initialization test failure.
77B-104	D	77B	Description: Internal wrap test failure.
77B-105	D	77B	Description: External wrap (10 Mbps) test failure.
77B-106	D	77B	Description: External wrap (100 Mbps) test failure.
77B-701	G	77B	Description: Error log analysis indicates that the adapter is not responding to initialization commands.
77B-702	G	77B	Description: Error Log Analysis indicates that the device driver has detected a PIO error which it was unable to correct.
77B-703	G	77B	Description: Error log analysis indicates that the adapter has been shut down due to an unrecoverable error.
77B-704	G	77B	Description: Error Log Analysis indicates a problem with the EEPROM on the adapter
77B-705	G	77B	Description: Error Log Analysis indicates a non-critical problem with the VPD and the EEPROM on the adapter Action: Schedule deferred maintenance.
780-101	D	780 227	Description: Adapter logic test failure.
780-102	D	780	Description: Adapter logic test failure.
780-109	D	780	Description: Adapter channel Input/Output test failure.
780-113	D	780	Description: Adapter Serial Communication Controller (SCC) test failure.
780-114	D	780 227	Description: Adapter logic test failure.
780-120	D	780 227 software	Description: Adapter could not be detected or configured.
780-140	D	271 780	Description: An error was found with the X.21 interface adapter cable.
780-150	D	272 780	Description: An error was found with the X.24 interface adapter cable.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
780-160	D	273 780	Description: An error was found with the X.35 interface adapter cable.
780-170	D	780	Description: The adapter hardware failed.
780-180	D	780	Description: The adapter hardware failed.
780-190	D	780	Description: The adapter hardware failed.
780-210	D	780 185	Description: An error was found on the adapter.
780-211	D	780 227	Description: The adapter card POST test failed.
780-230	D	780	Description: The adapter card hardware failed.
780-232	D	849 227	Description: The adapter card hardware failed.
780-240	D	780	Description: The adapter card hardware failed.
780-250	D	185 780	Description: An error was found on the adapter.
780-260	D	780	Description: The adapter card hardware failed.
780-270	D	780	Description: The adapter card hardware failed.
780-280	D	780	Description: The adapter card hardware failed.
780-290	D	780	Description: The adapter card hardware failed.
780-300	G	780	Description: An adapter error was found during error log analysis.
780-310	G	780 185	Description: An adapter error was found during error log analysis.
780-320	G	780 227	Description: An adapter error was found during error log analysis.
780-330	G	780 227	Description: Error log analysis indicates a hardware problem.
780-400	D	780 227	Description: A software error was caused by a hardware failure.
780-700	D	780 227 software	Description: The adapter failed to configure.
780-720	D	780	Description: Cable wrap test failed.
780-721	D	780	Description: Port wrap test failed.
780-722	D	780	Description: Cable wrap test failed.
781-101	D	781 227	Description: ROS POST adapter software initialization error.
781-102	D	781	Description: Extended DRAM SIP test failed.
781-103	D	781	Description: ROS checksum test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
781-104	D	781 227	Adapter download diagnostics failed
781-105	D	781 227	Description: Memory size test failed.
781-106	D	781 227	Description: Interface ID test failed.
781-107	D	781 227	Description: EIB ID test failed.
781-108	D	781 227	Description: ROS version test failed.
781-109	D	781	Description: DUSCC register test failed.
781-111	D	781	Description: DMA register test failed.
781-112	D	781	Description: X.21 PAL test failed.
781-113	D	781	Description: External wrap test failed.
781-114	D	781 227	Description: Twin tail logic test failed.
781-116	D	254	Description: The RS-232 cable wrap test failed.
781-117	D	253	Description: The RS-422A cable wrap test failed.
781-118	D	257	Description: The V.35 cable wrap test failed.
781-119	D	260	Description: The X.21 cable wrap test failed.
781-120	D	781 227 software	Description: The adapter was not detected or could not be configured. test failed.
781-121	D	781 227 software	Description: The 4-port jumper cable assembly wrap test failed.
781-200	G	781	Description: The error log analysis indicates the adapter failed.
781-221	G	781 227	Description: The error log analysis indicates the adapter hardware failed.
781-231	D	855 227	Description: No interface card detected.
781-501	D	B77 B69 227	Description: The power-on self-test (POST) failed.
781-502	D	B77	Description: The memory module failed.
781-503	D	781 227	Description: Adapter hardware failure.
781-504	D	B69	Description: Adapter hardware failure.
781-505	D	B71 B69	Description: Adapter hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
781-506	D	B72 B69	Description: Adapter hardware failure.
781-507	D	B73 B69	Description: Adapter hardware failure.
781-508	D	B74 B69	Description: Adapter hardware failure.
781-516	D	B77 B69	Description: Adapter Test Failure.
781-517	D	B69 B77	Description: Adapter Test Failure.
781-720	D	258 781	4-port multiprotocol cable
783-110	D	783	Description: The Reserve command failed.
783-120	D	783	Description: The Inquiry command failed.
783-130	D	783 media	Description: The Load command failed.
783-135	D	783 media	Description: The Unload command failed.
783-140	D	783	Description: The Mode Select command failed.
783-150	D	783 media	Description: The Test Unit Ready command failed.
783-160	D	783 media	Description: The Send Diagnostic command failed.
783-169	D	783 media	Description: The Send Diagnostic command failed.
783-170	D	783 B88 media	Description: The Read, Write and Compare test failed.
783-180	D	783 media	Description: The Load command failed.
783-185	D	783 media	Description: The Unload command failed.
783-190	D	783	Description: The Mode Select command failed.
783-200	D	783 media	Description: The Test Unit Ready command failed.
783-210	D	783 B88	Description: The device configuration failed.
783-220	D	783	Description: The Release command failed.
783-230	D	783	Description: The Request Sense command failed.
783-240	D	783	Description: The Openx command failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
783-300	D	783 software	Description: The device configuration failed.
783-310	D	B88 783 software	Description: SCSI adapter configuration failed.
783-320	G	783 media	Description: Error log analysis indicates a failure.
783-411 to 783-423	D	783 B88 software	Description: A reservation conflict occurred.
783-511 to 783-523	D	783 B88	Description: The drive returned bad or non-extended sense data.
783-611 to 783-623	D	783 B88 software	Description: An adapter or bus I/O error occurred.
783-711 to 783-723	D	783 B88 software	Description: A device timeout error occurred.
784-102	D	784	Description: An unrecoverable media error.
784-104	D	784	Description: The motor failed to restart.
784-105	D	784	Description: The drive did not become ready.
784-106	D	784	Description: The electronics card test failed.
784-108	D	784	Description: The bus test failed.
784-110	D	784	Description: The media format is corrupted.
784-112	D	784	Description: The diagnostic test failed.
784-114	D	784	Description: An unrecoverable hardware error.
784-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
784-117	D	784	Description: A write-protect error occurred.
784-118	D	784 B88	Description: A SCSI command time-out.
784-120	D	784	Description: A SCSI busy or command error.
784-122	D	784	Description: A SCSI reservation conflict error.
784-124	D	784	Description: A SCSI check condition error.
784-126	D	784 B88	Description: A software error was caused by a hardware failure.
784-128	G	784	Description: The error log analysis indicates a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
784-129	G	190 784 B88 software	Description: Error log analysis indicates a SCSI bus problem.
784-130	G	784	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
784-132	D	784	Description: A disk drive hardware error occurred.
784-134	D	B88 software	Description: The adapter failed to configure.
784-135	D	784 B88 software	Description: The device failed to configure.
784-136	D	784	Description: The certify operation failed.
784-137	D	784 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
785-111	D	785 227	Could not do the test because the device driver detected a hardware error.
785-114	D	785	The register verification test failed.
785-121	D	785 227	Could not do the test because the device driver detected a hardware error.
785-122	D	785 227	The data wrap communication test failed.
785-123	D	785 227	The modem control line test failed.
785-124	D	785	The memory test failed.
785-151	D	785 D57	Could not do the test because the device driver detected a hardware error.
785-152	D	785 D57	The data wrap communication test failed.
785-153	D	785 D57	The modem control line test failed.
785-171	D	259	Could not do the test because the device driver detected a hardware error.
785-172	D	259	The data wrap communication test failed.
785-173	D	259	The modem control line test failed.
785-181	D	261	Could not do the test because the device driver detected a hardware error.
785-182	D	261	The data wrap communication test failed.
785-183	D	261	The modem control line test failed.
785-251	D	785 D57	Could not perform because the device driver detected a hardware error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
785-252	D	785 D57	The data wrap communication test failed.
785-253	D	785 D57	The modem control line test failed.
785-271	D	785 D57	Could not perform because the device driver detected a hardware error.
785-272	D	785 D57	The data wrap communication test failed.
785-273	D	785 D57	The modem control line test failed.
785-281	D	785 D57	Could not perform because the device driver detected a hardware error.
785-282	D	785 D57	The data wrap communication test failed.
785-283	D	785 D57	The modem control line test failed.
785-481	D	D57	Could not do the test because the device driver detected a hardware error.
785-482	D	D57	The data wrap communication test failed.
785-483	D	D57	The modem control line test failed.
785-901 to 785-920	D	software 785	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 785; otherwise, suspect a software problem.
785-921	D	785 software	Description: The adapter failed to configure
785-922 to 785-924	D	software 785	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 785; otherwise, suspect a software problem.
785-925	D	785 software	Description: The adapter failed to configure

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
785-926 to 785-943	D	software 785	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 785; otherwise, suspect a software problem.
786-200	D	786 D96 227	Description: Initiation failed Note: You must determine which of the first two FFCs is installed in the system unit.
786-210	D	786 227	Description: The adapter test failed
786-211	D	D96 227	Description: The adapter test failed
786-220	D	786 Cable Monitor	Description: The display test failed
786-221	D	D96 Cable Monitor	Description: The display test failed
786-710	D	786 227	Description: The ELA indicates HW failure
786-711	D	D96 227	The ELA indicates HW failure
787-100	D	787	GXT500P Graphics Adapter
787-101	D	787 227	Description: GXT500P Graphics Adapter
787-1AA	D	787 RGB Cable Display	Description: GXT500P Graphics Adapter
787-1xx	D	787	Description: GXT500P Graphics Adapter
787-200	D	D95	Description: GXT550P Graphics Adapter
787-201	D	D95 227	Description: GXT550P Graphics Adapter
787-2AA	D	D95 RGB Cable Display	Description: GXT550P Graphics Adapter
787-2xx	D	D95	Description: GXT550P Graphics Adapter
788-001	D	788 227	Description: Adapter Error
788-002	D	software 788	Description: System Error

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
788-003	D	software 788	Description: System Error
788-004	D	788 software	Description: System Error
789-101	D	789	Description: Failed to release the device.
789-102	D	789	Description: Failed to reserve the device.
789-103	D	789	Description: The device motor failed to start.
789-104	D	789	Description: Failed to make the device ready.
789-105	D	789	Description: Failed to get the inquiry data.
789-106	D	789	Description: The Prevent Media Removal command failed.
789-107	D	789	Description: The Allow Media Removal command failed.
789-200	D	789 Optical-Disk	Description: The optical disk failed to load. Action: Change the media. Run diagnostics on the changed media in System Verification mode. If the error reoccurs use MAP 210; otherwise, replace the media.
789-201	D	789 Optical-Disk	Description: Failed to unload the optical disk. Action: Change the media. Run diagnostics on the changed media in System Verification mode. If the errors reoccur use MAP 210; otherwise, replace the media.
789-202	D	789 Optical-Disk	Description: The diagnostic test failed. Action: Change the media. Run diagnostics on the changed media in System Verification mode. If errors do not reoccur, replace the media; otherwise, run the drive cleaning procedures if applicable and rerun the diagnostics. If errors reoccur, or the drive does not support the cleaning procedures use MAP 210.
789-204	D	789 B88	Description: The device failed to configure.
789-205	D	789 Optical-Disk	Description: The Test Unit Ready command failed. Action: Change the media. Run diagnostics on the changed media in System Verification mode. If the error reoccurs, use MAP 210; otherwise, replace the media.
789-206	D	789 Optical-Disk	Description: The random write, read and compare test failed. Action: Change the media. Run diagnostics on the changed media in System Verification mode. If the errors do not reoccur, replace the media; otherwise, run the drive cleaning procedures if applicable, and rerun diagnostics. If the errors reoccur, or the drive does not support cleaning procedures, use MAP 210.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
789-207	D	789 Optical-Disk	Description: A hardware error occurred. Action: Change the media. Run diagnostics on the changed media in System Verification mode. If the errors do not reoccur, replace the media; otherwise, run the drive cleaning procedures if applicable, and rerun diagnostics. If the errors reoccur, or the drive does not support cleaning procedures, use MAP 210.
789-208	D	789 Optical-Disk	Description: The Mode Sense command failed. Action: Change the media. Run diagnostics on the changed media in System Verification mode. If the errors do not reoccur, replace the media; otherwise, run the drive cleaning procedures if applicable, and rerun diagnostics. If the errors reoccur, or the drive does not support cleaning procedures, use MAP 210.
789-209	D	789 Optical-Disk	Description: The Mode Select command failed. Action: Change the media. Run diagnostics on the changed media in System Verification mode. If the errors do not reoccur, replace the media; otherwise, run the drive cleaning procedures if applicable, and rerun diagnostics. If the errors reoccur, or the drive does not support cleaning procedures, use MAP 210.
789-300	D	789 B88 software	Description: A SCSI reservation conflict has occurred.
789-400	D	789 B88 Cables software	Description: A SCSI command time out has occurred.
789-401	D	Optical-Disk 190 B88 software	Description: An unknown error has occurred.
789-402	D	Optical-Disk 190 B88 software	Description: Unit attention condition has occurred.
789-600	G	Optical-Disk	Description: ELA indicates that the spare sectors on the disk are exhausted. Action: Backup the media and replace it. Note: Use the time when the error occurred and the "Spare Sector Availability" service aid to identify the disk that has the error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
789-700	G	789 Optical-Disk	Description: The ELA indicates an equipment error. Action: Run diagnostics in System Verification mode to isolate the problem. If errors are reported, use MAP 210; otherwise, the error is due to faulty media. Backup the media and then replace it. Note: Use the time when the error occurred to identify the faulty media.
789-701	G	Optical-Disk 789	Description: ELA indicates an irrecoverable data error. Action: Run diagnostics in System Verification mode to isolate the problem. If errors are reported, use MAP 210; otherwise, the error is due to faulty media. Backup the media and then replace it. Note: Use the time when the error occurred to identify the faulty media.
789-702	G	789 B88 Cables	Description: ELA indicates that the adapter detected an error. Action: Use the 7209 Installation and Service Guide. If the unit checks out to be good, use MAP 210.
78B-001	D	Software 78B	Description: Software error.
78B-002	D	78B Software	Description: Adapter failure.
78B-003	D	78B 227	Description: Adapter failure.
78B-004	D	78B Monitor/ Cable	Description: Adapter or display failure.
78B-005	D	78B 227 Monitor/ Cable	Description: Adapter failure.
78D-001	D	software 78D	Description: Software error.
78D-002	D	78D software	Description: Adapter failure.
78D-003	D	78D 227	Description: Adapter failure.
78D-004	D	78D Monitor/ Cable	Description: Display failure.
78D-005	D	78D 227 Monitor/ Cable	Description: Adapter failure.
790-101	D	790	Description: Configuration Register Test failure.
790-102	D	790	Description: I/O test failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
790-103	D	790	Description: Adapter initialization test failure.
790-104	D	790	Description: Internal wrap test failure.
790-105	D	790	Description: Internal wrap test failure.
790-106	D	790	Description: External wrap (10 Mbps) test failure.
790-107	D	790	Description: Internal wrap test failure.
790-108	D	790	Description: External wrap (100 Mbps) test failure.
790-109	D	790	Description: External wrap (10 Mbps) test failure.
790-121	D	790	Description: Configuration register test failure.
790-122	D	790	Description: I/O register test failure.
790-124	D	790	Description: Internal loopback test failure.
790-125	D	790	Description: Internal loopback test failure.
790-126	D	790	Description: External loopback test failure.
790-150	D	B08	Description: 10Base-T transceiver test failure.
790-151	D	B09	Description: 10Base-2 transceiver test failure.
790-223	D	790 software	Description: Device configuration failure
790-224	D	B08 790	Description: 10 Base-T transceiver test failure.
790-225	D	B09 790	Description: 10 Base-2 transceiver test failure.
790-250	D	B08 790	Description: 10 Base-T transceiver test failure.
790-251	D	B09 790	Description: 10 Base-2 transceiver test failure.
790-701	G	790	Description: Error Log Analysis indicates that the adapter is not responding to initialization commands.
790-702	G	790	Description: Error Log Analysis indicates that the device driver has detected a PIO error which it was unable to correct.
790-703	G	790	Description: Error Log Analysis indicates that the adapter has been shutdown due to an unrecoverable error.
790-704	G	790	Description: Error Log Analysis indicates a problem with EEPROM on the adapter.
790-720	G	790 software	Description: Error log analysis indicates a hardware problem
791-102	D	791	Description: An unrecoverable media error occurred.
791-104	D	791	Description: The motor failed to restart.
791-105	D	791	Description: The drive did not become ready.
791-106	D	791	Description: The electronics card test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
791-108	D	791	Description: The bus test failed.
791-110	D	791	Description: The media format is corrupted.
791-112	D	791	Description: The diagnostic test failed.
791-114	D	791	Description: An unrecoverable hardware error.
791-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
791-117	D	791	Description: A write-protect error occurred.
791-118	D	791 B88	Description: A SCSI command time-out occurred.
791-120	D	791	Description: A SCSI busy or command error.
791-122	D	791	Description: A SCSI reservation conflict error.
791-124	D	791	Description: A SCSI check condition error occurred.
791-126	D	791 B88	Description: A software error was caused by a hardware failure.
791-128	G	791	Description: The error log analysis indicates a hardware failure.
791-129	G	190 791 B88 software	Description: Error log analysis indicates a SCSI bus problem.
791-130	G	791	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
791-132	D	791	Description: A disk drive hardware error occurred.
791-134	D	B88 software	Description: The adapter failed to configure.
791-135	D	791 B88 software	Description: The device failed to configure.
791-136	D	791	Description: The certify operation failed.
791-137	D	791 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
792-102	D	792	Description: An unrecoverable media error occurred.
792-104	D	792	Description: The motor failed to restart.
792-105	D	792	Description: The drive did not become ready.
792-106	D	792	Description: The electronics card test failed.
792-108	D	792	Description: The bus test failed.
792-110	D	792	Description: The media format is corrupted.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
792-112	D	792	Description: The diagnostic test failed.
792-114	D	792	Description: An unrecoverable hardware error.
792-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
792-117	D	792	Description: A write-protect error occurred.
792-118	D	792 B88	Description: A SCSI command time-out occurred.
792-120	D	792	Description: A SCSI busy or command error.
792-122	D	792	Description: A SCSI reservation conflict error.
792-124	D	792	Description: A SCSI check condition error occurred.
792-126	D	792 B88	Description: A software error was caused by a hardware failure.
792-128	G	792	Description: The error log analysis indicates a hardware failure.
792-129	G	190 792 B88 software	Description: Error log analysis indicates a SCSI bus problem.
792-130	G	792	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
792-132	D	792	Description: A disk drive hardware error occurred.
792-134	D	B88 software	Description: The adapter failed to configure.
792-135	D	792 B88 software	Description: The device failed to configure.
792-136	D	792	Description: The certify operation failed.
792-137	D	792 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
793-102	D	793	Description: An unrecoverable media error occurred.
793-104	D	793	Description: The motor failed to restart.
793-105	D	793	Description: The drive did not become ready.
793-106	D	793	Description: The electronics card test failed.
793-108	D	793	Description: The bus test failed.
793-110	D	793	Description: The media format is corrupted.
793-112	D	793	Description: The diagnostic test failed.
793-114	D	793	Description: An unrecoverable hardware error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
793-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
793-117	D	793	Description: A write-protect error occurred.
793-118	D	793 B88	Description: A SCSI command time-out occurred.
793-120	D	793	Description: A SCSI busy or command error.
793-122	D	793	Description: A SCSI reservation conflict error.
793-124	D	793	Description: A SCSI check condition error occurred.
793-126	D	793 B88	Description: A software error was caused by a hardware failure.
793-128	G	793	Description: The error log analysis indicates a hardware failure.
793-129	G	190 793 B88 software	Description: Error log analysis indicates a SCSI bus problem.
793-130	G	793	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
793-132	D	793	Description: A disk drive hardware error occurred.
793-134	D	B88 software	Description: The adapter failed to configure.
793-135	D	793 B88 software	Description: The device failed to configure.
793-136	D	793	Description: The certify operation failed.
793-137	D	793 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
795-201	D	795	Description: Config register test failure.
795-202	D	795	Description: PROM check test failure.
795-203	D	795	Description: Timer and IRQ test failure.
795-204	D	795	Description: Adapter RAM check failure.
795-205	D	795 227	Description: ASIC test failure.
795-206	D	795	Description: High memory (ISA) test failure.
795-207	D	795	Description: RAM check via DMA test failure.
795-208	D	795	Description: FORMAC register test failure.
795-209	D	795 221	Description: PLC1 test failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
795-210	D	795 227	Description: PLC2 test failure.
795-211	D	795	Description: FORMAC Ring_Op test failure.
795-212	D	795	Description: Send long frame test failure.
795-213	D	795	Description: Restricted Token Monitor test failure.
795-214	D	795 227	Description: Receive queue handling test failure.
795-215	D	795 221	Description: FORMAC loopback test failure.
795-216	D	795 221	Description: FORMAC loopback with master access test failure.
795-217	D	795	Description: DMA measurement test failure.
795-218	D	795	Description: Special test failure.
795-219	D	795	Description: Bypass test failure.
795-301	D	795	Description: PLC1 FDDI external wrap failure.
795-302	D	795	Description: PLC2 FDDI external wrap failure.
795-303	D	795	Description: Send long frame FDDI external wrap failure
795-304	D	795	Description: FORMAC loopback external wrap failure
795-700	D	795	Description: Error log analysis indicates hardware failure
799-101	D	2C3 799	Description: External wrap test failed on port 0
799-102	D	2C3 799	Description: External wrap test failed on port 1
799-201	D	799 227	Description: Internal adapter test failed
799-202	D	799 227	Description: External wrap test failed on port 0
799-203	D	799 227	Description: External wrap test failed on port 1
799-204	D	2C3 799	Description: External wrap test failed on port 0
799-205	D	2C3 799	Description: External wrap test failed on port 1
799-206	D	2C3 799 software	Description: External wrap test failed on port 0
799-207	D	2C3 799 software	Description: External wrap test failed on port 1

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
799-301	D	799 227 software	Description: Internal adapter test failed
799-302	D	799 227 software	Description: External wrap test failed on port 0
799-303	D	799 227 software	Description: External wrap test failed on port 1
799-304	D	2C3 799 software	Description: External wrap test failed on port 0
799-305	D	23C 799 software	Description: External wrap test failed on port 1
799-700	D	799 software	Description: Error log analysis indicates a hardware problem
7C1-101	D	7C1 software	Description: Audio Subsystem failed
7C1-102	D	7C1	Description: CS4232 Failed
7C1-103	D	7C1	Description: Clock control failed
7C1-107	D	7C1	Description: SoundBlaster interface failed
7C1-108	D	7C1	Description: Loop back failed
7C1-109	D	7C1	Description: CODEC ID invalid
7C1-117	D	D97	Description: Internal speaker failed
802-655	C	655	Description: A resource was not detected that was previously installed.
802-657	C	657	Description: A resource was not detected that was previously installed.
802-684	C	684 687	Description: A potential problem with the RS422 concentrator exists.
802-787	C	787 D95	Description: The diagnostics did not detect an installed resource.
802-78C	C	78C	Description: A system bus problem exists. Action: Use “Chapter 10. MAP 0080: System Bus Problem Isolation” on page 65.
802-78D	C	78D	Description: A resource was not detected that was previously installed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
802-80c	C	80c	Description: A potential problem with a SSA adapter exists. If the system has external SSA drives refer to the <i>SSA Adapters User's Guide and Maintenance Information</i> or the service guide for your disk subsystem. If the system has internal SSA drives, go to the SSA MAP in either the system unit's service guide or user's guide.
802-837	C	837 687 E10 227	Description: A potential problem with the Enhanced Remote Async Node exists.
802-xxxx	C	xxxx E10 227	Description: The diagnostics did not detect an installed resource. Note: To obtain the FFC substitute the last three or four digits of the SRN following the dash (-) for xxxx. (The substituted xxxx is the FFC.)
803-xxxx	D	xxxx	Description: A software error occurred while running the diagnostics which could be caused by either hardware or software. Action: Run standalone diagnostics. If you get a different SRN, use it in place of the original SRN. If you get the same SRN, use the last three digits of the 803-xxx as the FFC and got to MAP 210. If you get no error from the standalone diagnostics, you may have a problem with the software, contact your support center. Note: xxxx corresponds to the last three or four digits of the SRN. If your 803-xxxx SRN is not listed, substitute the last three or four digits of the SRN after the dash (-) for xxxx, then proceed to the FFC table using the substituted digits as your FFC.
804-111	D	804 B88	Description: Unable to reserve device.
804-112	D	804 B88	Description: Unable to do configuration.
804-113	D	804 B88	Description: Unable to open the device driver.
804-121	D	804	Description: The CD-ROM drive indicates an error.
804-122	D	804	Description: The CD-ROM drive indicates an error.
804-123	D	804	Description: The CD-ROM drive indicates an error.
804-125	D	804 B88	Description: The CD-ROM drive indicates an error.
804-126	D	804	Description: The CD-ROM drive indicates an error.
804-127	D	804	Description: The CD-ROM drive indicates an error.
804-128	D	804	Description: The CD-ROM drive indicates an error.
804-129	D	804	Description: The CD-ROM drive indicates an error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
804-150	D	Test Disc 804	Description: A media error was detected.
804-151	D	804 B88	Description: A command timeout was detected.
804-152	D	804	Description: A command reservation conflict was detected.
804-162	D	804	Description: The CD-ROM drive indicates an error.
804-171	D	804	Description: Unable to reserve device.
804-172	D	804	Description: Unable to do configuration.
804-173	D	804	Description: Unable to open device driver.
804-175	D	804	Description: The CD-ROM drive indicates an error.
804-198	D	804 B88	Description: Undefined error detected.
804-199	D	804	Description: Undefined error detected.
804-211	D	804	Description: The LED test failed.
804-281	D	804	Description: No tone during audio test.
804-301	G	804	Description: Errors found during ELA.
804-302	G	804 B88	Description: Errors found during ELA.
804-xxxx	H	xxxx	Description: An unexpected halt occurred while running the diagnostics. Note: xxxx corresponds to the last three or four digits of the SRN. If your 804-xxxx SRN is not listed, substitute the last three or four digits of the SRN after the dash (-) for xxxx, then proceed to the FFC table using the substituted digits as your FFC.
805-110	G	D67	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-111	G	D83	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-120	G	D68	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-121	G	D84	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
805-130	G	D69	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-131	G	D85	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-140	G	D70	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-141	G	D86	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-150	G	E11	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-151	G	E14	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-210	G	D71	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-211	G	D87	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-220	G	D72	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-221	G	D88	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-230	G	D73	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
805-231	G	D89	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-240	G	D74	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-241	G	D90	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-250	G	E12	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-251	G	E15	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-310	G	D75	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-311	G	D91	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-320	G	D76	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-321	G	D92	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-331	G	D93	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-340	G	D78	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
805-341	G	D94	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-350	G	E13	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-351	G	E16	Description: Error log analysis indicates a machine check due to uncorrectable memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-600	G		Description: Error log analysis indicates a machine check due to uncorrectable memory error or unsupported memory. Action: Examine the memory modules and determine if they are supported types. If the modules are supported, then replace the appropriate memory module(s). Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
805-601	G	210	Description: Error log analysis indicates a machine check due to CPU internal cache error.
805-602	G	214 D01	Description: Error log analysis indicates a machine check due to CPU address/data bus parity error.
805-603	G	210 214 D01	Description: Error log analysis indicates a machine check due to CPU bus transfer error.
805-604	G	210 D01	Description: Error log analysis indicates a machine check due to CPU address/data bus parity error.
805-605	G	210	Description: Error log analysis indicates a machine check due to CPU bus transfer error.
805-606	G	214	Description: Error log analysis indicates a machine check due to memory controller internal error.
805-607	G	210 214	Description: Error log analysis indicates a machine check due to memory address error.
805-608	G	214 217	Description: Error log analysis indicates a machine check due to a Flash ROM error.
805-609	G	D01	Description: Error log analysis indicates a machine check due to a L2 parity error.
805-610	G		Description: Error log analysis indicates a machine check due to ISA device error, but the device could not be identified. Action: Run diagnostics on the ISA devices.
805-611	G		Description: Error log analysis indicates a machine check due to EISA/ISA bus time out error, but the device could not be identified. Action: Run diagnostics on the ISA devices. If multiple devices fail, use FFC 295.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
805-612	G	214	Description: Error log analysis indicates a machine check due to an Illegal L2 copy-back operation.
805-616	G	software	Description: Error log analysis indicates a machine check due to software.
805-617	G		Description: Error log analysis indicates a machine check of unknown origin. Action: If the problem is persistent, use MAP 1540.
805-618	G		Description: Error log analysis indicates multiple instances of machine check of unknown origin. Action: If the problem is persistent, use MAP 1540.
805-619	G	221	Description: Error log analysis indicates a machine check due to an unidentified source on the I/O subsystem. Action: Use MAP 210.
805-621	G	292	Description: Error log analysis indicates a machine check due to Integrated PCI device does not respond.
805-622	G	293	Description: Error log analysis indicates a machine check due to Integrated PCI device does not respond.
805-623	G	294	Description: Error log analysis indicates a machine check due to Integrated PCI device does not respond.
805-624	G	295	Description: Error log analysis indicates a machine check due to Integrated PCI device does not respond.
805-625	G	868	Description: Error log analysis indicates a machine check due to Integrated PCI device does not respond.
805-631	G	292	Description: Error log analysis indicates a machine check due to Internal error from PCI device.
805-632	G	293	Description: Error log analysis indicates a machine check due to Internal error from PCI device.
805-633	G	294	Description: Error log analysis indicates a machine check due to Internal error from PCI device.
805-634	G	295	Description: Error log analysis indicates a machine check due to Internal error from PCI device.
805-635	G	868	Description: Error log analysis indicates a machine check due to Internal error from PCI device.
805-640	G	2E8 214	Description: Error log analysis indicates a machine check due to a system bus error.
805-641	G	2E8 210	Description: Error log analysis indicates a machine check due to a processor bus error.
805-642	G	2E8	Description: Error log analysis indicates a machine check due to a directory parity error.
805-643	G	2E8	Description: Error log analysis indicates a machine check due to a cache paradox.
805-644	G	2E8	Description: Error log analysis indicates a machine check due to an internal error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
805-645	G	2E8	Description: Error log analysis indicates a machine check due to a detected L2 hit signal.
805-646	G	2E8 214	Description: Error log analysis indicates a machine check due to an address/data bus parity error.
805-649	G	software	Description: Error log analysis indicates a machine check due to a disabled I/O address space. Action: Run Standalone Diagnostics on all devices. Use any SRN reported. If no other SRN is reported, suspect a software problem.
805-801	G	166 221	Description: Slow fan or defective thermal sensor. Action: 1) Check spacing around system enclosure, 2) check for obstructions to cooling air flow, 3) check that all fans can rotate freely, and spin with power applied. If reasons 1, 2 and 3 can be ruled out, then replace the listed FRUs.
805-802	G	152 210	Description: Over/Under voltage condition. Action: Check AC line voltage per the Power MAP in your service guide. If the AC line voltage is correct replace the listed FRUs.
805-803	G	2E1 210	Description: System shutdown due to non-critical over temperature condition. Action: 1) check for obstructions to cooling air flow, 2) check for accumulated dust on the CPU and planar. If reasons 1 and 2 can be ruled out, then replace the listed FRUs.
805-804	G	166 2E1 152	Description: System shutdown due to critical over temperature condition. Action: Check to ensure fans are connected. If fans are connected, then replace the listed FRUs.
805-805	G	152	Description: System shutdown due to loss of AC power. Action: Check the voltage range switch, if present, on the power supply and ensure that it is set to match the AC input voltage. If the range switch is set correctly or is not present refer to "MAP 1520: Power" in the Service Guide for your system.
805-807	G	166	Description: System shutdown due to an inoperative fan. Action: Check to ensure fans are connected. If fans are connected replace the listed FRU.
805-811	D	166	Description: Slow fan or defective thermal sensor. Action: <ol style="list-style-type: none"> 1. Check spacing around system enclosure 2. Check for obstructions to cooling air flow 3. Check that all fans rotate freely, and spin when power is applied. <p>If reasons 1, 2, and 3 can be ruled out, then replace the listed FRUs.</p>

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
805-812	D	152 210	Description: Over/Under voltage condition. Action: Check the AC line voltage per the Power MAP in your service guide. If the AC line voltage is correct replace the listed FRUs.
805-813	D	2E1 210	Description: System shutdown due to non-critical over temperature condition. Action: 1. Check for obstructions to cooling air flow. 2. Check for accumulated dust on the CPU and planar. If reasons 1 and 2 can be ruled out, then replace the listed FRUs.
806-001 thu 806-017	D	806	Description: GXT800P Graphics Adapter
806-018	D	806	Description: GXT800P Graphics Adapter Monitor/Display Cable
806-100	D	806	Description: GXT800P Graphics Adapter
806-505	D	806 298	Description: GXT800P Graphics Adapter GXT800P Base Memory in slot 0, 1, 2, 3, or 4
806-515	D	806 297	Description: GXT800P Graphics Adapter GXT800P Base and Texture Memory in slot 0, 1, 2, 3, or 4
806-619	G	221	Description: Error log analysis indicates a machine check due to an unidentified source on the I/O subsystem.
806-700	D	298	Description: GXT800P Base Memory in slot 0
806-701	D	298	Description: GXT800P Base Memory in slot 1
806-702	D	298	Description: GXT800P Base Memory in slot 2
806-703	D	298	Description: GXT800P Base Memory in slot 3
806-704	D	298	Description: GXT800P Base Memory in slot 4
806-710	D	297	Description: GXT800P Base and Texture Memory in slot 0
806-711	D	297	Description: GXT800P Base and Texture Memory in slot 1
806-712	D	297	Description: GXT800P Base and Texture Memory in slot 2
806-713	D	297	Description: GXT800P Base and Texture Memory in slot 3
806-714	D	297	Description: GXT800P Base and Texture Memory in slot 4
806-e00	D	298	Description: GXT800P Base Memory in slot 0
806-e01	D	298	Description: GXT800P Base Memory in slot 1
806-e02	D	298	Description: GXT800P Base Memory in slot 2

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
806-e03	D	298	Description: GXT800P Base Memory in slot 3
806-e04	D	298	Description: GXT800P Base Memory in slot 4
806-e10	D	297	Description: GXT800P Base and Texture Memory in slot 0
806-e11	D	297	Description: GXT800P Base and Texture Memory in slot 1
806-e12	D	297	Description: GXT800P Base and Texture Memory in slot 2
806-e13	D	297	Description: GXT800P Base and Texture Memory in slot 3
806-e14	D	297	Description: GXT800P Base and Texture Memory in slot 4
807-201	D	199 891	Description: Device configuration error Action: If this SRN is for an externally attached machine or enclosure, go to the <i>Service Guide</i> for that unit. Otherwise, use the FFCs listed and go to MAP 210.
807-202	D	199 891	Description: Enclosure failed to open Action: If this SRN is for an externally attached machine or enclosure, go to the <i>Service Guide</i> for that unit. Otherwise, use the FFCs listed and go to MAP 210.
807-203	D	199 891	Description: Enclosure failed to return inquiry data Action: If this SRN is for an externally attached machine or enclosure, go to the <i>Service Guide</i> for that unit. Otherwise, use the FFCs listed and go to MAP 210.
807-204	D		Description: Redundant power supply or fan failure Action: If this SRN is for an externally attached machine or enclosure, go to the <i>Service Guide</i> for that unit. Otherwise, run diagnostics in problem determination mode on sysplanar0 . If no problems are found, replace FFC 199 and go to MAP 210.
807-205	D		Description: Critical power supply or fan failure Action: If this SRN is for an externally attached machine or enclosure, go to the <i>Service Guide</i> for that unit. Otherwise, run diagnostics in problem determination mode on sysplanar0 . If no problems are found, replace FFC 199 and go to MAP 210.
814-112	D	814	Description: The NVRAM test failed.
814-113	D	221	Description: The VPD test failed.
814-114	D	814	Description: I/O Card NVRAM test failed.
815-100	D	815	Description: The floating-point processor test failed.
815-101	D	815	Description: Floating point processor failed.
815-102	D	815	Description: Floating point processor failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
815-200	D	815 7C0	Description: Power-on self-test indicates a processor failure.
815-201	D	815	Description: Processor has a status of failed. Processors with a failed status are deconfigured and therefore cannot be tested or used by the system.
816-140	D	165 816	Description: The four-digit display test failed.
817-123	D	817	Description: The I/O planar time-of-day clock test failed.
817-124	D	817	Description: Time of day RAM test failed.
817-210	D	817	Description: The time-of-day clock is at POR.
817-211	D	817 169	Description: Time of day POR test failed.
817-212	D	151 816	Description: The battery is low.
817-213	D	817	Description: The real-time clock is not running.
817-215	D	817	Description: Time of day clock not running test failed.
817-217	D	817 169	Description: Time of day clock not running.
821-111	D	821 B31	Description: Unexpected results from the test.
821-332	D	821 software	Description: Cannot open device.
823-111	D	823	Description: Standard Mouse adapter failed.
823-134	D	823 software	Description: Cannot open device.
823-211	D	925 823	Description: Standard mouse adapter failed.
824-220	D	B10 824	Description: The tablet adapter fuse failed.
824-331	D	824 227	Description: An unexpected error occurred.
824-332	D	824 227	Description: The enable/disable device test failed. Note: Ensure that the wrap plug was not attached when the test was run. If the wrap plug was attached, remove it, and rerun the test.
824-333	D	824	Description: The internal wrap test failed.
824-334	D	B10 824	Description: The tablet adapter fuse failed.
824-441	D	824	Description: An unexpected error occurred.
824-442	D	824	Description: The wrap test failed.
824-450	D	227	Description: Software error caused by hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
824-461	G	227	Description: The error log analysis indicates a hardware failure.
824-511	D	824	Description: An unexpected error occurred.
824-512	D	824	Description: Tablet adapter reset test failed.
824-522	D	B10 824	Description: Adapter fuse failure.
824-523	D	824	Description: Device cannot be configured.
824-524	D	824 software	Description: Cannot open device.
826-111	D	221	Description: Cannot run the test because the device driver detected a hardware error.
826-112	D	221	Description: Unable to determine the type of adapter from the VPD.
826-113	D	826	Description: The VPD verification test failed.
826-114	D	826	Description: The register verification test failed.
826-121	D	221	Description: Cannot run the test because the device driver detected a hardware error.
826-122	D	221	Description: The data-wrap communications test failed.
826-123	D	221	Description: The modem control line test failed.
826-131	D	221	Description: Cannot run the test because the device driver detected a hardware error.
826-132	D	221	Description: The data wrap communications test failed.
826-133	D	221	Description: The modem control line test failed.
826-161	D	252	Description: Cannot run the test because the device driver detected a hardware error.
826-162	D	252	Description: The data wrap communications test failed.
826-163	D	252	Description: The modem control line test failed.
826-171	D	259	Description: Cannot run the test because the device driver detected a hardware error.
826-172	D	259	Description: The data wrap communications test failed.
826-173	D	259	Description: The modem control line test failed.
826-181	D	261	Description: Cannot run the test because the device driver detected a hardware error.
826-182	D	261	Description: The data wrap communications test failed.
826-183	D	261	Description: The modem control line test failed.
826-271	D	826 259	Description: Cannot run the test because the device driver detected a hardware error.
826-272	D	826 259	Description: The data wrap communications test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
826-273	D	826 259	Description: The modem control line test failed.
826-281	D	826 259	Description: Cannot run the test because the device driver detected a hardware error.
826-282	D	826 259	Description: The data wrap communications test failed.
826-283	D	826 259	Description: The modem control line test failed.
826-321	D	826	Description: Cannot run the test because the device driver detected a hardware error.
826-322	D	826	Description: The data wrap communications test failed.
826-323	D	826	Description: The modem control line test failed.
826-331	D	826	Description: Cannot run the test because the device driver detected a hardware error.
826-332	D	826	Description: The data wrap communications test failed.
826-333	D	826	Description: The modem control line test failed.
826-371	D	826	Description: Cannot run the test because the device driver detected a hardware error.
826-372	D	826	Description: The data wrap communications test failed.
826-373	D	826	Description: The modem control line test failed.
826-381	D	826	Description: Could not do the test because the device driver detected a hardware error.
826-382	D	826	Description: The data wrap communication test failed.
826-383	D	826	Description: The modem control line test failed.
826-481	D	D56	Description: Could not do the test because the device driver detected a hardware error.
826-482	D	D56	Description: The data wrap communication test failed.
826-483	D	D56	Description: The modem control line test failed.
826-581	D	826 D56	Description: Could not do the test because the device driver detected a hardware error.
826-582	D	826 D56	Description: The data wrap communication test failed.
826-583	D	826 D56	Description: The modem control line test failed.
826-901 to 826-920	D	software 826	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 826; otherwise, suspect a software problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
826-921	D	826 software	Description: The adapter failed to configure
826-922 to 826-924	D	software 826	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 826; otherwise, suspect a software problem.
826-925	D	826 software	Description: The adapter failed to configure
826-926 to 826-943	D	software 826	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 826; otherwise, suspect a software problem.
827-112	D	221	Description: The parallel port data register write/read test failed.
827-121	D	827	Description: Cannot run the test because the device driver detected a hardware error.
827-122	D	827	Description: The parallel port data register write/read test failed.
827-123	D	827	Description: The parallel port control register write/read test failed.
827-124	D	827	Description: The parallel port data register read test failed.
827-125	D	827	Description: The parallel port control register read test failed.
827-126	D	827	Description: The parallel port control register read test failed.
827-131	D	827	Description: Cannot run the test because the device driver detected a hardware error.
827-132	D	827	Description: The control port register direction bit (write) test with BIDI enabled failed.
827-133	D	827	Description: The control port register direction bit (read) test with BIDI enabled failed.
827-141	D	827	Description: Cannot run the test because the device driver detected a hardware error.
827-142	D	827	Description: The parallel port control register write/read test with BIDI enabled failed.
827-151	D	221	Description: Cannot run the test because the device driver detected a hardware error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
827-152	D	827	Description: The parallel port status register read test failed.
827-161	D	827	Description: Cannot run the test because the device driver detected a hardware error.
827-162	D	221	Description: The parallel port interrupt test failed.
827-163	D	221	Description: The parallel port interrupt test failed.
827-201	D	827	Description: The extend control register of the parallel port failed a read/write test.
827-202	D	827	Description: Input/output to the FIFO (without interrupts) failed.
827-203	D	827	Description: Input/output to the FIFO (with interrupts) failed.
827-204	D	827	Description: Direct memory access to the FIFO failed.
828-501	D	828	Description: The diskette adapter test failed.
82C-102	D	82C	Description: Adapter test failed.
82C-104	D	82C 725	Description: Display test failed.
830-111	D	830 227	Description: Could not do the test because the device driver detected a hardware error.
830-114	D	830	Description: The register verification test failed.
830-121	D	830 227	Description: Could not do the test because the device driver detected a hardware problem.
830-122	D	830 227	Description: The data wrap communication test failed.
830-123	D	830 227	Description: The modem control line test failed.
830-124	D	830	Description: The memory test failed.
830-151	D	B54 830	Description: Could not do the test because the device driver detected a hardware error.
830-152	D	B54 830	Description: The data wrap communication test failed.
830-153	D	D54 830	Description: The modem control line test failed.
830-171	D	259	Description: Could not run the test because the device driver detected a hardware error.
830-172	D	259	The data wrap communication test failed.
830-173	D	259	Description: The modem control line test failed.
830-181	D	261	Description: Could not do the test because the device driver detected a hardware error.
830-182	D	261	Description: The data wrap communication test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
830-183	D	261	Description: Interposer Wrap test failed.
830-251	D	830 D57	Description: Could not perform because the device driver detected a hardware error.
830-252	D	830 B54	Description: The data wrap communication test failed.
830-253	D	830 B54	Description: The modem control line test failed.
830-271	D	830 B54	Description: Could not perform because the device driver detected a hardware error.
830-272	D	830 B54	Description: The data wrap communication test failed.
830-273	D	830 B54	Description: The modem control line test failed
830-281	D	830 D57	Could not perform the test because the device driver detected a hardware error.
830-282	D	830 B54	Description: The data wrap communication test failed.
830-283	D	830 B54	Description: The modem control line test failed.
830-481	D	B54	Description: Could not do the test because the device driver detected a hardware error.
830-482	D	B54	Description: The data wrap communication test failed.
830-483	D	B54	Description: Async Cable Wrap Test failed.
830-901 to 830-920	D	software 830	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 830; otherwise, suspect a software problem.
830-921	D	830 software	Description: The adapter failed to configure
830-922 to 830-924	D	software 830	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 830; otherwise, suspect a software problem.
830-925	D	830 software	Description: The adapter failed to configure

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
830-926 to 830-943	D	software 830	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 830; otherwise, suspect a software problem.
831-111	D	221	Description: Cannot run the test because the device driver detected a hardware error.
831-112	D	221	Description: Unable to determine the type of adapter from the VPD.
831-113	D	831	Description: The VPD verification test failed.
831-114	D	831	Description: The register verification test failed.
831-121	D	221	Description: Cannot run the test because the device driver detected a hardware error.
831-122	D	221	Description: The data wrap communications test failed.
831-123	D	221	Description: The modem control line test failed.
831-131	D	221	Description: Cannot run the test because the device driver detected a hardware error.
831-132	D	221	Description: The data wrap communications test failed.
831-133	D	221	Description: The modem control line test failed.
831-161	D	252	Description: Cannot run the test because the device driver detected a hardware error.
831-162	D	252	Description: The data wrap communications test failed.
831-163	D	252	Description: The modem control line test failed.
831-164	D	221 252	Description: Cannot run the test because the device driver detected a hardware error.
831-165	D	221 252	Description: The data wrap communications test failed.
831-166	D	221 252	Description: The modem control line test failed.
831-171	D	259	Description: Cannot run the test because the device driver detected a hardware error.
831-172	D	259	Description: The data wrap communications test failed.
831-173	D	259	Description: The modem control line test failed.
831-181	D	261	Description: Cannot run the test because the device driver detected a hardware error.
831-182	D	261	Description: The data wrap communications test failed.
831-183	D	261	Description: The modem control line test failed.
831-271	D	831 259	Description: Cannot run the test because the device driver detected a hardware error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
831-272	D	831 259	Description: The data wrap communication test failed.
831-273	D	831 259	Description: The modem control line test failed.
831-281	D	831 259	Description: Cannot run the test because the device driver detected a hardware error.
831-282	D	831 259	Description: The data wrap communications test failed.
831-283	D	831 259	Description: The modem control line test failed.
831-321	D	831	Description: Cannot run the test because the device driver detected a hardware error.
831-322	D	831	Description: The data wrap communications test failed.
831-323	D	831	Description: The modem control line test failed.
831-331	D	831	Description: Cannot run the test because the device driver detected a hardware error.
831-332	D	831	Description: The data wrap communications test failed.
831-333	D	831	Description: The modem control line test failed.
831-371	D	831	Description: Cannot run the test because the device driver detected a hardware error.
831-372	D	831	Description: The data wrap communications test failed.
831-373	D	831	Description: The modem control line test failed.
831-381	D	831	Description: Cannot run the test because the device driver detected a hardware error.
831-382	D	831	Description: The data wrap communications test failed.
831-383	D	831	Description: The modem control line test failed.
831-481	D	D56	Description: Could not do the test because the device driver detected a hardware error.
831-482	D	D56	Description: The data wrap communication test failed.
831-483	D	D56	Description: The modem control line test failed.
831-581	D	831 D56	Description: Could not do the test because the device driver detected a hardware error.
831-582	D	831 D56	Description: The data wrap communication test failed.
831-583	D	831 D56	Description: The modem control line test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
831-901 to 831-920	D	software 831	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 831; otherwise, suspect a software problem.
831-921	D	831 software	Description: The adapter failed to configure
831-922 to 831-924	D	software 831	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 831; otherwise, suspect a software problem.
831-925	D	831 software	Description: The adapter failed to configure
831-926 to 831-943	D	software 831	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 831; otherwise, suspect a software problem.
832-xxxx	G	xxxx	Description: I/O bridge/device internal error Note: xxxx represents the last 3 or 4 digits of the SRN after the dash (-).
833-xxxx	G	xxxx 296 2C9	Description: PCI device address parity error, PCI device data parity error, or PCI device abort error. The diagnostics screen indicates the actual error. Note: xxxx represents the last 3 or 4 digits of the SRN after the dash (-).
836-101	D	836	Description: Cannot run the test because the device driver detected a hardware error.
836-111	D	836 227	Description: Cannot run test because the device driver detected a hardware error.
836-112	D	836 227	Description: Unable to determine the type of adapter from the VPD.
836-113	D	836	Description: The VPD verification test failed.
836-114	D	836	Description: The register verification test failed.
836-115	D	836	Description: The VPD verification test failed.
836-116	D	B54 836	Description: The 128-port controller line test failed.
836-117	D	684	Description: Remote Async Node test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
836-118	D	837	Description: Remote async node test failed.
836-119	F	836	Description: Sync line termination test failed.
836-151	D	837	Description: Cannot run the test because the device driver detected a hardware error.
836-152	D	837	Description: The data wrap communications test failed.
836-153	D	837	Description: The modem control line test failed.
836-154	D	684 836	Description: Cannot run the test because the device driver detected a hardware error.
836-155	D	684 836 152	Description: The data wrap communications test failed.
836-161	D	C22	Description: Cannot run the test because the device driver detected a hardware error.
836-162	D	C22	Description: The data wrap communications test failed.
836-163	D	C22	Description: The modem control line test failed.
836-164	D	D06	Description: The data wrap communication test failed.
836-171	D	259	Description: Cannot run the test because the device driver detected a hardware error.
836-172	D	259	Description: The data wrap communications test failed.
836-173	D	259	Description: The modem control line test failed.
836-174	D	263	Description: Cannot run the test because the device driver detected a hardware error while running the Printer/Terminal cable wrap test.
836-175	D	263	Description: The data wrap communications test failed while running the Printer/Terminal cable wrap test.
836-181	D	261	Description: Cannot run the test because the device driver detected a hardware error.
836-182	D	261	Description: The data wrap communications test failed.
836-183	D	261	Description: The modem control line test failed.
836-251	D	836 837	Description: Cannot run the test because the device driver detected a hardware error.
836-252	D	836 837	Description: The data wrap communications test failed.
836-253	D	836 837	Description: The modem control line test failed.
836-254	D	836 837	Description: Cannot run the test because the device driver detected a hardware error while running the Remote Async Node wrap test.
836-255	D	836 684	Description: The data wrap communications test failed while running the Remote Async Node wrap test.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
836-271	D	836 837	Description: Cannot run the test because the device driver detected a hardware error.
836-272	D	836 837	Description: The data wrap communications test failed.
836-273	D	836 837	Description: The modem control line test failed.
836-274	D	836 684	Description: Cannot run the test because the device driver detected a hardware error while running the Printer/Terminal cable wrap test.
836-275	D	836 684	Description: The data wrap communications test failed while running the Printer/Terminal cable wrap test.
836-281	D	836 837	Description: Cannot run the test because the device driver detected a hardware error.
836-282	D	836 837	Description: The data wrap communication test failed.
836-283	D	836 837	Description: The modem control line test failed.
836-481	D	D56	Description: Could not do the test because the device driver detected a hardware error.
836-482	D	D56	Description: The data wrap communication test failed.
836-483	D	D56	Description: The modem control line test failed.
836-901 to 836-920	D	software 836	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 836; otherwise, suspect a software problem.
836-921	D	836 software	Description: The adapter failed to configure
836-922 to 836-924	D	software 836	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 836; otherwise, suspect a software problem.
836-925	D	836 software	Description: The adapter failed to configure

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
836-926 to 836-943	D	software 836	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 836; otherwise, suspect a software problem.
840-101	D	840 221	Description: Enhanced error handling failure on the bus.
840-102	D	840 221	Description: Enhanced error handling failure on a chip.
840-103	D	840	Description: Enhanced error handling failure on the adapter.
840-212	D	840	Description: FIFO empty bit set.
840-213	D	840	Description: FIFO empty bit clear.
840-214	D	840	Description: FIFO full bit set.
840-215	D	840	Description: FIFO full bit clear.
840-216	D	840	Description: FIFO data miscompare.
840-217	D	840	Description: SCSI FIFO data miscompare.
840-218	D	840	Description: SCSI FIFO underflow.
840-219	D	840	Description: SCSI parity error.
840-220	D	840	Description: SCSI FIFO flags error.
840-221	D	840 221	Description: Miscompare during the write/read of the configuration register.
840-222	D	840	Description: Error during the write/read of the memory register.
840-223	D	840	Description: Miscompare during the write/read of the memory I/O register. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
840-224	D	840 221	Description: SCSI configuration register read or write error.
840-225	D	840	Description: Adapter POST failed.
840-226	D		Description: SCSI wrap or PTC failure. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
840-227	D	840 221	Description: SCSI adapter test failure.
840-230	D		Description: Arbitration test failed. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
840-231	D		Description: Function could not complete. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
840-232	D		Description: SCSI bus data miscompare. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
840-240	D		Description: No terminal power. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
840-242	D		Description: SCSI bus error. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
840-301	D	840 221	Description: The parent device open failed.
840-600	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-601	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-602	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-603	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-604	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-605	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-606	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-607	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-701	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-702	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-703	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-704	G	840	Description: Error log analysis indicates a PCI SCSI adapter failure.
840-800	G		Description: Error log analysis indicates a PCI SCSI adapter PTC failure. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
840-801	G		Description: Error log analysis indicates a terminator problem. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
840-802	G		Description: Error log analysis indicates that multiple attempts to reset the SCSI bus have timed out. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.
840-803	G		Description: Error log analysis indicates that multiple SCSI bus errors have occurred. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in "General SCSI Configuration Checks" on page 3 to resolve the problem.
844-xxx series	D	844	Description: A 7135 controller problem is indicated. Action: Use 7135 documentation.
845-xxx series	D	845	Description: A 7135 DASD drawer problem is indicated. Action: Use 7135 documentation.
846-xxx series	D	846	Description: A 7135 DASD drawer problem is indicated. Action: Use 7135 documentation.
868-101	D	868 221	Description: Enhanced error handling failure on the bus.
868-102	D	868 221	Description: Enhanced error handling failure on a chip.
868-103	D	868	Description: Enhanced error handling failure on the adapter.
868-110	D	221	Description: The adapter diagnostic subcommand test failed.
868-130	D	279	Description: The adapter fuse test failed.
868-140	D	868	Description: The wrap test failed.
868-150	D	868	Description: The BCR registers write/read test failed.
868-160	D	868	Description: The POS registers write/read test failed.
868-170	D	868	Description: The internal/external reset test failed.
868-180	D	279 868	Description: The adapter command timed out. Note: Check the fuse before replacing.
868-190	D	221	Description: A software error was caused by a hardware failure.
868-191	G	868	Description: Analysis of the error log indicates a problem with the hardware.
868-192	G	221	Description: Analysis of the error log indicates a problem with the hardware.
868-193	G	279	Description: Analysis of the error log indicates a problem with the hardware.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
868-194	G	868	Description: Analysis of the error log indicates a problem with the hardware.
868-200	D	868	Description: ROM CRC error.
868-201	D	868	Description: Adapter RAM error.
868-202	D	868	Description: The control logic failed.
868-203	D	868	Description: The control logic failed.
868-204	D	868	Description: The control logic failed.
868-205	D	868	Description: The control logic failed.
868-206	D	868	Description: Diagnostics completed with a previous error.
868-211	D	279 868 software	Description: The device failed to configure.
868-212	D	868	Description: FIFO empty bit set.
868-213	D	868	Description: FIFO empty bit clear.
868-214	D	868	Description: FIFO full bit set.
868-215	D	868	Description: FIFO full bit clear.
868-216	D	868	Description: FIFO data miscompare.
868-217	D	868	Description: SCSI FIFO data miscompare.
868-218	D	868	Description: SCSI FIFO underflow.
868-219	D	868	Description: SCSI parity error.
868-220	D	868	Description: SCSI FIFO flags error.
868-221	D	868 221	Description: Miscompare during the write/read of the configuration register.
868-222	D	868	Description: Error during the write/read of the memory register.
868-223	D	868	Description: Miscompare during the write/read of the memory I/O register. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
868-224	D	868 221	Description: SCSI configuration register read or write error.
868-225	D	868	Description: Adapter POST failed.
868-226	D		Description: SCSI wrap or PTC failure. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
868-227	D	868 221	Description: SCSI adapter test failure.
868-230	D		Description: Arbitration test failed. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
868-231	D		Description: Function could not complete. Action: Go to "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
868-232	D		Description: SCSI bus data miscompare. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
868-240	D		Description: No terminal power. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
868-242	D		Description: SCSI bus error. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
868-301	D	868 221	Description: Configuration open failed for parent bus.
868-700	G	868	Description: Error log analysis indicates a PCI SCSI adapter failure.
868-701	G	868	Description: Error log analysis indicates a PCI SCSI adapter failure.
868-702	G	868	Description: Error log analysis indicates a PCI SCSI adapter failure.
868-703	G	868	Description: Error log analysis indicates a PCI SCSI adapter failure.
868-704	G	868	Description: Error log analysis indicates a PCI SCSI adapter failure.
868-705	G	868	Description: Error log analysis indicates a PCI SCSI adapter failure.
868-800	G		Description: Error log analysis indicates a PCI SCSI adapter PTC failure. Action: Go to “Chapter 8. MAP 0050: SCSI Bus Problems” on page 53.
868-801	G		Description: Error log analysis indicates a terminator problem. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.
868-802	G		Description: Error log analysis indicates that multiple attempts to reset the SCSI bus have timed out. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.
868-803	G		Description: Error log analysis indicates that multiple SCSI bus errors have occurred. Action: Run the diagnostics on the adapter in System Verification mode. If an SRN is reported, use the SRN to resolve the problem. If an SRN is not reported, use the SCSI service hints in “General SCSI Configuration Checks” on page 3 to resolve the problem.
887-101	D	887	Description: POS register test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
887-102	D	887	Description: I/O register test failed.
887-103	D	887	Description: Local RAM test failed.
887-104	D	887	Description: Vital Product Data (VPD) failed.
887-105	D	887	Description: LAN coprocessor internal tests failed.
887-106	D	887	Description: Internal loopback test failed.
887-107	D	887	Description: External loopback test failed.
887-108	D	887	Description: External loopback test failed.
887-109	D	887	Description: External loopback parity tests failed.
887-110	D	887	Description: External loopback fairness test failed.
887-111	D	887	Description: External loopback fairness and parity tests failed.
887-112	D	887	Description: External loopback (twisted pair) test failed.
887-113	D	887	Description: External loopback (twisted pair) parity test failed.
887-114	D	887	Description: Ethernet loopback (twisted pair) fairness test failed.
887-115	D	887	Description: External loopback (twisted pair) fairness and parity tests failed.
887-116	D	887	Description: Twisted pair wrap data failed).
887-117	D	887 software	Description: Device configuration fails.
887-118	D	887	Description: Device driver indicates a hardware problem.
887-120	D	887	Description: Device driver indicates a hardware problem.
887-121	D	B08	Description: Ethernet transceiver test failed.
887-122		B09	Description: Ethernet 10 Base-2 transceiver test failed.
887-123	D	887	Description: Internal loopback test failed.
887-124	G	887 software	Description: Error log indicates a hardware problem.
887-125	G	887	Description: Fuse test failed.
887-202	D	887	Description: Vital product data test failed.
887-203	D	887	Description: Vital product data test failed.
887-209	D	887	Description: RJ-45 converter test failed.
887-304	D	887	Description: Coprocessor internal test failed.
887-305	D	887	Description: Internal loopback test failed.
887-306	D	887	Description: Internal loopback test failed.
887-307	D	887	Description: External loopback test failed.
887-319	D	887 software	Description: Device driver indicates a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
887-400	D	887	Description: Fuse test failed.
887-401	D	887	Description: Circuit breaker for Ethernet test failed.
887-402	D	B09 887	Description: Ethernet 10 Base-2 transceiver test failed.
887-403	D	B08 887	Description: Ethernet 10 Base-T transceiver test failed.
887-404	D	C29 887	Description: RJ-45 converter test failed.
887-405	F	Ethernet- network 887	Description: Rerun diagnostics in advanced mode for accurate problem determination.
89c-111	D	89c B88	Description: Unable to reserve device.
89c-112	D	89c B88	Description: Unable to do configuration.
89c-113	D	89c B88	Description: Unable to open the device driver.
89c-121	D	89c	Description: The CD-ROM drive indicates an error.
89c-122	D	89c	Description: The CD-ROM drive indicates an error.
89c-123	D	89c	Description: The CD-ROM drive indicates an error.
89c-125	D	89c B88	Description: The CD-ROM drive indicates an error.
89c-126	D	89c	Description: The CD-ROM drive indicates an error.
89c-127	D	89c	Description: The CD-ROM drive indicates an error.
89c-128	D	89c	Description: The CD-ROM drive indicates an error.
89c-129	D	89c	Description: The CD-ROM drive indicates an error.
89c-150	D	Test- Disc 89c	Description: A media error was detected.
89c-151	D	89c D88	Description: A command timeout was detected.
89c-152	D	89c	Description: A command reservation conflict was detected.
89c-162	D	89c	Description: The CD-ROM drive indicates an error.
89c-171	D	89c	Description: Unable to reserve device.
89c-172	D	89c	Description: Unable to do configuration.
89c-173	D	89c	Description: Unable to open device driver.
89c-175	D	89c	Description: The CD-ROM drive indicates an error.
89c-198	D	89c B88	Description: Undefined error detected.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
89c-199	D	89c	Description: Undefined error detected.
89c-211	D	89c	Description: The LED test failed.
89c-281	D	89c	Description: No tone during audio test.
89c-301	G	89c	Description: Errors found during ELA.
89c-302	G	89c B88	Description: Errors found during ELA.

Chapter 32. SRNs 900-001 through xxxxxxx

Note: Some SRNs in this chapter may have 4 rather than 3 digits after the dash (-).

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
900-001	D	900 227 Monitor	Description: "NO" to color panel.
900-002	D	900 Monitor	Description: "NO" to cursor panel.
900-007	D	Info code	Description: The EMC_SCROLLING_17_H_TEST failed.
900-009	D	Info code	Description: The EMC_SCROLLING_21_H_TEST failed.
900-064	D	900 227	Description: TRIO64V+_TIMEOUT.
900-101	D	900 227	Description: Color miscompare.
900-102	D	900 227	Description: Clipping error.
900-103	D	900 227	Description: Rectangle fill test failed.
900-128	D	software 900	Description: MALLOC_ERROR.
900-161	D	software	Description: Loop count value in rules file is zero.
900-191	D	900 227	Description: Red screen error.
900-193	D	900 227	Description: Green screen error.
900-1FF	D	900 227	Description: Rectangle fill test failed.
900-201	D	900 227	Description: Color miscompare.
900-202	D	900 227	Description: Clipping error.
900-203	D	900 227	Description: Image transfer across Plane Test failed.
900-211	D	software	Description: INTERNAL_ERROR_DATA_SIZE.
900-212	D	software	Description: INTERNAL_ERROR_NO_ACCESS.
900-215	D	900 227	Description: Black screen error.
900-217	D	900 227	Description: 9 x 7 Cross hatch grid failed.
900-233	D	software	Description: OPEN_RCM_ERROR.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
900-234	D	software	Description: IOCTL_GSC_HANDLE_FAILED.
900-235	D	software	Description: AIXGSC_MAKE_GP_FAILED.
900-236	D	software	Description: AIXGSC_UNMAKE_GP_FAILED.
900-237	D	software	Description: DEVICE_BUSY_ERROR.
900-241	D	Info code	Description: The SCROLLING_17_H_TEST failed.
900-263	D	Info code	Description: The EMC_SCROLLING_21_H_TEST failed.
900-2FF	D	900 227	Description: Image transfer across Plane Test failed.
900-301	D	900 227	Description: A write of "0x00" to the palette register failed.
900-302	D	900 227	Description: A write of "0x15" to the palette register failed.
900-303	D	900 227	Description: A write of "0x2A" to the palette register failed.
900-304	D	900 227	Description: A write of "0x3F" to the palette register failed.
900-305	D	900 227	Description: The test of the palette registers failed.
900-3FF	D	900 227	Description: The test of the palette registers failed.
900-401	D	900 227	Description: Frame buffer base address inconsistent.
900-402	D	900 227	Description: VRAM inaccessible.
900-403	D	900 227	Description: Miscompare found in VRAM.
900-404	D	900 227	Description: The test of the VRAM failed.
900-447	D	900 227	Description: Green screen error.
900-449	D	900 227	Description: Blue Screen error.
900-471	D	900 227	Description: 9 x 7 Cross hatch grid failed.
900-473	D	900 227	Description: 11 x 9 Cross hatch grid failed.
900-495	D	Info code	Description: The SCROLLING_17_H_TEST failed.
900-497	D	Info code	Description: The SCROLLING_21_H_TEST failed.
900-4FF	D	900 227	Description: The test of the VRAM failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
900-501	D	900 227	Description: Color miscompare.
900-502	D	900 227	Description: Clipping error.
900-503	D	900 227	Description: Direct Frame Buffer test failed.
900-5FF	D	900 227	Description: Direct Frame Buffer test failed.
900-601	D	900 227	Description: Video Stream Register test failed.
900-602	D	900 227	Description: Video Stream hardware test failed.
900-6FF	D	900 227	Description: Video Stream hardware test failed.
900-701	D	900 227	Description: 0 Degree Short Stroke Draw failed.
900-702	D	900 227	Description: 45 Degree Short Stroke Draw failed.
900-703	D	900 227	Description: Blue Screen error, or 90 Degree Short Stroke Draw failed.
900-704	D	900 227	Description: 135 Degree Short Stroke Draw failed.
900-705	D	900 227	Description: White screen error, or 180 Degree Short Stroke Draw failed.
900-706	D	900 227	Description: 225 Degree Short Stroke Draw failed.
900-707	D	900 227	Description: 270 Degree Short Stroke Draw failed.
900-708	D	900 227	Description: 315 Degree Short Stroke Draw failed.
900-709	D	900 227	Description: Short Stroke Vector Function test failed.
900-727	D	900 227	Description: 11 x 9 Cross hatch grid failed.
900-750	D	Info code	Description: The SCROLLING_21_H_TEST failed.
900-753	D	Info code	Description: The EMC_SCROLLING_17_H_TEST failed.
900-7FE	D	900 227	Description: Short Stroke Vector Function test failed.
900-7FF	D	software 900 227	Description: Bad vector detected.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
900-801	D	900 227	Description: Color for PatBlt thru screen failed.
900-802	D	900 227	Description: Clipping for PatBlt thru screen failed.
900-803	D	900 227	Description: Color for PatBlt Across screen failed.
900-804	D	900 227	Description: Clipping for PatBlt Across screen failed.
900-805	D	900 227	Description: Pattern Fill Across the Plane test failed.
900-8FF	D	900 227	Description: Pattern Fill Across the Plane test failed.
900-901	D	900 227	Description: Color miscompare of white boxes detected.
900-902	D	900 227	Description: Clipping error of white boxes detected.
900-903	D	900 227	Description: Color miscompare of color bars detected.
900-904	D	900 227	Description: Clipping error of white boxes detected.
900-905	D	900 227	Description: Color miscompare of white boxes detected.
900-906	D	900 227	Description: Clipping error of white boxes detected.
900-907	D	900 227	Description: Color miscompare of white boxes detected.
900-908	D	900 227	Description: Clipping miscompare of white boxes detected.
900-909	D	900 227	Description: The Area fill test (color bars) failed.
900-937	D	900 227	Description: Red screen error.
900-959	D	900 227	Description: White screen error.
900-961	D	900 227	Description: Black screen error.
900-9FF	D	900 227	Description: The Area fill test (color bars) failed.
900-A01	D	900 227	Description: Color miscompare of horizontal top line.
900-A02	D	900 227	Description: Clipping error of horizontal top line.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
900-A03	D	900 227	Description: Color miscompare of vertical right line.
900-A04	D	900 227	Description: Clipping error of vertical right line.
900-A05	D	900 227	Description: Color miscompare of horizontal bottom line.
900-A06	D	900 227	Description: Clipping error of horizontal bottom line.
900-A07	D	900 227	Description: Color miscompare of vertical left line.
900-A08	D	900 227	Description: Clipping error of vertical left line.
900-A09	D	900 227	Description: Color miscompare of horizontal center line.
900-A0A	D	900 227	Description: Clipping error of horizontal center line.
900-A0B	D	900 227	Description: Color miscompare of vertical center line.
900-A0C	D	900 227	Description: Clipping error of vertical center line.
900-A0D	D	900 227	Description: Reserved.
900-A0F	D	900 227	Description: Reserved.
900-A10	D	900 227	Description: Color miscompare of textured top line.
900-A11	D	900 227	Description: Clipping error of textured top line.
900-A12	D	900 227	Description: Line Drawing Function test failed.
900-AFF	D	900 227	Description: Line Drawing Function test failed.
900-B01	D	900 227	Description: Rectangle Area Color miscompare detected.
900-B02	D	900 227	Description: Rectangle Area Clip error detected.
900-B03	D	900 227	Description: Clipped Area Horizontal color miscompare (background line color wrong).
900-B04	D	900 227	Description: Clipped Area Horizontal clip miscompare (clip of background line wrong).
900-B05	D	900 227	Description: Clipped Area Vertical color miscompare (background line color wrong).

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
900-B06	D	900 227	Description: Clipped Area Vertical clip error (clip of background line wrong).
900-B07	D	900 227	Description: The clipping function test failed.
900-BFF	D	900 227	Description: The clipping function test failed.
900-C01	D	900 227	Description: The BIOS read failed.
900-C02	D	900 227	Description: The BIOS function test failed.
900-CFF	D	900 227	Description: The BIOS function test failed.
900-D01	D	900 227	Description: The HW cursor function test failed.
900-DFE	D	900 227	Description: The HW cursor function test failed.
901-xxx			Description: Vendor SCSI device problem. Refer to the service documentation for this device.
902-xxx			Description: Vendor display problem. Refer to the service documentation for this display.
903-xxx			Description: Vendor Async device problem. Refer to the service documentation for this device.
904-xxx			Description: Vendor Parallel device problem. Refer to the service documentation for this device.
905-xxx			Description: Vendor device problem. Refer to the service documentation for this device.
908-001 to 908-010	D	908 C33 C48	Description: Invalid function request or bad parameters passed.
908-016 to 908-019	D	908	Description: MCIC failed reading header.
908-020	D	C33 908 C36	Description: Error closing 7250 DD.
908-111	D	908 C33 C36	Description: Loader check sum error.
908-112	D	C33 908 C36 C34	Description: DMA failed to complete a transfer.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
908-113	D	908 C33 C36	Description: Errors in loading ASCII registers.
908-114 to 908-118	D	C33 908 C36	Description: Errors in loading ASCII registers.
908-120 to 908-150	D	908 C33 C36	Description: DMA transfer or PFCA data error.
908-151 to 908-158	D	908	Description: SPAN board error.
908-160	D	908 C33 System C36	Description: 7250 is not available.
908-200 to 908-254	D	C33 908 C36	Description: GPSS board failure.
908-255	D	C33 C34 908 C48	Description: CP NMI bus timeout interrupt error.
908-256 to 908-454	D	C33 908 C36	Description: GPSS board failure.
908-455	D	C33 908 C34 C48	Description: CP NMI bus timeout interrupt error.
908-456 to 908-699	D	C33 908 C36	Description: GPSS board failure.
908-700 to 908-766	D	C34 C33 C48	Description: BLT or RATTLE error.
908-767 to 908-769	D	C35 C34 C44	Description: VOO feature error.
908-770 to 908-799	D	C34 C33 C48	Description: RSS BIST failure.
908-800	D	C46 D66	Description: Base 16M CHAP0 SIMM bad.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
908-801	D	C45 D66	Description: RSS base 12M CHAP0 SIMM bad (801).
908-802	D	C46 D66	Description: RSS AG 16M CHAP0 SIMM bad (802).
908-803	D	C45 D66	Description: RSS AG 12M CHAP0 SIMM bad (803).
908-804	D	C47 D66	Description: RSS TX 16M CHAP0 SIMM bad (804).
908-805	D	C46 D66	Description: Base 16M CHAP 1 SIMM bad (805).
908-806	D	C45 D66	Description: RSS base 12M CHAP1 SIMM bad (806).
908-807	D	C46 D66	Description: RSS AG 16M CHAP1 SIMM bad (807).
908-808	D	C45 D66	Description: RSS AG 12M CHAP1 SIMM bad (808).
908-809	D	C47 D66	Description: RSS TX 16M CHAP1 SIMM bad (809).
908-810	D	C46 D66	Description: RSS base 16M CHAP2 SIMM bad (810).
908-811	D	C45 D66	Description: RSS base 12M CHAP2 SIMM bad (811).
908-812	D	C46 D66	Description: RSS AG 16M CHAP2 SIMM bad (812).
908-813	D	C45 D66	Description: RSS AG 12M CHAP2 SIMM bad (813).
908-814	D	C47 D66	Description: RSS TX 16M CHAP2 SIMM bad (814).
908-815	D	C46 D66	Description: RSS base 16M CHAP3 SIMM bad (815).
908-816	D	C45 D66	Description: RSS base 12M CHAP3 SIMM bad (816).
908-817	D	C46 D66	Description: RSS AG 16M CHAP3 SIMM bad (817).
908-818	D	C45 D66	Description: RSS AG 12M CHAP3 SIMM bad (818).
908-819	D	C47 D66	Description: RSS TX 16M CHAP3 SIMM bad (819).
908-820	D	C46 D66	Description: RSS base 16M CHAP4 SIMM bad (820).
908-821	D	C45 D66	Description: RSS base 12M CHAP4 SIMM bad (821).

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
908-822	D	C46 D66	Description: RSS AG 16M CHAP4 SIMM bad (822).
908-823	D	C45 D66	Description: RSS AG 12M CHAP4 SIMM bad (823).
908-824	D	C47 D66	Description: RSS TX 16M CHAP4 SIMM bad (824).
908-825	D	C34	Description: RSS error.
908-830 to 908-870	D	C34	Description: Multiple SIMMs failed.
908-871 to 908-899	D	D66	Description: RSS error.
908-900 to 908-966	D	D66 C33 C48	Description: RSS error.
908-967 to 908-969	D	C35 D66 C48	Description: VOO error.
908-970 to 908-999	D	D66 C33 C48	Description: RSS error.
912-102	D	912	Description: An unrecoverable media error.
912-104	D	912	Description: The motor failed to restart.
912-105	D	912	Description: The drive did not become ready.
912-106	D	912	Description: The electronics card test failed.
912-108	D	912	Description: The bus test failed.
912-110	D	912	Description: The media format is corrupted.
912-112	D	912	Description: The diagnostic test failed.
912-114	D	912	Description: An unrecoverable hardware error.
912-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
912-117	D	912	Description: A write-protect error occurred.
912-118	D	912 B88	Description: A SCSI command time-out.
912-120	D	912	Description: A SCSI busy or command error.
912-122	D	912	Description: A SCSI reservation conflict error.
912-124	D	912	Description: A SCSI check condition error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
912-126	D	912 B88	Description: A software error was caused by a hardware failure.
912-128	G	912	Description: The error log analysis indicates a hardware failure.
912-129	G	190 912 B88 software	Description: Error log analysis indicates a SCSI bus problem.
912-130	G	912	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
912-132	D	912	Description: A disk drive hardware error occurred.
912-134	D	B88 software	Description: The adapter failed to configure.
912-137	D	912 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
913-102	D	913	Description: An unrecoverable media error.
913-104	D	913	Description: The motor failed to restart.
913-105	D	913	Description: The drive did not become ready.
913-106	D	913	Description: The electronics card test failed.
913-108	D	913	Description: The bus test failed.
913-110	D	913	Description: The media format is corrupted.
913-112	D	913	Description: The diagnostic test failed.
913-114	D	913	Description: An unrecoverable hardware error.
913-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
913-117	D	913	Description: A write-protect error occurred.
913-118	D	913 B88	Description: A SCSI command time-out.
913-120	D	913	Description: A SCSI busy or command error.
913-122	D	913	Description: A SCSI reservation conflict error.
913-124	D	913	Description: A SCSI check condition error.
913-126	D	913 B88	Description: A software error was caused by a hardware failure.
913-128	G	913	Description: The error log analysis indicates a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
913-129	G	190 913 B88 software	Description: Error log analysis indicates a SCSI bus problem.
913-130	G	913	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
913-132	D	913	Description: A disk drive hardware error occurred.
913-134	D	B88 software	Description: The adapter failed to configure.
913-137	D	913 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
914-110	D	914	Description: The Reserve command failed.
914-120	D	914	Description: The Inquiry command failed.
914-130	D	914 media	Description: The Load command failed.
914-135	D	914 media	Description: The Unload command failed.
914-140	D	914	Description: The Mode Select command failed.
914-150	D	914 media	Description: The Test Unit Ready command failed.
914-160	D	914 media	Description: The Send Diagnostic command failed.
914-170	D	914 B88 media	Description: The Read, Write and Compare test failed.
914-180	D	914 media	Description: The Load command failed.
914-185	D	914 media	Description: The Unload command failed.
914-190	D	914	Description: The Mode Select command failed.
914-200	D	914 media	Description: The Test Unit Ready command failed.
914-210	D	914 B88	Description: The device configuration failed.
914-220	D	914	Description: The Release command failed.
914-230	D	914	Description: The Request Sense command failed.
914-240	D	914	Description: The Opnx command failed.
914-300	D	914 software	Description: The device configuration failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
914-310	D	B88 914 software	Description: SCSI adapter configuration failed.
914-320	G	914 media	Description: Error log analysis indicates a failure.
914-411 to 914-423	D	914 B88 software	Description: A reservation conflict occurred.
914-511 to 914-523	D	914 B88	Description: The drive returned bad or non-extended sense data.
914-611 to 914-623	D	914 B88 software	Description: An adapter or bus I/O error occurred.
914-711 to 914-723	D	914 B88 software	Description: A device timeout error occurred.
915-110	D	915	Description: The Reserve command is corrupted.
915-120	D	915	Description: The Inquiry command failed.
915-130	D	915 media	Description: The Load command failed.
915-135	D	915 media	Description: The Unload command failed.
915-140	D	915	Description: The Mode Select command failed.
915-150	D	915 media	Description: The Test Unit Ready command failed.
915-160	D	915 media	Description: The Send Diagnostic command failed.
915-169	D	915 media	Description: The Send Diagnostic command failed.
915-170	D	915 B88 media	Description: The Read, Write and Compare test failed.
915-180	D	915 media	Description: The Load command failed.
915-185	D	915 media	Description: The Unload command failed.
915-190	D	915	Description: The Mode Select command failed.
915-200	D	915 media	Description: The Test Unit Ready command failed.
915-210	D	915 B88	Description: The device configuration failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
915-220	D	915	Description: The Replace command failed.
915-230	D	915	Description: The Request Sense command failed.
915-240	D	915	Description: The Openx command failed.
915-300	D	915 software	Description: The device configuration failed.
915-310	D	B88 915 software	Description: SCSI adapter configuration failed.
915-320	G	915 media	Description: Error log analysis indicates a failure.
915-411 to 915-423	D	915 B88 software	Description: A reservation conflict occurred.
915-511 to 915-523	D	915 B88	Description: The drive returned bad or non-extended sense data.
915-611 to 915-623	D	915 B88 software	Description: An adapter or bus I/O error occurred.
915-711 to 915-723	D	915 B88 software	Description: A device timeout error occurred.
917-102	D	917	Description: An unrecoverable media error.
917-104	D	917	Description: The motor failed to restart.
917-105	D	917	Description: The drive did not become ready.
917-106	D	917	Description: The electronics card test failed.
917-108	D	917	Description: The bus test failed.
917-110	D	917	Description: The media format is corrupted.
917-112	D	917	Description: The diagnostic test failed.
917-114	D	917	Description: An unrecoverable hardware error.
917-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
917-117	D	917	Description: A write-protect error occurred.
917-118	D	917 B88	Description: A SCSI command time-out.
917-120	D	917	Description: A SCSI busy or command error.
917-122	D	917	Description: A SCSI reservation conflict error.
917-124	D	917	Description: A SCSI check condition error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
917-126	D	917 B88	Description: A software error was caused by a hardware failure.
917-128	G	917	Description: The error log analysis indicates a hardware failure.
917-129	G	190 917 B88 software	Description: Error log analysis indicates a SCSI bus problem.
917-130	G	917	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
917-132	D	917	Description: A disk drive hardware error occurred.
917-134	D	B88 software	Description: The adapter failed to configure.
917-135	D	917 B88 software	Description: The device failed to configure.
917-136	D	917	Description: The certify operation failed.
917-137	D	917 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
918-102	D	918	Description: An unrecoverable media error.
918-104	D	918	Description: The motor failed to restart.
918-105	D	918	Description: The drive did not become ready.
918-106	D	918	Description: The electronics card test failed.
918-108	D	918	Description: The bus test failed.
918-110	D	918	Description: The media format is corrupted.
918-112	D	918	Description: The diagnostic test failed.
918-114	D	918	Description: An unrecoverable hardware error.
918-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
918-117	D	918	Description: A write-protect error occurred.
918-118	D	918 B88	Description: A SCSI command time-out.
918-120	D	918	Description: A SCSI busy or command error.
918-122	D	918	Description: A SCSI reservation conflict error.
918-124	D	918	Description: A SCSI check condition error.
918-126	D	918 B88	Description: A software error was caused by a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
918-128	G	918	Description: The error log analysis indicates a hardware failure.
918-129	G	190 918 B88 software	Description: Error log analysis indicates a SCSI bus problem.
918-130	G	918	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
918-132	D	918	Description: A disk drive hardware error occurred.
918-134	D	B88 software	Description: The adapter failed to configure.
918-135	D	918 B88 software	Description: The device failed to configure.
918-136	D	918	Description: The certify operation failed.
918-137	D	918 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
921-101	D	821	Description: An unexpected adapter error occurred.
921-102	D	921 821	Description: An unexpected device or adapter error occurred.
921-103	D	921 821	Description: The keyboard reset failed.
921-104	D	921	Description: Unknown keyboard.
921-105	D	921 821	Description: The keyboard light-on test failed.
921-106	D	921 821	Description: The keyboard light-off test failed.
921-201	D	821	Description: An unexpected adapter error occurred.
921-202	D	921 821	Description: An unexpected device or adapter error occurred.
921-203	D	921 821	Description: The read keyboard ID test failed.
921-204	D	921	Description: The keyboard layout ID test failed.
921-205	D	921 821	Description: The keyboard echo test failed.
921-206	D	921 821	Description: The select scan code set test failed.
921-301	D	821	Description: An unexpected adapter error occurred.
921-302	D	921 821	Description: An unexpected device or adapter error occurred.
921-303	D	921	Description: An error occurred in turning on the lamps.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
921-304	D	921	Description: An error occurred in turning off the lamps.
921-401	D	821	Description: An unexpected adapter error occurred.
921-402	D	921 821	Description: An unexpected device or adapter error occurred.
921-403	D	921	Description: Unable to recognize the keyboard.
921-404	D	921 821	Description: The keyboard is failing.
921-501	D	821	Description: An unexpected adapter error occurred.
921-502	D	921 821	Description: An unexpected device or adapter error occurred.
921-503	D	921	Description: The auto-click cannot be disabled.
921-504	D	921	Description: The auto-click cannot be enabled.
921-505	D	921	Description: Unable to recognize the keyboard.
921-601	D	821	Description: An unexpected adapter error occurred.
921-602	D	921 821	Description: An unexpected device or adapter error occurred.
921-603	D	921	Description: The speaker test failed.
921-701	D	921 821	Description: Error configuring the device.
921-901	G	821	Description: The error log analysis indicates an adapter failure.
921-902	G	921 821	Description: The error log analysis indicates a device failure.
921-903	G	921 821	Description: The error log analysis indicates an unknown failure.
922-101	D	821	Description: An unexpected adapter error occurred.
922-102	D	922 821	Description: An unexpected device or adapter error occurred.
922-103	D	922 821	Description: The keyboard reset failed.
922-104	D	922	Description: Unknown keyboard.
922-105	D	922 821	Description: The keyboard light-on test failed.
922-106	D	922 821	Description: The keyboard light-off test failed.
922-201	D	821	Description: An unexpected adapter error occurred.
922-202	D	922 821	Description: An unexpected device or adapter error occurred.
922-203	D	922 821	Description: The read keyboard id test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
922-204	D	922	Description: The keyboard layout id test failed.
922-205	D	922 821	Description: The keyboard echo test failed.
922-206	D	922 821	Description: The select scan code set test failed.
922-301	D	821	Description: An unexpected adapter error occurred.
922-302	D	922 821	Description: An unexpected device or adapter error occurred.
922-303	D	922	Description: An error occurred in turning on the lamps.
922-304	D	922	Description: An error occurred in turning off the lamps.
922-401	D	821	Description: An unexpected adapter error occurred.
922-402	D	922 821	Description: An unexpected device or adapter error occurred.
922-403	D	922	Description: The keyboard is failing.
922-404	D	922 821	Description: Unable to recognize the keyboard.
922-501	D	821	Description: An unexpected adapter error occurred.
922-502	D	922 821	Description: An unexpected device or adapter error occurred.
922-503	D	921	Description: The auto-click cannot be disabled.
922-504	D	922	Description: The auto-click cannot be enabled.
922-505	D	922	Description: Unable to recognize the keyboard.
922-601	D	821	Description: An unexpected adapter error occurred.
922-602	D	922 821	Description: An unexpected device or adapter error occurred.
922-603	D	922	Description: The speaker test failed.
922-701	D	922 821	Description: Error configuring the device.
922-901	G	821	Description: The error log indicates an adapter failed.
922-902	G	922 821	Description: The error log indicates a device failed.
922-903	G	922 821	Description: The error log analysis indicates an unknown failure.
923-101	D	821	Description: An unexpected adapter error occurred.
923-102	D	923 821	Description: An unexpected device or adapter error occurred.
923-103	D	923 821	Description: The keyboard reset failed.
923-104	D	923	Description: Unknown keyboard.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
923-105	D	923 821	Description: The keyboard light-on test failed.
923-106	D	923 821	Description: The keyboard light-off test failed.
923-201	D	821	Description: An unexpected adapter error occurred.
923-202	D	923 821	Description: An unexpected device or adapter error occurred.
923-203	D	923 821	Description: The read keyboard id test failed.
923-204	D	923	Description: The keyboard layout id test failed.
923-205	D	923 821	Description: The keyboard echo test failed.
923-206	D	923 821	Description: The select scan code set test failed.
923-301	D	821	Description: An unexpected adapter error occurred.
923-302	D	923 821	Description: An unexpected device or adapter error occurred.
923-303	D	923	Description: An error occurred in turning on the lamps.
923-304	D	923	Description: An error occurred in turning off the lamps.
923-401	D	821	Description: An unexpected adapter error occurred.
923-402	D	923 821	Description: An unexpected device or adapter error occurred.
923-403	D	923	Description: The keyboard is failing.
923-404	D	923 821	Description: Unable to recognize the keyboard.
923-501	D	821	Description: An unexpected adapter error occurred.
923-502	D	923 821	Description: An unexpected device or adapter error occurred.
923-503	D	923	Description: The auto-click cannot be disabled.
923-504	D	923	Description: The auto-click cannot be enabled.
923-505	D	923	Description: Unable to recognize the keyboard.
923-601	D	821	Description: An unexpected adapter error occurred.
923-602	D	923 821	Description: An unexpected device or adapter error occurred.
923-603	D	923	Description: The speaker test failed.
922-701	D	923 821	Description: Error configuring the device.
923-901	G	821	Description: The error log indicates an adapter failed.
923-902	G	923 821	Description: The error log analysis indicates a device failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
923-903	G	923 821	Description: The error log analysis indicates an unknown failure.
925-111	D	925 823	Description: An unexpected device error occurred.
925-112	D	925 823	Description: The device disable test failed.
925-113	D	925	Description: Could not reset the device.
925-114	D	925 823	Description: The Read Status command failed.
925-115	D	925	Description: The device test failed.
925-116	D	925	Description: Unknown Mouse type.
925-117	D	925 823	Description: Mouse wrap mode failed.
925-118	D	925 823	Description: Error setting mouse parameters.
925-121 to 925-171	D	925	Description: The device test failed.
925-200	D	925 823	Description: A software error was caused by a hardware failure.
925-300	G	925	Description: The error log analysis indicates a hardware failure.
925-301	G	925 823	Description: The error log analysis indicates a hardware failure.
926-104	D	926 159	Description: Input device cable is not attached.
926-111	D	824	Description: Adapter error.
926-112 to 926-115	D	926 824	Description: Device, adapter or tablet reset failed.
926-116	D	159	Description: The input device cable is not attached.
926-119	D	188	Description: The input device cable is not attached.
926-121	D	824	Description: Adapter error.
926-131	D	824 926	Description: Adapter error.
926-132 to 926-135	D	926	Description: Device or adapter error.
926-141	D	824 926	Description: Adapter error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
926-142 to 926-161	D	926	Description: Device or adapter error.
926-162	D	159 926	Description: Device or adapter error.
926-163	D	159 926	Description: Error in turning off input device LED.
926-164	D	159 926	Description: Error in turning off input device LED.
926-165	D	159	Description: The input device cable is not attached.
926-166	D	188 926	Description: Device or adapter error.
926-167	D	188 926	Description: Error in turning off input device LED.
926-168	D	188 926	Description: Error in turning on input device LED.
926-169	D	188	Description: The input device cable is not attached.
926-172	D	159 926	Description: Device or adapter error.
926-173	D	159 926	Description: Error in turning off input device switch.
926-174	D	159 926	Description: Error in turning on input device switch.
926-175	D	159	Description: The input device cable is not attached.
926-176	D	188 926	Description: Device or adapter error.
926-177	D	188 926	Description: Error in turning off input device switch.
926-178	D	188 926	Description: Error in turning on input device switch.
926-179	D	188	Description: The input device cable is not attached.
926-181	D	824 926	Description: Adapter error.
926-182	D	159 926	Description: Device or adapter error.
926-183	D	159 926	Description: Error in incremental data mode test.
926-184	D	159	Description: The input device cable is not attached.
926-186	D	188 926	Description: Device or adapter error.
926-187	D	188 926	Description: The incremental data mode test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
926-188	D	188	Description: The input device cable is not attached.
926-203	D	926 824	Description: Error in disabling tablet.
926-204	D	926 824	Description: Error in enabling tablet.
926-207	D	926 824	Description: Enabled/disabled test failed.
926-208	D	926 824	Description: Enabled/disabled test failed.
926-221	D	824	Description: Adapter error.
926-222	D	926 824	Description: Device or adapter error.
926-225	D	159	Description: The input device cable is not attached.
926-229	D	188	Description: The input device cable is not attached.
926-271	D	926	Description: Adapter error.
926-272	D	159 926	Description: Device or adapter error.
926-273	D	159	Description: Error in input device switch test.
926-274	D	159	Description: The input device cable is not attached.
926-276	D	188 926	Description: Device or adapter error.
926-277	D	188 926	Description: Error in input device switch test.
926-278	D	188	Description: Input device cable is not attached.
926-281	D	824 926	Description: Adapter error.
926-282	D	159 926	Description: Device or adapter error.
926-283	D	159 926	Description: Error in incremental data mode test.
926-284	D	159	Description: The input device cable is not attached.
926-286	D	188 926	Description: Device or adapter error.
926-287	D	188 926	Description: Error in incremental data mode test.
926-288	D	188	Description: The input device cable is not attached.
927-104	D	927 159	Description: The input device cable is not attached.
927-111	D	824	Description: Adapter error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
927-112	D	927 824	Description: Device or adapter error.
927-113	D	927 824	Description: Tablet reset failed.
927-114	D	927 824	Description: The read configuration test failed.
927-115	D	927 824	Description: The read status test failed.
927-116	D	159	Description: The input device cable is not attached.
927-119	D	188	Description: The input device cable is not attached.
927-121	D	824	Description: Adapter error.
927-122	D	927 824	Description: Device or adapter error.
927-125	D	927 824	Description: The input device cable is not attached.
927-131	D	824 927	Description: Adapter error.
927-132	D	927	Description: Device or adapter error.
927-133	D	927	Description: The set conversion mode test failed.
927-134	D	927	Description: The set resolution test failed.
927-135	D	927	Description: The read status test failed.
927-141	D	824 927	Description: Adapter error.
927-142	D	927	Description: Device or adapter error.
927-143	D	927	Description: Error in tablet indicator.
927-161	D	927	Description: Adapter error.
927-162	D	159 927	Description: Device or adapter error.
927-163	D	159 927	Description: Error in turning off input device LED.
927-164	D	159 927	Description: Error in turning on input device LED.
927-165	D	159	Description: The input device cable is not attached.
927-166	D	188 927	Description: Device or adapter error.
927-167	D	188 927	Description: Error in turning off input device LED.
927-168	D	188 927	Description: Error in turning on input device LED.
927-169	D	188	Description: The input device cable is not attached.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
927-171	D	927	Description: Adapter error.
927-172	D	159 927	Description: Device or adapter error.
927-173	D	159 927	Description: Error in turning off input device switch.
927-174	D	159 927	Description: Error in turning on input device switch.
927-175	D	159	Description: The input device cable is not attached.
927-176	D	188 927	Description: Device or adapter error.
927-177	D	188 927	Description: Error in turning off input device switch.
927-178	D	188 927	Description: Error in turning on input device switch.
927-179	D	188	Description: The input device cable is not attached.
927-181	D	824 927	Description: Adapter error.
927-182	D	159 927	Description: Device or adapter error.
927-183	D	159 927	Description: Error in incremental data mode test.
927-184	D	159	Description: The input device cable is not attached.
927-186	D	188 927	Description: Device or adapter error.
927-187	D	188 927	Description: Error in incremental data mode test.
927-188	D	188	Description: The input device cable is not attached.
927-203	D	927 824	Description: Error in disabling tablet.
927-204	D	927 824	Description: Error in enabling tablet.
927-221	D	824	Description: Adapter error.
927-222	D	927 824	Description: Device or adapter error.
927-225	D	159	Description: The input device cable is not attached.
927-229	D	188	Description: The input device cable is not attached.
927-271	D	927	Description: Adapter error.
927-272	D	159 927	Description: Device or adapter error.
927-273	D	159 927	Description: Error in input device switch test.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
927-274	D	159	Description: The input device cable is not attached.
927-276	D	188 927	Description: Device or adapter error.
927-277	D	188 927	Description: Error in input device switch test.
927-278	D	188	Description: The input device cable is not attached.
927-281	D	824 927	Description: Adapter error.
927-282	D	159 927	Description: Device or adapter error.
927-283	D	159 927	Description: Error in incremental data mode test.
927-284	D	159	Description: The input device cable is not attached.
927-286	D	188 927	Description: Device or adapter error.
927-287	D	188 927	Description: Error in incremental data mode test.
927-288	D	188	Description: The input device cable is not attached.
929-201	D	929	Description: Failed to register input ring.
929-202	D	929	Description: Unable to read event from the device.
929-203	D	929	Description: Unable to communicate with the device.
929-204	D	929	Description: Cannot set the device granularity.
929-210	D	929	Description: Device or adapter failure.
929-212	D	929	Description: Cannot set the device to HIGH granularity.
929-213	D	929	Description: Cannot set the device to LOW granularity.
929-299	D	software 929	Description: Error unconfiguring the device.
929-301	D	software 929	Description: Error configuring the device.
930-201	D	930	Description: Device or adapter failure.
930-210	G	930	Description: Unable to turn the lights on.
930-220	G	930	Description: Unable to turn the lights off hardware failure.
930-230	D	930	Description: Unable to turn the lights off.
930-241	D	930	Description: Unable to turn a single light-on.
930-242	D	930	Description: Device or adapter failure.
930-243	D	930	Description: Device or adapter failure.
930-261	D	930	Description: Cable test failed.
930-262	D	930	Description: Cable test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
930-299	D	software 930	Description: Error unconfiguring the device.
930-301	D	software 930	Description: Error configuring the device.
935-101 to 935-102	D	935 828	Description: The diskette-drive select or deselect test failed.
935-103 to 935-107	D	935 828	Description: The diskette failed.
935-108	D	935	Description: The diskette read test failed.
935-109 to 935-110	D	935 828	Description: The read/write on the diskette drive failed.
935-111 to 935-114	D	935	Description: A diskette drive test failed.
935-115 to 935-121	D	935 828	Description: The diskette drive test failed.
935-122	G	935 828	Description: The error log analysis indicates a hardware failure.
935-123	G	935	Description: The error log analysis indicates a hardware failure.
935-124	D	935 software	Description: Unable to configure the device.
938-101	D	938 227	Description: HIPPI Adapter test failed.
938-104	D	938 227	Description: HIPPI Adapter test failed.
938-105	D	938 227	Description: HIPPI Adapter test failed.
938-108	D	938 227	Description: HIPPI Adapter test failed.
938-109	D	938 227	Description: HIPPI Adapter test failed.
938-10A	D	938 227	Description: HIPPI Adapter test failed.
938-10B	D	938 227	Description: HIPPI Adapter test failed.
938-10C	D	Wrap- Plug 938	Description: HIPPI Adapter test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
938-124	D	938 227	Description: HIPPI Adapter test failed.
938-600	D	938 227 software	Description: HIPPI Adapter test failed.
938-800	D	938 227	Description: HIPPI Adapter test failed.
945-102 to 945-114	D	990	Description: 1 GB 16-bit SCSI differential disk drive problem.
945-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
945-117	D	990	Description: A write-protect error occurred.
945-118	D	990 B88	Description: A SCSI command time-out.
945-120 to 945-124	D	990	Description: 1 GB 16-bit SCSI differential disk drive problem.
945-126	D	990 B88	Description: A software error was caused by a hardware failure.
945-128	G	990	Description: The error log analysis indicates a hardware failure.
945-129	G	950 B88 software	Description: Error log analysis indicates a SCSI bus problem.
945-132	D	990	Description: A disk drive hardware error occurred.
945-134	D	B88 software	Description: The adapter failed to configure.
945-136	D	990	Description: The certify operation failed.
946-111	D	946 227	Description: Cannot run the test because the device driver detected a hardware error.
946-114	D	946	Description: The register verification test failed.
946-121	D	946 227	Description: Cannot run the test because the device driver detected a hardware error.
946-122	D	946 227	Description: The data wrap communications test failed.
946-123	D	946 227	Description: The modem control line test failed.
946-131	D	946	Description: Cannot run the test because the device driver detected a hardware error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
946-132	D	946 227	Description: The data wrap communications test failed.
946-133	D	946	Description: The modem control line test failed.
946-161	D	252	Description: Could not do the test because the device driver detected a hardware error.
946-162	D	252	Description: The data wrap communication test failed.
946-163	D	252	Description: The modem control line test failed.
946-171	D	259	Description: Cannot run the test because the device driver detected a hardware error.
946-172	D	259	Description: The data wrap communications test failed.
946-173	D	259	Description: The modem control line test failed.
946-181	D	261	Description: Cannot run the test because the device driver detected a hardware error.
946-182	D	261	Description: The data wrap communications test failed.
946-183	D	261	Description: The modem control line test failed.
946-271	D	946 259	Description: Cannot run the test because the device driver detected a hardware error.
946-272	D	946 259	Description: The data wrap communication test failed.
946-273	D	946 259	Description: The modem control line test failed.
946-281	D	946 261	Description: Cannot run the test because the device driver detected a hardware error.
946-282	D	946 261	Description: The data wrap communications test failed.
946-283	D	946 261	Description: The modem control line test failed.
946-321	D	946	Description: Cannot run the test because the device driver detected a hardware error.
946-322	D	946	Description: The data wrap communications test failed.
946-323	D	946	Description: The modem control line test failed.
946-331	D	946	Description: Cannot run the test because the device driver detected a hardware error.
946-332	D	946	Description: The data wrap communications test failed.
946-333	D	946	Description: The modem control line test failed.
946-371	D	946	Description: Cannot run the test because the device driver detected a hardware error.
946-372	D	946	Description: The data wrap communications test failed.
946-373	D	946	Description: The modem control line test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
946-381	D	946	Description: Cannot run the test because the device driver detected a hardware error.
946-382	D	946	Description: The data wrap communications test failed.
946-383	D	946	Description: The modem control line test failed.
946-481	D	D56	Description: Could not do the test because the device driver detected a hardware error.
946-482	D	D56	Description: The data wrap communication test failed.
946-483	D	D56	Description: The modem control line test failed.
946-581	D	946 D56	Description: Could not do the test because the device driver detected a hardware error.
946-582	D	946 D56	Description: The data wrap communication test failed.
946-583	D	946 D56	Description: The modem control line test failed.
946-901 to 946-920	D	software 946	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 946; otherwise, suspect a software problem.
946-921	D	946 software	Description: The adapter failed to configure.
946-922 to 946-924	D	software 946	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 946; otherwise, suspect a software problem.
946-925	D	946 software	Description: The adapter failed to configure.
946-926 to 946-943	D	software 946	Description: An unexpected error occurred that can be attributed to software or hardware. Action: Run diagnostics from a source other than from the disk or a network. If the same error occurs or if the original SRN was not obtained from disk or a network based diagnostics, use MAP 210 with a FFC of 946; otherwise, suspect a software problem.
950-61D	C	61D B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
950-100	C	192	Description: Power supply problem. Action: Use the service documentation for the portable disk.
950-101	F	2C9 153	Description: PCI bus was not found. Action: Rerun diagnostics in Advanced Mode for additional problem isolation.
950-102	C	2C9	Description: PCI bus was not found. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-103	C	2C9	Description: Multiple adapters on bus were not found.
950-105	C	2C9 221	Description: PCI bus was not found. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-106	C	2C9	Description: PCI bus was not found. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-107	C	153 165	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-108	C	190 199 153 165	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-200	C	152	Description: Power supply problem. Action: Use the service documentation for the external device.
950-201	C	SCSI Bus	Description: SCSI bus problem. Action: Refer to MAP 2010 in the 7134 High Density SCSI Disk Subsystem Installation and Service Guide.
950-400	C	153	Description: Power supply problem. Action: Use the service documentation for the drawer/tower containing the failing power supply. If the drawer/deskside unit service documentation does not isolate the problem, go to MAP 1520 in the system unit installation and service guide.
950-440	C	440 B88 190 199 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-441	C	440 B88 190 199 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
950-442	C	440 B88 190 199 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-443	C	440 B88 190 199 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-500	C	152	Description: Power supply problem. Action: Use the service documentation for the system unit, rack, or drawer that contains the missing device.
950-638	C	638 B88 277 190 152	Description: The SCSI device is not responding. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-639	C	639 B88 190 152	Description: The device is not responding. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-63A	C	63A B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-63B	C	63B B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-63C	C	63C B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-63D	C	63D B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-63E	C	63E B88 277 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-63F	C	63F B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
950-640	C	640 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-664	C	664 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-678	C	678 B88 190 152	Description: The SCSI Tape Drive is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-679	C	679 B88 190 152	Description: The SCSI Disk Drive is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-681	C	681 2E7 190 152	Description: The SCSI Disk Drive is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-700	C	700 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-701	C	701 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-702	C	702 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-703	C	703 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-704	C	704 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-705	C	705 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
950-706	C	706 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-707	C	707 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-721	C	721 B88 190 152	Description: An unknown drive type is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-722	C	722 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-723	C	723 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-724	C	724 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-734	C	734 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-741	C	741 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-772	C	772 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-773	C	773 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-789	C	789 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
950-792	C	792 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-793	C	793 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-804	C	804 B88 190 152	Description: The device is not responding. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-912	C	912 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-914	C	914 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-915	C	915 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-917	C	917 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-918	C	918 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-935	C	935 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-936	C	936 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-951	C	951 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
950-952	C	952 B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-953	C	953 B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-954	C	954 B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-955	C	955 B88 190 141 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-956	C	956 B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-959	C	959 B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-960	C	960 B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-964	C	964 B88 190 152	Description: The SCSI Tape Drive is not responding. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-968	C	968 B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-970	C	970 B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.
950-971	C	971 B88 190 152	Description: Device does not respond. Action: Use "Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution" on page 113.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
950-972	C	972 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-974	C	974 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-981	C	981 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-984	C	984 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-986	C	986 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-987	C	987 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-989	C	989 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-990	C	990 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-991	C	991 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-994	C	994 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-995	C	995 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
950-998	C	998 B88 190 152	Description: Device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113.
950-xxxx	C	xxxx B88 190 152	Description: The device does not respond. Action: Use “Chapter 20. MAP 0291: Missing Device or Bus Problem Resolution” on page 113. Note: xxxx corresponds to the last three or four digits of the SRN after the dash (-). If your 950-xxxx SRN is not listed, substitute the last three or four digits of the SRN for xxxx, then proceed to the FFC table using the substituted digits as your FFC.
951-102	D	951	Description: An unrecoverable media error.
951-104	D	951	Description: The motor failed to restart.
951-105	D	951	Description: The drive did not become ready.
951-106	D	951	Description: The electronics card test failed.
951-108	D	951	Description: The bus test failed.
951-110	D	951	Description: The media format is corrupted.
951-112	D	951	Description: The diagnostic test failed.
951-114	D	951	Description: An unrecoverable hardware error.
951-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to ensure they are all compatible. If you do not find a problem, call your support person.
951-117	D	951	Description: A write-protect error occurred.
951-118	D	951 B88	Description: A SCSI command timeout.
951-120	D	951	Description: A SCSI busy or command error.
951-122	D	951	Description: A SCSI reservation conflict error.
951-124	D	951	Description: A SCSI check condition error.
951-126	D	951 B88	Description: A software error was caused by a hardware failure.
951-128	G	951	Description: The error log analysis indicates a hardware failure.
951-129	G	190 951 B88 software	Description: Error log analysis indicates a SCSI bus problem.
951-130	G	951	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
951-132	D	951	Description: A disk drive hardware error occurred.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
951-134	D	B88 software	Description: The adapter failed to configure.
951-135	D	951 B88 software	Description: The device failed to configure.
951-136	D	951	Description: The certify operation failed.
951-137	D	951 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
952-102	D	952	Description: An unrecoverable media error.
952-104	D	952	Description: The motor failed to restart.
952-105	D	952	Description: The drive did not become ready.
952-106	D	952	Description: The electronics card test failed.
952-108	D	952	Description: The bus test failed.
952-110	D	952	Description: The media format is corrupted.
952-112	D	952	Description: The diagnostic test failed.
952-114	D	952	Description: An unrecoverable hardware error.
952-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
952-117	D	952	Description: A write-protect error occurred.
952-118	D	952 B88	Description: A SCSI command timeout.
952-120	D	952	Description: A SCSI busy or command error.
952-122	D	952	Description: A SCSI reservation conflict error.
952-124	D	952	Description: A SCSI check condition error.
952-126	D	952 B88	Description: A software error was caused by a hardware failure.
952-128	G	952	Description: The error log analysis indicates a hardware failure.
952-129	G	190 952 B88 software	Description: Error log analysis indicates a SCSI bus problem.
952-130	G	952	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
952-132	D	952	Description: A disk drive hardware error occurred.
952-134	D	B88 software	Description: The adapter failed to configure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
952-135	D	952 B88 software	Description: The device failed to configure.
952-136	D	952	Description: The certify operation failed.
952-137	D	952 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
953-102	D	953	Description: An unrecoverable media error.
953-104	D	953	Description: The motor failed to restart.
953-105	D	953	Description: The disk drive did not become ready.
953-106	D	953	Description: The electronics card test failed.
953-108	D	953	Description: The bus test failed.
953-110	D	953	Description: The media format is corrupted.
953-112	D	953	Description: The diagnostic test failed.
953-114	D	953	Description: An unrecoverable hardware error.
953-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
953-117	D	953	Description: A write-protect error.
953-118	D	953 B88	Description: A SCSI command timeout.
953-120	D	953	Description: A SCSI busy or command error.
953-122	D	953	Description: A SCSI reservation conflict error.
953-124	D	953	Description: A SCSI check condition error.
953-126	D	953 B88	Description: A software error was caused by a hardware failure.
953-128	G	953	Description: The error log analysis indicates a hardware failure.
953-129	G	190 953 B88 software	Description: Error log analysis indicates a SCSI bus problem.
953-130	G	953	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
953-132	D	953	Description: A disk drive hardware error occurred.
953-134	D	B88 software	Description: The adapter failed to configure.
953-135	D	953 B88 software	Description: The device failed to configure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
953-136	D	953	Description: The certify operation failed.
953-137	D	953 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
954-102	D	954	Description: An unrecoverable media error.
954-104	D	954	Description: Motor failed to restart.
954-105	D	954	Description: The disk drive did not become ready.
954-106	D	954	Description: Electronics card failure.
954-108	D	954	Description: Bus failure.
954-110	D	954	Description: The media format is corrupted.
954-112	D	954	Description: Diagnostic failure.
954-114	D	954	Description: An unrecoverable hardware error.
954-116	D		Description: A protocol error was detected. Action: Check the levels of the device, adapter, diagnostic software, and application software, ensure that they are all compatible. If you do not find a problem, call your support person.
954-117	D	954	Description: write-protect error.
954-118	D	954 B88	Description: SCSI command timeout.
954-120	D	954	Description: SCSI busy/command error.
954-122	D	954	Description: SCSI reservation conflict error.
954-124	D	954	Description: SCSI check condition error.
954-126	D	954 B88	Description: Software error caused by hardware failure.
954-128	G	954	Description: Error log analysis indicates hardware failure.
954-129	G	150 954 B88 software	Description: Error log analysis indicates a SCSI bus problem.
954-130	G	954	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
954-132	D	954	Description: A disk drive hardware error occurred.
954-134	D	B88 software	Description: The adapter failed to configure.
954-135	D	954 B88 software	Description: The device failed to configure.
954-136	D	954	Description: The certify operation failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
954-137	D	954 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
955-102	D	955 141	Description: A media error was encountered.
955-104	D	955 141	Description: The motor failed to restart. Action: For devices installed in a drawer/deskside unit, use the drawer/deskside unit documentation. Refer to "Drawer/Deskside Unit Documentation" under Hints in Chapter 1. For other locations, go to MAP 0210. If the electronics card has been exchanged, exchange the adapter first. If the drawer/deskside unit documentation does not isolate the problem, go to MAP 0210.
955-105	D	955 141	Description: The disk drive did not become ready.
955-106	D	955 141	Description: The electronics card failed.
955-108	D	955	Description: The bus test failed.
955-110	D	955 141	Description: The media format is corrupted.
955-112	D	955 141	Description: The diagnostic test failed.
955-114	D	955 141	Description: An unrecoverable hardware error.
955-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
955-118	D	955 B88	Description: A SCSI command timeout.
955-120	D	955 B88	Description: A SCSI busy or command error.
955-122	D	955	Description: A SCSI reservation conflict error.
955-124	D	955 B88	Description: A SCSI check condition error.
955-126	D	955 B88	Description: A software error was caused by a hardware failure.
955-128	G	955 141	Description: The error log analysis indicates a hardware failure.
955-129	G	190 955 B88 software	Description: Error log analysis indicates a SCSI bus problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
955-130	G	955	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
955-132	D	955	Description: A disk drive hardware error occurred.
955-134	D	B88 software	Description: The adapter failed to configure.
955-135	D	955 B88 software	Description: The device failed to configure.
955-136	D	955 141	Description: The certify operation failed.
955-137	D	955 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
956-102	D	956	Description: An unrecoverable media error.
956-104	D	956	Description: The motor failed to restart.
956-105	D	956	Description: The drive did not become ready.
956-106	D	956	Description: The electronics card test failed.
956-108	D	956	Description: The bus test failed.
956-110	D	956	Description: The media format is corrupted.
956-112	D	956	Description: The diagnostic test failed.
956-114	D	956	Description: An unrecoverable hardware error.
956-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
956-117	D	956	Description: A write-protect error occurred.
956-118	D	956 B88	Description: A SCSI command time-out.
956-120	D	956	Description: A SCSI busy or command error.
956-122	D	956	Description: A SCSI reservation conflict error.
956-124	D	956	Description: A SCSI check condition error.
956-126	D	956 B88	Description: A software error was caused by a hardware failure.
956-128	G	956	Description: The error log analysis indicates a hardware failure.
956-130	G	956 B88	Description: The error log analysis indicates a hardware failure.
956-132	D	956	Description: A disk drive hardware error occurred.
956-134	D	B88 software	Description: The adapter failed to configure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
956-136	D	956	Description: The certify operation failed.
959-102	D	959	Description: Non-recoverable medium error.
959-104	D	959	Description: Motor failed to restart.
959-105	D	959	Description: The drive did not become ready.
959-106	D	959	Description: Electronics card failure.
959-108	D	959	Description: Bus failure.
959-110	D	959	Description: The media format is corrupted.
959-112	D	959	Description: Diagnostic failure.
959-114	D	959	Description: Non-recoverable hardware error.
959-116	D		Description: A protocol error was detected. Action: Check the levels of the device, adapter, diagnostic and application software, and ensure they are all compatible. If you do not find a problem, call your support person.
959-117	D	959	Description: write-protect error.
959-118	D	959 B88	Description: SCSI command timeout.
959-120	D	959	Description: SCSI busy/command error.
959-122	D	959	Description: SCSI reservation conflict error.
959-124	D	959	Description: SCSI check condition error.
959-126	D	959 B88	Description: Software error caused by hardware failure.
959-128	G	959	Description: Error log analysis indicates hardware failure.
959-129	G	190 959 B88 software	Description: Error log analysis indicates a SCSI bus problem.
959-130	G	959	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
959-134	D	B88 software	Description: The adapter failed to configure.
959-135	D	959 B88 software	Description: The device failed to configure.
959-136	D	959	Description: The certify operation failed.
959-137	D	959 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
960-102	D	960	Description: An unrecoverable media error.
960-104	D	960	Description: The motor failed to restart.
960-105	D	960	Description: The drive did not become ready.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
960-106	D	960	Description: The electronics card test failed.
960-108	D	960	Description: The bus test failed.
960-110	D	960	Description: The media format is corrupted.
960-112	D	960	Description: The diagnostic test failed.
960-114	D	960	Description: An unrecoverable hardware error.
960-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
960-117	D	960	Description: A write-protect error occurred.
960-118	D	960 B88	Description: A SCSI command time-out.
960-120	D	960	Description: A SCSI busy or command error.
960-122	D	960	Description: A SCSI reservation conflict error.
960-124	D	960	Description: A SCSI check condition error.
960-126	D	960 B88	Description: A software error was caused by a hardware failure.
960-128	G	960	Description: The error log analysis indicates a hardware failure.
960-129	G	190 960 B88 software	Description: Error log analysis indicates a SCSI bus problem.
960-130	G	960	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
960-132	D	960	Description: A disk drive hardware error occurred.
960-134	D	B88 software	Description: The adapter failed to configure.
960-135	D	960 B88 software	Description: The device failed to configure.
960-136	D	960	Description: The certify operation failed.
960-137	D	960 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
964-101	D	964	Description: Timeout while attempting to communicate with SCSI device.
964-102	D	964	Description: The SCSI device indicates busy.
964-103	D	964	Description: The SCSI device indicates a reservation conflict.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
964-104	D	964	Description: The SCSI device indicates a check condition.
964-105	D	964	Description: An error is detected in request sense data.
964-107	D	964	Description: Sense data from the SCSI drive has unexpected data.
964-110	D	964	Description: The Reserve command failed.
964-111	D	964	Description: Invalid condition from the drive after a reserve.
964-112	D	964	Description: The write-protect sensor test failed.
964-113	D	964	Description: Invalid condition from drive after a request sense.
964-114	D	964	Description: Timeout while attempting to communicate with the SCSI device.
964-120	D	964	Description: The Inquiry command failed.
964-130	D	964 media	Description: The Load command failed.
964-134	D	B88 software	Description: The adapter failed to configure.
964-135	D	964 media	Description: The Unload command failed.
964-140	D	964	Description: The Mode Select command failed.
964-150	D	964 media	Description: The Test Unit Ready command failed.
964-160	D	964 media	Description: The Send Diagnostic command failed.
964-161	D	964 B88	Description: Invalid condition from the drive after a reserve.
964-163	D	964 B88	Description: Invalid condition from the drive after a request sense.
964-164	D	964 B88	Description: Timeout while attempting to communicate with the SCSI device.
964-165	D	964 B88 276	Description: Write, Read and Compare Test failed.
964-166	D	964 B88 software	Description: Unable to configure the device.
964-167	D	964 B88	Description: An unexpected SCSI error occurred.
964-168	D	B88 software	Description: The adapter failed to configure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
964-169	D	964 media	Description: The Send Diagnostic command failed.
964-170	D	964 B88 media	Description: The Read, Write and Compare test failed.
964-180	D	964 media	Description: The Load command failed.
964-185	D	964 media	Description: The Unload command failed.
964-190	D	964	Description: The Mode Select command failed.
964-200	D	964 media	Description: The Test Unit Ready command failed.
964-201	G	964 B88	Description: Error diagnosed from error log analysis.
964-210	D	964 B88	Description: The device configuration failed.
964-211	D	964 B88	Description: The device open failed.
964-220	D	964	Description: The Release command failed.
964-230	D	964	Description: The Request Sense command failed.
964-240	D	964	Description: The Openx command failed.
964-260	D	964	Description: The device configuration failed.
964-261	D	964	Description: The device open failed.
964-300	D	964 software	Description: The device configuration failed.
964-310	D	B88 964 software	Description: SCSI adapter configuration failed.
964-320	G	964 media	Description: Error log analysis indicates a failure.
964-411 to 964-423	D	964 B88 software	Description: A reservation conflict occurred.
964-511 to 964-523	D	964 B88	Description: The drive returned bad or non-extended sense data.
964-611 to 964-623	D	964 B88 software	Description: An adapter or bus I/O error occurred.
964-711 to 964-723	D	964 B88 software	Description: A device timeout error occurred.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
966-101	D	966	Error in non-interactive tests.
966-103	D	966	The test pattern failed.
966-201	D	966 190	Description: Error in non-interactive tests on card.
966-203	D	966 190	Description: The test pattern failed.
966-205	D	966 190	Description: Test pattern failed.
966-207	D	966 190	Description: Test pattern failed.
966-208	D	190	Description: Error in non-interactive test on card.
966-209	D	190	Description: Test pattern failed.
966-211	D	190	Test pattern failed.
966-213	D	190	Test pattern failed.
966-304	D	E22 725 966	Video error in interactive test.
966-306	D	E23 725 966	Audio error in interactive test.
966-310	D	E22 725	Video error in interactive test.
966-312	D	E22 725	Audio error in interactive test.
966-400	D	152 190 E24 166	Error in non-interactive tests.
966-402	D	190 E23 E22	Test pattern failed.
968-102	D	968	Description: An unrecoverable media error.
968-104	D	968	Description: The motor failed to restart.
968-105	D	968	Description: The drive did not become ready.
968-106	D	968	Description: The electronics card test failed.
968-108	D	968	Description: The bus test failed.
968-110	D	968	Description: The media format is corrupted.
968-112	D	968	Description: The diagnostic test failed.
968-114	D	968	Description: An unrecoverable hardware error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
968-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
968-117	D	968	Description: A write-protect error occurred.
968-118	D	968 B88	Description: A SCSI command time-out.
968-120	D	968	Description: A SCSI busy or command error.
968-122	D	968	Description: A SCSI reservation conflict error.
968-124	D	968	Description: A SCSI check condition error.
968-126	D	968 B88	Description: A software error was caused by a hardware failure.
968-128	G	968	Description: The error log analysis indicates a hardware failure.
968-129	G	190 968 B88 software	Description: Error log analysis indicates a SCSI bus problem.
968-130	G	968	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
968-132	D	968	Description: A disk drive hardware error occurred.
968-134	D	B88 software	Description: The adapter failed to configure.
968-135	D	968 B88 software	Description: The device failed to configure.
968-136	D	968	Description: The certify operation failed.
968-137	D	968 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
969-110	G	D67	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-111	G	D83	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-120	G	D68	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-121	G	D84	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
969-130	G	D69	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-131	G	D85	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-140	G	D70	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-141	G	D86	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-150	G	E11	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-151	G	E14	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-206	G	D72	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-208	G	D73	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-210	G	D71	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-211	G	D87	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-212	G	E12	Description: Residual Data Analysis indicates memory error.
969-220	G	D72	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-221	G	D88	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-230	G	D73	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-231	G	D89	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
969-240	G	D74	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-241	G	D90	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-250	G	E12	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-251	G	E15	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-310	G	D75	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-311	G	D91	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-320	G	D76	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-321	G	D92	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-330	G	D77	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-331	G	D93	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-340	G	D78	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-341	G	D94	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-350	G	E13	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.
969-351	G	E16	Description: Residual Data Analysis indicates memory error. Action: Use “Chapter 14. MAP 0240: Memory Problem Resolution” on page 91.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
969-600	G		Description: Residual Data Analysis indicates memory error or unsupported memory. Action: Examine the memory modules and determine if they are supported types. If the modules are supported, then replace the appropriate memory module(s). Use "Chapter 14. MAP 0240: Memory Problem Resolution" on page 91.
969-701	D	814	Description: NVRAM test failed.
969-702	D	151	Description: Time of Day Battery test failed.
969-703	D	817	Description: Time of Day Chip test failed.
969-800	G	221	Description: Memory problems indicate System Planar failure.
969-900	G	D01	Description: L2 cache test failed.
970-101	D	970	Description: Timeout while attempting to communicate with SCSI device.
970-102	D	970	Description: The SCSI device indicates busy.
970-103	D	970	Description: The SCSI device indicates a reservation conflict.
970-104	D	970	Description: The SCSI device indicates a check condition.
970-105	D	970	Description: An error is detected in request sense data.
970-107	D	970	Description: Sense data from the SCSI drive has unexpected data.
970-110	D	970	Description: The Reserve command failed.
970-111	D	970	Description: Invalid condition from the drive after a reserve.
970-112	D	970	Description: The write-protect sensor test failed.
970-113	D	970	Description: Invalid condition from drive after a request sense.
970-114	D	970	Description: Timeout while attempting to communicate with the SCSI device.
970-120	D	970	Description: The Inquiry command failed.
970-130	D	970 media	Description: The Load command failed.
970-134	D	B88 software	Description: The adapter failed to configure.
970-135	D	970 media	Description: The Unload command failed.
970-140	D	970	Description: The Mode Select command failed.
970-150	D	970 media	Description: The Test Unit Ready command failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
970-160	D	970 media	Description: The Send Diagnostic command failed.
970-161	D	970 B88	Description: Invalid condition from the drive after a reserve.
970-163	D	970 B88	Description: Invalid condition from the drive after a request sense.
970-164	D	970 B88	Description: Timeout while attempting to communicate with the SCSI device.
970-165	D	970 B88 276	Description: Write, Read and Compare Test failed.
970-166	D	970 B88 software	Description: Unable to configure the device.
970-167	D	970 B88	Description: An unexpected SCSI error occurred.
970-168	D	B88 software	Description: The adapter failed to configure.
970-169	D	970 media	Description: The Send Diagnostic command failed.
970-170	D	970 B88 media	Description: The Read, Write and Compare test failed.
970-180	D	970 media	Description: The Load command failed.
970-185	D	970 media	Description: The Unload command failed.
970-190	D	970	Description: The Mode Select command failed.
970-200	D	970 media	Description: The Test Unit Ready command failed.
970-201	G	970 B88	Description: Error diagnosed from error log analysis.
970-210	D	970 B88	Description: The device configuration failed.
970-211	D	970 B88	Description: The device open failed.
970-220	D	970	Description: The Release command failed.
970-230	D	970	Description: The Request Sense command failed.
970-240	D	970	Description: The Openx command failed.
970-260	D	970	Description: The device configuration failed.
970-261	D	970	Description: The device open failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
970-300	D	970 software	Description: The device configuration failed.
970-310	D	B88 970 software	Description: SCSI adapter configuration failed.
970-320	G	970 media	Description: Error log analysis indicates a failure.
970-411 to 970-423	D	970 B88 software	Description: A reservation conflict occurred.
970-511 to 970-523	D	970 B88	Description: The drive returned bad or non-extended sense data.
970-611 to 970-623	D	970 B88 software	Description: An adapter or bus I/O error occurred.
970-711 to 970-723	D	970 B88 software	Description: A device timeout error occurred.
971-101	D	971	Description: Timeout while attempting to communicate with SCSI device.
971-102	D	971	Description: The SCSI device indicates busy.
971-103	D	971	Description: The SCSI device is indicating a reservation conflict.
971-104	D	971	Description: The SCSI device indicates a check condition.
971-105	D	971	Description: Sense data from the SCSI device shows an error.
971-107	D	971	Description: The SCSI drive returned unexpected sense data.
971-110	D	971	Description: The Reserve command failed.
971-111	D	971	Description: Invalid condition from the drive after a reserve.
971-112	D	971	Description: The write-protect sensor test failed.
971-113	D	971	Description: Invalid condition from the drive after a request sense.
971-114	D	971	Description: Timeout while attempting to communicate with the SCSI device.
971-120	D	971	Description: The Inquiry command failed.
971-130	D	971 media	Description: The Load command failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
971-135	D	971 media	Description: The Unload command failed.
971-140	D	971	Description: The Mode Select command failed.
971-150	D	971 media	Description: The Test Unit Ready command failed.
971-160	D	971 media	Description: The Send Diagnostic command failed.
971-161	D	971 B88	Description: Invalid condition from the drive after a reserve.
971-163	D	971 B88	Description: Invalid condition from the drive after a request sense.
971-164	D	971 B88	Description: Timeout while attempting to communicate with the SCSI device.
971-165	D	971 B88 276	Description: Write, Read and Compare Test failed.
971-166	D	971 B88 software	Description: Unable to configure the device.
971-167	D	971 B88	Description: An unexpected SCSI error occurred.
971-168	D	B88 software	Description: The adapter failed to configure.
971-169	D	971 media	Description: The Send Diagnostic command failed.
971-170	D	971 B88 media	Description: The Read, Write and Compare test failed.
971-180	D	971 media	Description: The Load command failed.
971-185	D	971 media	Description: The Unload command failed.
971-190	D	971	Description: The Mode Select command failed.
971-200	D	971 media	Description: The Test Unit Ready command failed.
971-201	G	971 B88	Description: An error is diagnosed from the error log analysis.
971-210	D	971 B88	Description: The device configuration failed.
971-211	D	971 B88	Description: The device open test failed.
971-220	D	971	Description: The Release command failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
971-230	D	971	Description: The Request Sense command failed.
971-240	D	971	Description: The Openx command failed.
971-260	D	971	Description: The device configuration failed.
971-261	D	971	Description: The device open test failed.
971-300	D	971 software	Description: The device configuration failed.
971-310	D	B88 971 software	Description: SCSI adapter configuration failed.
971-320	G	971 media	Description: Error log analysis indicates a failure.
971-411 to 971-423	D	971 B88 software	Description: A reservation conflict occurred.
971-511 to 971-523	D	971 B88	Description: The drive returned bad or non-extended sense data.
971-611 to 971-623	D	971 software	Description: An adapter or bus I/O error occurred.
971-711 to 971-723	D	971 B88 software	Description: A device timeout error occurred.
972-101	D	972	Description: Timeout while attempting to communicate with SCSI device.
972-102	D	972	Description: The SCSI device indicates busy.
972-103	D	972	Description: The SCSI device indicates a reservation conflict.
972-104	D	972	Description: The SCSI device indicates a check condition.
972-105	D	972	Description: An error is detected in request sense data.
972-107	D	972	Description: The drive has returned unexpected sense data.
972-110	D	972	Description: The Reserve command failed.
972-111	D	972	Description: Invalid condition from the drive after a reserve.
972-112	D	972	Description: The write-protect sensor test failed.
972-113	D	972	Description: Invalid condition from the drive after a request sense.
972-114	D	972	Description: Timeout while attempting to communicate with the SCSI device.
972-120	D	972	Description: The Inquiry command failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
972-130	D	972 media	Description: The Load command failed.
972-135	D	972 media	Description: The Unload command failed.
972-140	D	972	Description: The Mode Select command failed.
972-150	D	972 media	Description: The Test Unit Ready command failed.
972-160	D	972 media	Description: The Send Diagnostic command failed.
972-161	D	972 B88	Description: Invalid condition from the drive after a reserve.
972-163	D	972 B88	Description: Invalid condition from the drive after a request sense.
972-164	D	972 B88 276	Description: Timeout while attempting communication with SCSI device.
972-165	D	972 B88 276	Description: Write, Read and Compare Test failed.
972-166	D	972 B88 software	Description: Unable to configure the device.
972-167	D	972 B88	Description: An unexpected SCSI error occurred.
972-168	D	B88 software	Description: The adapter failed to configure.
972-169	D	972 media	Description: The Send Diagnostic command failed.
972-170	D	972 B88 media	Description: The Read, Write and Compare test failed.
972-180	D	972 media	Description: The Load command failed.
972-185	D	972 media	Description: The Unload command failed.
972-190	D	972	Description: The Mode Select command failed.
972-200	D	972 media	Description: The Test Unit Ready command failed.
972-201	G	972 B88	Description: An error is diagnosed from the error log analysis.
972-210	D	972 B88	Description: The device configuration failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
972-211	D	972 B88	Description: The device open test failed.
972-220	D	972	Description: The Release command failed.
972-230	D	972	Description: The Request Sense command failed.
972-240	D	972	Description: The Openx command failed.
972-260	D	972	Description: The device configuration test failed.
972-261	D	972	Description: The device open test failed.
972-300	D	972 software	Description: The device configuration failed.
972-310	D	B88 972 software	Description: SCSI adapter configuration failed.
972-320	G	972 media	Description: Error log analysis indicates a failure.
972-411 to 972-423	D	972 B88 software	Description: A reservation conflict occurred.
972-511 to 972-523	D	972 B88	Description: The drive returned bad or non-extended sense data.
972-611 to 972-623	D	972 B88 software	Description: An adapter or bus I/O error occurred.
972-711 to 972-723	D	972 B88 software	Description: A device timeout error occurred.
973-110	D	973	Description: The Reserve command failed.
973-120	D	973	Description: The Inquiry command failed.
973-130	D	973 media	Description: The Load command failed.
973-135	D	973 media	Description: The Unload command failed.
973-140	D	973	Description: The Mode Select command failed.
973-150	D	973 media	Description: The Test Unit Ready command failed.
973-160	D	973 media	Description: The Send Diagnostic command failed.
973-169	D	973 media	Description: The Send Diagnostic command failed.
973-170	D	973 B88 media	Description: The Read, Write and Compare test failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
973-180	D	973 media	Description: The Load command failed.
973-185	D	973 media	Description: The Unload command failed.
973-190	D	973	Description: The Mode Select command failed.
973-200	D	973 media	Description: The Test Unit Ready command failed.
973-210	D	973 B88	Description: The device configuration failed.
973-220	D	973	Description: The Release command failed.
973-230	D	973	Description: The Request Sense command failed.
973-240	D	973	Description: The Openx command failed.
973-300	D	973 software	Description: The device configuration failed.
973-310	D	B88 973 software	Description: SCSI adapter configuration failed.
973-320	G	973 media	Description: Error log analysis indicates a failure.
973-411 to 973-423	D	973 B88 software	Description: A reservation conflict occurred.
973-511 to 973-523	D	973 B88	Description: The drive returned bad or non-extended sense data.
973-611 to 973-623	D	973 B88 software	Description: An adapter or bus I/O error occurred.
973-711 to 973-723	D	973 B88 software	Description: A device timeout error occurred.
974-111	D	974 B88	Description: Unable to reserve device.
974-112	D	974 B88	Description: Unable to do configuration.
974-113	D	974 B88	Description: Unable to open the device driver.
974-121	D	974	Description: The CD-ROM drive indicates an error.
974-122	D	974	Description: The CD-ROM drive indicates an error.
974-123	D	974	Description: The CD-ROM drive indicates an error.
974-125	D	974 B88	Description: The CD-ROM drive indicates an error.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
974-126	D	974	Description: The CD-ROM drive indicates an error.
974-127	D	974	Description: The CD-ROM drive indicates an error.
974-128	D	974	Description: The CD-ROM drive indicates an error.
974-129	D	974	Description: The CD-ROM drive indicates an error.
974-150	D	Test-Disc 974	Description: A media error was detected.
974-151	D	974 D88	Description: A command timeout was detected.
974-152	D	974	Description: A command reservation conflict was detected.
974-162	D	974	Description: The CD-ROM drive indicates an error.
974-171	D	974	Description: Unable to reserve device.
974-172	D	974	Description: Unable to do configuration.
974-173	D	974	Description: Unable to open device driver.
974-175	D	974	Description: The CD-ROM drive indicates an error.
974-198	D	974 B88	Description: Undefined error detected.
974-199	D	974	Description: Undefined error detected.
974-211	D	974	Description: The LED test failed.
974-281	D	974	Description: No tone during audio test.
974-301	G	974	Description: Errors found during ELA.
974-302	G	974 B88	Description: Errors log analysis indicates hardware failure.
981-102	D	981	Description: An unrecoverable media error.
981-104	D	981	Description: The motor failed to restart.
981-105	D	981	Description: The drive did not become ready.
981-106	D	981	Description: The electronics card test failed.
981-108	D	981	Description: The bus test failed.
981-110	D	981	Description: The media format is corrupted.
981-112	D	981	Description: The diagnostic test failed.
981-114	D	981	Description: An unrecoverable hardware error.
981-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
981-117	D	981	Description: A write-protect error occurred.
981-118	D	981 B88	Description: A SCSI command time-out.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
981-120	D	981	Description: A SCSI busy or command error.
981-122	D	981	Description: A SCSI reservation conflict error.
981-124	D	981	Description: A SCSI check condition error.
981-126	D	981 B88	Description: A software error was caused by a hardware failure.
981-128	G	981	Description: The error log analysis indicates a hardware failure.
981-129	G	190 981 B88 software	Description: Error log analysis indicates a SCSI bus problem.
981-130	G	981	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
981-132	D	981	Description: A disk drive hardware error occurred.
981-134	D	B88 software	Description: The adapter failed to configure.
981-136	D	981	Description: The certify operation failed.
981-137	D	981 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
984-102	D	984	Description: An unrecoverable media error.
984-104	D	984	Description: The motor failed to restart.
984-105	D	984	Description: The drive did not become ready.
984-106	D	984	Description: The electronics card test failed.
984-108	D	984	Description: The bus test failed.
984-110	D	984	Description: The media format is corrupted.
984-112	D	984	Description: The diagnostic test failed.
984-114	D	984	Description: An unrecoverable hardware error.
984-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
984-117	D	984	Description: A write-protect error occurred.
984-118	D	984 B88	Description: A SCSI command time-out.
984-120	D	984	Description: A SCSI busy or command error.
984-122	D	984	Description: A SCSI reservation conflict error.
984-124	D	984	Description: A SCSI check condition error.
984-126	D	984 B88	Description: A software error was caused by a hardware failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
984-128	G	984	Description: The error log analysis indicates a hardware failure.
984-129	G	190 984 B88 software	Description: Error log analysis indicates a SCSI bus problem.
984-130	G	984	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
984-132	D	984	Description: A disk drive hardware error occurred.
984-134	D	B88 software	Description: The adapter failed to configure.
984-137	D	984 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
986-102	D	986	Description: An unrecoverable media error.
986-104	D	986	Description: The motor failed to restart.
986-105	D	986	Description: The drive did not become ready.
986-106	D	986	Description: The electronics card test failed.
986-108	D	986	Description: The bus test failed.
986-110	D	986	Description: The media format is corrupted.
986-112	D	986	Description: The diagnostic test failed.
986-114	D	986	Description: An unrecoverable hardware error.
986-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
986-117	D	986	Description: A write-protect error occurred.
986-118	D	986 B88	Description: A SCSI command time-out.
986-120	D	986	Description: A SCSI busy or command error.
986-122	D	986	Description: A SCSI reservation conflict error.
986-124	D	986	Description: A SCSI check condition error.
986-126	D	986 B88	Description: A software error was caused by a hardware failure.
986-128	G	986	Description: The error log analysis indicates a hardware failure.
986-129	G	190 986 B88 software	Description: Error log analysis indicates a SCSI bus problem.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
986-130	G	986	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
986-132	D	986	Description: A disk drive hardware error occurred.
986-134	D	B88 software	Description: The adapter failed to configure.
986-136	D	986 C11	Description: The certify operation failed.
986-137	D	986 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
987-111	D	987 B88	Description: Unable to reserve device.
987-112	D	987 B88	Description: Unable to do configuration.
987-113	D	987 B88	Description: Unable to open the device driver.
987-121	D	987	Description: The CD-ROM drive indicates an error.
987-122	D	987	Description: The CD-ROM drive indicates an error.
987-123	D	987	Description: The CD-ROM drive indicates an error.
987-125	D	987 B88	Description: The CD-ROM drive indicates an error.
987-126	D	987	Description: The CD-ROM drive indicates an error.
987-127	D	987	Description: The CD-ROM drive indicates an error.
987-128	D	987	Description: The CD-ROM drive indicates an error.
987-129	D	987	Description: The CD-ROM drive indicates an error.
987-150	D	Test-Disc 987	Description: A media error was detected.
987-151	D	987 B88	Description: A command timeout was detected.
987-152	D	987	Description: A command reservation conflict was detected.
987-162	D	987	Description: The CD-ROM drive indicates an error.
987-171	D	987	Description: Unable to reserve device.
987-172	D	987	Description: Unable to do configuration.
987-173	D	987	Description: Unable to open device driver.
987-175	D	987	Description: The CD-ROM drive indicates an error.
987-198	D	987 B88	Description: Undefined error detected.
987-199	D	987	Description: Undefined error detected.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
987-211	D	987	Description: The LED test failed.
987-281	D	987	Description: No tone during audio test.
987-301	G	987	Description: Errors found during ELA.
987-302	G	987 B88	Description: Errors found during ELA.
989-102	D	989	Description: An unrecoverable media error
989-104	D	989	Description: The motor failed to restart.
989-105	D	989	Description: The drive did not become ready.
989-106	D	989	Description: The electronics card test failed.
989-108	D	989	Description: The bus test failed.
989-110	D	989	Description: The media format is corrupted.
989-112	D	989	Description: The diagnostic test failed.
989-114	D	989	Description: A non-recoverable hardware error.
989-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
989-117	D	989	Description: A write-protect error occurred.
989-118	D	989 B88	Description: A SCSI command time-out.
989-120	D	989	Description: A SCSI busy or command error.
989-122	D	989	Description: A SCSI reservation conflict error.
989-124	D	989	Description: A SCSI check condition error.
989-126	D	989 B88	Description: A software error was caused by a hardware failure.
989-128	G	989	Description: The error log analysis indicates a hardware failure.
989-129	G	190 989 B88 software	Description: Error log analysis indicates a SCSI bus problem.
989-130	G	989	Description: Error log analysis indicates a problem reported by the disk drive's self-monitoring function.
989-132	D	989	Description: A disk drive hardware error occurred.
989-134	D	B88 software	Description: The adapter failed to configure.
989-135	D	989 B88 software	Description: The device failed to configure.
989-136	D	989	Description: The certify operation failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
989-137	D	989 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
990-102	D	990	Description: An unrecoverable media error.
990-104	D	990	Description: The motor failed to restart.
990-105	D	990	Description: The drive did not become ready.
990-106	D	990	Description: The electronics card test failed.
990-108	D	990	Description: The bus test failed.
990-110	D	990	Description: The media format is corrupted.
990-112	D	990	Description: The diagnostic test failed.
990-114	D	990	Description: An unrecoverable hardware error.
990-116	D		Description: A protocol error. Action: Check the levels of the device, adapter, diagnostic software, and application software to be sure they are all compatible. If you do not find a problem, call your support person.
990-117	D	990	Description: A write-protect error occurred.
990-118	D	990 B88	Description: A SCSI command time-out.
990-120	D	990	Description: A SCSI busy or command error.
990-122	D	990	Description: A SCSI reservation conflict error.
990-124	D	990	Description: A SCSI check condition error.
990-126	D	990 B88	Description: A software error was caused by a hardware failure.
990-128	G	990	Description: The error log analysis indicates a hardware failure.
990-129	G	190 990 B88 software	Description: Error log analysis indicates a SCSI bus problem.
990-130	G	990	Description: Error log analysis indicates a problem reported by the disk drive’s self-monitoring function.
990-132	D	990	Description: A disk drive hardware error occurred.
990-134	D	B88 software	Description: The adapter failed to configure.
990-136	D	990	Description: The certify operation failed.
990-137	D	990 B88 190	Description: Unit attention condition has occurred on the Send Diagnostic command.
991-101	D	991	Description: Timeout while attempting to communicate with SCSI device.
991-102	D	991	Description: The SCSI device indicates busy.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
991-103	D	991	Description: The SCSI device is indicating a reservation conflict.
991-104	D	991	Description: The SCSI device indicates a check condition.
991-105	D	991	Description: Sense data from the SCSI device shows an error.
991-107	D	991	Description: The SCSI drive returned unexpected sense data.
991-110	D	991	Description: The Reserve command failed.
991-111	D	991	Description: Invalid condition from the drive after a reserve.
991-112	D	991	Description: The write-protect sensor test failed.
991-113	D	991	Description: Invalid condition from the drive after a request sense.
991-114	D	991	Description: Timeout while attempting to communicate with the SCSI device.
991-120	D	991	Description: The Inquiry command failed.
991-130	D	991 media	Description: The Load command failed.
991-135	D	991 media	Description: The Unload command failed.
991-140	D	991	Description: The Mode Select command failed.
991-150	D	991 media	Description: The Test Unit Ready command failed.
991-160	D	991 media	Description: The Send Diagnostic command failed.
991-161	D	991 B88	Description: Invalid condition from the drive after a reserve.
991-163	D	991 B88	Description: Invalid condition from the drive after a request sense.
991-164	D	991 B88	Description: Timeout while attempting to communicate with the SCSI device.
991-165	D	991 B88 276	Description: Write, Read and Compare Test failed.
991-166	D	991 B88 software	Description: The device failed to configure.
991-167	D	991 B88	Description: An unexpected SCSI error occurred.
991-168	D	B88 software	Description: The adapter failed to configure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
991-169	D	991 media	Description: The Send Diagnostic command failed.
991-170	D	991 B88 media	Description: The Read, Write and Compare test failed.
991-180	D	991 media	Description: The Load command failed.
991-185	D	991 media	Description: The Unload command failed.
991-190	D	991	Description: The Mode Select command failed.
991-200	D	991 media	Description: The Test Unit Ready command failed.
991-201	G	991 B88	Description: An error is diagnosed from the error log analysis.
991-210	D	991 B88	Description: The device configuration failed.
991-211	D	991 B88	Description: The device open test failed.
991-220	D	991	Description: The Release command failed.
991-230	D	991	Description: The Request Sense command failed.
991-240	D	991	Description: The Openx command failed.
991-260	D	991	Description: The device configuration failed.
991-261	D	991	Description: The device open test failed.
991-300	D	991 software	Description: The device configuration failed.
991-310	D	B88 991 software	Description: SCSI adapter configuration failed.
991-320	G	991 media	Description: Error log analysis indicates a failure.
991-411 to 991-423	D	991 B88 software	Description: A reservation conflict occurred.
991-511 to 991-523	D	991 B88	Description: The drive returned bad or non-extended sense data.
991-611 to 991-623	D	991 B88 software	Description: An adapter or bus I/O error occurred.
991-711 to 991-723	D	991 B88 software	Description: A device timeout error occurred.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
994-110	D	994	Description: The Reserve command failed.
994-120	D	994	Description: The Inquiry command failed.
994-130	D	994 media	Description: The Load command failed.
994-135	D	994 media	Description: The Unload command failed.
994-140	D	994	Description: The Mode Select command failed.
994-150	D	994 media	Description: The Test Unit Ready command failed.
994-160	D	994 media	Description: The Send Diagnostic command failed.
994-169	D	994 media	Description: The Send Diagnostic command failed.
994-170	D	994 B88 media	Description: The Read, Write and Compare test failed.
994-180	D	994 media	Description: The Load command failed.
994-185	D	994 media	Description: The Unload command failed.
994-190	D	994	Description: The Mode Select command failed.
994-200	D	994 media	Description: The Test Unit Ready command failed.
994-210	D	994 B88	Description: The device configuration failed.
994-220	D	994	Description: The Release command failed.
994-230	D	994	Description: The Request Sense command failed.
994-240	D	994	Description: The Openx command failed.
994-300	D	994 software	Description: The device configuration failed.
994-310	D	B88 994 software	Description: SCSI adapter configuration failed.
994-320	G	994 media	Description: Error log analysis indicates a failure.
994-411 to 994-423	D	994 B88 software	Description: A reservation conflict occurred.
994-511 to 994-523	D	994 B88	Description: The drive returned bad or non-extended sense data.


Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
994-611 to 994-623	D	994 B88 software	Description: An adapter or bus I/O error occurred.
994-711 to 994-723	D	994 B88 software	Description: A device timeout error occurred.
995-110	D	995	Description: The Reserve command failed.
995-120	D	995	Description: The Inquiry command failed.
995-130	D	995 media	Description: The Load command failed.
995-135	D	995 media	Description: The Unload command failed.
995-140	D	995	Description: The Mode Select command failed.
995-150	D	995 media	Description: The Test Unit Ready command failed.
995-160	D	995 media	Description: The Send Diagnostic command failed.
995-169	D	995 media	Description: The Send Diagnostic command failed.
995-170	D	995 B88 media	Description: The Read, Write and Compare test failed.
995-180	D	995 media	Description: The Load command failed.
995-185	D	995 media	Description: The Unload command failed.
995-190	D	995	Description: The Mode Select command failed.
995-200	D	995 media	Description: The Test Unit Ready command failed.
995-210	D	995 B88	Description: The device configuration failed.
995-220	D	995	Description: The Release command failed.
995-230	D	995	Description: The Request Sense command failed.
995-240	D	995	Description: The Openx command failed.
995-300	D	995 software	Description: The device configuration failed.
995-310	D	B88 995 software	Description: SCSI adapter configuration failed.
995-320	G	995 media	Description: Error log analysis indicates a failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
995-411 to 995-423	D	995 B88 software	Description: A reservation conflict occurred.
995-511 to 995-523	D	995 B88	Description: The drive returned bad or non-extended sense data.
995-611 to 995-623	D	995 B88 software	Description: An adapter or bus I/O error occurred.
995-711 to 995-723	D	995 B88 software	Description: A device timeout error occurred.
998-110	D	998	Description: The Reserve command failed.
998-120	D	998	Description: The Inquiry command failed.
998-130	D	998 media	Description: The Load command failed.
998-135	D	998 media	Description: The Unload command failed.
998-140	D	998	Description: The Mode Select command failed.
998-150	D	998 media	Description: The Test Unit Ready command failed.
998-160	D	998 media	Description: The Send Diagnostic command failed.
998-169	D	998 media	Description: The Send Diagnostic command failed.
998-170	D	998 B88 media	Description: The Read, Write and Compare test failed.
998-180	D	998 media	Description: The Load command failed.
998-185	D	998 media	Description: The Unload command failed.
998-190	D	998	Description: The Mode Select command failed.
998-200	D	998 media	Description: The Test Unit Ready command failed.
998-210	D	998 B88	Description: The device configuration failed.
998-220	D	998	Description: The Release command failed.
998-230	D	998	Description: The Request Sense command failed.
998-240	D	995	Description: The Openx command failed.
998-300	D	995 software	Description: The device configuration failed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
998-310	D	B88 995 software	Description: SCSI adapter configuration failed.
998-320	G	995 media	Description: Error log analysis indicates a failure.
998-411 to 998-423	D	998 B88 software	Description: A reservation conflict occurred.
998-511 to 998-523	D	998 B88	Description: The drive returned bad or non-extended sense data.
998-611 to 998-623	D	998 B88 software	Description: An adapter or bus I/O error occurred.
998-711 to 998-723	D	998 B88 software	Description: A device timeout error occurred.
999-xxx series	D	999	Description: A 7137 or 3514 disk array subsystem problem is indicated. Action: Use 7137 or 3514 documentation.
9CC-1xx	G		Description: I/O Error on PCI bus. Action: Refer to the Bus SRN to FRU Reference Table in the system unit's service guide. Note: xx represents the last 2 digits of the SRN.
9CC-xxx	G	xxx 2C9	Description: I/O Bus Data, Address Parity Error, or Time-out error. Note: xxx represents the last 3 digits of the SRN.
xxxxxx	G	none	Description: You have a six-digit error code (like an SRN) containing no dash (-) between the third and fourth digits. Action: Use the "Error Code to FRU Index" in the service guide.
xxxxxxx	G	none	Description: Refer to the Error Code to FRU Index in the system unit's service guide. Action: Use the "Error Code to FRU Index" in the service guide.

Chapter 33. SRNs A01-(x)xxx through A1D-(x)xxx

The **x** in the following group of SRNs is encoded as follows:

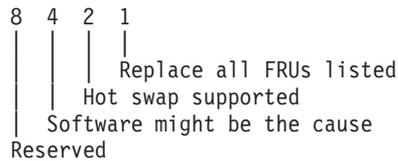

Note: Some SRNs in this chapter may have 4 rather than 3 digits after the dash (-).

Use the physical location codes and FRU numbers listed on the diagnostics Problem Report Screen. Failing Function Codes (FFCs) are not used in this group of SRNs. For more detailed information refer to “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.

Service Request Number	SRN Src.	Description and Action
A00-FF0	G	Description: Error log analysis is unable to determine the error. The error log indicates the following physical FRU locations as the probable causes. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A01-00x	G	Description: Error log analysis indicates an error detected by the CPU, but the failure could not be isolated. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A01-01x	G	Description: CPU internal error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A01-02x	G	Description: CPU internal cache or cache controller error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A01-03x	G	Description: External cache parity or multi-bit ECC error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A01-04x	G	Description: External cache ECC single-bit error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A01-05x	G	Description: System bus time-out error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A01-06x	G	Description: Time-out error waiting for I/O. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A01-07x	G	Description: System bus parity error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A01-08x	G	Description: System bus protocol/transfer error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.

Service Request Number	SRN Src.	Description and Action
A02-00x	G	Description: Error log analysis indicates an error detected by the memory controller, but the failure could not be isolated. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-01x	G	Description: Uncorrectable Memory Error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-02x	G	Description: ECC correctable error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-03x	G	Description: Correctable error threshold exceeded. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-04x	G	Description: Memory Control subsystem internal error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-05x	G	Description: Memory Address Error (invalid address or access attempt). Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-06x	G	Description: Memory Data error (Bad data going to memory). Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-07x	G	Description: Memory bus/switch internal error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-08x	G	Description: Memory time-out error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-09x	G	Description: System bus parity error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-10x	G	Description: System bus time-out error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-11x	G	Description: System bus protocol/transfer error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-12x	G	Description: I/O Host Bridge time-out error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-13x	G	Description: I/O Host Bridge address/data parity error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-15x	G	Description: System support function error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A02-16x	G	Description: System bus internal hardware/switch error
A03-00x	G	Description: Error log analysis indicates an error detected by the I/O device, but the failure could not be isolated. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A03-01x	G	Description: I/O Bus Address parity error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-02x	G	Description: I/O Bus Data parity error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-03x	G	Description: I/O bridge/device time-out, access or other error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-04x	G	Description: I/O bridge/device internal error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-05x	G	Description: I/O Error on non-PCI bus. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-06x	G	Description: Mezzanine bus address parity error
A03-07x	G	Description: System bus address parity error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-08x	G	Description: Mezzanine bus data parity error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-09x	G	Description: System bus data parity error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-10x	G	Description: Mezzanine bus time-out, transfer or protocol error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-11x	G	Description: System bus time-out error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-12x	G	Description: Error on System bus. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-13x	G	Description: I/O Expansion bus parity error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-14x	G	Description: I/O Expansion bus time-out error. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-15x	G	Description: I/O Expansion bus connection failure. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A03-16x	G	Description: I/O Expansion unit not in an operating state. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A05-00x	G	Description: Error log analysis indicates an environmental and power warning, but the failure could not be isolated. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.

Service Request Number	SRN Src.	Description and Action
A05-01x	G	Description: Sensor indicates a fan has failed. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A05-02x	G	Description: System shutdown due to a fan failure. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A05-03x	G	Description: Sensor indicates a voltage outside normal range. Action: Use MAP 1540 in the service guide.
A05-04x	G	Description: System shutdown due to voltage outside normal range. Action: Use MAP 1540 in the service guide.
A05-05x	G	Description: Sensor indicates an abnormally high internal temperature. Action: Verify that: <ol style="list-style-type: none"> 1. The room ambient temperature is within the system operating environment 2. There is unrestricted air flow around the system 3. All system covers are closed 4. There are no fan failures <p>If none of these problems exist, then proceed with “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.</p>
A05-06x	G	Description: System shutdown due to abnormally high internal temperature. Action: Verify that: <ol style="list-style-type: none"> 1. The room ambient temperature is within the system operating environment 2. There is unrestricted air flow around the system 3. All system covers are closed 4. There are no fan failures <p>If none of these problems exist, then proceed with “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.</p>
A05-07x	G	Description: Sensor indicates a power supply has failed. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A05-08x	G	Description: System shutdown due to power supply failure. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A05-09x	G	Description: Sensor detected a FRU that has failed. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.
A05-10x	G	Description: System shutdown due to FRU that has failed. Action: Use “Chapter 13. MAP 0230: Platform Error Problem Resolution” on page 85.

Service Request Number	SRN Src.	Description and Action
A05-14x	G	Description: System shutdown due to power fault with an unspecified cause. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A05-16x	G	Description: System shutdown due to internal power supply failure. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A05-19x	G	Description: System shutdown due to Fan failure. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A05-21x	G	Description: System shutdown due to Over temperature condition. Action: Verify the following: <ul style="list-style-type: none"> • The room ambient temperature is within the system operating environment • There is unrestricted air flow around the system • All system covers are closed If all conditions are met, then use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A05-22x	G	Description: System shutdown due to over temperature and fan failure. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A05-24x	G	Description: Power Fault specifically due to internal battery failure. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-00x	G	Description: Error log analysis indicates an error detected by the Service Processor, but the failure could not be isolated. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-01x	G	Note: Ensure that the system IPLROS and Service Processor are at the latest firmware level before removing any parts from the system. Description: Time-out communication response from Service Processor. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-02x	G	Description: I/O (I2C) general bus error. Note: If you are servicing a 9076/Nxx system, go to the Service Processor Error Log (SVP). Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-03x	G	Description: Secondary I/O (I2C) general bus error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-04x	G	Description: Internal Service Processor memory error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A0D-05x	G	Description: Service Processor error accessing special registers. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-06x	G	Description: Service Processor reports unknown communication error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-07x	G	Description: Internal service processor firmware error or incorrect version. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-08x	G	Description: Other internal Service Processor hardware error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-09x	G	Description: Service Processor error accessing Vital Product Data EEPROM. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-10x	G	Description: Service Processor error accessing Operator Panel. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-11x	G	Description: Service Processor error accessing Power Controller. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-12x	G	Description: Service Processor error accessing Fan Sensor. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-13x	G	Description: Service Processor error accessing Thermal Sensor. Note: If you are servicing a 9076/Nxx system, go to the Service Processor Error Log (SVP).Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-14x	G	Description: Service Processor error accessing Voltage Sensor. Note: If you are servicing a 9076/Nxx system, go to the Service Processor Error Log (SVP).Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-17x	G	Description: Service Processor error accessing serial port. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-18x	G	Description: Service Processor detected NVRAM error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-19x	G	Description: Service Processor error accessing Real Time Clock/Time-of-Day Clock. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-20x	G	Description: Service Processor error accessing scan controller/hardware. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A0D-21x	G	Description: Service Processor detect error with Time-of-Day Clock backup battery. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-23x	G	Description: Loss of heart beat from Service Processor. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-24x	G	Description: Service Processor detected a surveillance time-out. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-25x	G	Description: Power Control Network general connection failure. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-26x	G	Description: Power Control Network node failure. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-29x	G	Description: Service Processor error accessing Power Control Network. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-30x	G	Description: Non-supported hardware. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-31x	G	Description: Error detected while handling an attention/interrupt from the system hardware. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-33x	G	Description: Array of Logic Built in Self Test Error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-34x	G	Description: Wire Test Error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-35x	G	Description: Mainstore or Cache IPL Diagnostic Error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-36x	G	Description: Other IPL Diagnostic Error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-37x	G	Description: Clock or PLL Error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-38x	G	Description: Hardware Scan or Initialization Error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-39x	G	Description: Chip ID Verification Error. Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A0D-40x	G	Description: FRU Presence/Detect Error (Mis-Plugged). Action: Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A10-200	E	Description: The resource was marked failed by the platform. The system is operating in degraded mode. Action: Schedule maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A10-210	D	Description: The processor has been deconfigured. The system is operating in degraded mode. Action: Schedule maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-00x	G	Description: A non-critical error has been detected. Error log analysis indicates an error detected by the CPU, but the failure could not be isolated. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-01x	G	Description: A non-critical error has been detected, a CPU internal error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-02x	G	Description: A non-critical error has been detected, a CPU internal cache or cache controller error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-03x	G	Description: A non-critical error has been detected, an external cache parity or multi-bit ECC error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-04x	G	Description: A non-critical error has been detected, an external cache ECC single-bit error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-05x	G	Description: A non-critical error has been detected, a system bus time-out error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-06x	G	Description: A non-critical error has been detected, a time-out error waiting for an I/O device. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-07x	G	Description: A non-critical error has been detected, a system bus parity error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-08x	G	Description: A non-critical error has been detected, a system bus protocol/transfer error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A11-50x	G	Description: Recoverable errors on resource indicate a trend toward an unrecoverable error. However, the resource could not be deconfigured and is still in use. The system is operating with the potential for an unrecoverable error. Action: If repair is not immediately available, reboot and the resource will be deconfigured. Then operations can continue in a degraded mode. To repair use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-510	G	Description: Resource has been deconfigured and is no longer in use due to a trend toward an unrecoverable error. Action: The system is operating in a degraded mode. Schedule maintenance. To repair use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-520	G	Description: Recoverable errors on resource indicate a trend toward an unrecoverable error. However, the resource could not be deconfigured and is still in use. The system is operating with the potential for an unrecoverable error. Action: Try removing the processes from the failing processor and retry the deconfiguration, use the ha_star -C command. An alternative is reboot, and the processor will be deconfigured. Then the system can continue in a degraded mode. To repair use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-530	G	Description: Recoverable errors on resource indicate a trend toward an unrecoverable error. However, the resource could not be deconfigured and is still in use. The system is operating with the potential for an unrecoverable error. Run-time processor deconfiguration can be enabled to deconfigure the processor. Action: To enable run-time processor deconfiguration, use the chdev -a cpuguard=enable -l sys0 command. Then to retry the deconfiguration, use the ha_star -C command. An alternative is reboot, and the processor will be deconfigured. Then the system can continue in a degraded mode. To repair use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-540	G	Description: Recoverable errors on resource indicate a trend toward an unrecoverable error. However, the resource could not be deconfigured and is still in use. The system is operating with the potential for an unrecoverable error. Action: If repair is not immediately available, reboot and the resource will be deconfigured. Then operations can continue in a degraded mode. To repair use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A11-550	G	Description: Recoverable errors on resource indicate a trend toward an unrecoverable error. However, the resource could not be deconfigured and is still in use. The system is operating with the potential for an unrecoverable error. Action: If repair is not immediately available, reboot and the resource will be deconfigured. Then operations can continue in a degraded mode. To repair use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A12-00x	G	Description: A non-critical error has been detected. Error log analysis indicates an error detected by the memory controller, but the failure could not be isolated. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-01x	G	Description: A non-critical error has been detected, an uncorrectable memory error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-02x	G	Description: A non-critical error has been detected, an ECC correctable error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-03x	G	Description: A non-critical error has been detected, a correctable error threshold exceeded. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-04x	G	Description: A non-critical error has been detected, a memory control subsystem internal error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-05x	G	Description: A non-critical error has been detected, a memory address error (invalid address or access attempt). Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-06x	G	Description: A non-critical error has been detected, a memory data error (bad data going to memory). Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-07x	G	Description: A non-critical error has been detected, a memory bus/switch internal error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-08x	G	Description: A non-critical error has been detected, a memory time-out error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-09x	G	Description: A non-critical error has been detected, a system bus parity error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-10x	G	Description: A non-critical error has been detected, a system bus time-out error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A12-11x	G	Description: A non-critical error has been detected, a system bus protocol/transfer error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-12x	G	Description: A non-critical error has been detected, an I/O host bridge time-out error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-13x	G	Description: A non-critical error has been detected, a I/O host bridge address/data parity error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-15x	G	Description: A non-critical error has been detected, a system support function error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-16x	G	Description: A non-critical error has been detected, a system bus internal hardware/switch error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A12-50x	G	Description: Recoverable errors on resource indicate a trend toward an unrecoverable error. However, the resource could not be deconfigured and is still in use. The system is operating with the potential for an unrecoverable error. Action: If repair is not immediately available, reboot and the resource will be deconfigured. Then operations can continue in a degraded mode. To repair use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-00x	G	Description: A non-critical error has been detected, a error log analysis indicates an error detected by the I/O device, but the failure could not be isolated. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-01x	G	Description: A non-critical error has been detected, an I/O bus address parity error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-02x	G	Description: A non-critical error has been detected, an I/O bus data parity error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-03x	G	Description: A non-critical error has been detected, an I/O bus time-out, access or other error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A13-04x	G	Description: A non-critical error has been detected, an I/O bridge/device internal error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-05x	G	Description: A non-critical error has been detected, an I/O error on non-PCI bus. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-06x	G	Description: A non-critical error has been detected, a mezzanine bus address parity error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-07x	G	Description: A non-critical error has been detected, a system bus address parity error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-08x	G	Description: A non-critical error has been detected, a mezzanine bus data parity error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-09x	G	Description: A non-critical error has been detected, a system bus data parity error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-10x	G	Description: A non-critical error has been detected, a mezzanine bus time-out error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-11x	G	Description: A non-critical error has been detected, a system bus time-out error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-12x	G	Description: A non-critical error has been detected, an error on system bus. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-13x	G	Description: A non-critical error has been detected, an I/O expansion bus parity error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-14x	G	Description: A non-critical error has been detected, an I/O expansion bus time-out error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A13-15x	G	Description: A non-critical error has been detected, an I/O expansion bus connection failure. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-16x	G	Description: A non-critical error has been detected, an I/O expansion unit not in an operating state. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A13-50x	G	Description: Recoverable errors on resource indicate a trend toward an unrecoverable error. However, the resource could not be deconfigured and is still in use. The system is operating with the potential for an unrecoverable error. Action: If repair is not immediately available, reboot and the resource will be deconfigured. Then operations can continue in a degraded mode. To repair use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-01x	G	Description: Sensor indicates a fan is turning too slowly. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-03x	G	Description: Sensor indicates a voltage outside normal range. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-05x	G	Description: Sensor indicates an abnormally high internal temperature. Action: Verify that: <ol style="list-style-type: none"> 1. The room ambient temperature is within the system operating environment 2. There is unrestricted air flow around the system 3. All system covers are closed 4. There are no fan failures <p>If none of these problems exist, then proceed with "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.</p>
A15-07x	G	Description: Sensor indicates a power supply has failed. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-09x	G	Description: Sensor indicates a FRU has failed. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-11x	G	Description: Sensor detected a redundant fan failure. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-12x	G	Description: Sensor detected redundant power supply failure. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A15-13x	G	Description: Sensor detected a redundant FRU that has failed. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-14x	G	Description: Power fault due to unspecified cause. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-16x	G	Description: Internal power supply failure. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-17x	G	Description: Internal redundant power supply failure. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-19x	G	Description: Fan failure. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-20x	G	Description: Non-critical cooling problem, loss of redundant fan. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-21x	G	Description: Over temperature condition. Action: Verify the following: <ul style="list-style-type: none"> • The room ambient temperature is within the system operating environment • There is unrestricted air flow around the system • All system covers are closed <p>If all conditions are met, then use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.</p>
A15-22x	G	Description: Fan failure and Over temperature condition. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-23x	G	Description: Non-critical power problem, loss of redundant power supply. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-24x	G	Description: Power Fault specifically due to internal battery failure. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A15-50x	G	Description: Recoverable errors on resource indicate a trend toward an unrecoverable error. However, the resource could not be deconfigured and is still in use. The system is operating with the potential for an unrecoverable error. Action: If repair is not immediately available, reboot and the resource will be deconfigured. Then operations can continue in a degraded mode. To repair use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A1D-00x	G	Description: A non-critical error has been detected. Error log analysis indicates an error detected by the Service Processor, but the failure could not be isolated. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-01x	G	Note: Ensure that the system IPLROS and Service Processor are at the latest firmware level before removing any parts from the system. Description: A non-critical error has been detected. Time Out communication response from Service Processor Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-02x	G	Description: A non-critical error has been detected, an I/O (I2C) general bus error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-03x	G	Description: A non-critical error has been detected, a secondary I/O (I2C) general bus error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-04x	G	Description: A non-critical error has been detected, an internal service processor memory error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-05x	G	Description: A non-critical error has been detected, a service processor error accessing special registers. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-06x	G	Description: A non-critical error has been detected, a service processor reports unknown communication error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-07x	G	Description: A non-critical error has been detected,; Internal service processor firmware error or incorrect version. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-08x	G	Description: A non-critical error has been detected, an other internal service processor hardware error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-09x	G	Description: A non-critical error has been detected, a service processor error accessing vital product data EEPROM. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-10x	G	Description: A non-critical error has been detected, a service processor error accessing operator panel. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A1D-11x	G	Description: A non-critical error has been detected, a service processor error accessing power controller. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-12x	G	Description: A non-critical error has been detected, a service processor error accessing fan sensor. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-13x	G	Description: A non-critical error has been detected, a service processor error accessing a thermal sensor. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-14x	G	Description: A non-critical error has been detected, a service processor error accessing voltage sensor. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-17x	G	Description: A non-critical error has been detected, a service processor error accessing serial port. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-18x	G	Description: A non-critical error has been detected, a service processor detected NVRAM error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-19x	G	Description: A non-critical error has been detected, a service processor error accessing real time clock/time-of-day clock. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-20x	G	Description: A non-critical error has been detected: Service processor error accessing scan controller/hardware. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-21x	G	Description: A non-critical error has been detected, a service processor detected error with time-of-day clock backup battery. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-23x	G	Description: A non-critical error has been detected: Loss of heart beat from Service Processor. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-24x	G	Description: A non-critical error has been detected, a service processor detected a surveillance time-out. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A1D-25x	G	Description: A non-critical error has been detected, a power control network general connection failure. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-26x	G	Description: A non-critical error has been detected, a power control network node failure. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-29x	G	Description: A non-critical error has been detected, a service process error accessing power control network. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-30x	G	Description: A non-critical error has been detected: Non-supported hardware. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-31x	G	Description: A non-critical error has been detected: Error detected while handling an attention/interrupt from the system hardware. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-33x	G	Description: A non-critical error has been detected: Array of Logic Built in Self Test Error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-34x	G	Description: A non-critical error has been detected: Wire Test Error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-35x	G	Description: A non-critical error has been detected: Mainstore or Cache IPL Diagnostic Error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-36x	G	Description: A non-critical error has been detected: Other IPL Diagnostic Error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-37x	G	Description: A non-critical error has been detected: Clock or PLL Error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-38x	G	Description: A non-critical error has been detected: Hardware Scan or Initialization Error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-39x	G	Description: A non-critical error has been detected: Chip ID Verification Error. Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Service Request Number	SRN Src.	Description and Action
A1D-40x	G	Description: A non-critical error has been detected: Presence/Detect Error (Mis-Plugged). Action: Schedule deferred maintenance. Use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.
A1D-50x	G	Description: Recoverable errors on resource indicate a trend toward an unrecoverable error. However, the resource could not be deconfigured and is still in use. The system is operating with the potential for an unrecoverable error. Action: If repair is not immediately available, reboot and the resource will be deconfigured. Then operations can continue in a degraded mode. To repair use "Chapter 13. MAP 0230: Platform Error Problem Resolution" on page 85.

Chapter 34. SRNs 2520-212 through 2590-(x)xxx

Replace FRU parts in the order by which the "Failing Function Codes" are listed.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
2520-212	D	2520	Description: FIFO empty bit set.
2520-213	D	2520	Description: FIFO empty bit clear.
2520-214	D	2520	Description: FIFO full bit set.
2520-215	D	2520	Description: FIFO full bit clear.
2520-216	D	2520	Description: FIFO data miscompare.
2520-217	D	2520	Description: SCSI FIFO data miscompare.
2520-218	D	2520	Description: SCSI FIFO underflow.
2520-219	D	2520	Description: SCSI parity error.
2520-220	D	2520	Description: SCSI FIFO flags error.
2520-221	D		Description: Miscompare during the write/read of configuration register. Action: Use "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2520-222	D	2520	Description: Error during the write/read of the memory register.
2520-223	D	2520	Description: Miscompare during the write/read of the memory I/O.
2520-224	D	2520 221	Description: SCSI configuration read or write error.
2520-226	D	2520	Description: SCSI wrap or PTC error.
2520-227	D	2520 221	Description: SCSI adapter interrupt test failure.
2520-230	D		Description: Arbitration test failed. Action: Use "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2520-231	D		Description: Function could not complete. Action: Use "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2520-232	D		Description: SCSI bus data miscompare. Action: Use "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2520-240	D		Description: No terminal power. Action: Use "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2520-242	D		Description: SCSI bus error. Action: Use "Chapter 8. MAP 0050: SCSI Bus Problems" on page 53.
2520-301	D	2520 221	Description: Configuration open failed for parent bus.
2520-601	G	2520	Description: Error Log Analysis indicates that the adapter could not be configured.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use "Chapter 11. MAP 0210: General Problem Resolution" on page 69.)
2520-801	G		Description: Error Log Analysis indicates a terminator problem. Action: Run diagnostic on the adapter in System Verification Mode. If an SRN is reported, use the SRN to resolve the problem. If a SRN is not reported, use the SCSI service hints to resolve the problem.
2520-802	G		Description: Error Log Analysis indicates that multiple attempts to reset the SCSI bus have timed out. Action: Run diagnostic on the adapter in System Verification Mode. If an SRN is reported, use the SRN to resolve the problem. If a SRN is not reported, use the SCSI service hints to resolve the problem.
2520-803	G		Description: Error Log Analysis indicates that multiple SCSI bus errors have occurred. Action: Run diagnostic on the adapter and the devices in System Verification Mode. If an SRN is reported, use the SRN to resolve the problem. If a SRN is not reported, use the SCSI service hints to resolve the problem.
2530-101	D	221	Description: Enhanced Error Handling failure on bus.
2530-102	D	221	Description: Enhanced Error Handling logic failure.
2530-103	D	2530	Description: Enhanced Error Handling failure on adapter.
2530-104	D	2530	Description: Port command test failure.
2530-105	D	2530	Description: CU command test failure.
2530-106	D	2530	Description: External wrap test failure.
2530-201	D	2530 221	Description: EEPROM test failure.
2530-202	D	2530 221	Description: Internal wrap test failure.
2530-701	G	2530	Description: Error log analysis indicates that this device has failed to initialize due to a self-test failure.
2530-702	G	2530	Description: Error log analysis indicates that this device has failed to initialize due to an EEH hardware error.
2530-703	G	2530	Description: Error log analysis indicates that this device has failed to initialize due to a problem with the EEPROM on the adapter.
2530-704	G	2530 221	Description: Error log analysis indicates that this device has failed to initialize due to EEH errors.
2550-001	D	Software 2550	Description: Software error.
2550-002	D	2550 Software	Description: Adapter failure.
2550-003	D	2550 227	Description: Adapter failure.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
2550-004	D	2550 Monitor/ Cable	Description: Adapter or display failure.
2550-005	D	2550 227 Monitor/ Cable	Description: Adapter or display failure.
2551-001	D	Software 2551	Description: Software error.
2551-002	D	2551 Software	Description: Adapter failure.
2551-003	D	2551 227	Description: Adapter failure.
2551-004	D	2551 Monitor/ Cable	Description: Adapter or display failure.
2551-005	D	2551 227 Monitor/ Cable	Description: Adapter or display failure.
2570-101	D	2570	Description: DES test failed.
2570-102	D	2570	Description: RSA test failed.
2570-103	D	2570	Description: MAC test failed.
2570-104	D	2570	Description: DES and SHA test failed.
2570-105	D	2570	Description: DES to SHA test failed.
2570-106	D	221	Description: Enhanced Error Handling Circuitry failure.
2570-107	D	221	Description: Enhanced Error Handling failure on bus.
2570-108	D	221	Description: Enhanced Error Handling failure on adapter.
2570-201	D	2570 221	Description: Register test failed.
2570-601	G	2570	Description: ELA indicates hardware failure has occurred.
2570-602	G	2570	Description: ELA indicates hardware timeout has occurred.
2570-603	G	2570	Description: ELA indicates hardware failure and timeout has occurred.
2590-101	D	2590	Description: Unable to open CD-ROM device driver. Action:
2590-201	D	25A0	Description: Unable to configure adapter.
2590-202	D	2590 25A0 media	Description: Unable to configure the device.
2590-203	D	25A0	Description: Unable to open IDE adapter driver.

Service Request Number	SRN Src.	Failing Function Codes	Description and Action (Unless otherwise indicated, use “Chapter 11. MAP 0210: General Problem Resolution” on page 69.)
2590-204	D	media 2590	Description: The Inquire command failed.
2590-205	D	2590 media	Description: The Read Sense Data command failed.
2590-206	D	2590	Description: The Test Unit Ready command failed.
2590-207	D	media 2590	Description: The test media is bad or missing.
2590-208	D	2590 media	Description: The CD-ROM Play Audio command failed.
2590-209	D	2590	Description: No tone during audio test.
2590-210	D	2590	Description: The Prevent Media Removal or Allow Media Removal command failed.
2590-211	D	2590	Description: CD-ROM drive indicates an error.

Chapter 35. Failing Function Codes (FFCs)

Failing function codes represent functions within the system unit.

Description of the Failing Function Code List

The failing function codes are listed in numerical sequence.

A function may not be physically packaged on the same FRU in different system units. When this condition exists, the FRU part number for each type of system unit is listed.

List Column Heading Term Definitions

The columns in the failing function code list are as follows:

Failing Function Code

The failing function code number from the SRN list in “Chapter 16. MAP 0260: System Hangs During Resource Configuration” on page 97.

Machine Type/Model

This column is used when the failing function is on a FRU which differs by machine type and model. Use the part number for the type system unit you are servicing.

See “Machine Types” on page 532 for the names of the machine types.

Note: Although the machine cover logo may depict the model number as four digits, the service and parts ordering system requires three-digit numbers. For example, if the cover logo depicts model number xxx, service and parts documentation may refer to that model as xxx.

Part Number

This column contains the part number of the FRU that contains the failing function. Use the part number for the type of system unit you are servicing.

Description and Notes

This column contains the description of the FRU and any usage notes. The FRU description may be different in different system units. Use the one for the type of system unit you are servicing.

Machine Types

Machine Type	Description
3151	Display Terminal
3161	Display Terminal
3163	Display Terminal
3514	External Disk Array, Models 212 and 213
3812	Pageprinter
3852	Printer
4201	Proprinter II
4202	Proprinter XL
4207	Proprinter X24
4208	Proprinter XL24
4216	Personal Pageprinter
4224	Printer
4234	Printer
4869	5.25-Inch External Diskette Drive
5081	Color Display
5083	Tablet
5085	Graphics Processor
5086	Graphics Processor
5088	Communications Controller
5202	Quietwriter Printer
5204	Quickwriter Printer
6094	Model 10, Dials
6094	Model 20, Lighted Program Function Keyboard (LPFK)
6094	Model 30, Spaceball™
6180	M1 color plotter
6182	Color Plotter
6184	Color Plotter
6185	Model 1 Color Plotter
6186	Color Plotter
6187	Plotter
7372	Plotter
7017	System Unit (Rack Mount), I/O Rack (with up to 4 I/O drawers)
7024	System Unit (Floor Standing)
7025	System Unit (Floor Standing)
7026	System Unit (Rack Mount)
7027	Disk Drive Drawer
7040	System Unit (Model 690)
7043	System Unit (Models 140, 150, 240, 260)
7044	System Unit (Models 170, 270) Floor Standing
7046	System Unit (Model B50) Rack Mount
7131	Model 105 SCSI Multi-Storage Tower
7134	High Density SCSI Disk Subsystem, Model 010.
7137	Disk Array Subsystem Models 412, 413, and 414
7135	RAIDiant Array SCSI Disk Drive Subsystem, Models 010 and 110

Machine Type	Description
7203	External Portable Disk Drive
7204	External Disk Drive Model 320
7206	2.0 GB or 4.0 GB External 4 mm Tape Drive 24/48 GB DDS-2 4 mm Autotape Loader
7207	150 MB, 525 MB or 1.2 GB External 1/4-Inch Cartridge Tape Drive
7208	2.3 GB or 5.0 GB External 8 mm Tape Drive
7210	External CD-ROM Drive
7235	POWERgraphics GTO graphics subsystem
7250	POWERgraphics Accelerator
7317	System Unit, (Telco Rack Mounted)
7331	Model 205 8 mm Tape Library
7332	Model 005 4 mm Tape Library
8508	Monochrome Display
9076	SMP Thin/Wide Node
9076	Power3 SMP Thin/Wide Node
9076	Power3 SMP High Node
9333	High-Performance Disk Drive Subsystem Models 010 and 011
9333	High-Performance Disk Drive Subsystem Models 500 and 501
9334	SCSI Expansion Unit Model 010 (Single-Ended), Model 011 (Differential)
9334	SCSI Expansion Unit Model 500 (Single-Ended), Model 501 (Differential)
9348	1/2-Inch 9-Track Tape Drive

Failing Function Code List

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
11A		09J8199	Battery kit, Cryptographic Coprocessor
131			Unidentified memory error. Check all Memory Modules to be present and properly installed. Check all Memory Modules to be the same. If no discrepancy is found then replace the memory module in the location called out by the 888 sequence. Go to MAP 1540 in either the service guide or the installation and service guide for this system unit.
132			The program that just loaded may be damaged.
151		33F8354	Battery, time-of-day, NVRAM, etc. Battery Note: After replacement of this FRU the following must be done by you or the customer: 1. Time and date must be set. 2. Network IP addresses should be set (for machines that IPL from a network). 3. The bootlist should be set to reflect the customers preference for the IPL devices (when set different than the default values).
151	7017/S70 7017/S7A 7017/S80 7017/S85	03N3523 03N3523 11K0301 16G8095	Service Processor Card Service Processor Card Service Processor Card Battery
151	7025/6F0 7025/6F1	16G8095 43L5269	Battery System board
151	7025/F80	16G8095 43L5269	Battery System board
151	7026/6H0 7026/6H1 7026/6M1 7026/H80 7026/M80	16G8095 41L5560	Battery Primary I/O backplane
151	7040/61R	44H2790	Integrated Battery Feature
151	7040/681	18G8095 09P2435	Battery Primary I/O Book
151	7043/150 7044/170 7046/B50	15F8409	Battery
151	9076 SMP Thin/Wide Node	41L6138	I/O Planar (Check NVRAM jumper)

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
151	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz) (Check NVRAM jumper)
151	9076/ Power3 SMP High Node	11K0571	NIO Planar Note: There is no battery for this model.
152	7017/S70	21H7030 21H6961 21H7763 21H7100 93H3753 93H3734 93H3682 07L6658 07L6656	System Power Supply problem AC Bulk Power Supply SPCN card Programmable regulator assembly Memory regulator assembly AC box, Domestic (U.S.) single phase AC box, World Trade, single phase AC box, World Trade, two phase Bulk Power Supply (-48 Vdc) DC box (-48 Vdc)
152	7017/S7A	21H7030 21H6961 21H7763 21H7100 93H3753 93H3734 93H3682 97H9465 08L1336	AC Bulk Power Supply SPCN card Programmable regulator assembly Memory regulator assembly AC box, Domestic (U.S.) single phase AC box, World Trade, single phase AC box, World Trade, two phase Power distribution board I/O Drawer Power Supply
152	7017/S80 7017/S85	21H7719 21H6961 21H7763 21H3603 93H3753 93H3734 93H3682 21H7000 04N6092 97H9465 08L1336	System Rack AC Bulk Power Supply SPCN Card Programmable Regulator assembly CPM Regulator assembly AC Box, Domestic (U.S.) Single Phase AC Box, World Trade, Single Phase AC Box, World Trade, Two Phase With dual line cord feature: AC Box, Single phase Concurrent maintenance card I/O Rack Power Distribution Board I/O Drawer Power Supply
152	7024	93H3504	Power Supply
152	7025/6F0 7025/6F1	24L1400	Power supply
152	7025/F30	40H5428	Power Supply (474 watts)
152	7025/F30 7025/F40	12J5701	Optional Power Supply Note: If you are replacing the power supply because of receiving SRNs 950-700 thru 950-998, replace the optional power supply first.

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
152	7025/F40	07L7476	Power Supply (575 watts)
152	7025/F50	93H9789	Power Supply
152	7025/F80	24L1400	Power supply
152	7026/6H0 7026/6H1	11K0802 41L5404 11K0812 41L5413 03N2829	CEC drawer ac power supply CEC drawer dc power supply I/O drawer ac power supply I/O drawer dc power supply Cooling unit (filler)
152	7026/6M1	24L0728 44L0045 11K0812 03N2829	CEC drawer ac power supply CEC drawer dc power supply I/O drawer ac power supply Cooling unit (filler)
152	7026/B80	00P2342 00P2344	Power supply, ac Power supply, dc
152	7026/H10	93H8714	System Power Supply problem Power Supply
152	7026/H50	93H9551 08L1336 97H9464	Power Distribution Board Power Supply Power Supply(-48 Vdc) Note: Replace the Power Distribution Board before replacing the power supply.
152	7026/H70	08L0388 94H1041 41L4881	Power Distribution Board Power Supply Power Supply(-48 Vdc) Note: Replace the Power Distribution Board before replacing the power supply.
152	7026/H80	11K0802 41L5404 11K0812 41L5413 03N2829	CEC drawer ac power supply CEC drawer dc power supply I/O drawer ac power supply I/O drawer dc power supply Cooling unit (filler)
152	7026/M80	24L0728 44L0045 11K0812 03N2829	CEC drawer ac power supply CEC drawer dc power supply I/O drawer ac power supply Cooling unit (filler)
152	7028/6C1 7028/6E1	24P6867	Power supply

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
152	7040/681	11P1543 11P1544 11P1545 11P1546 11P1547 11P1548 11P1549 11P1550 11P1551 11P1552 11P1540	Distributed Converter Assembly (DCA1) P00 Distributed Converter Assembly (DCA1) P01 Distributed Converter Assembly (DCA2) P00 Distributed Converter Assembly (DCA2) P01 Distributed Converter Assembly (DCA3) P00 Distributed Converter Assembly (DCA3) P01 Distributed Converter Assembly (DCA4) P00 Distributed Converter Assembly (DCA4) P01 Distributed Converter Assembly (DCA5) P00 Distributed Converter Assembly (DCA5) P01 Capacitor Card
152	7040/61D	11P3582	Distributed Converter Assembly
152	7040/61R	31L8609 11P1598 12K0981 11P4205 44H2790	Bulk Power Regulator (BPR) Bulk Power Controller (BPC) Bulk Power Distribution (BPD) Bulk Power Enclosure (BPE) Integrated Battery Feature (IBF)
152	7043/140 7043/150 7043/240	40H7566 40H7563	PFC Power Supply (Japan Only) Non-PFC Power Supply (Other Countries)
152	7043/260	97H9337	Power supply
152	7043/270	24L1968	Power Supply
152	7044/170	41L5215	Power Supply
152	7044/270	24L1968	Power Supply
152	7046/B50	24L2659	Power supply
152	7203	00G2960	Bridge Box Power Supply
152	7204/001	46G3934	Bridge Box Power Supply
152	7204 Models, 112, 113, 114, 139, 317, 325, 339	59H3760	Bridge Box Power Supply
152	7204 Models 010, 215, 315	8191380	Bridge Box Power Supply
152	7206/001	46G3934	Bridge Box Power Supply
152	7206/002	8191380	Bridge Box Power Supply
152	7207 Models 001, 011	00G2960	Bridge Box Power Supply
152	7207/012	46G3934	Bridge Box Power Supply
152	7207/315	59H3760	Bridge Box Power Supply
152	7208/001	00G2960	Bridge Box Power Supply
152	7208/011 7208/034 7208/341 7208/342	46G3934 59H3760 59H2835 59H2836	Bridge Box Power Supply

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
152	7209	46G3934	Bridge Box Power Supply
152	7210/001	00G2960	Bridge Box Power Supply
152	7210/005	65G7585	Power supply/enclosure
152	7210/010	59H3760	Power supply
152	7236 MediaStreamer	40H7566	Power Supply
152	7317/F3L	93H2232	Power Supply
152	16-Port RAN	93H7091	Power Supply for Remote Async Node, FRU Part Numbers 51G8139, 93H6549, or 93H6563
152	9076 SMP Thin/Wide Node	11J6523 11J6524	CPU Power Supply I/O power supply
152	9076/ Power3 SMP Thin/Wide Node	31L7865 11J6524	CPU Power Supply I/O Power Supply
152	9076/ Power3 SMP High Node	12K0447 12K0448 12K0449 12K0450 12K0452	2.5V DC/DC Regulator Card 3.3V DC/DC Regulator Card +5V standby/+12V DC/DC regulator card -5V/-12V DC/DC regulator card Power distribution board
152	9076/ Power3 RIO Drawer	11J6495	Power card (2)
153	7017/S70	07L7178 93H8714 93H7539 93H7542	Device drawer, exp unit pwr sup 1/4 Power Supply (AC) 3/4 Power Supply (AC) 1/4 Power Supply (-48 Vdc) 3/4 Power Supply (-48 Vdc)
153	7017/S7A	08L1336	I/O Drawer Power Supply
153	7017/S80 7017/S85	08L1336	I/O Drawer Power Supply
153	7040/61D	11P3582	Distributed Converter Assembly
153	7040/61R	31L8609 11P1598 12K0981 11P4205 44H2790	Bulk Power Regulator (BPR) Bulk Power Controller (BPC) Bulk Power Distribution (BPD) Bulk Power Enclosure (BPE) Integrated Battery Feature (IBF)
159		6247455	Tablet Puck problem Tablet cursor, Models 21, 22
159		74F3131	Tablet cursor, 4-button, 6093 Models 11, 12
159		74F3132	Tablet cursor, 6-button, 6093 Models 11, 12
165	7017/S70	91H1381 03N3523	Indicator Card Service Processor Card

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
165	7017/S7A	91H1381 07L9514 03N3523	Indicator Card Drawer Indicator Panel Card Service Processor Card Note: See the location codes in the system unit service guide to determine if the operator panel or the drawer indicator panel is the failing FRU.
165	7017/S80 7017/S85	91H1381 07L9514 11K0301	Indicator Card Drawer Indicator Panel Card Service Processor Card Note: See the location codes in the system unit service guide to determine if the operator panel or the drawer indicator panel is the failing FRU.
165	7024	93H4859 40H5434	Display panel Display cable
165	7025/6F0 7025/6F1	24L1593	Operator panel
165	7025/F30	82G3614 71G6290 93H5911	Display panel Display cable Operator panel control assembly
165	7025/F40	82G3614 93H1816 07L7600	Display panel Display cable Operator panel control assembly
165	7025/F50	06H7082 93H1816 93H2922	Display panel Display cable Operator panel control assembly
165	7025/F80	24L1593	Operator panel
165	7026/6H0 7026/6H1 7026/6M1	24L1089	Primary I/O drawer operator panel
165	7026/B80	04N5108 04N6150	Operator panel signal cable Operator panel assembly
165	7026/H10	82G3614 93H1816 93H7439	Display panel Display cable Operator panel control assembly
165	7026/H50	06H7082 93H1816 93H2922	Display panel Display cable Operator panel control assembly
165	7026/H70	06H7082 93H1816 41L6006	Display panel Display cable Operator panel control assembly
165	7026/H80 7026/M80	24L1089	Primary I/O drawer operator panel

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
165	7028/6C1 7028/6E1	21P6650 21P6820	Operator panel cable Operator panel assembly
165	7040/681	24L1089	Operator Panel
165	7043/140 7043/150 7043/240	73H3766	Operator Panel problem Operator panel circuit assembly
165	7043/260 7043/270	97H9328 97H9442 07L7234	Operator panel signal cable Operator panel audio cable Operator panel assembly
165	7044/170	41L6173	Operator Panel
165	7044/270	97H9328 97H9442 07L7234	Operator panel signal cable Operator panel audio cable Operator panel assembly
165	7046/B50	07L9101	Operator panel
165	7317/F3L	82G3614 71G6290 73H0895	Display panel Display cable Operator panel control assembly
165	9076 SMP Thin/Wide Node	11J4000	Supervisor Card
165	9076/ Power3 SMP Thin/Wide Node	11J4000	Supervisor Card
166	7017/S70	21H6959 40H4878	Fan Assembly or Blower problem System rack blower 3-Fan assembly
166	7017/S7A	21H6959 41L6269 93H8868	System rack blower I/O drawer blower DASD Fan Assembly
166	7017/S80 7017/S85	21H6959 41L6269 93H8868	System Rack System rack blower I/O Rack I/O drawer blower DASD Fan Assembly
166	7024	06H2647	Fan
166	7025/6F0 7025/6F1	24L1730	Fan
166	7025/F30	39H9898	Fan
166	7025/F40	40H1424 40H1423 40H1433	Fan 1 and 3 Fan 2 Fan 4
166	7025/F50	40H1424 40H1433 73H3577	Fan 3 Fan 2 and 4 Fan 1 CPU

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
166	7025/F80	24L1730	Fan
166	7026/6H0 7026/6H1	41L5315 41L5448 03N2829 41L5448	CEC drawer fan CEC drawer fan Cooling unit (filler) I/O drawer fan
166	7026/6M1	04N3345 03N2829 41L5448	CEC drawer fan Cooling unit (filler) I/O drawer fan
166	7026/B80	04N5124 04N5121	Front fans 1 and 2 Rear fans 3 and 4
166	7026/H10	40H4878	3-Fan hot-plug assembly
166	7026/H50	93H8868 41L6269 93H8570	Fan 1, 2, 3, 4 Blower Fan 5, 6 Fan 7 CPU
166	7026/H70	93H8868 41L6269 41L5329 08L0530	Fan 1, 2, 3, 4 Blower Fan 5, 6 Fan 7 CPU I/O Blower 8
166	7026/H80	41L5315 41L5448 03N2829 41L5448	CEC drawer fan CEC drawer fan Cooling unit (filler) I/O drawer fan
166	7026/M80	04N3345 03N2829 41L5448	CEC drawer fan Cooling unit (filler) I/O drawer fan
166	7028/6C1 7028/6E1	21P6798	Processor Fan
166	7040/61R 7040/61D	11P1787 11P2345	Bulk Power Fan Fan Assembly
166	7040/681	07H5349	Blower
166	7043/140 7043/150	40H7584	Fan Assembly or Blower problem Fan assembly
166	7043/240	93H1820	Fan assembly
166	7043/260 7043/270	74G6361 97H9425	Fan 1, CEC Fan 2, I/O
166	7044/170	41L6172 10L5575 10L5574	Bottom front fan assembly Top front fan Rear fan
166	7044/270	74G6361 97H9425	Fan 1, CEC Fan 2, I/O
166	7046/B50	11H9744	Fan assembly
166	7236 MediaStreamer	94H0620	Fan assembly

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
166	9076 SMP Thin/Wide Node	11J6513 11J6514 11J6513	CPU Fan 1 CPU Fan 2 (High Speed) I/O Fan 3 and 4
166	9076/ Power3 SMP Thin/Wide Node	11J6513 11J6514	Fan (Medium Speed) Fan (High Speed)
166	9076/ Power3 SMP High Node	07L8594	Fan assembly
166	9076/ Power3 RIO Drawer	11J5275	Fan (2)
167	7024	93H3504	Power Supply Fan problem Power supply
167	7025	12J5701 40H5428 07L7476 93H9789	Power supply
167	7025/6F0 7025/6F1	24L1400	Power supply
167	7025/F30 7025/F40 7025/F50	12J5701 40H5428 07L7476 93H9789	Power supply
167	7025/F80	24L1400	Power supply
167	7026/H50	93H8868	Power supply
167	7040/61R	11P1787	Bulk Power Fan
167	7043/140 7043/150 7043/240	40H7566 40H7563	PFC Power Supply (Japan Only) Non-PFC Power Supply (All Other Countries)
167	7043/260	97H9337	Power supply
167	7043/270	24L1968	Power Supply
167	7044/170	41L5215	Power Supply
167	7044/270	24L1968	Power Supply
167	7046/B50	24L2659	Power supply
167	9076 SMP Thin/Wide Node	11J6513 11J6514 11J6513	CPU Fan 1 CPU Fan 2 (High Speed) I/O Fan 3 and 4
167	9076/ Power3 SMP Thin/Wide Node	11J6513 11J6514	Fan (Medium Speed) Fan (High Speed)
169			Operator Panel Logic problem Note: If the type/model and FRU information is not listed here, refer to FFC 221..
181	7024	11H8073	Diskette drive cable problem Cable, diskette drive signal

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
181	7025/6F0 7025/6F1	24L1771 23L2922	Cable, diskette drive signal Cable, diskette drive power
181	7025/F30	11H8162	Cable, diskette drive signal
181	7025/F40 7025/F50	73H1894	Cable, diskette drive signal
181	7025/F80	24L1771 23L2922	Cable, diskette drive signal Cable, diskette drive power
181	7026/H10	73H1894	Cable, diskette drive signal
181	7026/H50	73H1894	Cable, diskette drive signal
181	7026/H70	73H1894	Cable, diskette drive signal
181	7040/681	11P2353	Cable, diskette drive signal
181	7043/140 7043/240	93H1821	Cable, diskette drive signal
181	7043/150	93H1821	Cable, diskette drive signal
181	7043/260 7043/270	97H9320	Cable, diskette drive signal
181	7044/170	24L2668	Cable, diskette drive signal
181	7044/270	97H9320	Cable, diskette drive signal
181	7046/B50	76H4091 24L2668	Diskette drive Cable, diskette drive
181	7317/F3L	73H4937	Cable, diskette drive
185		71G6458	X.25 Interface Co-Processor Adapter
186		33F8967 84F7540 53F2662	Co-Processor Multiport Adapter, Model 2 Daughter Card 1 MB Memory Module
188		6247454	Tablet stylus, Models 21, 22
188		74F3133	Tablet stylus, 6093 Models 11, 12
190	7017/S70	93H2455 93H2456 07L7005 93H2485 52G4291 06H6036 52G4233 73H3142	Internal Disk Signal Cable problem SCSI Cable Media Bay to SCSI slot 2 I35 SCSI Cable, slot 9 to Redrive Card I35 SCSI Cable, slot 9 to Redrive Card SCSI Cable, I35 SCSI Card to Card SCSI Cable, SCSI-2 to SE/SE SCSI Redrive Card (0.6 m) SCSI Cable, SCSI-2 to SE/SE SCSI Redrive Card (1.0 m) SCSI Cable, SCSI-2 to SE/SE SCSI Redrive Card (2.5 m) SCSI Cable, SCSI-2 to Bulkhead Note: Consult the 7017/S70 Service Guide before ordering replacement cables.

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
190	7017/S7A	93H2455 06H6876	SCSI Cable Media Bay to SCSI Adapter SCSI Card to Backplane Note: Consult the 7017/S7A Service Guide before ordering replacement cables.
190	7017/S80 7017/S85	93H2455 06H6876	SCSI Cable Media Bay to SCSI Adapter SCSI Card to Backplane Note: Consult the 7017/S80 or 7017/S85 Service Guide before ordering replacement cables.
190	7024	12H1169	Cable, Internal SCSI, 4-drop
190	7025/6F0 7025/6F1	04N4265 00P2358 04N2273 04N4555 04N5589	Internal SCSI cable, 4-drop SCSI cable, short (8 inches) SCSI cable, long (44 inches) SCSI two-pack backplane SCSI six-pack backplane
190	7025/F30	73H3596	Cable, Internal SCSI, 4-drop
190	7025/F40	93H3490	Cable, Internal SCSI, 4-drop
190	7025/F50	73H3596	Cable, Internal SCSI, 4-drop
190	7025/F80	04N4265 00P2358 04N2273 04N4555 04N5589	Internal SCSI cable, 4-drop SCSI cable, short (8 inches) SCSI cable, long (44 inches) SCSI two-pack backplane SCSI six-pack backplane
190	7026/6H0 7026/6H1 7026/6M1	41L5519	I/O drawer internal SCSI cable
190	7026/B80	21P3951	Cable, internal SCSI
190	7026/H10	73H3596	Cable, Internal SCSI, 4-drop
190	7026/H50	93H9613 52G4291 52G4233 06H6876	Cable, Internal SCSI, 4-drop Cable, SCSI-2 Cable, SCSI Cable, SCSI
190	7026/H80 7026/M80	41L5519	I/O drawer internal SCSI cable
190	7026/H70	93H9613 52G4291 52G4233	Cable, Internal SCSI, 4-drop Cable, SCSI-2 Cable, SCSI
190	7028/6C1 7028/6E1	21P6655	Cable, internal SCSI
190	7040/681	11P2349 11P2350	SCSI Cable for Media Subsystem Rear Component SCSI Cable for Media Subsystem Front Component

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
190	7043/140 7043/150	73H0435	Internal Disk Signal Cable problem Cable, Internal SCSI, 4-drop
190	7043/240	40H7572	Cable, Internal SCSI, 4-drop
190	7043/240	93H6151	Ultra SCSI Cable assembly (optional)
190	7043/260 7043/270	97H9322 01K6497	Cable, Internal SCSI, 4-drop Cable, Internal SCSI Pigtail
190	7044/170	41L6178	Cable, Internal SCSI, 7-drop
190	7044/270	97H9322 01K6497	Cable, Internal SCSI, 4-drop Cable, Internal SCSI Pigtail
190	7046/B50	24L2667	Cable, internal SCSI
190	7236 MediaStreamer	93H6435 93H6629	SCSI Cable SCSI ID Cable
190	7317/F3L	93H8972	Cable, Internal SCSI, 3-drop
190	9076 SMP Thin/Wide Node	08J6105 11J5177 08J6111	Cable, Internal SCSI, 2-drop Cable, Internal SCSI, 4-drop Alternate DASD Cabling
190	9076/ Power3 SMP Thin/Wide Node	08J6105 11J5177 08J6111	Cable, Internal SCSI, 2-drop Cable, Internal SCSI, 4-drop Alternate DASD cabling
190	9076/ Power3 SMP High Node	08L1353 41L6350 41L5044 03N3667	Docking card, processor Docking card, I/O Cable, SCSI to docking card Cable, DASD
190	9076/ Power3 RIO Drawer	05N4972 11J5276	DASD docking card Cable, SCSI
190	2104	09L3111 09L3307 09L3305 09L3303 09L3301 09L3299 09L3309	JBOD card 20 m cable, adapter to JBOD 10 m cable, adapter to JBOD 5 m cable, adapter to JBOD 3 m cable, adapter to JBOD 1 m cable, adapter to JBOD 3 m non-LVD cable, adapter to JBOD
192	7203	00G2960	Power Supply, portable disk drive
199			SCSI Enclosure Service (SES) Note: If the system or enclosure type does not appear in the list below, refer to it's service guide.
199	7025/6F0 7025/6F1 7025/F80	04N5589	SCSI six-pack backplane
199	7040/61D	11P2395	DASD 4 Pck Cage Assembly

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
199	9076/ Power3 RIO Drawer	12K0503	DASD Controller
199	2104	09L3111	JBOD card
201			Note: Content moved to FFC 190.
203			Note: Content moved to FFC 152.
210	7017/S70	90H9694 90H9662	Fixed Point Processor problem Processor Card (4x) (Type 2) (120 MHz) Processor Card (4x) (Type 1) (120 MHz)
210	7017/S7A	08L1474 08L1473	Processor Card (Type 2) (262 MHz) Processor Card (Type 1) (262 MHz)
210	7017/S80	23L7434 23L7447	Processor Card (Type 1 RH) Processor Card (Type 2 LH)
210	7017/S85	21P4511 21P4517	Processor Card (Type 1 RH) Processor Card (Type 2 LH)
210	7024/E20	40H6616 03N3989	CPU card (100 MHz) CPU card (233 MHz)
210	7024/E30	73H3614 93H2431 03N3989	CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
210	7025/6F0	04N5353 23L7785 23L7794	1-way processor card (600 MHz) 2-way processor card (667 MHz) 4-way processor card (667 MHz)
210	7025/6F1	04N5353 23L7785 23L7794 23L7799	1-way processor card (600 MHz) 2-way processor card (667 MHz) 4-way processor card (667 MHz) 6-way processor card (667 MHz)
210	7025/F30	73H3614 93H2431 03N3989	CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
210	7025/F40	11H7517 41L6111	CPU card (166 MHz) CPU card (233 MHz)
210	7025/F50	93H2679 73H4768 93H9018 93H8945	166 MHz CPU card (1 way) 166 MHz CPU card (2 way) 332 MHz CPU card (1 way) 332 MHz CPU card (2 way)
210	7025/F80	04N4765 03P0062 03P0070 03P0085	1-way processor card 2-way processor card 4-way processor card 6-way processor card
210	7026/6H0	04N5353 23L7785 23L7794	1-way processor card (600 MHz) 2-way processor card (667 MHz) 4-way processor card (667 MHz)

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
210	7026/6H1	04N5353 23L7785 23L7794 23L7799	1-way processor card (600 MHz) 2-way processor card (667 MHz) 4-way processor card (667 MHz) 6-way processor card (667 MHz)
210	7026/6M1	04N6698 21P6381 21P6383	2-way processor card (500 MHz) 2-way processor card (750 MHz) 4-way processor card (750 MHz)
210	7026/B80	09P0399 09P0143 09P0406 09P4478	Processor card (375 Mhz, one-way) Processor card (375 Mhz, two-way, 8 M L2) Processor card (375 Mhz, two-way, 4 M L2) Processor Card (450 Mhz, two-way)
210	7026/H10 7026/H10	11H7517	CPU card (166 MHz)
210	7026/H50	93H9018 93H8945	CPU card (332 MHz one-way) CPU card (332 MHz two-way)
210	7026/H70	94H1013 94H1008	Fixed Point Processor problem CPU card (332 MHz one-way) CPU card (332 MHz two-way)
210	7026/H80	04N4765 03P0062 03P0070 03P0085	1-way processor card 2-way processor card 4-way processor card 6-way processor card
210	7026/M80	04N6930 04N6931	2-way processor card 4-way processor card
210	7028/6C1 7028/6E1	09P3666 09P3669	375 MHz Processor card 450 MHz Processor Card
210	7040/681	03N3223 03N3228 03N3229 09P3217	1.3 GHz 4-way MCM with VPD Card 1.3 GHz 8-way MCM with VPD Card 1 GHz 4-way MCM with VPD Card 1 GHz 8-way MCM with VPD Card
210	7043/140	93H7142 93H7143 93H6023 93H9334	166 MHz System board 200 MHz System board 233 MHz System board 332 MHz System board
210	7043/150	41L5912	375 MHz System board
210	7043/240	11H7517 41L6111	166 MHz Processor and Cache Card 233 MHz Processor and Cache Card
210	7043/260	03N2403	200 MHz CPU card
210	7043/270	11K0171 11K0218	CPU card (375 MHz one-way) CPU card (375 MHz two-way)

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
210	7044/170	09P0277 09P0272 09P0943	Processor card (333 MHz) Processor card (400 MHz) Processor card (450 Mhz)
210	7044/270	11K0171 11K0218 09P4478	CPU card (375 MHz one-way) CPU card (375 MHz two-way) CPU card (450 MHz two-way)
210	7046/B50	41L5912	375 MHz System board
210	7317/F3L	73H3614 93H2431 03N3989	CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
210	9076 SMP Thin/Wide Node	93H9716	CPU card (332 MHz)
210	9076/ Power3 SMP Thin/Wide Node	03N2403 11K0232	CPU card (200 MHz) CPU card (375 MHz)
210	9076/ Power3 SMP High Node	11K0198	CPU card
212			Cache problem Note: For type/model and FRU information refer to FFC 210.
214	7017/S70 7017/S7A	97H7696	Memory Control Unit problem System backplane assembly
214	7017/S80 7017/S85	23L7598	System backplane assembly
214	7024/E20	40H6616 03N3989	CPU card (100 MHz) CPU card (233 MHz)
214	7024/E30	73H3614 93H2431 03N3989	CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
214	7025/6F0 7025/6F1	43L5269	System board
214	7025/F30	73H3614 93H2431 03N3989	CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
214	7025/F40	11H7517 93H5163	CPU card (166 MHz) CPU card (233 MHz)
214	7025/F50	07L9718	System board
214	7025/F80	43L5269	System board
214	7026/6H0	04N5353 23L7785 23L7794	1-way processor card (600 MHz) 2-way processor card (667 MHz) 4-way processor card (667 MHz)

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
214	7026/6H1	04N5353 23L7785 23L7794 23L7799	1-way processor card (600 MHz) 2-way processor card (667 MHz) 4-way processor card (667 MHz) 6-way processor card (667 MHz)
214	7026/6M1	04N3524	CEC drawer backplane
214	7026/B80	08L0988	System board
214	7026/H10	11H7517	CPU card (166 MHz)
214	7026/H50	07L9718	System board
214	7026/H70	08L0988	System board
214	7026/H80	04N4765 03P0062 03P0070 03P0085	1-way processor card 2-way processor card 4-way processor card 6-way processor card
214	7026/M80	04N3023	CEC drawer backplane
214	7028/6C1 7028/6E1	09P2420	System board
214	7040/681	11P3046	System Backplane
214	7043/140	93H7142 93H7143 93H6023 93H9334	166 MHz System board 200 MHz System board 233 MHz System board 332 MHz System board
214	7043/150	41L5912	375 MHz System board
214	7043/240	11H7517 41L6111	166 MHz Processor and Cache Card 233 MHz Processor and Cache Card
214	7043/260	08L1303	Memory Control Unit Problem System board
214	7043/270	08L0988	System board
214	7044/170	41L572 09P0037	System board, class A System board, class B
214	7044/270	08L0988	System board
214	7046/B50	41L5912	375 MHz System board
214	7317/F3L	73H3614 93H2431 03N3989	Memory Control Unit problem CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
214	9076 SMP Thin/Wide Node	07L9718 41L6138 93H3316	CPU chassis system board CPU chassis I/O planar I/O chassis connection card

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
214	9076/ Power3 SMP Thin/Wide Node	08L1303 08L0988 03N2866 03N3368 07L8531	CPU chassis, system board (200 MHz) CPU chassis, system board (375 MHz) CPU chassis, I/O planar (200 MHz) CPU chassis, I/O planar (375 MHz) I/O expansion card
214	9076/ Power3 SMP High Node	03N4184	System Planar
217	7024/E20	40H6616 03N3989	System ROS/EEPROM problem CPU card (100 MHz) CPU card (233 MHz)
217	7024/E30	73H3614 93H2431 03N3989	CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
217	7025/6F0 7025/6F1	43L5269	System board
217	7025/F30	73H3614 93H2431 03N3989	CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
217	7025/F40	11H7517 93H5163	CPU card (166 MHz) CPU card (233 MHz)
217	7025/F50	41L5106	I/O board
217	7025/F80	43L5269	System board
217	7026/B80	00P1859	I/O board
217	7026/H10	11H7517	CPU card (166 MHz)
217	7026/H50	41L5106	I/O board
217	7026/H70	08L0617	I/O board
217	7028/6C1 7028/6E1	09P2420	System Board
217	7043/140	93H7142 93H7143 93H6023 93H9334	System ROS/EEPROM problem 166 MHz System board 200 MHz System board 233 MHz System board 332 MHz System board
217	7043/150	41L5912	375 MHz System board
217	7043/240	11H7517 41L6111	166 MHz Processor and Cache Card 233 MHz Processor and Cache Card
217	7043/260	41L5511	I/O board
217	7043/270	41L6013	I/O board
217	7044/170	41L5721 09P0037	System board, class A System board, class B
217	7044/270	41L6013	I/O board
217	7046/B50	41L5912	375 MHz System board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
217	7317/F3L	73H3614 93H2431 03N3989	CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
217	9076 SMP Thin/Wide Node	41L6138	I/O planar
217	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz)
219			Common Memory Logic problem Refer to "Appendix C. System Memory Reference" on page 619 for memory card and memory module FRU part numbers. Note: If more than a pair of memory modules from the same memory card are reported missing, replace the memory card first. Otherwise, replace the memory module at the physical location code that is reported.
221	7017/S70	94H1268	System I/O Control Logic problem I/O planar
221	7017/S7A	08L0103	I/O planar
221	7017/S80 7017/S85	08L1438	I/O planar
221	7024	93H4808	System board
221	7025/6F0 7025/6F1	43L5269	System board
221	7025/F30	93H8371	System board
221	7025/F40	93H8652	System board
221	7025/F50	41L5106	I/O board
221	7025/F80	43L5269	System board
221	7026/6H0 7026/6H1 7026/6M1	41L5560 41L5661	Primary I/O drawer backplane Secondary I/O drawer backplane
221	7026/B80	00P1859	I/O board
221	7026/H10	93H8652	System board
221	7026/H50	41L5106	I/O board
221	7026/H70	03N2797	I/O board
221	7026/H80 7026/M80	41L5560 41L5661	Primary I/O drawer backplane Secondary I/O drawer backplane
221	7028/6C1 7028/6E1	09P2420	System Board
221	7040/61D	11P2623	I/O Planar

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
221	7043/140	93H7142 93H7143 93H6023 93H9334	System I/O control logic problem 166 MHz System board 200 MHz System board 233 MHz System board 332 MHz System board
221	7043/150	41L5912	375 MHz System board
221	7043/240	11H7516	System board
221	7043/260	41L5511	I/O board
221	7043/270	41L6013	I/O board
221	7044/170	41L5721 09P0037	System board, class A System board, class B
221	7044/270	41L6013	I/O board
221	7046/B50	41L5912	375 MHz System board
221	7317/F3L	93H8371	System board
221	9076 SMP Thin/Wide Node	41L6138	I/O planar
221	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz)
221	9076/ Power3 SMP High Node	11K0571	NIO planar
221	9076/ Power3 RIO Drawer	05N5005	RIO planar (expansion unit)
226			System Status Logic problem Note: If the type/model and FRU information is not listed here, refer to FFC 221..
227	7017/S70	94H1268 93H8502	ISA/PCI Bus Logic problem I/O board Indicator Panel card
227	7017/S7A	08L0103	I/O planar
227	7017/S80 7017/S85	08L1438	I/O planar
227	7024	93H4808	System board
227	7025/6F0 7025/6F1	43L5269	System board
227	7025/F30	93H8371	System board
227	7025/F40	93H8652	System board
227	7025/F50	41L5106	I/O board
227	7025/F80	43L5269	System board
227	7026/6H0 7026/6H1 7026/6M1	41L5660 41L5661	Primary I/O drawer backplane Secondary I/O drawer backplane

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
227	7026/B80	00P1859	I/O board
227	7026/H10	93H8652	System board
227	7026/H50	41L5106	I/O board
227	7026/H70	08L0617	I/O board
227	7026/H80 7026/M80	41L5660 41L5661	Primary I/O drawer backplane Secondary I/O drawer backplane
227	7028/6C1 7028/6E1	09P2420	System Board
227	7040/61D	11P2623	I/O Planar
227	7043/140	93H7142 93H7143 93H6023 93H9334	166 MHz System board 200 MHz System board 233 MHz System board 332 MHz System board
227	7043/150	07L8446	375 MHz System board
227	7043/240	11H7516	System board
227	7043/260	08L0633	I/O board
227	7043/270	41L6013	I/O board
227	7044/170	41L5721 09P0037	System board, class A System board, class B
227	7044/270	41L6013	I/O board
227	7046/B50	41L5912	375 MHz System board
227	7317/F3L	93H8371	System board
227	9076 SMP Thin/Wide Node	41L6138	I/O planar
227	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz)
227	9076/ Power3 SMP High Node	11K0571	NIO Planar
227	9076/ Power3 RIO Drawer	05N5005	RIO Planar (expansion unit)
240			Token-ring network problem
241			Ethernet network problem
251		8529214 8185219	Cables, parallel printer
252		40H6328	Standard 9-pin to 25-pin converter cable
253			Cable, Multiprotocol, EIA-422A, (customer-provided)
254		71F0165	Cable, 4-Port Multiprotocol EIA-232, V.24
256		6339098	Cable, token-ring, 10 ft. (3.04 m)

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
257		71F0162	Cable, 4-Port Multiprotocol, V.35
258		40F9897	4-Port Multiprotocol cable
259		6323741	Cable, async EIA-232D, V.24
260		71F0164	Cable, 4-Port Multiprotocol, X.21
261		1749352	RS/232 Interposer
262		00F5524	8-Port Multiport Interface Cable
263		12H1204	Terminal cable, EIA-232
266		59F3432	RJ-45 to DB-25 Converter Cable
267		81F8570	Cable assembly, 4-port Multiprotocol jumper
271		07F3151 53F3926	Cable, X.25 attachment cable, X.21 (3 m) Cable, X.25 attachment cable, X.21 (6 m)
272		07F3160 53F3927	Cable, X.25 attachment cable, V.24 (3 m) Cable, X.25 attachment cable, V.24 (6 m)
273		07F3171 53F3928	Cable, X.25 attachment cable, V.35 (3 m) Cable, X.25 attachment cable, V.35 (6 m)
276		31F4221	Cable, SCSI controller cable
277	7017/S70	93H2455 07L7005 93H2485 52G4291 06H6036 52G4233 73H3142	Internal SCSI Signal Cable problem SCSI Cable Media Bay to SCSI slot 2 I35 SCSI Cable, slot 9 to Redrive Card SCSI Cable, I35 SCSI Card to Card SCSI Cable, SCSI-2 to SE/SE SCSI Redrive Card (0.6 m) SCSI Cable, SCSI-2 to SE/SE SCSI Redrive Card (1.0 m) SCSI Cable, SCSI-2 to SE/SE SCSI Redrive Card (2.5 m) SCSI Cable, SCSI-2 to Bulkhead Note: Consult the 7017/S70 Service Guide before ordering replacement cables.
277	7017/S7A	93H2455 06H6876	SCSI Cable Media Bay to SCSI Adapter SCSI Card to Backplane Note: Consult the 7017/S7A Service Guide before ordering replacement cables.
277	7017/S80 7017/S85	93H2455 06H6876	SCSI Cable Media Bay to SCSI Adapter SCSI Card to Backplane Note: Consult the 7017/S80 or 7017/S85 Service Guide before ordering replacement cables.
277	7024	12H1169	Cable, Internal SCSI, 7-drop
277	7025/6F0 7025/6F1	04N4265	Internal SCSI cable
277	7025/F30	73H3596	Cable, Internal SCSI, 7-drop
277	7025/F40	93H3490	Cable, Internal SCSI, 7-drop

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
277	7025/F50	73H3596	Cable, Internal SCSI, 7-drop
277	7025/F80	04N4265	Internal SCSI cable
277	7026/6H0 7026/6H1	41L5519	I/O drawer internal SCSI cable
277	7026/6M1	31F4223	I/O drawer internal SCSI cable
277	7026/B80	21P3951	Cable, internal SCSI
277	7026/H10	73H3596	Cable, Internal SCSI, 7-drop
277	7026/H50	93H9613 52G4291 52G4233 06H6876	Cable, Internal SCSI, 4-drop Cable, SCSI-2 Cable, SCSI Cable, SCSI
277	7026/H70	93H9613 52G4291 52G4233 06H6876	Internal SCSI Signal Cable problem Cable, Internal SCSI, 4-drop Cable, SCSI-2 Cable, SCSI Cable, SCSI
277	7026/H80	41L5519	I/O drawer internal SCSI cable
277	7026/M80	31F4223	I/O drawer internal SCSI cable
277	7028/6C1 7028/6E1	21P6655	SCSI Cable
277	7043/140 7043/150	73H0435	Cable, Internal SCSI, 4-drop
277	7040	11P2349 11P2350	SCSI Cable for Media Subsystems Front Component SCSI Cable for Media Subsystems Rear Component
277	7043/240	40H7572	Cable, Internal SCSI, 4-drop
277	7043/240	93H6151	Ultra SCSI Cable assembly (optional)
277	7043/260 7043/270	97H9322 01K6497	Cable, Internal SCSI, 4-drop Cable, Internal SCSI Pigtail
277	7044/170	41L6178	Cable, Internal SCSI, 7-drop
277	7044/270	97H9322 01K6497	Cable, Internal SCSI, 4-drop Cable, Internal SCSI Pigtail
277	7046/B50	24L2667	Cable, internal SCSI
277	7236 MediaStreamer	93H6435 93H6629	SCSI Cable SCSI ID Cable
277	7317/F3L	93H8972	Cable Internal SCSI, 3-drop
277			Generic SCSI Cable (external) Note: For FRU part number refer to the system unit's service guide. If the cable is after market refer to it's service documentation.

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
277	9076 SMP Thin/Wide Node	08J6105 11J5177 08J6111	Cable, Internal SCSI, 2-drop Cable, Internal SCSI, 4-drop Alternate DASD Cabling
277	9076/ Power3 SMP Thin/Wide Node	08J6105 11J5177 08J6111	Cable, Internal SCSI, 2-drop Cable, Internal SCSI, 4-drop Alternate DASD Cabling
279			PTC resistor has been tripped Note: Refer to the PTC Tripping section in "SCSI-2 Single-Ended Adapter PTC Failure Isolation Procedure" on page 4 of this manual.
282	7017/S70	97H7696	System Backplane Assembly
282	7017/S7A	97H7696	System Backplane Assembly
282	7017/S80 7017/S85	23L7598	System Backplane Assembly
282	7025/6F0 7025/6F1 7025/F80	04N4555	SCSI backplane
282	7026/6H0 7026/6H1 7026/H80	43L5274	CEC drawer backplane
282	7026/M80	04N3023	CEC drawer backplane
282	7026/6M1	04N3524	CEC drawer backplane
282	7040/681	11P3046	System Backplane
287	7017/S70	93H8714	I/O Drawer 3/4 Power Supply
287	7017/S7A	08L1336	I/O Drawer power supply
287	7017/S80 7017/S85	08L1336	I/O Drawer power supply
287	7026/6H0 7026/6H1 7026/6M1 7026/H80 7026/M80	11K0812	I/O drawer power supply
287	7040/61D	11P3582	I/O Drawer DCA
287	9076/ Power3 RIO Drawer	12K0446 31L8752	Power Supply Supervisor Card
289	7017/S70	07L7178	I/O Drawer 1/4 Power Supply
289	7017/S7A	08L1336	I/O Drawer Power supply
289	7017/S80 7017/S85	08L1336	I/O Drawer Power supply

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
289	7026/6H0 7026/6H1 7026/6M1 7026/H80 7026/M80	11K0812	I/O drawer power supply
289	7040/61D	11P3582	I/O Drawer DCA
289	9076/ Power3 RIO Drawer	12K0446 31L8752	Power Card Supervisor Card
292	7017/S70	94H1268	Host - PCI Bridge problem I/O planar
292	7017/S7A	08L0103	I/O planar
292	7017/S80 7017/S85	08L1438	I/O planar
292	7024/E20	40H6616 03N3989	CPU card (100 MHz) CPU card (233 MHz)
292	7024/E30	73H3614 93H2431 03N3989	CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
292	7025/6F0 7025/6F1	43L5269	System board
292	7025/F30	73H3614 93H2431 03N3989	CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
292	7025/F40	11H7517 41L6111	CPU card (166 MHz) CPU card (233 MHz)
292	7025/F50	41L5106	I/O board
292	7025/F80	43L5269	System board
292	7026/6H0 7026/6H1 7026/6M1	04N6228	RIO adapter
292	7026/B80	00P1859	I/O board
292	7026/H10	11H7517	CPU card (166 MHz)
292	7026/H50	41L5106	I/O board
292	7026/H70	08L0617	Host - PCI Bridge problem I/O planar
292	7026/H80	04N6228	RIO adapter
292	7026/M80	04N3687	CEC RIO adapter
292	7040/61D	11P2623	I/O Planar
292	7028/6C1 7028/6E1	09P2420	System Board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
292	7043/140	93H7142 93H7143 93H6023 93H9334	166 MHz System board 200 MHz System board 233 MHz System board 332 MHz System board
292	7043/150	41L5912	375 MHz System board
292	7043/240	11H7517 41L6111	166 MHz Processor and Cache Card 233 MHz Processor and Cache Card
292	7043/260	41L5511	I/O board
292	7043/270	41L6013	I/O board
292	7044/170	41L5721 09P0037	System board, class A System board, class B
292	7044/270	41L6013	I/O board
292	7046/B50	41L5912	375 MHz System board
292	7317/F3L	73H3614 93H2431 03N3989	CPU card (133 MHz) CPU card (166 MHz) CPU card (233 MHz)
292	9076 SMP Thin/Wide Node	07L9718 41L6138 93H3316	CPU chassis system board CPU chassis I/O planar I/O chassis connection card
292	9076/ Power3 SMP Thin/Wide Node	08L1303 08L0988 03N2866 03N3368	CPU chassis, system board (200 MHz) CPU chassis, system board (375 MHz) CPU chassis, I/O planar (200 MHz) CPU chassis, I/O planar (375 Mhz)
293			PCI - PCI Bridge problem Note: If the type/model and FRU information is not listed here, refer to FFC 221..
294			MPIC Interrupt Controller problem Note: If the type/model and FRU information is not listed here, refer to FFC 221..
295			PCI - ISA Bridge problem Note: If the type/model and FRU information is not listed here, refer to FFC 221..
296			PCI Device or Adapter problem The FRU can only be identified by it's location code reported by diagnostics.
297		93H6055	Texture memory module for the GXT800P Graphics Adapter
298		93H6057	Base memory module for the GXT800P Graphics Adapter
2C3		93H5263 93H5264 93H5265 93H5267	2-Port Multiprotocol adapter cable V.24 2-Port Multiprotocol adapter cable V.35 2-Port Multiprotocol adapter cable V.36 2-Port Multiprotocol adapter cable X.21

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2C4	7017/S70	97H7696	System Bus Connector problem System Backplane Assembly
2C4	7017/S7A	97H7696	System Backplane Assembly
2C4	7017/S80 7017/S85	23L7598	System Backplane Assembly
2C4	7025/6F0 7025/6F1	43L5269	System board
2C4	7025/F50	07L9718	System board
2C4	7025/F80	43L5269	System board
2C4	7026/6H0 7026/6H1	43L5274	CEC drawer backplane
2C4	7026/6M1	04N3524	CEC drawer backplane
2C4	7026/B80	08L988	System board
2C4	7026/H50	07L9718	System board
2C4	7026/H70	08L0988	System board
2C4	7026/H80	43L5274	CEC drawer backplane
2C4	7026/M80	04N3023	CEC drawer backplane
2C4	7028/6C1 7028/6E1	09P2420	System Board
2C4	7040/681	11P3046	System Backplane
2C4	7043/260	08L1303	System board
2C4	7043/270	08L0988	System board
2C4	7044/170	41L5721 09P0037	System board, class A System board, class B
2C4	7044/270	08L0988	System board
2C4	9076 SMP Thin/Wide Node	07L9718	CPU chassis system board
2C4	9076/ Power3 SMP Thin/Wide Node	08L1303 08L0988	CPU chassis, system board (200 MHz) CPU chassis, system board (375 MHz)
2C5	7017/S70	19H0289	32 MB Memory Module problem 32 MB Memory Module
2C5	7025/F50	07L7729	32 MB Memory Module
2C5	7026/H50	07L7729	32 MB Memory Module
2C5	7026/H70	07L7729	32 MB Memory Module
2C5	7043/260	42H2773	32 MB Memory Module
2C6	7025/6F0 7025/6F1	07L7729 93H4702 07L9030 10L5417 09P0335	32 MB memory module 128 MB memory module 256 MB memory module 512 MB memory module 1 GB memory module

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2C6	7025/F50	93H4702	128 MB Memory Module problem 128 MB Memory Module
2C6	7025/F80	07L7729 93H4702 07L9030 10L5417	32 MB memory module 128 MB memory module 256 MB memory module 512 MB memory module
2C6	7026/6H0 7026/6H1	07L7729 93H4702 07L9030 10L5417 09P0335	32 MB memory module 128 MB memory module 256 MB memory module 512 MB memory module 1 GB memory module
2C6	7026/6M1	07L7729 93H4702 07L9030 10L5417 09P0466	32 MB memory module 128 MB memory module 256 MB memory module 512 MB memory module 1 GB Memory module
2C6	7026/B80	93H4702	128 MB Memory Module
2C6	7026/H50	93H4702	128 MB Memory Module
2C6	7026/H70	93H4702	128 MB Memory Module
2C6	7026/H80	07L7729 93H4702 07L9030 10L5417	32 MB memory module 128 MB memory module 256 MB memory module 512 MB memory module
2C6	7026/M80	07L7729 93H4702 07L9030 10L5417	32 MB memory module 128 MB memory module 256 MB memory module 512 MB memory module
2C6	7028/6C1 7028/6E1	93H4702 09P0550 09P0491	128 MB DIMM 256 MB DIMM 512 MB DIMM
2C6	7043/260 7043/270	93H4702	128 MB Memory Module
2C6	7044/170	93H4702 07L9030 09P0550 07L9758 09P0491	128 MB Memory Module 256 MB Memory Module 256 MB Memory Module 512 MB Memory Module 512 MB Memory Module
2C6	7044/270	93H4702	128 MB Memory Module
2C6	9076/ Power3 SMP High Node	93H4702	128 MB Memory Module
2C7	7017/S70	93H7689 93H7688	Base Memory Card problem Base Memory Card (LH) Base Memory Card (RH)

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2C7	7025/6F0 7025/6F1	04N4808 44H8167	Base memory card Memory card filler
2C7	7025/F50	93H2641	Base Memory Card
2C7	7025/F80	04N4808 44H8167	Base memory card Memory card filler
2C7	7026/6H0 7026/6H1	04N4808 44H8167	Memory riser card Memory card filler
2C7	7026/6M1	04N3033	Memory riser card
2C7	7026/B80	07L7065	Base Memory Card
2C7	7026/H50	93H2641	Base Memory Card
2C7	7026/H70	07L7065	Base Memory Card
2C7	7026/H80	04N4808 44H8167	Memory riser card Memory card filler
2C7	7026/M80	04N3033	Memory riser card
2C7	7043/260 7043/270	07L7065	Base Memory Card
2C7	7044/270	07L7065	Base Memory Card
2C7	9076 SMP Thin/Wide Node	93H2641	Base Memory Card
2C7	9076/ Power3 SMP Thin/Wide Node	07L7065	Base Memory Card
2C7	9076/ Power3 SMP High Node	07L6608	Base Memory Card
2C8	7017/S70	94H1268	Mezzanine Bus problem I/O planar
2C8	7017/S7A	08L0103	I/O planar
2C8	7017/S80 7017/S85	08L1438	I/O planar
2C8	7025/6F0 7025/6F1	43L5269	System board
2C8	7025/F50	07L9718 41L5106	System board I/O board
2C8	7025/F80	43L5269	System board
2C8	7026/6H0 7026/6H1 7026/6M1	04N6228 41L5560 41L5561	RIO adapter Primary I/O backplane Secondary I/O backplane
2C8	7026/B80	08L0988 00P1859	System board I/O board
2C8	7026/H50	07L9718 1L5106	System board I/O board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2C8	7026/H70	08L0988 03N2797	System board I/O board
2C8	7026/H80	04N6228 41L5560 41L5561	RIO adapter Primary I/O backplane Secondary I/O backplane
2C8	7026/M80	04N6228 41L5560 41L5561	RIO adapter Primary I/O backplane Secondary I/O backplane
2C8	7028/6C1 7028/6E1	09P2420	System Board
2C8	7040/61D	11P2623	I/O Planar
2C8	7043/260	08L1303 03N2443	System board I/O board
2C8	7043/270	08L0988 41L6013	System board I/O board
2C8	7044/270	08L0988 41L6013	System board I/O board
2C8	9076 SMP Thin/Wide Node	07L9718 41L6138 93H3316 31L7766	CPU chassis system board CPU chassis I/O planar I/O Chassis connection card SP Switch MX
2C8	9076/ Power3 SMP Thin/Wide Node	08L1303 08L0988 03N2866 03N3368 07L8531 31L7766	CPU chassis, system board (200 MHz) CPU chassis, system board (375 MHz) CPU chassis, I/O planar (200 MHz) CPU chassis, I/O planar (375 MHz) I/O Expansion Card SP Switch MX
2C9	7017/S70	94H1268	PCI Bus problem I/O planar
2C9	7017/S7A	08L0103	I/O planar
2C9	7017/S80 7017/S85	08L1438	I/O planar
2C9	7024/E20 7024/E30	93H4808	System board
2C9	7025/6F0 7025/6F1	43L5269	System board
2C9	7025/F30	93H8371	System board
2C9	7025/F40	93H8652	System board
2C9	7025/F50	41L5106	I/O board
2C9	7025/F80	43L5269	System board
2C9	7026/6H0 7026/6H1 7026/6M1	04N6228 41L5560 41L5561	RIO adapter Primary I/O backplane Secondary I/O backplane

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2C9	7026/B80	00P1859	I/O board
2C9	7026/H10	93H8652	System board
2C9	7026/H50	41L5106	I/O board
2C9	7026/H70	03N2797	PCI Bus problem I/O board
2C9	7026/H80	04N6228 41L5560 41L5561	RIO adapter Primary I/O backplane Secondary I/O backplane
2C9	7026/M80	04N6228 41L5560 41L5561	RIO adapter Primary I/O backplane Secondary I/O backplane
2C9	7028/6C1 7028/6E1	09P2420	System Board
2C9	7040/61D	11P2623	I/O Planar
2C9	7043/140	93H7142 93H7143 93H6023 93H9334	166 MHz System board 200 MHz System board 233 MHz System board 332 MHz System board
2C9	7043/150	41L5912	375 MHz System board
2C9	7043/240	11H7516	166 MHz System board
2C9	7043/260	03N2443	I/O board
2C9	7043/270	41L6013	I/O board
2C9	7044/170	41L5721 09P0037	System board, class A System board, class B
2C9	7044/270	41L6013	I/O board
2C9	7046/B50	41L5912	375 MHz System board
2C9	7317/F3L	93H8371	System board
2C9	9076 SMP Thin/Wide Node	41L6138 93H3316 93H3202	I/O planar Expansion I/O connection card PCI Expansion I/O planar Note: Suspect planar associated with the failing device.
2C9	9076/ Power3 SMP Thin/Wide Node	08L1303 08L0988 03N2866 03N3368 07L8531 31L7766	CPU chassis, system board (200 MHz) CPU chassis, system board (375 MHz) CPU chassis, I/O planar (200 MHz) CPU chassis, I/O planar (375 MHz) I/O Expansion Card SP Switch MX
2C9	9076/ Power3 SMP High Node	11K0571	NIO Planar
2C9	9076/ Power3 RIO Drawer	05N5005	RIO Planar

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2CC		09P0335	1 GB Memory Module
2CD		07L9030 09P0550	256 MB Memory Module 256 MB Memory Module
2CE		11K9758 09P0491	512 MB Memory Module 512 MB Memory Module
2D0			ISA adapter or integrated device
2D1	7025/F50	41L5106	ISA Bus problem I/O board
2D1	7026/B80	00P1859	I/O board
2D1	7026/H50	41L5106	I/O board
2D1	7026/H70	30N2797	I/O board
2D1	7028/6C1 7028/6E1	09P2420	System Board
2D1	7043/260	03N2443	I/O board
2D1	7043/270	41L6013	I/O board
2D1	7044/170	41L5721 09P0037	System board, class A System board, class B
2D1	7044/270	41L6013	I/O board
2D2	7017/S70	94H1268	Mezzanine Bus Arbiter problem I/O planar
2D2	7017/S7A	08L0103	I/O planar
2D2	7017/S80 7017/S85	08L1438	I/O planar
2D2	7025/6F0 7025/6F1	43L5269	System board
2D2	7025/F50	41L5106	I/O board
2D2	7025/F80	43L5269	System board
2D2	7026/6H0 7026/6H1 7026/6M1	04N6228 41L5560 41L5561	RIO adapter Primary I/O backplane Secondary I/O backplane
2D2	7026/B80	00P1859	I/O board
2D2	7026/H50	41L5106	I/O board
2D2	7026/H70	03N2797	I/O board
2D2	7026/H80	04N6228 41L5560 41L5561	RIO adapter Primary I/O backplane Secondary I/O backplane
2D2	7026/M80	04N6228 41L5560 41L5561	RIO adapter Primary I/O backplane Secondary I/O backplane

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2D2	7028/6C1 7028/6E1	09P2420	System Board
2D2	7040/61D	11P2623	I/O Planar
2D2	7043/260	03N2443	I/O board
2D2	7043/270	41L6013	I/O board
2D2	7044/170	41L5721 09P0037	System board, class A System board, class B
2D2	7044/270	41L6013	I/O board
2D2	9076 SMP Thin/Wide Node	07L9718	CPU chassis system board
2D2	9076/ Power3 SMP Thin/Wide Node	08L1303 08L0988	System board (200 MHz) System board (375 MHz)
2D2	9076/ Power3 SMP High Node	11K0571	NIO planar
2D2	9076/ Power3 RIO Drawer	05N5005	RIO planar
2D3	7017/S70	03N3523	Service processor card problem Service Processor Card
2D3	7017/S7A	03N3523	Service Processor Card
2D3	7017/S80 7017/S85	11K0301	Service Processor Card
2D3	7025/6F0 7025/6F1	43L5269	System board
2D3	7025/F50	08L0442	Service Processor Note: The Service Processor can fail diagnostics if the firmware levels between the system and service processor are not compatible. Check the levels of the system and service processor firmware. Compatible levels are listed in update package documentation and in RETAIN. If the firmware levels are compatible and the problem persists, then replace the Service Processor card.
2D3	7025/F80	43L5269	System board
2D3	7026/6H0 7026/6H1 7026/6M1	41L5560	Primary I/O drawer backplane
2D3	7026/B80	00P1859	I/O board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2D3	7026/H50	08L0449	Service Processor Note: The Service Processor can fail diagnostics if the firmware levels between the system and service processor are not compatible. Check the levels of the system and service processor firmware. Compatible levels are listed in update package documentation and in RETAIN. If the firmware levels are compatible and the problem persists, then replace the Service Processor card.
2D3	7026/H70	03N2797	I/O board
2D3	7026/H80 7026/M80	41L5560	Primary I/O drawer backplane
2D3	7028/6C1 7028/6E1	09P2420	System Board
2D3	7040/681	09P2435	Primary I/O Book
2D3	7043/260	03N2443	I/O board
2D3	7043/270	41L6013	I/O board
2D3	7044/170	41L5721 09P0037	System board, class A System board, class B
2D3	7044/270	41L6013	I/O board
2D3	9076 SMP Thin/Wide Node	08L0442	Service Processor Note: The Service Processor can fail diagnostics if the firmware levels between the system and service processor are not compatible. Check the levels of the system and service processor firmware. Compatible levels are listed in update package documentation and in RETAIN. If the firmware levels are compatible and the problem persists, then replace the Service Processor card.
2D3	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz)
2D3	9076/ Power3 SMP High Node	11K0571	NIO planar
2D4	7017/S70	94H1268	System/SP Interface Logic problem I/O planar
2D4	7017/S7A	08L0103	I/O planar
2D4	7017/S80 7017/S85	08L1438	I/O planar
2D4	7025/6F0 7025/6F1	43L5269	System board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2D4	7025/F50	41L5106	I/O board
2D4	7025/F80	43L5269	System board
2D4	7026/6H0 7026/6H1 7026/6M1	41L5560	Primary I/O drawer backplane
2D4	7026/B80	00P1859	I/O board
2D4	7026/H50	41L5106	I/O board
2D4	7026/H70	03N2797	I/O board
2D4	7026/H80 7026/M80	41L5560	Primary I/O drawer backplane
2D4	7028/6C1 7028/6E1	09P2420	System Board
2D4	7040/681	09P2435	Primary I/O Book
2D4	7043/260	08L0633	I/O board
2D4	7043/270	41L6013	I/O board
2D4	7044/170	41L5721 09P0037	System board, class A System board, class B
2D4	7044/270	41L6013	I/O board
2D4	9076 SMP Thin/Wide Node	41L6138	I/O planar
2D4	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) /O planar (375 Mhz)
2D4	9076/ Power3 SMP High Node	11K0571	NIO planar
2D5	7017/S70	03N3523 94H1268	SP Primary I/O bus problem Service Processor Card I/O planar
2D5	7017/S7A	03N3523 08L0103	Service Processor Card I/O planar
2D5	7017/S80 7017/S85	11K0301 08L1438	Service Processor Card I/O planar
2D5	7025/6F0 7025/6F1	43L5269	System board
2D5	7025/F50	41L5106 08L0442	I/O board Service Processor
2D5	7025/F80	43L5269	System board
2D5	7026/6H0 7026/6H1 7026/6M1	41L5560	Primary I/O drawer backplane
2D5	7026/B80	00P1859	I/O board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2D5	7026/H50	41L5106 08L0449	I/O board Service Processor
2D5	7026/H70	03N2797	I/O board
2D5	7026/H80 7026/M80	41L5560	Primary I/O drawer backplane
2D5	7028/6C1 7028/6E1	09P2420	System Board
2D5	7040/681	09P2435	Primary I/O Book
2D5	7043/260	03N2443	I/O board
2D5	7043/270	41L6013	I/O board
2D5	7044/170	41L5721 09P0037	System board, class A System board, class B
2D5	7044/270	41L6013	I/O board
2D5	9076 SMP Thin/Wide Node	41L6138	I/O planar
2D5	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz)
2D5	9076/ Power3 SMP High Node	11K0571 03N4184 07L6608	NIO planar System planar Base memory card
2D6	7017/S70	03N3523	Service Processor Card
2D6	7017/S7A	03N3523	Service Processor Card
2D6	7017/S80 7017/S85	11K0301	Service Processor Card
2D6	7025/6F0 7025/6F1	43L5269	System board
2D6	7025/F80	43L5269	System board
2D6	7026/6H0 7026/6H1 7026/6M1 7026/H80 7026/M80	41L5560	Primary I/O drawer backplane
2D6	7040/681	09P2435	Primary I/O Book
2D6	9076/ Power3 SMP High Node	11K0571	NIO planar
2D7	7025/6F0 7025/6F1	43L5269	System board
2D7	7026/6M1	24L1089	Primary I/O Operator Panel
2D7	7025/F50	93H2922	VPD Module problem Operator Panel
2D7	7025/F80	43L5269	System board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2D7	7026/B80	00P1859	I/O board
2D7	7026/H50	93H2922	Operator Panel
2D7	7026/H70	41L6006	Operator Panel
2D7	7026/H70 7026/M80	24L1089	Primary I/O Operator Panel
2D7	7028/6C1 7028/6E1	09P2420	System Board
2D7	7040/681	24L1089	Operator Panel
2D7	7043/260	03N2443	I/O board
2D7	7043/270	41L6013	I/O board
2D7	7044/170	41L5721 09P0037	System board, class A System board, class B
2D7	7044/270	41L6013	I/O board
2D7	9076 SMP Thin/Wide Node	41L6138	I/O planar
2D7	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz)
2D7	9076/ Power3 SMP High Node	11K0571	NIO planar (VPD module)
2D9	7017/S70	94H1268	Power Controller problem I/O planar
2D9	7017/S7A	08L0103	I/O planar
2D9	7017/S80 7017/S85	08L1438	I/O planar
2D9	7025/6F0 7025/6F1	43L5269	System board
2D9	7025/F50	41L5106	I/O board
2D9	7025/F80	43L5269	System board
2D9	7026/6H0 7026/6H1 7026/6M1	41L5560 41L5561	Primary I/O drawer backplane Secondary I/O drawer backplane
2D9	7026/B80	00P1859	I/O board
2D9	7026/H50	41L5106	I/O board
2D9	7026/H70	03N2797	I/O board
2D9	7026/H80 7026/M80	41L5560 41L5561	Primary I/O drawer backplane Secondary I/O drawer backplane
2D9	7028/6C1 7028/6E1	09P2420	System Board
2D9	7040/61R	11P1598	Bulk Power Controller (BPC)
2D9	7043/260	03N2443	I/O board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2D9	7043/270	41L6013	I/O board
2D9	7044/170	41L5721 09P0037	System board, class A System board, class B
2D9	7044/270	41L6013	I/O board
2D9	9076 SMP Thin/Wide Node	41L6138	I/O planar
2D9	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz)
2D9	9076/ Power3 SMP High Node	11K0571 05N5775	NIO planar Supervisor card
2E0	7017/S70	94H1268	Fan Sensor problem I/O planar
2E0	7017/S7A	93H8686	Fan monitoring control card
2E0	7017/S80 7017/S85	93H8686 97H9465	Fan monitoring control card Power Distribution Board
2E0	7025/6F0 7025/6F1	43L5269	System board
2E0	7025/F50	41L5106	I/O board
2E0	7025/F80	43L5269	System board
2E0	7026/6H0 7026/6H1 7026/6M1	11K1107 41L5415 41L5560	SPCN fan control card Power distribution board Primary I/O backplane
2E0	7026/B80	00P1859	I/O board
2E0	7026/H50	93H8686	Fan Monitoring Control Card
2E0	7026/H70	93H8686	Fan Monitoring Control Card
2E0	7026/H80 7026/M80	11K1107 41L5415 41L5560	SPCN fan control card Power distribution board Primary I/O backplane
2E0	7028/6C1 7028/6E1	09P2420	System Board
2E0	7040/61R 7040/681	11P1598 09P2435	Bulk Power Controller (BPC) Primary I/O Book
2E0	7043/260	03N0633	I/O board
2E0	7043/270	41L6013	I/O board
2E0	7044/170	41L5721 09P0037	System board, class A System board, class B
2E0	7044/270	41L6013	I/O board
2E0	9076 SMP Thin/Wide Node	41L6138	I/O planar
2E0	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz)

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2E0	9076/ Power3 SMP High Node	12K0451	Fan control card
2E0	9076/ Power3 RIO Drawer	31L8752 05N5005	Supervisor card RIO planar
2E1	7017/S70	94H1268	Thermal Sensor problem I/O planar
2E1	7017/S7A	08L0103	I/O planar
2E1	7017/S80 7017/S85	08L1438	I/O planar
2E1	7024	93H4808	System board
2E1	7025/6F0 7025/6F1	43L5269	System board
2E1	7025/F30	93H8371	System board
2E1	7025/F40	93H8652	System board
2E1	7025/F50	41L5106	I/O board
2E1	7025/F80	43L5269	System board
2E1	7026/6H0 7026/6H1 7026/6M1	41L5560 41L5561 24L1089 24L0955	Primary I/O backplane Secondary I/O backplane Primary I/O drawer operator panel Secondary I/O drawer operator panel
2E1	7026/B80	00P1859	I/O board
2E1	7026/H10	93H8652	System board
2E1	7026/H50	41L5106	I/O board
2E1	7026/H70	03N2797	I/O board
2E1	7026/H80 7026/M80	41L5560 41L5561 24L1089 24L0955	Primary I/O backplane Secondary I/O backplane Primary I/O drawer operator panel Secondary I/O drawer operator panel
2E1	7028/6C1 7028/6E1	09P2420	System Board
2E1	7040/61D	11P2623	I/O Planar
2E1	7043/140	93H7142 93H7143 93H6023 93H9334	Thermal Sensor problem 166 MHz System board 200 MHz System board 233 MHz System board 332 MHz System board
2E1	7043/150	41L5912	375 MHz system board
2E1	7043/240	11H7516	System board
2E1	7043/260	03N2443	I/O board
2E1	7043/270	41L6013	I/O board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2E1	7044/170	41L5721 09P0037	System board, class A System board, class B
2E1	7044/270	41L6013	I/O board
2E1	7046/B50	41L5912	375 MHz System board
2E1	7317/F3L	93H8371	System board
2E1	9076 SMP Thin/Wide Node	41L6138	I/O planar
2E1	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz)
2E1	9076/ Power3 SMP High Node	03N4184 11K0571	System planar (inlet) NIO planar (outlet)
2E1	9076/ Power3 RIO Drawer	12K0446 05N5005 31L8752	Power Supply RIO planar (midrange) Supervisor card
2E2	7017/S70	94H1268	Voltage Sensor problem I/O planar
2E2	7017/S7A	08L0103	I/O planar
2E2	7017/S80 7017/S85	08L1438	I/O planar
2E2	7025/6F0 7025/6F1	43L5269	System board
2E2	7025/F50	41L5106	I/O board
2E2	7025/F80	43L5269	System board
2E2	7026/6H0 7026/6H1 7026/6M1	41L5415	Power distribution board
2E2	7026/B80	00P1859	I/O board
2E2	7026/H50	41L5106	I/O board
2E2	7026/H70	03N2797	I/O board
2E2	7026/H80 7026/M80	41L5415	Power distribution board
2E1	7028/6C1 7028/6E1	09P2420	System Board
2E2	7040/61D	11P2623	I/O Planar
2E2	7043/260	03N2443	I/O board
2E2	7043/270	41L6013	I/O board
2E2	7044/170	41L5721 09P0037	System board, class A System board, class B
2E2	7044/270	41L6013	I/O board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2E2	9076 SMP Thin/Wide Node	41L6138 46H9165	I/O planar I/O Expansion Interposer Card
2E2	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368 46H9165	I/O planar (200 MHz) I/O planar (375 Mhz) I/O Expansion Interposer Card
2E2	9076/ Power3 SMP High Node	11K0571 03N4184 11K0198	NIO Planar 3.3V, +5V, 5SB, +12V, -12V System Planar 2.5V, 3.3V CPU Card 1.8V, 2.5V
2E2	9076/ Power3 RIO Drawer	05N5005	RIO planar
2E3	7017/S70	03N3523	Serial Port Controller problem Service Processor Card
2E3	7017/S7A	03N3523	Service Processor Card
2E3	7017/S80 7017/S85	11K0301	Service Processor Card
2E3	7025/6F0 7025/6F1	43L5269	System board
2E3	7025/F50	41L5106	I/O board
2E3	7025/F80	43L5269	System board
2E3	7026/6H0 7026/6H1 7026/6M1	41L5560	Primary I/O drawer backplane
2E3	7026/B80	00P1859	I/O board
2E3	7026/H50	41L5106	I/O board
2E3	7026/H70	03N2797	I/O board
2E3	7026/H80 7026/M80	41L5560	Primary I/O drawer backplane
2E3	7028/6C1 7028/6E1	09P2420	System Board
2E3	7040/681	09P2435	Primary I/O Book
2E3	7043/260	03N2443	I/O board
2E3	7043/270	41L6013	I/O board
2E3	7044/170	41L5721 09P0037	System board, class A System board, class B
2E3	7044/270	41L6013	I/O board
2E3	9076 SMP Thin/Wide Node	41L6138 11J4000 11J5197	I/O planar Supervisor card Power/supervisor interposer cable
2E3	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368 11J4000 11J5197	I/O planar (200 MHz) I/O planar (375 MHz) Supervisor card Power/supervisor interposer cable

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2E3	9076/ Power3 SMP High Node	11K0571	NIO planar
2E4	7017/S70	03N3523	JTAG/COP Controller problem Service Processor Card
2E4	7017/S7A	03N3523	Service Processor Card
2E4	7017/S80 7017/S85	11K0301	Service Processor Card
2E4	7025/6F0 7025/6F1	43L5269	System board
2E4	7025/F50	41L5106	I/O board
2E4	7025/F80	43L5269	System board
2E4	7026/6H0 7026/6H1 7026/6M1	41L5560	Primary I/O drawer backplane
2E4	7026/B80	00P1859	I/O board
2E4	7026/H50	41L5106	I/O board
2E4	7026/H70	03N2797	I/O board
2E4	7026/H80 7026/M80	41L5560	Primary I/O drawer backplane
2E4	7028/6C1 7028/6E1	09P2420	System Board
2E4	7040/681	09P2435	Primary I/O Book
2E4	7043/260	03N2443	I/O board
2E4	7043/270	41L6013	I/O board
2E4	7044/170	41L5721 09P0037	System board, class A System board, class B
2E4	7044/270	41L6013	I/O board
2E4	9076 SMP Thin/Wide Node	41L6138	I/O planar
2E4	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz)
2E4	9076/ Power3 SMP High Node	11K0571 03N4184	NIO Planar (JTAG) System Planar
2E6		40H6595	PCI Differential Ultra SCSI Adapter (4-L)
2E6	7017/S80 7017/S85 7040/61D 7043/270 7044/170 7044/270 7046/B50	11K0671	PCI Universal Differential Ultra SCSI Adapter (4-U)

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
2E7			Generic PCI SCSI Adapter
2E8	7025/6F0	04N5353 23L7785 23L7794	1-way processor card (600 MHz) 2-way processor card (667 MHz) 4-way processor card (667 MHz)
2E8	7025/6F1	04N5353 23L7785 23L7794 23L7799	1-way processor card (600 MHz) 2-way processor card (667 MHz) 4-way processor card (667 MHz) 6-way processor card (667 MHz)
2E8	7025/F40	11H7517	166 MHz Processor and Cache card
2E8	7025/F80	04N4765 03P0062 03P0070 03P0085	1-way processor card 2-way processor card 4-way processor card 6-way processor card
2E8	7026/6M1	04N6698 21P6381 21P6383	2-way processor card (500 MHz) 2-way processor card (750 MHz) 4-way processor card (750 MHz)
2E8	7026/B80	09P0399 09P0143 09P0406 09P4478	Processor card (375 Mhz, one-way) Processor card (375 Mhz, two-way, 8 M L2) Processor card (375 Mhz, two-way, 4 M L2) Processor Card (450 Mhz, two-way)
2E8	7026/H10	11H7517	166 MHz Processor and Cache card
2E8	7026/M80	04N6930 04N6931	2-way processor card 4-way processor card
2E8	7028/6C1 7028/6E1	09P2420	System Board
2E8	7040/681	03N3223 03N3228 03N3229 09P3217	1.3 GHz 4-way MCM with VPD Card 1.3 GHz 8-way MCM with VPD Card 1 GHz 4-way MCM with VPD Card 1 GHz 8-way MCM with VPD Card
2E8	7043/240	11H7517 41L6111	166 MHz Processor and Cache card 233 MHz Processor and Cache card
2E8	7043/270 7044/270	11K0171 11K0218	CPU card (375 MHz one-way) CPU card (375 MHz two-way)
301	7017/S70	90H9831	Memory 128 MB Card
301	7017/S7A	90H9831	Memory 128 MB Card
302	7017/S70	90H9834	Memory 256 MB Card
302	7017/S7A	90H9834	Memory 256 MB Card
302	7017/S80 7017/S85	23L7566	Memory 256 MB Card
303	7017/S70	90H9837	512 MB Memory Card

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
303	7017/S7A	90H9837	512 MB Memory Card
303	7017/S80 7017/S85	23L7570	512 MB Memory Card
304	7017/S70	97H6226	1 GB Memory Card
304	7017/S7A	97H6226	1 GB Memory Card
304	7017/S80 7017/S85	23L7577	1 GB Memory Card
305	7017/S7A	97H6244	2 GB Memory Card
305	7017/S80 7017/S85	23L7589	2 GB Memory Card
306	7017/S70	90H9795 21H7643 21H7377	Remote I/O cable (2 meter) Remote I/O cable (6 meter) Remote I/O cable (15 meter)
306	7017/S7A	90H9795 21H7643 21H7377	Remote I/O cable (2 meter) Remote I/O cable (6 meter) Remote I/O cable (15 meter)
306	7017/S80 7017/S85	90H9795 21H7643 21H7377	Remote I/O cable (2 meter) Remote I/O cable (6 meter) Remote I/O cable (15 meter)
306	7026/6H0 7026/6H1 7026/6M1 7026/H80 7026/M80	44L0005 97H7490 04N7014	Remote I/O cable (3 meter) Remote I/O cable (6 meter) Remote I/O cable (15 meter)
306	7040/681	23L3080 44H8873 44H9137	Remote I/O Cable 3-Meter Remote I/O Cable 6-Meter Remote I/O Cable 15-Meter
306	9076/ Power3 SMP High Node	90H9795 21H7377	Remote I/O cable (2 meter) Remote I/O cable (15 meter)
307	7017/S70	94H1268	Expansion Unit Logic problem I/O planar
307	7017/S7A	08L0103	I/O planar
307	7017/S80 7017/S85	08L1438	I/O planar
307	7026/6H0 7026/6H1 7026/6M1 7026/H80 7026/M80	41L5560 41L5561	Primary I/O backplane Secondary I/O backplane
307	7040/61D	11P2623	I/O Planar
308	7017/S70	97H7696	I/O Bridge problem System backplane Assembly
308	7017/S7A	97H7696	System Backplane Assembly

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
308	7017/S80 7017/S85	23L7598	System Backplane Assembly
308	7025/6F0 7025/6F1	43L5269	System board
308	7025/F80	43L5269	System board
308	7026/6H0 7026/6H1	43L5274	CEC backplane
308	7026/6M1	04N3867	CEC RIO adapter card
308	7026/H80	43L5274	CEC backplane
308	7026/M80	04N3867	CEC RIO adapter card
308	7040/681	11P2623	Primary I/O Book
30A		20L7595	4 GB Memory Card
440		25L3101	9.1 GB Ultra SCSI Disk Drive only
440	7046/B50	03N3873	9.1 GB Ultra SCSI Disk Drive and Carrier
441		25L3100	18.2 GB Ultra SCSI Disk Drive only
441	7046/B50	03N3874	18.2 GB Ultra SCSI Disk Drive and Carrier
442		09L3117	9.1 GB Ultra LVD SCSI Disk Drive
443		09L3118	18.2 GB Ultra LVD SCSI Disk Drive
444		41L5235	2-Port Multiprotocol PCI Adapter (ASIC)
447		09P0102	PCI 64-Bit Fibre Channel Adapter
541		19P2042 19P1629	7205-440 40GB TAPE DRIVE 7337-360 40GB TAPE DRIVE
542		19P0708 19P0207	7208-345 60GB TAPE DRIVE 7334-410 60GB TAPE DRIVE
58B		09P4874	9.1 GB 80-pin SCSI Disk Drive
58D		09P4435 09P4437	18.2 GB 80-pin SCSI Disk Drive Note: The FRU part numbers are not interchangeable. Replace FRU part number with identical FRU part number.
59B		09P4445 09P4447	36.4GB 80-pin SCSI Disk Drive Note: The FRU part numbers are not interchangeable. Replace FRU part number with identical FRU part number.
601		07N3675 03N3873 31L8768	9.1 GB LVD 68-pin SCSI Disk Drive 9.1 GB LVD 68-pin Drive/Carrier (U2) 9.1 GB LVD 68-pin Drive/Carrier (SP)
60B		07N3776 09P4429	18.2 GB LVD 68-pin SCSI Disk Drive Note: The FRU part numbers are not interchangeable. Replace FRU part number with identical FRU part number.

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
61B	7043/7044	07N3780 09P4443	36.4 GB LVD 80-pin SCSI Disk Drive Note: The FRU part numbers are not interchangeable. Replace FRU part number with identical FRU part number.
61B	7028/6C1/7028/6E1	09P3826	36.4 GB 80-pin SCSI Disk Drive
61D		00P1519	36.4 GB LVD 80-pin Drive/Carrier
61E		00P1511	18.2 GB LVD 68-pin Drive/Carrier
621		03N3301	9.1 GB LVD 80-pin Drive/Carrier (U2)
623		07N3674 03N3874 31L8770	18.2 GB LVD 68-pin SCSI Disk Drive 18.2 GB LVD 68-pin Drive/Carrier (U2) 18.2 GB LVD 68-pin Drive/Carrier (SP)
624		03N3302	18.2 GB LVD 80-pin Drive/Carrier (U2)
62D		07N3778 09P4868	9.1 GB LVD 68-pin SCSI Disk Drive Note: The FRU part numbers are not interchangeable. Replace FRU part number with identical FRU part number.
62E		00P1508	9.1 GB LVD 68-pin Drive/Carrier
637		03N3606	Dual Channel PCI-2 Ultra2 SCSI Adapter
636		97H7782	TURBOWAYS 622 Mbps PCI MMF ATM Adapter
638		22L0027	4.5 GB 16 bit Ultra SCSI SE Disk Drive
639		34L2232 08L1155 06H9389 06H7691 1147429	9.1 GB Ultra SCSI Disk Drive (68-pin) Spacer Tray ID cable Screw
63A			See 62D.
63B		07N3784 09P4872	9.1 GB LVD 80-pin SCSI Disk Drive Note: The FRU part numbers are not interchangeable. Replace FRU part number with identical FRU part number.
63C			See 60B.
63D	7043/7044	07N3782 09P4433	18.2 GB LVD 80-pin SCSI Disk Drive Note: The FRU part numbers are not interchangeable. Replace FRU part number with identical FRU part number.
63D	7028/6C1/7028/6E1	09P3823	18.2 GB LVD 80-pin SCSI Disk Drive
63E		07N3774 09P4439	36.4 GB LVD 68-pin SCSI Disk Drive Note: The FRU part numbers are not interchangeable. Replace FRU part number with identical FRU part number.
63F			See 61B.

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
640		34L2233 44H4644 44H4266	9.1 GB Ultra SCSI Disk Drive (80-pin) Tray Screw
643		09L3116	18.2 GB Ultra LVD SCSI Disk Drive
644		09L3339	36.2 GB Ultra LVD SCSI Disk Drive
646		03N3554	High-Speed Token-Ring PCI Adapter
64A			See 62E.
64B		00P1517	9.1 GB LVD 80-pin Drive/Carrier
64C			See 61E.
64D		00P1520	18.2 GB LVD 80-pin Drive/Carrier
64E		00P1514	36.4 GB LVD 68-pin Drive/Carrier
64F			See 61D.
650			Unknown disk drive. Note: This FFC indicates that the disk drive could not properly configure. Refer to the disk drive FRU part number.
653		59H6923	18.2 GB Ultra-SCSI 16-bit disk drive
655		11K0313	GXT130P PCI Graphics Adapter
657		07L7495	GXT2000P 3D Graphics Adapter PCI
662	7025/6F0 7025/6F1	43L5269	System board
662	7025/F80	43L5269	System board
662	7026/B80	00P1859	I/O board
662	7026/H50	41L5106	I/O board, Integrated Ultra2 SCSI
662	7026/H70	03N2797	I/O board, Integrated Ultra2 SCSI
662	7028/6C1 7028/6E1	09P2420	System Board
662	7043/260	08L0633	I/O board, Integrated Ultra2 SCSI
662	7043/270	41L6013	I/O board
662	7044/170	41L5721 09P0037	System board, class A System board, class B
662	7044/270	41L6013	I/O board
663		87H3734 47L8851 09J8829	IBM ARTIC960RxD PCI Adapter (base card) IBM ARTIC960RxF Adapter IBM ARTIC960 Quad T1/E1 Adapter (daughter card)
664		04N2967	SCSI-2 CD-ROM Drive
667		01K7396	PCI 3-Channel Ultra2 SCSI RAID Adapter

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
669		41L6396	PCI Gigabit Ethernet Adapter
66C		00P1690	10/100/1000 Base-T Ethernet PCI Adapter
66D		37L6892	PCI 4-Channel Ultra3 SCSI RAID Adapter (Base card only)
66E		04N5967	4.7 GB DVD-RAM drive, Black Bezel
66E		04N5968	4.7 GB DVD-RAM drive, White Bezel
674		31L7567 39H8084	ESCON Channel PCI Adapter Assembly IBM ARTIC960Rx PCI Base Adapter
675		87H3427	IBM ARTIC960Hx PCI Base Adapter
677		09P1173	PCI 32-Bit Fibre Channel Adapter
678		59H3879	12 GB 4 mm SCSI Tape Drive
679		83H7105	4.5 GB SCSI Disk Drive
67B		10J0593	PCI Cryptographic Coprocessor Card
67E		09P3209	GXT135P PCI Graphics Adapter
681		59H6926	9.1 GB Ultra-SCSI 16-bit drive
682		93H8055	20X (MAX) SCSI-2 CD-ROM Drive
683			2105 Model B09
684		93H6563 93H7091	Enhanced Remote Asynchronous Node, 16-Port RS-422 Power supply, remote async node
685		93H2534	GXT120P 2D Video Accelerator Adapter PCI
686		93H6541	8-Port Asynchronous EIA-232/RS-422 Adapter
687		93H6545	128-Port Asynchronous Controller
689	7317/F3L	83H7105 93H9005	4.5 GB 16 bit Ultra SCSI SE Disk Drive 4.5 GB 16 bit Ultra SCSI SE Disk Drive assembly
68C		19P0802	20 GB 4-mm Tape Drive
68E		00P2368	POWER GXT6000P Graphics Adapter
690		76H2698	9.1 GB 16 bit Ultra SCSI SE Disk Drive
691		93H5513	TURBOWAYS 25 ATM PCI Adapter
692		59H3121 59H3569 59H3569 59H3570 59H3570	7205-311 35 GB DLT Tape Drive 3447-105 35 GB DLT Tape Drive 3447-106 35 GB DLT Tape Drive 7337-305 35 GB DLT Tape Drive 7337-306 35 GB DLT Tape Drive
693		93H5839	Eicon ISDN DIVA PRO 2.0 PCI S/T Adapter for PowerPC System
697		21H3890	TURBOWAYS 155 PCI MMF ATM Adapter (1 MB)

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
698		21H7977	TURBOWAYS 155 PCI UTP ATM Adapter (1 MB)
699		94H0385	3Com Fast EtherLink XL PCI 10/100 Ethernet for PowerPC Microprocessor-based Systems
69b		21P4106	64-bit/66MHz PCI ATM MMF Adapter
69d		21P4112	64-bit/66MHz PCI ATM 155 UTP Adapter
6CC		59H6259 21H8734 05J6446 09P0618 03N4139 12K0576 09P0620 09P0622 09P0624	4.5 GB SSA drive (DCHC/DGHC) in a blue-handled carrier 9.1 GB 1.6-inch SSA drive (DCHC) in a blue-handled carrier 9.1 GB 1.0-inch SSA drive (DGHC) in a blue-handled carrier 9.1 GB 10 K RPM SSA drive (DRVC) in a blue-handle carrier 9.1 GB 10 K RPM SSA drive (DRVC) in a F80 carrier 9.1 GB 10 K RPM SSA drive (DRVC) in a SP carrier 18.2 GB 10 K RPM SSA drive (DRVC) in a F80 carrier 18.2 GB 10 K RPM SSA drive (DRVC) in a SP carrier 36.4 GB 10 K RPM SSA drive (DRVC) in a SP carrier
700		74G6995	1.1 GB 8-bit SE Disk Drive Assembly
701		74G7006 06H8631 06H7691 27H0380	1.1 GB 16-bit SE Disk Drive Assembly Tray Assembly 4 Position ID Cable Electronics Card Assembly
702		74G7009 74G7015	1.1 GB 16-bit DE Disk Drive Assembly Electronics Card Assembly
703		74G6996 74G6998	2.2 GB 8-bit SE Disk Drive Electronics card assembly
704		74G8824 74G7007 06H8631 06H7691 27H0380	2.2 GB 16-bit SE Disk Drive Assembly 2.2 GB 16-bit SE Disk Drive Unit Tray Assembly 4 Position ID Cable Electronics Card Assembly
705		74G7010 74G7015	2.2 GB 16-bit DE Disk Drive Assembly Electronics Card Assembly
706		74G7008 74G8825 06H8631 06H7691 27H0380	4.5 GB 16-bit SE Disk Drive 4.5 GB 16-bit SE Disk Drive Assembly Tray Assembly 4 Position ID Cable Electronics Card Assembly

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
707		74G7011 74G7015	4.5 GB 16-bit DE Disk Drive Assembly Electronics Card Assembly
709	7024 7025 7026/B80 7026/H50 7043/140 7043/240 7043/270 7044/270 7317/F3L	73H3384	128-Port ISA Adapter
711			Unknown adapter
713		87H3427	IBM ARTIC960Hx PCI Base Adapter
721			Unknown SCSI device
722			Unknown disk drive
723			Unknown CD-ROM drive
724			Unknown tape drive
725	Model P50	96G2130 96G2699	Display, 15", Northern Hemisphere Display, 15", Southern Hemisphere
725	Model P70	96G3020 96G2150	Display, 17", Northern Hemisphere Display, 17", Southern Hemisphere
725	Model P72	21L4570 21L4571 61H0215 61H0216	Display, 17", Northern (White) Display, 17", Northern (Black) Display, 17", Southern (White) Display, 17", Southern (Black)
725	Model P92	61H0412 61H0223 61H0224 61H0225	Display, 19", Northern (White) Display, 19", Northern (Black) Display, 19", Southern (White) Display, 19", Southern (Black)
725	Model P200	96G2701 96G3049	Display, 20", Northern Hemisphere Display, 20", Southern Hemisphere
725	Model P202	60H0233 60H0234 60H0235 60H0236	Display, 21", Northern (White) Display, 21", Northern (Black) Display, 21", Southern (White) Display, 21", Southern (Black)
725			Unknown display adapter type
726			Unknown input device
727			Unknown async device
728			Unknown parallel device
730			Unknown diskette drive
733		59H3161	140 GB 8 mm Tape Library
734		73H1513	Quad Speed SCSI-2 600 MB CD-ROM Drive

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
736			Quiet Touch Keyboard and Speaker cable Note: The part number is printed on the underside of the keyboard.
741		52G0124 06H8631	1.08 GB SCSI-2 Disk Drive (1-inch high) 8-bit Tray Assembly
742		11H8128	T2 PCI Ethernet Adapter
745	7332/005 7332/110		16 GB DDS-2 Tape Cartridge Auto Loader 48 GB DDS-3 Tape Cartridge Auto Loader Note: Service documentation for this device supply the FRU part numbers.
746	7017/S70 7017/S7A 7017/S80 7017/S85	73H3562	PCI SCSI SE Adapter problem SCSI-2 Fast/Wide PCI Adapter
746	7024	73H3562 93H4808	SCSI-2 Fast/Wide PCI Adapter System board, Integrated SCSI
746	7025/F30	73H3562 93H8371	SCSI-2 Fast/Wide PCI Adapter System board, Integrated SCSI
746	7025/F40	73H3562 93H8652	SCSI-2 Fast/Wide PCI Adapter System board, Integrated SCSI
746	7025/F50	73H3562 07L6594	SCSI-2 Fast/Wide PCI Adapter I/O board, Integrated SCSI
746	7026/B80 7026/H10	73H3562 93H8652	SCSI-2 Fast/Wide PCI Adapter System board, Integrated SCSI
746	7026/H50	73H3562 07L6594	SCSI-2 Fast/Wide PCI Adapter I/O board, Integrated SCSI
746	7043/140	73H3562 93H7142 93H7143 93H6023 93H9334	PCI SCSI SE Adapter problem SCSI-2 Fast/Wide PCI Adapter System board 166 MHz, Integrated SCSI System board 200 MHz, Integrated SCSI System board 233 MHz, Integrated SCSI System board 332 MHz, Integrated SCSI
746	7043/150	07L8446	375 MHz System board
746	7043/240	73H3562 11H7516	SCSI-2 Fast/Wide PCI Adapter System board, Integrated SCSI
746	7043/260	73H3562 08L0633	SCSI-2 Fast/Wide PCI Adapter I/O board
746	7043/270	41L6013 73H3562	I/O board SCSI-2 Fast/Wide PCI Adapter
746	7044/170	41L5721 09P0037 73H3562	System board, class A, Integrated SCSI System board, class B, Integrated SCSI SCSI-2 Fast/Wide PCI Adapter

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
746	7044/270	41L6013 73H3562	I/O board SCSI-2 Fast/Wide PCI Adapter
746	7046/B50	41L5912	375 MHz System board
746	9076 SMP Thin/Wide Node	73H3562 41L6138	SCSI-2 Fast/Wide PCI Adapter I/O board, Integrated SCSI
746	9076/ Power3 SMP Thin/Wide Node	73H3562 03N2866 03N3368	SCSI-2 Fast/Wide PCI Adapter I/O planar (200 MHz), integrated SCSI I/O planar (375 Mhz), integrated SCSI
747		93H8407	SCSI-2 Differential Fast/Wide PCI Adapter
749	7331/205		7331 Model 205 8 mm Tape Library Note: For FRU numbers, refer to the service documentation for this device.
74A	7024	93H4808	Integrated SCSI-2 F/W SE problem System board, Integrated SCSI
74A	7025/F30	93H8371	System board, Integrated SCSI
74A	7025/F40	93H8652	System board, Integrated SCSI
74A	7025/F50	41L5106	I/O board, Integrated SCSI
74A	7026/B80	00P1859 73H3384	I/O board SCSI-2 Fast/Wide PCI Adapter
74A	7026/H10	93H8652	System board, Integrated SCSI
74A	7026/H50	41L5106	I/O board, Integrated SCSI
74A	7026/H70	03N2797	I/O board, Integrated SCSI
74A	7043/140	73H3562 93H7142 93H7143 93H6023 93H9334	PCI SCSI SE Adapter problem SCSI-2 Fast/Wide PCI Adapter System board 166 MHz, Integrated SCSI System board 200 MHz, Integrated SCSI System board 233 MHz, Integrated SCSI System board 332 MHz, Integrated SCSI
74A	7043/150	07L8446	375 MHz System board
74A	7043/240	73H3562 11H7516	SCSI-2 Fast/Wide PCI Adapter System board, Integrated SCSI
74A	7043/260	73H3562 08L0633	SCSI-2 Fast/Wide PCI Adapter I/O board
74A	7043/270	41L6013 73H3562	I/O board SCSI-2 Fast/Wide PCI Adapter
74A	7044/170	41L5721 00P1859 73H3562	System board, class A, Integrated SCSI System board, class B, Integrated SCSI SCSI-2 Fast/Wide PCI Adapter
74A	7044/270	41L6013 73H3562	I/O board SCSI-2 Fast/Wide PCI Adapter
74A	7046/B50	41L5912	375 MHz System board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
74A	9076 SMP Thin/Wide Node	73H3562 41L6138	SCSI-2 Fast/Wide PCI Adapter I/O board, Integrated SCSI
74A	9076/ Power3 SMP Thin/Wide Node	73H3562 03N2866 03N3368	SCSI-2 Fast/Wide PCI Adapter I/O planar (200 MHz), integrated SCSI I/O planar (375 Mhz), integrated SCSI
750		04H8098	Auto LANStreamer® Token-Ring PCI Adapter
751		08L1319 06H6036 52G4233 40H7351	SCSI 32-bit SE F/W RAID Adapter SCSI RAID Cable (1.0 m) SCSI RAID Cable (2.5 m) SCSI RAID Cable (6.0 m)
757		87G4858	SCSI 13 GB 1/4-Inch Tape Drive
763		31L7847 46H9688 77G0818	SP Switch MX Adapter Wrap Plug Terminator
764		08L0398 46H9688 77G0818	SP System Attachment Adapter Wrap Plug Terminator
772		83H7105	4.5 GB 16 bit SCSI F/W Disk Drive
773		76H2698	9.1 GB 16 bit SCSI F/W Disk Drive
774	7204/339	27H1677	9.1 GB External SCSI DE Disk Drive
775		93H5107	MVP Power Graphics Adapter
776		93H6594	PCI Token-Ring Adapter
777		94H0823	10/100 Base-TX Ethernet PCI Adapter
778		24L0030	POWER GXT3000P 3D Graphics Adapter PCI
77b		03N3952 09P1421	4-Port 10/100 Ethernet Tx PCI Adapter 4-Port 10/100 Ethernet Tx PCI Adapter (new chip)
780		40H1937	X.25 Interface Co-Processor Adapter
781		84F7540 33F8967	Co-Processor Multiport Adapter, Model 2 Daughter Co-Processor Multiport Adapter, Model 2 (Base) Note: Replace the daughter card before replacing the base card.
783		76H0473 76H0474 41H8714	24/48 GB DDS-2 4 mm Tape Autoloader (vertical orientation) 24/48 GB DDS-2 4 mm Tape Autoloader (horizontal orientation) Tape Magazine
784		93H7151 93H7152	2.1 GB 8-bit SCSI-2 Disk Drive 2.1 GB 16-bit SCSI-2 Disk Drive
785		40H6632	8-port ISA Async EIA-232/RS-422 Adapter

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
786		93H6264	GXT250P High Performance Graphics Adapter
786		93H6267	GXT255P High Performance Graphics Adapter
787		94H0028	GXT500P Graphics Adapter
788		07L9009	Ultimedia® Video Capture Adapter
789	7209/003	50G0212	External 2.6 GB Rewritable Optical Disk Drive
78B		00P2429	POWER GXT4000P Graphics Adapter
78D		03N4169	GXT300P 2D Graphics Adapter
790			Multi-bus Integrated Ethernet Adapter problem Note: If the type/model and FRU information is not listed here, refer to FFC 221..
791		74G8824 74G7007 06H8631 06H7691 27H0380	2.2 GB 16-bit SE Disk Drive Assembly 2.2 GB 16-bit SE Disk Drive unit Tray Assembly 4 Position ID Cable Electronics card Assembly
792		83H7105	4.5 GB 16-bit SE Disk Drive Assembly
793		76H2698	9.1 GB 16-bit SE Disk Drive Assembly
795		73H3405 73H3401 73H3413	FDDI LPSAS Adapter (single fiber) FDDI LPDAS Adapter (dual fiber) FDDI UPSAS Adapter (single copper)
799		93H6086 93H3662	2-Port Multiprotocol PCI Adapter 2-Port Multiprotocol PCI Wrap Plug
7C0	7024	93H4808	CPU/System Interface System board
7C0	7025/F30	93H8371	System board
7C0	7025/F40	93H8652	System board
7C0	7025/F50	07L9718	System board
7C0	7026/B80	08L0988	System board
7C0	7026/H10	93H8652	System board
7C0	7026/H50	07L9718	System board
7C0	7026/H70	08L0988	System board
7C0	7028/6C1 7028/6E1	09P2420	System Board
7C0	7043/140	93H7142 93H7143 93H6023 93H9334	166 MHz System board 200 MHz System board 233 MHz System board 332 MHz System board
7C0	7043/150	41L5912	375 MHz System board
7C0	7043/240	11H7516	166 MHz System board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
7C0	7043/260	08L1303	CPU/System Interface System board
7C0	7043/270	08L0988	System board
7C0	7044/170	41L5721 09P0037	System board, class A System board, class B
7C0	7044/270	08L0988	System board
7C0	7046/B50	41L5912	375 MHz System board
7C0	7317/F3L	93H8371	System board
7C0	9076 SMP Thin/Wide Node	07L9718	System board
7C0	9076/ Power3 SMP Thin/Wide Node	08L1303 08L0988	System board (200 MHz) System board (375 MHz)
7C1	7024	93H4808	Business Audio Subsystem problem System board
7C1	7025/F30	93H8371	System board
7C1	7025/F40	93H8652	System board
7C1	7025/F50	07L9718	System board
7C1	7026/B80	00P1859 04N6150	I/O board Operator panel assembly
7C1	7026/H10	93H8652	System board
7C1	7026/H50	07L9718	System board
7C1	7026/H70	08L0988	System board
7C1	7028/6C1 7028/6E1	09P2420 21P6820	System Board Operator Panel
7C1	7043/140	93H7142 93H7143 93H6023 93H9334	166 MHz System board 200 MHz System board 233 MHz System board 332 MHz System board
7C1	7043/150	41L5912	375 MHz System board
7C1	7043/240	11H7516	166 MHz System board
7C1	7043/260	08L1303	System board
7C1	7043/270	41L6013 07L7234	I/O board Operator panel
7C1	7044/170	41L5721 09P0037	System board, class A System board, class B
7C1	7044/270	41L6013 07L7234	I/O board Operator panel
7C1	7046/B50	41L5912	375 MHz System board
7C1	7317/F3L	93H8371	System board
804		73H2601	8X Speed SCSI-2 CD-ROM Drive

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
806		07L7113	GXT800P Graphics Adapter
807			SCSI Device Enclosure
80c			SSA Adapter problem refer to the <i>SSA Adapters: User's Guide and Maintenance Information</i> .
811			Processor Complex being identified.
812			Common Standard Adapter Logic problem Note: For type/model and FRU information refer to FFC 227.
814	7025/6F0 7025/6F1	43L5269	System board
814	7025/F80	43L5269	System board
814	7026/6H0 7026/6H1 7026/6M1 7026/H80 7026/M80	41L5560	Primary drawer I/O backplane
814	7017/S70	03N3523	Service Processor Card problem Service Processor Card Note: Unless listed, refer to FFC 221 for type/model and FRU information.
814	7017/S7A	03N3523	Service Processor Card Note: Unless listed, refer to FFC 221 for type/model and FRU information.
814	7017/S80 7017/S85	11K0301	Service Processor Card Note: Unless listed, refer to FFC 221 for type/model and FRU information.
814	7040/681	09P2435	Primary I/O Book
814	9076/ Power3 SMP High Node	11K0571	NIO Planar
815			Floating Point Processor problem Note: For type/model and FRU information refer to FFC 210.
815	9076/ Power3 SMP High Node		Note: If the type/model and FRU information is not listed here, refer to FFC 221..
816			Operator Panel Logic problem Note: If the type/model and FRU information is not listed here, refer to FFC 221..
816	7040/681	09P2435	Primary I/O Book
817	7025/6F0 7025/6F1	43L5269	System board
817	7025/F80	43L5269	System board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
817	7026/6H0 7026/6H1 7026/6M1 7026/H80 7026/M80	41L5560	Primary drawer I/O backplane
817	7017/S70	03N3523	Time of Day Logic problem Service Processor Card Note: Unless listed refer to FFC 221 for type/model and FRU information.
817	7017/S7A	03N3523	Service Processor Card Note: Unless listed refer to FFC 221 for type/model and FRU information.
817	7017/S80 7017/S85	11K0301	Service Processor Card Note: Unless listed refer to FFC 221 for type/model and FRU information.
817	7040/681	09P2435	Primary I/O Book
817	9076/ Power3 SMP High Node	11K0571	NIO Planar
820			Interprocessor related testing problem Note: For type/model and FRU information, if not listed here, refer to FFC 221.
821			Standard Keyboard Adapter problem Note: If the type/model and FRU information is not listed here, refer to FFC 221..
823			Standard Mouse Adapter problem Note: For type/model and FRU information, if not listed here, refer to FFC 221.
823	9076/ Power3 SMP High Node	11K0571	NIO Planar
824			Standard Tablet Adapter problem Note: For type/model and FRU information, if not listed here, refer to FFC 221.
824	9076/ Power3 SMP High Node	11K0571	NIO Planar
825	9076/ Power3 SMP High Node	11K0571	NIO Planar
826			Serial Port 1 Adapter problem Note: For type/model and FRU information, if not listed here, refer to FFC 221.
826	7040/681	09P2435	Primary I/O Book
826	9076 SMP Thin/Wide Node	11J4000 11J5197 41L6138	Supervisor Card Power/supervisor interposer cable I/O planar

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
826	9076/ Power3 SMP Thin/Wide Node	11J4000 11J6147 03N2866 03N3368	Supervisor Card Power/supervisor interposer cable I/O planar (200 MHz) I/O planar (375 MHz)
826	9076/ Power3 SMP High Node	11K0571	NIO Planar
827			Built-in Parallel Port Adapter problem Note: For type/model and FRU information, if not listed here, refer to FFC 221.
827	9076/ Power3 SMP High Node	11K0571	NIO Planar
828			Standard Diskette Adapter problem Note: For type/model and FRU information, if not listed here, refer to FFC 221.
828	7040/681	09P2435	Primary I/O Book
828	9076/ Power3 SMP High Node	11K0571	NIO Planar
82C		11H6095	S15 Graphics PCI Adapter
830		11H5969	8-Port ISA adapter
831			Serial Port 2 Adapter problem Note: If the type/model and FRU information is not listed here, refer to FFC 221..
831	9076/ Power3 SMP High Node	11K0571	NIO Planar
836		73H3384	128-Port Async Controller
837		88G3842 93H6549 40H2589 93H7091	Remote Async Node, 16-port EIA-232 Enhanced Remote Async Node, 16-port EIA-232 Rack Mounted Node, 16-port EIA-232 Power Supply, Remote Async Node
840		93H3809	PCI Single-Ended Ultra SCSI Adapter Note: If you receive this FFC but are working with Integrated Ultra SCSI see FFC 84A.
844	7135		RAIDiant Array SCSI Subsystem Controller Note: Refer to the 7135 documentation.
845	7135		RAIDiant Array SCSI 2.0 GB Disk Drive Note: Refer to the 7135 documentation.
846	7135		RAIDiant Array SCSI 1.3 GB Disk Drive Note: Refer to the 7135 documentation.
84A	7026/B80	00P1859	I/O board
84A	7026/H10	93H8652	Integrated Ultra SCSI problem System board, Integrated Ultra SCSI
84A	7026/H50	41L5106	I/O board, Integrated Ultra SCSI

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
84A	7026/H70	03N3484	I/O board, Integrated Ultra SCSI
84A	7028/6C1 7028/6E1	09P2420	System Board
84A	7043/140	93H7142 93H7143 93H6023 93H9334	System board 166 MHz, Integrated Ultra SCSI System board 200 MHz, Integrated Ultra SCSI System board 233 MHz, Integrated Ultra SCSI System board 332 MHz, Integrated Ultra SCSI
84A	7043/150	41L5912	375 MHz System board
84A	7043/240	11H7516	System board, Integrated Ultra SCSI
84A	7043/260	03N2443	I/O board
84A	7043/270	41L6013	I/O board
84A	7044/170	41L5721 09P0037	System board, class A System board, class B
84A	7044/270	41L6013	I/O board
84A	7046/B50	41L5912	375 MHz System board
84A	7317/F3L	93H8371	System board, Integrated Ultra SCSI
84A	9076/ Power3 SMP High Node	11K0571	NIO Planar
868			Integrated SCSI I/O Controller problem Note: If the type/model and FRU information is not listed here, refer to FFC 221..
868	9076/ Power3 SMP High Node	11K0571	NIO Planar
887	7025/F40	93H8652	Integrated Ethernet Adapter problem System board, Integrated Ethernet Adapter
887	7025/F50	41L5106	I/O board, Integrated Ethernet Adapter
887	7026/B80	00P1859	I/O board
887	7026/H10	93H8652	System board, Integrated Ethernet Adapter
887	7026/H50	41L5106	I/O board, Integrated Ethernet Adapter
887	7026/H70	03N3484	I/O board, Integrated Ethernet Adapter
887	7028/6C1 7028/6E1	09P2420	System Board

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
887	7043/140	93H7142	System board 166 MHz, Integrated Ethernet Adapter
		93H7143	System board 200 MHz, Integrated Ethernet Adapter
		93H6023	System board 233 MHz, Integrated Ethernet Adapter
		93H9334	System board 332 MHz, Integrated Ethernet Adapter
887	7043/150	41L5912	375 MHz System board
887	7043/240	11H7516	System board, Integrated Ethernet Adapter
887	7043/260	03N2443	I/O board
887	7043/270	41L6013	I/O board
887	7044/170	41L5721	System board, class A
		09P0037	System board, class B
887	7044/270	41L6013	I/O board
887	7046/B50	41L5912	375 MHz System board
887	9076 SMP Thin/Wide Node	41L6138	I/O planar
887	9076/ Power3 SMP Thin/Wide Node	03N2866	I/O planar (200 MHz)
		03N3368	I/O planar (375 Mhz)
887	9076/ Power3 SMP High Node	11K0571	NIO Planar
891			Vendor SCSI Adapter
892			Vendor Display Adapter
893			Vendor LAN Adapter
894			Vendor Async Communications Adapter
899			Atape
89c		73H1513	600 MB Double Speed Tray-Loading CD-ROM
			Note: The 2x CD-ROM drive is no longer available. A 4x CD-ROM drive will be shipped as a replacement.
900		93H7983	GXT110P Graphics Adapter
901			Vendor SCSI device
902			Vendor Display
903			Vendor Async device
904			Vendor Parallel device
905			Other Vendor device

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
908	7025/F40 7025/F50 7043/140 7043/150 7043/240 7043/260 7043/270 7044/170 7044/270	93H2399	POWER GXT1000 Graphics Accelerator Attachment Adapter
912		86F0119 86F0125	2.0 GB SCSI-2 DE Disk Drive Differential frame electronics Note: Check RETAIN for frame electronics availability. Exchange the complete drive assembly whenever possible. Exchange the logic card only when the data on the disk must be saved.
913		6374682 6374683	1 GB DE Disk Drive, half-height Differential frame electronics Note: Check RETAIN for frame electronics availability. Exchange the complete drive assembly whenever possible. Exchange the logic card only when the data on the disk must be saved.
914		16G8492	5 GB 8 mm SCSI DE Tape Drive
915		59H3481	4/8 GB 4 mm Tape Drive
917		86F0767	2.0 GB DE F/W Disk Drive Note: If the disk drive is in a 7134 drawer replace with FRU P/N 67G3022.
918		86F0766	2.0 GB 16-bit SCSI SE F/W Disk Drive
921		82G3278 1392090 1394609	101 Key Keyboard problem Keyboard U.S. English Keyboard Cost Reduced English Keyboard cable
921	7040	93H8120	101 Keyboard U.S. English
922		8131596	102 Key Keyboard problem Keyboard, Arabic
922	7040	93H8125	Keyboard, Arabic (ID 238)
922	7040	93H8127	Keyboard, Belgium-French (ID 120)
922		1391414	Keyboard, Belgium-Dutch
922		1391526	Keyboard, Belgium-French
922	7040	93H8126	Keyboard, Belgium-French (ID 120)
922		64F7707	Keyboard, Brazilian Portuguese
922	7040	93H8124	Keyboard, Brazilian Portuguese (ID 275)
922		1399583	Keyboard, Bulgarian

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
922	7040	93H8128	Keyboard, Bulgarian (ID 442)
922	7040	93H8155	Keyboard, Chinese/US (ID 467)
922		1399570	Keyboard, Czechoslovakian
922	7040	93H8129	Keyboard, Czechoslovakian (ID 243)
922		1391407	Keyboard, Danish
922	7040	93H8130	Keyboard, Danish (ID 159)
922	7040	93H8130	Keyboard, Danish (ID 159)
922	7040	93H8131	Keyboard, Dutch (ID 143)
922		1391511	Keyboard, Dutch/Netherlands
922		1391411	Keyboard, Finnish/Swedish
922		1391402	Keyboard, French
922	7040	93H8132	Keyboard, French(ID 189)
922		82G3279	Keyboard, French-Canadian
922	7040	93H8121 93H8122	Keyboard, French-Canadian (ID 058) Keyboard, French-Canadian (ID 445)
922	7040	93H8133	Keyboard, German (ID 129)
922		1391403	Keyboard, German/Austrian
922		1399046	Keyboard, Greek
922	7040	93H8134	Keyboard, Greek (ID 129)
922		1391408	Keyboard, Hebrew
922	7040	93H8135	Keyboard, Hebrew (ID 212)
922		1399581	Keyboard, Hungarian
922	7040	93H8136	Keyboard, Hungarian (ID 208)
922		1391407	102 Key Keyboard problem Keyboard, Icelandic
922	7040	93H8137	Keyboard, Icelandic (ID 197)
922		1393395	Keyboard, Italian
922	7040	93H8138	Keyboard, Italian (ID 142)
922	7040	93H8156	Keyboard, Korea (ID 413)
922		82G3292	Keyboard, Latin American (Spanish)
922	7040	93H8152	Keyboard, Latvia (ID 234)
922		1391409	Keyboard, Norwegian
922	7040	93H8139	Keyboard, Norwegian (ID 155)
922		1391410	Keyboard, Portuguese
922		1399580	Keyboard, Polish
922	7040	93H8140	Keyboard, Polish (ID 214)

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
922	7040	93H8141	Keyboard, Portuguese (ID 163)
922		1399582	Keyboard, Romania
922	7040	93H8142	Keyboard, Romania (ID 446)
922		1399579	Russian
922	7040	93H8143	Keyboard, Russian (ID 443)
922	7040	93H8144	Keyboard, Serbian (ID 118)
922		1399571	Keyboard, Slovak
922	7040	93H8145	Keyboard, Slovak (ID 245)
922		1391405	Keyboard, Spanish
922	7040	93H8123 93H8146	Keyboard, Spanish (ID 171) Keyboard, Spanish (ID 172)
922	7040	93H8147	Keyboard, Sweden/Finland (ID 153)
922		1395881	Keyboard, Swiss-French
922	7040	93H8148	Keyboard, Swiss French/German (ID 150)
922		1395882	Keyboard, Swiss-German
922	7040	93H8157	Keyboard, Thailand (ID 191)
922		1393286	Keyboard, Turkish (ID 179)
922	7040	93H8149	Keyboard, Turkish (ID 179)
922		8125409	Keyboard, Turkish (ID 440)
922	7040	93H8150	Keyboard, Turkish (ID 440)
922		1391406	Keyboard, U.K. English
922	7040	93H8151	Keyboard, Turkish (ID 166)
922	7040	93H8153	Keyboard, US English ISO9995 (ID 103P)
922		06H3048	Keyboard, U.S. OEM
922	7040	93H8154	Keyboard, 106 Japan (ID 194)
922		1394609	Keyboard cable
923		1392090 79F0167 66G0507 06H5286 02G7353	106 keys International Keyboard problem Keyboard, Chinese Keyboard, Japanese-Kanji Japanese, Enhanced Keyboard, Korean Keyboard, Taiwanese
925		93H9113	3-Button Mouse
925	7040	76H5084	3-Button Mouse
926		6247450 74F3130	Tablet, 5083 Model 21 Tablet, 6093 Model 11
927		6247452 74F3140 93H7714	Tablet, 5083 Model 22 Tablet, 6093 Model 12 Tablet, 6093 Model 21

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
929		39F8227 39F8302	Dials, 6094 Model 10 Cable, Serial Attachment, Power
930		39F8226 39F8302	Lighted Program Function Keyboard (LPFK), 6094 Model 20 Cable, Serial Attachment, Power
935	7024, 7025, 7043, 7317, 7026, 7040/681 7044, 7017/S70, 7017/S7A, 7017/S80, 7017/S85	93F2361 76H4091 07L7814	1.44 MB 3.5-inch White Diskette Drive 1.44 MB 3.5-inch Black Diskette Drive 1.44 MB 3.5-inch Diskette Drive
938			Serial HIPPI PCI Adapter Notes: 1. Use the number printed above the bar code to order this part. 2. The FRU part number of the wrap plug used with this adapter is 21H3547.
946			Standard Serial Port 3 Adapter problem Note: For type/model and FRU information, if not listed here, refer to FFC 221.
946	7040/681	09P2435	Primary I/O Book
946	9076/ Power3 SMP High Node	11K0571	NIO Planar
950			Unknown SCSI device is missing.
951		53F3429 6373521	670 MB SCSI Disk Drive Logic Card Note: Exchange the complete drive whenever possible. If extreme data saving measures are necessary, exchange the logic card.
952		53F3427 6373521	355 MB SCSI Disk Drive Logic Card Note: Exchange the complete drive whenever possible. If extreme data saving measures are necessary, exchange the logic card.
953		93X0961 93X0901	320 MB SCSI Disk Drive Logic Card and Frame assembly Note: Exchange the complete drive whenever possible. Exchange the logic card only when the data on the disk must be saved.

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
954		00G1948 73F8994	400 MB SCSI Disk Drive Logic Card and Frame assembly Note: Exchange the complete drive whenever possible. Exchange the logic card only when the data on the disk must be saved.
955		45G9502	857 MB SCSI Disk Drive
956		6373521	355/670 MB Logic Card.
960		52G0061 31G9756	1.37 GB SCSI Disk Drive Assembly Logic card Note: Logic card stocking is limited, special ordering is required. Check RETAIN for logic card availability. Exchange the complete drive assembly when possible. Exchange the logic card when the data on the disk must be saved.
962	3161		Use device documentation.
963	3163		Use device documentation.
964		59H2839 59H4120 59H2835 59H2842	20 GB 8 mm SE SCSI Tape Drive (internal,white) 20 GB 8 mm SE SCSI Tape Drive (internal, black) 20 GB 8 mm Diff SCSI Tape Drive (external/white) 400 GB 8 mm Diff Tape Autoloader (No LCD in Bezel/white)
966		93H2136	Media Streamer Audio/Video Decoder Adapter
968		55F9902 55F9909	1 GB SCSI SE Disk Drive Single-Ended Frame Electronics Note: Check RETAIN for frame electronics availability. Exchange the complete drive assembly when possible. Exchange the logic card when the data on the disk must be saved.
970	9348		1/2-inch 9-Track Tape Drive Use device documentation
971		16G8423	150 MB 1/4-Inch Tape Drive
972		16G8421	2.3 GB 8 mm Tape Drive
973			Other SCSI Tape Drive
974		88G3929	CD-ROM Drive (Type A or Type B bezel)
980	4216		Use the device documentation
981		51G8237	540 MB SCSI-2 Single-Ended Disk Drive
982	3852		Use the device documentation
983	4201		Use the device documentation

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
984		45G9467	1 GB 8-bit Disk Drive
986		36G0454	2.4 GB SCSI Disk Drive
987		73H1513	600 MB CD-ROM-2 Disk Drive
989		43G1842	200 MB SCSI Disk Drive
990		86F0118	2.0 GB SCSI-2 SE Disk Drive
991		46G2700	525 MB 1/4-Inch SCSI Tape Drive
992	5202		Use the device documentation
993	5204		Use the device documentation
994		59H3159	5/10 GB 8 mm Internal Tape Drive
995		21H5155	1.2 GB 1/4-inch Cartridge Tape Drive
998		8191193	2.0 GB 4 mm SCSI Tape Drive
999	3514 7137		Disk Array Subsystems Note: Refer to the 3514 or 7137 documentation
B08		02G7431	Ethernet 10 Base Twisted-pair Transceiver
B09		02G7437	Ethernet/ISO 8802.3 Transceiver (formerly IEEE 802.3)
B10			System board PTC (thermal fuse) Note: If a thermal fuse has opened, it should reset within ten minutes after turning the power off. If the thermal fuse does not reset, a faulty device may be drawing excessive power through the fuse.
B31			Unknown keyboard type
B3A			Unidentifiable backplane tied to a SCSI RAID adapter
B54		43G0936 43G0937	128-Port Async Controller Cable, 0.2 m (9 in.) 128-Port Async Controller Cable, 4.6 m (15 ft.)
B69		33F8967	Co-Processor Multiport Adapter, Model 2 (0 MB)
B71		53F2612	8-Port EIA-232-D Multiport, Model 2 Interface Card
B72		53F2615	8-Port EIA-422-A Multiport, Model 2 Interface Card
B73		72F0164	6-Port V.35 Multiport, Model 2 Interface Card
B74		04G5500	6-Port V.21 Multiport, Model 2 Interface Card
B77		53F2662	Co-Processor 1 MB Memory Module
B81		40F9897	Co-Processor Multiport Interface Cable

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
B82		71F0162	Co-Processor Multiport V.35 Cable
B83		71F0164	Co-Processor Multiport X.21 Cable
B88			<p>Generic SCSI I/O Controller</p> <p>Notes:</p> <ol style="list-style-type: none"> 1. If the failing FRU for this FFC is PCI(x), where x is the PCI bus number, 0, 1, ..., refer to FFC 221. 2. Use the location code to identify the failing FRU. Determine if the failing FRU is integrated on the system board. If the failing FRU is integrated use FFC 221. If the failing FRU is not integrated replace the FRU identified by its description that is shown with the location code for SCSI and SCSI-2 adapter. Choose the FFC for the appropriate SCSI I/O controller. 3. Check the SCSI controller fuse or PTC resistor before exchanging the system board. Refer to Service Hints in "SCSI-2 Single-Ended Adapter PTC Failure Isolation Procedure" on page 4. 4. Check that the SCSI disable jumper is in the enabled position. 5. Check the FRU number of the installed external terminator: Low density - 51G7736 High density - 51G7737
C11		36G4280	<p>2.4 GB SCSI Disk Drive Field Repair Assembly</p> <p>Note: The field repair assembly includes one disk drive, the electronics planar, and the 5-1/4 inch form factor "cage." The remaining "good" drive is removed from the failed disk drive assembly and installed in the field repair assembly to create a complete dual-disk drive assembly. If saving data is critical, as a last resort try installing the "bad" drive in place of one of the two "good" drives in the now-complete field repair assembly. If the "bad" drive operates satisfactorily, the problem was probably in the electronics planar.</p>
C22		94H0779	RJ-45 to DB25 Converter Cable Kit
C24		54G3384 55G3384	<p>Fiber Optic Cables for PCI Fibre Channel Adapter</p> <p>6.7 m</p> <p>12.8 m</p>

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
C33	7025/F40 7250/002	73H4034	GPSS Card
C34	7025/F40 7250/002	11H8490	RSS Card (without memory sockets)
C35	7025/F40 7250/002	65G4887	VOO Card
C36	7025/F40 7250/002	65G4892	Attachment Adapter Cable
C44	7025/F40 7250/002	65G4894	VOO/RSS Crossover Cable
C45	7025/F40 (Base and AG memory) 7250/002	65G4889	12M VRAM Memory Module
C46	7025/F40 (Base and AG memory) 7250/002	65G4890	16M VRAM Memory Module
C47	7025/F40 (TX Memory) 7250/002	65G4891	16M DRAM Memory Module
C48	7025/F40 7250/002	65G4893	RSS/GPSS Crossover Card
C94		68X6356 87H3621	IBM ARTIC960 4 MB Memory Module IBM ARTIC960 8 MB Memory Module
C95		87H3413 87H3428 87H3701 09J8829 51H8702	IBM ARTIC960 4-Port Selectable interface Board IBM ARTIC960 4-Port T1/E1 interface Card IBM ARTIC960Hx DSP interface card IBM ARTIC960 Quad T1/E1 interface card IBM ARITC960 PCI Adapter interface Board
C97		87H3502 87H3311 5605670	IBM ARTIC960 4-Port T1/E1 Interface Card Wrap Plug IBM ARTIC960 4-Port Selectable Interface Board Wrap Plug ESCON Wrap Plug Note: A wrap plug is shipped with each adapter and cable.

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
C98		87H3405	IBM ARTIC960 4-Port Selectable EIA-232 Cable
		87H3396	IBM ARTIC960 4-Port Selectable RS-449 Cable
		87H3408	IBM ARTIC960 4-Port Selectable X.21 Cable
		87H3399	IBM ARTIC960 4-Port Selectable V.35 Cable
		87H3402	IBM ARTIC960 4-Port Selectable EIA-530 Cable
		87H3518	IBM ARTIC960 4-Port T1 RJ-45 Cable
		87H3515	IBM ARTIC960 4-Port E1 RJ-45 Cable Note: A wrap plug is shipped with each adapter and cable.
D01	7017/S70	90H9694 90H9662	Generic L2 Cache problem Processor Card (4x) (Type 2) Processor Card (4x) (Type 1)
D01	7017/S7A	08L1474 08L1473	Processor Card (type 2) (262 MHz) Processor Card (type 1) (262 MHz)
D01	7017/S80	23L7434 23L7447	Processor Card (Type 1 RH) Processor Card (Type 2 LH)
D01	7017/S85	21P4511 21P4517	Processor Card (Type 1 RH) Processor Card (Type 2 LH)
D01	7024/E20	40H6616 03N3989	CPU Card (100 MHz) CPU Card (233 MHz)
D01	7024/E30	73H3614 93H2431 03N3989	CPU Card (133 MHz) CPU Card (166 MHz) CPU Card (233 MHz)
D01	7025/6F0	04N5353 23L7785 23L7794	1-way 600 Mhz Processor Card 2-way 600 Mhz Processor Card 4-way 600 Mhz Processor Card Note: Supports only 4 processors
D01	7025/6F1	04N5353 23L7785 23L7794 23L7799	1-way 600 Mhz Processor Card 2-way 600 Mhz Processor Card 4-way 600 Mhz Processor Card 6-way 668 Mhz Processor Card
D01	7025/F30	73H3614 93H2431 03N3989	CPU Card (133 MHz) CPU Card (166 MHz) CPU Card (233 MHz)
D01	7025/F40	11H7517 93H5163	CPU Card (166 MHz) CPU Card (233 MHz)
D01	7025/F50	93H2679 73H4768 93H9018 93H8945	166 MHz CPU Card (1 way) 166 MHz CPU Card (2 way) 332 MHz CPU Card (1 way) 332 MHz CPU Card (2 way)

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
D01	7025/F80	04N4765 21P4751 21P4760 21P4774	1-way 450 Mhz Processor 2-way 450 Mhz Processor 4-way 450 Mhz Processor 6-way 450 Mhz Processor
D01	7026/6H0	04N5353 23L7785 23L7794	1-way 600 Mhz processor card 2-way 600 Mhz processor card 4-way 600 Mhz processor card Note: Supports only 4 processors
D01	7026/6H1	04N5353 23L7785 23L7794 23L7799	1-way 600 Mhz processor card 2-way 600 Mhz processor card 4-way 600 Mhz processor card 6-way 668 Mhz processor card
D01	7026/6M1	04N6698 21P6381 21P6383	2-way processor card (500 Mhz) 2-way processor card (750 Mhz) 4-way processor card (750 Mhz)
D01	7026/B80	09P0399 09P0143 09P0406 09P4478	Processor card (375 Mhz, one-way) Processor card (375 Mhz, two-way, 8 M L2) Processor card (375 Mhz, two-way, 4 M L2) Processor Card (450 Mhz, two-way)
D01	7026/H10	11H7517	166 MHz Processor and Cache Card
D01	7026/H50	93H9018 93H8945	CPU Card (1 way) CPU Card (2 way)
D01	7026/H70	94H1013 94H1008	Generic L2 Cache problem CPU Card (1 way) CPU Card (2 way)
D01	7026/H80	04N4765 21P4751 21P4760 21P4774	1-way 450 Mhz processor card 2-way 450 Mhz processor card 4-way 450 Mhz processor card 6-way 450 Mhz processor card
D01	7026/M80	04N6930 04N6931	2-way processor card 4-way processor card
D01	7040/681	03N3223 03N3228 03N3229 09P3217	1.3 GHz 4-way MCM with VPD Card 1.3 GHz 8-way MCM with VPD Card 1 GHz 4-way MCM with VPD Card 1 GHz 8-way MCM with VPD Card
D01	7043/140	75H5462 75H5463	512KB L2 Cache 1 MB L2 Cache
D01	7043/150	07L8446	System Board
D01	7043/240	11H7517 93H5163	166 MHz Processor and Cache Card 233 MHz Processor and Cache Card
D01	7043/260	08L1013	200 MHz CPU Card

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
D01	7043/270	11K0171 11K0218	CPU card (375 MHz one-way) CPU card (375 MHz two-way)
D01	7044/170	09P0277 09P0272 09P0943	Processor card (333 MHz) Processor card (400 MHz) Processor card (450 Mhz)
D01	7044/270	11K0171 11K0218 09P4478	CPU card (375 MHz one-way) CPU card (375 MHz two-way) CPU card (450 MHz two-way)
D01	7046/B50	41L5912	375 MHz System board
D01	7317/F3L	73H3614 93H2431 03N3989	CPU Card (133 MHz) CPU Card (166 MHz) CPU Card (233 MHz)
D01	9076 SMP Thin/Wide Node	93H9716	CPU card (332 MHz)
D01	9076/ Power3 SMP Thin/Wide Node	03N2403 11K0232	CPU card (200 MHz) CPU card (375 MHz)
D01	9076/ Power3 SMP High Node	11K0198	CPU card
D06		88G3650	64 Port to 128 Port Converter Kit (four to a pack) Note: Converter part number is 88G3651
D07	7044/170	09P0277 09P0272 09P0943	Processor card (333 Mhz) Processor card (400 Mhz) Processor card (450 Mhz)
D08	7134	88G5722	DC Fan assembly
D46		6339098	Token-Ring 9-pin D-Shell cable, 3m (10 ft.)
D46		60G1063	Token-Ring RJ-45 STP cable, 3m (10 ft.) Note: Not used with the High-Speed Token-Ring PCI adapter
D46		93H8894	RJ-45 to 9-pin D-Shell Token-Ring Conversion cable Note: Not used with the High-Speed Token-Ring PCI adapter
D46		OEM Cable	Standard UTP RJ-45 cable
D50			Content moved to FFC 190.
D56		12H1204	EIA-232E Printer/ Terminal Serial Cable
D57		07L9822	8-Port Multiport Interface Cable ISA Async Adapter
D59		93H7766	TP PCI Ethernet Adapter
D60		93H1902	T2 PCI Ethernet Adapter
D60		93H7766	TP PCI Ethernet Adapter

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
D66	7250	11H4436	RSS Card (with memory sockets)
D67			8 MB, ECC, 50 nsec Memory Module
D68			16 MB, ECC, 50 nsec Memory Module
D69			32 MB, ECC, 50 nsec Memory Module
D70			64 MB, ECC, 50 nsec Memory Module
D71		42H2771	8 MB, ECC, 60 nsec Memory Module
D72		42H2772	16 MB, ECC, 60 nsec Memory Module
D73		42H2773	32 MB, ECC, 60 nsec Memory Module
D74	7025/F40 7043/140 7043/240	42H2774	64 MB, ECC, 60 nsec Memory Module
D74	7043/140	93H6823	128 MB, ECC, 60 nsec Memory Module
D74	7043/240	93H6822	128 MB, ECC, 60 nsec Memory Module
D74	7043/150	07L9302 07L9304 07L9306	64 MB, ECC Memory Module 128 MB, ECC Memory Module 256 MB, ECC Memory Module
D74	7046/B50	19L1809 29L3302	128 MB, ECC Memory Module 256 MB, ECC Memory Module
D75		65G4615	8 MB, ECC, 70 nsec Memory Module
D76			16 MB, ECC, 70 nsec Memory Module
D77			32 MB, ECC, 70 nsec Memory Module
D78		39H9837	64 MB, ECC, 70 nsec Memory Module
D83			8 MB, Parity, 50 nsec Memory Module
D84			16 MB, Parity, 50 nsec Memory Module
D85			32 MB, Parity, 50 nsec Memory Module
D86			64 MB, Parity, 50 nsec Memory Module
D87			8 MB, Parity, 60 nsec Memory Module
D88			16 MB, Parity, 60 nsec Memory Module
D89			32 MB, Parity, 60 nsec Memory Module
D90			64 MB, Parity, 60 nsec Memory Module
D91			8 MB, Parity, 70 nsec Memory Module
D92			16 MB, Parity, 70 nsec Memory Module
D93		65G4617	32 MB, Parity, 70 nsec Memory Module
D94		39H9837	64 MB, ECC, 70 nsec Memory Module
D95	7043/140 7043/150 7025/F40 7043/240	94H0029	GXT550P Graphics Adapter

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
D96		93H6267	GXT255P High Performance PCI Graphics Adapter
D97		93H7439	Operator Panel/Speaker Assembly
E10	7043/140 7043/150	73H4532	Riser Card
E10	7043/240	73H3712	Riser Card
E10	7046/B50	23L8117	Riser Card
E10	Models not listed		Refer to FFC 227
E11			128 MB, ECC, 50 nsec Memory Module
E12	7025/F40 7025/F50 7026/H10 7026/H50 7317/F3L	93H6821	128 MB, ECC, 60 nsec Memory Module
E12	7043/140	93H6823	128 MB, ECC, 60 nsec Memory Module
E12	7043/240	93H6822	128 MB, ECC, 60 nsec Memory Module
E12	9076 SMP Thin/Wide Node	93H4702	128 MB, ECC, 60 nsec Memory Module
E12	9076/ Power3 SMP Thin/Wide Node	93H4702	128 MB, ECC, 60 nsec Memory Module
E13			128 MB, ECC, 70 nsec Memory Module
E14			128 MB, Parity, 50 nsec Memory Module
E15			128 MB, Parity, 60 nsec Memory Module
E16			128 MB, Parity, 70 nsec Memory Module
E17	7017/S70	19H0288	Memory 16 MB Memory Module
E18	7017/S70	35H8751	Memory 64 MB Memory Module
E19	7026/H50	07L6594	Power Supply Sensor Failed I/O planar
E19	7026/H70	08L0617	I/O planar
E19	9076 SMP Thin/Wide Node	41L6138	I/O planar
E19	9076/ Power3 SMP Thin/Wide Node	03N2866 03N3368	I/O planar (200 MHz) I/O planar (375 Mhz)
E19	9076/ Power3 SMP High Node	11K0198 03N4184 11K0571	CPU Card System Planar NIO Planar
E19	9076/ Power3 RIO Drawer	31L8752 12K0446 05N5005	Supervisor Card Power Supply RIO planar
E1A	7017/S80 7017/S85	23L7595	4 GB Memory Card

Failing Function Code	Machine Type/- Model	FRU Part Number	Description and Notes
E2A		37L6902 19K0561	128 MB Cache, U.S. (includes battery) 128 MB Cache, Japan (includes battery)
E3A		37L6903 00N9561	128 MB Cache battery, U.S. 128 MB Cache battery, Japan
E22			Video Cable (generic)
E23			Audio Cable (generic)
E24	7236	94H0623	Resistor Assembly
E26	7026/H50	93H9551	Power Distribution Card
E26	7026/H70	08L0388	Power Distribution Card
E29		21H8979	32 MB Cache (Located on the LVD SCSI RAID Adapter) (includes battery)
E30		44H8429	32 MB Cache Battery (Located on the LVD SCSI RAID Adapter)
Exx	9076/ Power3 SMP Thin/Wide Node		(xx represents any character) Refer to the Firmware Checkpoint Three-Digit Error Code section of the service manual.
Fxx	7024 7025		(xx represents any character) Refer to the Firmware Checkpoint Three-Digit Error Code section of the service manual.
2520		09P2544	Dual-Channel Ultra3 SCSI PCI Adapter
2530		09P3196	10/100 Mbps Ethernet PCI Adapter II
2550		09P3425	POWER GXT4500P Graphics Adapter
2551		09P3391	POWER GXT6500P Graphics Adapter
2570		11P1856	IBM Cryptographic Accelerator PCI Adapter
2590		24P3605 24P3603	48x IDE CDROM Drive Black Bezel White Bezel

Chapter 36. FRU Cross-References

The FRU Cross-references enable the service technician to determine FRU numbers if the part name is known or to determine a FRU description if the FRU number is known.

Using the FRU Name Cross-Reference List

The following procedure is used to find a FRU part number when the FRU name is known. FRU names are listed in alphabetic order.

1. Find your FRU name in the FRU name column.
2. Record the failing function code for the FRU.
3. Go to the "Failing Function Code List" on page 534 to find the FRU part number and description.

FRU Name Cross-Reference List

Description and Notes	Failing Function Code
Adapter, 10/100 MB Base-TX Ethernet PCI	777
Adapter, 2-Port Multiprotocol PCI (ASIC)	444
Adapter, 2-Port Multiprotocol PCI	799
Adapter, 3Com Fast EtherLink XL PCI 10/100 Ethernet for PowerPC Microprocessor-Based Systems	699
Adapter, 4-Port 10/100 Ethernet Tx PCI Adapter	77b
Adapter, 8-Port RS232 ISA Adapter	830
Adapter, 8-Port ISA Async EIA-232/RS-422 Adapter	785
Adapter, 8-Port PCI Asynchronous EIA-232/RS-422 Adapter	686
Adapter, IBM ARTIC960Hx Adapter	675
Adapter, IBM ARTIC960Rx Adapter	674
Adapter, IBM ARTIC960RxD Quad Digital Trunk PCI Adapter, IBM Artic960RxF Digital Trunk Resource	663
Adapter, Auto LANStreamer Token-Ring PCI	750
Adapter, Auto LANStreamer Token-Ring PCI	776
Adapter, PCI High-Speed Token-Ring	646
Adapter, Built-in Parallel Port	827
Adapter, Co-Processor Multiport Adapter, Model 2	781
Adapter, Cryptographic 4755	992
Adapter, ESCON Channel PCI Adapter	674
Adapter, Ethernet	962
Adapter, 10/100 Mbps Ethernet PCI Adapter II	2530
Adapter, FDDI (vendor logoed)	795

Description and Notes	Failing Function Code
Adapter, GXT110P Graphics Adapter	900
Adapter, GXT120P Graphics Adapter	685
Adapter, GXT130P Graphics Adapter	655
Adapter, GXT135P Graphics Adapter	67E
Adapter, GXT250P PCI Graphics Adapter	786
Adapter, GXT255P High Performance PCI Graphics Adapter	D96
Adapter, GXT300P Graphics Adapter	78D
Adapter, GXT500P Graphics	787
Adapter, GXT550P Graphics	D95
Adapter, GXT800P Graphics (Base Card)	806
Adapter, GXT800P Graphics (Base DIMM)	298
Adapter, GXT800P Graphics (Texture DIMM)	297
Adapter, GXT1000 Graphics Attachment (SPAN)	908
Adapter, GXT2000P Graphics	657
Adapter, GXT3000P 3D PCI Graphics Adapter	778
Adapter, GXT4000P 3D PCI Graphics Adapter	78b
Adapter, GXT4500P 3D PCI Graphics Adapter	2550
Adapter, GXT6000P 3D PCI Graphics Adapter	68E
Adapter, GXT6500P 3D PCI Graphics Adapter	2551
Adapter, Serial HIPPI PCI	938
Adapter, Integrated Ethernet System Planar	887
Adapter, ISDN Basic Rate Interface	693
Adapter, Media Streamer Audio/Video Decoder	966
Adapter, Multibus Integrated Ethernet	790
Adapter, MVP Power Graphics	775
Adapter, PCI Gigabit Fibre Channel	677
Adapter, PCI 2-Gigabit Fibre Channel	447
Adapter, PCI Differential Ultra SCSI (wide/fast-20) (4-L)	2E6
Adapter, PCI Dual-Channel Ultra3 SCSI (4-Y)	2520
Adapter, PCI Gigabit Ethernet	669
Adapter, PCI IBM Cryptographic Accelerator	2570
Adapter, Universal PCI Differential Ultra SCSI (4-U)	2E6
Adapter, Dual-Channel PCI-2 to Ultra2 SCSI (4-R)	637
Adapter, Integrated Ultra2 SCSI	84A
Adapter, SCSI-2 Fast/Wide PCI (4-A, 4_A)	746
Adapter, SCSI-2 Differential Fast/Wide PCI (4-B, 4_B)	747

Description and Notes	Failing Function Code
Adapter, PCI 3-Channel Ultra2 SCSI RAID (4-T) (also, see FFC E30 and E29)	667
Adapter, PCI 4-Channel Ultra3 SCSI RAID (4-X) (also, see FFC E3A and E2A)	66D
Adapter, SCSI 32-bit SE Fast/Wide Raid (4-H)	751
Adapter, PCI Single-Ended Ultra SCSI (wide/fast-20) (4-K)	840
Adapter, T2 PCI Ethernet	D60 742
Adapter, SP Switch MX	763
Adapter, TB3-PCI Adapter	764
Adapter, TP PCI Ethernet	D59
Adapter, TURBOWAYS 25 ATM PCI	691
Adapter, 64-bit/66 MHz PCI ATM MMF	69b
Adapter, 64-bit/66 MHz PCI ATM 155 UTP	69d
Adapter, TURBOWAYS 155 PCI MMF ATM (1MB)	697
Adapter, TURBOWAYS 155 PCI UTP ATM (1MB)	698
Adapter, Ultimedia Video Capture Adapter	788
Adapter, Unknown (vendor supplied)	711
Adapter, X.25 Interface Co-Processor	780
Adapter, XGA graphics	983
Battery, Time-of-Day and NVRAM	151
Battery, Cache (also, see FFC 667)	E30
Battery, Cache (also, see FFC 66D)	E3A
Cable, 2-Port Multiprotocol V.24, V.35, V.36, and X.21	2C3
Cable, 4-Port Multiprotocol jumper	267
Cable, Async EIA - 232D, V.24	259
Cable, IBM ARTIC960 Adapter	C98
Cable, Audio (generic)	E23
Cable, Diskette Drive Signal	181
Cable, EIA-232E Printer/Terminal Serial	D56
Cable, Fiber optic for FC-AL adapter	C24
Cable, Multiport Interface Cable for 8-port Async ISA Adapter	D57
Cable, Multiprotocol - EIA-422A	253
Cable, Parallel Printer	251
Cable, Power, Serial Attachment, Dials/6094	929
Cable, SCSI Controller	276
Cable, SCSI Internal (by machine type)	277
Cable, SCSI Generic (External)	277

Description and Notes	Failing Function Code
Cable, SCSI Internal Disk Drive	190
Cable, Signal, Serial Attachment, Dials6094	270
Cable, Terminal Cable, EIA-422A	263
SCSI Device/SCSI Cable/SCSI Terminator	190
Cable, Token Ring	256
Cable, Type 3 Media Filter Token Ring .254m (10inch) or Auto Token-Ring LANstreamer MC 32 Standard Token Ring	D46
Cable, Video (generic)	E22
CD-ROM drive, 20x (MAX) SCSI-2 Drive	682
CD-ROM drive, 32x (MAX) SCSI-2 Drive	664
CD-ROM drive, 48x (MAX) IDE Drive	2590
CD-ROM drive, 600 MB Double Speed Tray-Loading, Type C Bezel	89c
CD-ROM drive, 8x Speed SCSI-2 Drive	804
CD-ROM drive, External 2.6 GB Rewritable Optical Disk	789
CD-ROM drive, Quad Speed SCSI-2 640 MB Drive	734
CD-ROM drive, Type A or B Bezel	974
CD-ROM-2 drive, Type B Bezel (Unload button has a white underside)	987
Controller, 128-Port Aysnc Controller	709
Controller, 128-Port PCI Asynchronous	687
Controller, SCSI I/O	B88
CPU card	210
Disk Drive Assembly, 200 MB SCSI, 3.5 inch	989
Disk Drive Assembly, 320 MB SCSI	953
Disk Drive Assembly, 320 MB SCSI, logic card and frame	953
Disk Drive Assembly, 355 MB SCSI	952
Disk Drive Assembly, 355 MB SCSI, logic card and frame	952
Disk Drive Assembly, 400 MB SCSI	954
Disk Drive Assembly, 400 MB SCSI, logic card and frame	954
Disk Drive Assembly, 540 MB SCSI-2 (1-inch height)	981
Disk Drive Assembly, 857 MB SCSI, logic card and frame	955
Disk Drive Assembly, 1.0 GB SCSI (1-inch height)	984
Disk Drive Assembly, 1 GB SCSI, Single-Ended	968
Disk Drive Assembly, 1.08 GB SCSI-2 (1-inch height)	741
Disk Drive Assembly, 1.1 GB 8-bit Single-Ended	700
Disk Drive Assembly, 1.1 GB 16-bit Single-Ended	701
Disk Drive Assembly, 1.1 GB 16-bit Differential	702

Description and Notes	Failing Function Code
Disk Drive Assembly, 1.37 GB SCSI	960
Disk Drive Assembly, 1.37 GB SCSI, Logic Card	960
Disk Drive Assembly, 2.0 GB SCSI-2, Differential	912
Disk Drive Assembly, 2.0 GB SCSI-2, Differential Fast/Wide	917
Disk Drive Assembly, 2.0 GB SCSI-2, Single-Ended Fast/Wide	918
Disk Drive Assembly, 2.0 GB SCSI-2, Single-Ended	990
Disk Drive Assembly, 2.1 GB 16 bit SCSI	784
Disk Drive Assembly, 2.2 GB 8-bit Single-Ended	703
Disk Drive Assembly, 2.2 GB 16-bit Single-Ended	704
Disk Drive Assembly, 2.2 GB 16-bit Differential	705
Disk Drive Assembly, 2.2 GB 16-bit Single-Ended	791
Disk Drive Assembly, 2.4 GB SCSI	986
Disk Drive Assembly, 4.5 GB 16-bit Single-Ended	706
Disk Drive Assembly, 4.5 GB 16-bit Differential	707
Disk Drive Assembly, 4.5 GB 16-bit Single-Ended	772
Disk Drive Assembly, 4.5 GB 16-bit Single-Ended	792
Disk Drive Assembly, 4.5 GB Ultra SCSI Single-Ended	638
Disk Drive Assembly, 4.5 GB Ultra SCSI Single-Ended	689
Disk Drive Assembly, 4.5 GB SCSD Single-Ended	679
Disk Drive Assembly, 4.7 GB DVD-RAM drive	66E
Disk Drive Assembly, 9.1 GB Ultra SCSI Single-Ended	690
Disk Drive Assembly, 9.1 GB 16-bit Single-Ended	773
Disk Drive Assembly, 9.1 GB 16-bit Single-Ended	793
Disk Drive Assembly, 9.1 GB 68-pin LVD SCSI	63A 64A 601
Disk Drive Assembly, 9.1 GB 80-pin LVD SCSI	63B 64B 621
Disk Drive Assembly, 9.1 GB Ultra-SCSI 16-bit	681
Disk Drive Assembly, 9.1 GB Ultra SCSI (68-pin)	440
Disk Drive Assembly, 9.1 GB 10K RPM Ultra SCSI (68-pin)	639
Disk Drive Assembly, 9.1 GB 10K RPM Ultra SCSI (80-pin)	640
Disk Drive Assembly, 18.2 GB 68-pin LVD SCSI	63C 64C 623

Description and Notes	Failing Function Code
Disk Drive Assembly, 18.2 GB 80-pin LVD SCSI	63D 64D 624
Disk Drive Assembly, 18.2 GB Ultra-SCSI 16-bit	653
Disk Drive Assembly, 18.2 GB Ultra SCSI (68-pin)	441
Disk Drive Assembly, 36.4 GB 68-pin LVD SCSI	63E 64E
Disk Drive Assembly, 36.4 GB 80-pin LVD SCSI	63F 64F
Disk Drive Assembly, 9.1 GB Differential	774
Disk Drive Assemblies, SSA type	6CC
Diskette Drive, 3.5-inch	935
Display Unit,	725
Fan Assemblies	166 167
File Server	993
Fuse, SCSI I/O Controller	279
Interface board, IBM ARTIC960 Adapter	C95
Interposer, RS232 Printer/Terminal	261
Keyboard, 5085/5086	931
Keyboard, Kanji	923
Keyboard, PS/2	736
Keyboard U.S.	921
Keyboard, WT	922
Lighted Program Function Keyboard (6094, model 20)	930
Logic Card, 355/670 MB	956
Memory Modules	2C6
Memory Base Cards (Risers)	2C7
Memory Module, IBM ARTIC960	C94
Memory Module, 1 GB	2CC
Memory Module, 256 MB	2CD
Memory Module, 512 MB	2CE
Memory, 32 MB Cache (includes battery FFC E30) (also, see FFC 667)	E29
Memory, 128 MB Cache (includes battery FFC E3A) (also, see FFC 66D)	E2A
Module, ROM	217
Mouse, 3-Button	925
Network Interface, Switching	980

Description and Notes	Failing Function Code
Power Supplies	152
Power Supply, Portable Disk Drive	192
RAN, 16-Port EIA-232	837
RAN, 16-Port RS-422	684
Resistor Assembly for 7236	E24
Riser Card, Operator Panel, SCSI	812
SSA disk drives	6CC
Stylus, Tablet	188
System Board	221
System Board, Integrated Ultra2 SCSI	662
Tablet Cursor	159
Tablet, 5083/21 or 6093/11	926
Tablet, 5083/22 or 6093/12, 21, 22	927
Tape, Atape	899
Tape Drive, 150 MB 1/4 inch	971
Tape Drive, 525 MB 1/4 inch	991
Tape Drive, 1.2 GB 1/4 inch	995
Tape Drive, 2.0 GB 4 mm	998
Tape Drive, 2.3 GB 8 mm	972
Tape Drive, 4 GB 4 mm	915
Tape Drive, 5 GB 8 mm Single-Ended	994
Tape Drive, 5 GB 8 mm Differential	914
Tape Drive, 12 GB 4 mm SCSI	678
Tape Drive, 13 GB 1/4 inch	757
Tape Drive, 16 GB 4 mm Tape Autoloader	745
Tape Drive, 20 GB 8 mm SCSI	964
Tape Drive, 24/48 GB 4 mm DDS-2 Tape Autoloader	783
Tape Drive, 35 GB DLT7000	692
Tape Drive, 40 GB DLT8000	451
Tape Drive, 48 GB 4 mm Tape Autoloader	745
Tape Drive, 60 GB	452
Tape Drive, 140 GB 8 mm	733
Tape Drive, 400 GB 8 mm SCSI Autoloader	964
Tape Drive, 9348 1/2-Inch 9-Track	970
Tape Library, 7331 Model 205	749
Terminator, SCSI card edge	232

Description and Notes	Failing Function Code
Terminator, SCSI pass-through and cable assembly	277
Terminator, SCSI Controller (external)	233
Transceiver, Ethernet, Twisted Pair	B08
Transceiver, Ethernet, ISO 8802/3 (formerly IEEE 802.3)	B09
Wrap plug, IBM ARTIC960 Adapter Interface Board	C97
3514 External Disk Array, Models 212, and 213	999
3852 Graphics Visualization Server	982
2105 Model B09	683

Appendix A. Wrap Plugs

Adapter Name	Connector Type, Port Name, or Cable	Part Number
2-Port Multiprotocol PCI Adapter	Wrap Plug	93H3662
8-Port EIA-232/RS-422A Asynchronous ISA Adapter	25-position D-shell	6298964
16-Port EIA-232 Remote Async Node	RJ-45 0.2m (9 inch) controller cable 4.6m (15 feet) controller cable RJ-45 to DB-25 converter cable Cable kit (provides four RJ-45 to DB-25 cable) Terminator	43G0928 43G0936 43G0937 51G8610 43G0938 43G0926
Auto LANstreamer Token-Ring PCI Adapter	Token-Ring Port	6165899
Built-in Serial Adapter	Serial Ports S1 & S2 9-pin to 25-pin Converter Cable 25-pin D-shell	6298965 6450242 6298964
Built-in Parallel Printer Adapter	Parallel Printer Port	71F0690
Co-Processor Multiport Adapter, Model 2	78-Position X.21 V.35 EIA-232D EIA-422A	40F9902 40F9904 40F9900 40F9903 53F3886
ESCON Adapter	ESCON Wrap Plug	5605670
10/100 Mbps Ethernet PCI Adapter II 10/100 Ethernet Tx PCI Adapter 4-Port 10/100 Base-TX Ethernet PCI Adapter	Twisted Pair Wrap Plug	00G2380
Ethernet T2 PCI Adapter	Transceiver Wrap Plugs: Thin Twisted Pair	02G7433 00G2380
Ethernet T5 PCI Adapter	Transceiver Wrap Plugs: Thin Twisted Pair 15-Position D-Shell BNC, 25-ohm terminator	02G7433 00G2380 70F9625 70F9626
Ethernet PCI Adapter	Adapter wrap plugs: Twisted Pair DIX 15-pin connectors (2) BNC wrap plugs (3)	00G2380 71F1167 70F9625 71F1168 70F9626 02G7433
Gigabit Ethernet Adapter	Twisted Pair Wrap Plug	00P1689
2-Gigabit Fibre Channel PCI Adapter	Fiber Connector Wrap Plug	05N6768

Adapter Name	Connector Type, Port Name, or Cable	Part Number
64-bit/66 MHz PCI ATM MMF Adapter Gigabit Ethernet-SX PCI Adapter Serial HIPPI PCI Adapter TURBOWAYS 155 PCI MMF ATM PCI Adapter	Fiber Connector Wrap Plug	21H3547
Gigabit Fibre Channel PCI Adapter	Fiber Connector Wrap Plug	16G5609
64-bit/66 MHz PCI ATM 155 UTP Adapter TURBOWAYS 25 ATM PCI Adapter TURBOWAYS 155 PCI UTP ATM PCI Adapter	Wrap Plug	21P8009 42H0540
X.25 Interface Co-Processor Adapter	X.25 Adapter Wrap Plug X.21 Cable Wrap Plug V.24 Cable Wrap Plug V.35 Cable Wrap Plug	07F3132 07F3153 07F3163 07F3173

Appendix B. Test Media

Device	Media or Supplies	Part Number
4 GB 4 mm tape drive	Tape/media kit Kit includes: - 4 mm Cleaning Tape Cartridge - 4 mm 2GB Data Tape Cartridge - 4 mm 4GB Data Tape Cartridge 4 mm Diagnostic Cartridge	8191149 21F8763 21F8758 8191160 8191146
5 GB 8 mm Tape Drive	Tape/Media kit Kit includes: - 8 mm Cleaning Tape Cartridge - 8 mm Blank Data Tape Cartridge - 8 mm Test Tape Cartridge Package of five 8 mm Blank Tapes	59F3907 21F8593 21F8595 21F8577 21F8595
1/4-inch Cartridge Tape Drive	1/4 inch Head Cleaning Kit 150 MB Data Tape Cartridge (5-pack) 525 MB Data Tape Cartridge (5-pack) 1.2 GB Data Tape Cartridge (5-pack) 1.2 GB 1/4 inch Test Tape Cartridge	21F8570 21F8588 21F8587 21F8732 21F8734
3-1/2 inch Diskette Drive	3-1/2 inch 1.0 MB Blank Diskette 3-1/2 inch 1.0 MB Diagnostic Test Diskette 3-1/2 inch 2.0 MB Blank Diskette 3-1/2 inch 2.0 MB Diagnostic Test Diskette	6404095 71F1247 6404078 71F1248
CD-ROM Drive, Bezel type C	Test Disc	81F8902
RISC System/6000 Diagnostic Package	Diagnostic and Tests on CD-ROM	40H3401 40H3394

Supplemental Diagnostic Diskette Description	Part Number
10/100 Ethernet Tx PCI Adapter	93H1843
Eicon ISDN DIV A Pro 2.0 PCI S/T Adapter (Order through the kit FRU Part Number)	41L5794
IBM ARTIC960Hx 4-port Selectable PCI Adapter IBM ARTIC960Hx 4-port T1/E1 Adapter IBM ARTIC960Hx 4-port DSP Resource Adapter	07L9046
SSA Multi-Initiator/RAID EL Adapter	96H9868

Appendix C. System Memory Reference

System Unit Memory Combinations

Type and Model	System Memory Configuration Type/Size (Min./Max.)	Base Memory Card FRU Number	Memory Module Size (Bytes)	Memory Module FRU Number	Card Pairs
7013/S70 7015/S70 7017/S70	(512 MB/16 GB)	93H767 (RH) 93H7689 (LH)	16 MB 32 MB 64 MB	19H0288 19H0289 35H8751	Yes
7013/S7A 7015/S7A 7017/S7A	(512 MB/32 GB) R1 Memory Cards	90H9831 90H9834 97H6204 90H9837 97H6213 97H6226 97H6244	128 MB 256 MB 256 MB (64 MB) 512 MB 512 MB (64 MB) 1024 MB 2048 MB	N/A	Quads
7013/S80 7015/S80 7017/S80 7017/S85	(1G B/64 GB)	23L7566 23L7570 23L7577 23L7589 23L7595	256 MB 512 MB 1024 MB 2048 MB 4096 MB	N/A	Quads
7024/E20 7024/E30	(16 MB/1 GB) System Board	N/A	8 MB 16 MB 32 MB 64 MB 128 MB	65G4615 19H0288 65G4617 39H9837 73H3451	No
7025/F30	(16 MB/1 GB) System Board	N/A	8 MB 16 MB 32 MB 64 MB 128 MB	65G4615 19H0288 65G4617 39H9837 73H3451	No
7025/F40	(16 MB/1 GB) System Board	N/A	8 MB 16 MB 32 MB 64 MB 128 MB	42H2771 42H2772 42H2773 42H2774 93H6821	No
7025/F50	(64 MB/1 GB)	93H2641	32 MB 128 MB	93H4700 93H4702	Yes
7025/6F0 7025/6F1 7025/F80	(256 MB/16 GB)	04N4808	32 MB 128 MB 256 MB 512 MB 1 GB	07L7729 93H4702 07L9030 10L5417 09P0335	quads

Type and Model	System Memory Configuration Type/Size (Min./Max.)	Base Memory Card FRU Number	Memory Module Size (Bytes)	Memory Module FRU Number	Card Pairs
7026/B80	System board (256 MB/16 GB)	07L7065	128 MB 256 MB 512 MB	93H470 09P0550 09P0491	Yes*
7026/H10	(16 MB/1 GB)	N/A	16 MB 32 MB 64M 128M	42H4772 42H2773 42H2774 93H6821	No
7026/H50	(64 MB/1 GB)	93H2641	32 MB 128 MB	93H4700 93H4702	Yes
7026/H70	(64 MB/8 GB)	93H2641	32 MB 128 MB 256 MB	93H4700 93H4702 07L9030	Yes
7026/6H0 7026/6H1	(256 MB/16 GB)	04N4808	32 MB 128 MB 256 MB 512 MB 1 GB	07L7729 93H4702 07L9030 10L5417 09P0335	quads
7026/6M1	(1 GB/32 GB)	04N3033	128 MB 256 MB 512 MB 1 GB	93H4702 07L9030 10L5417 09P0335	Group of 8
7026/H80	(256 MB/16 GB)	04N4808	32 MB 128 MB 256 MB 512 MB 1 GB	07L7729 93H4702 07L9030 10L5417 09P0335	quads
7026/M80	(1 GB/32 GB)	04N3033	128 MB 256 MB 512 MB	93H4702 07L9030 10L5417	Group of 8
7040/681	(8 GB/256 GB)	Inner 21P6497 Outer 21P6519 Inner 21P6504 Outer 21P6526 Inner 21P6511 Outer 21P6533	8 MB 8 MB 16 MB 16 MB 32 MB 32 MB	N/A	No
7043/140	(32 MB/768 MB) System Board	N/A	16 MB 32 MB 64 MB 128 MB	42H2772 42H2773 42H2774 93H6823	No
7043/150	(128 MB/1 GB) System board	N/A	64 MB 128 MB 256 MB	19L1808 19L1809 29L3302	No

Type and Model	System Memory Configuration Type/Size (Min./Max.)	Base Memory Card FRU Number	Memory Module Size (Bytes)	Memory Module FRU Number	Card Pairs
7043/240	(32 MB/1 GB) System Board	N/A	8 MB 16 MB 32 MB 64 MB 128 MB	42H2771 42H2772 42H2773 42H2774 93H6822	No
7043/260	(256 MB/4 GB)	07L7065	32 MB 128 MB	07L7729 93H4702	Yes
7043/270	(256 MB/8 GB)	07L7065	128 MB 256 MB	93H4702 07L9030	Yes
7044/170	(256 MB/2 GB) System Board	N/A	128 MB 256 MB 256 MB 512 MB 512 MB	93H4702 07L9030 09P0550 07L9758 09P0491	Yes
7044/270	(256 MB/8 GB)	07L7065	128 MB 256 MB	93H4702 07L9030	Yes
7046/B50	(128 MB/1 GB)	N/A	64 MB 128 MB 256 MB	19L1808 19L1809 29L3302	Yes
7317/F3L	(16 MB/1 GB) System Board	N/A	8 MB 16 MB 32 MB 64 MB 128 MB	65G4615 19H0288 65G4617 39H9837 73H3451	No
9076 SMP Thin/Wide Node	(256 MB/3 GB)	93H2641	128 MB	93H4702	Yes
9076/ Power3 SMP Thin/Wide Node	(256 MB/8 GB)	07L7065	128 MB 256 MB	93H4702 07L9030	Yes
9076/ Power3 SMP High Node	(1 GB/16 GB)	07L6608	128 MB	93H4702	Group of 8
Note: * = Can be replaced individually with exact same part number, otherwise replace in pairs.					

Appendix D. General Attributes Required When Using a TTY Terminal

The following general attributes are the default settings for the diagnostic programs. Be sure your terminal is set to these attributes.

Note: These attributes should be set before the diagnostic programs are loaded.

Refer to the following table.

General Setup Attributes	3151 /11 /31 /41 Settings	3151 /51 /61 Settings	3161 /3164 Settings	Description
Machine mode	IBM 3151	IBM 3151 PC	IBM 3161 or IBM 3164	The diagnostic programs are set to emulate use of the 3161 ASCII Display Terminal. If your terminal can emulate a 5085, 3161 or 3164 terminal, use the following attribute settings. Otherwise, refer to your operator's manual, compare the follow attribute descriptions with those of your terminal, and set your attributes accordingly.
Generated Code Set		ASCII		
Screen	Normal	Normal		Uses the EIA-232 interface protocol.
Row and Column	24 x 80	24 x 80		Uses the EIA-232 interface protocol.
Scroll	Jump	Jump	Jump	When the last character on the bottom line is entered, the screen moves down one line.
Auto LF	Off	Off	Off	For the "On" setting, pressing the Return key moves the cursor to the first character position of the next line. For the "Off" setting, pressing the Return key moves the cursor to the first character position of the current line. The CR and LF characters are generated by the New line setting.
CRT saver	Off	Off	10	The "10" setting causes the display screen to go blank if there is no activity for 10 minutes. When the system unit sends data or a key is pressed, the screen contents are displayed again.
Line wrap	On	On	On	The cursor moves to the first character position of the next line in the page after it reaches the last character position of the current line in the page.
Forcing insert	Off	Off		
Tab	Field	Field	Field	The column tab stops are ignored, and the tab operation depends on the field attribute character positions.

General Setup Attributes	3151 /11 /31 /41 Settings	3151 /51 /61 Settings	3161 /3164 Settings	Description
Trace			All	Both inbound data (data to the system unit) and outbound data (data from the system unit) to and from the main port can be transferred to the auxiliary port without disturbing communications with the system unit when the Trace key is pressed.

Additional Communication Attributes

The following communication attributes are for the 3151, 3161, and 3164 terminals.

Communication Setup Attributes	3151/11 /31/41 Settings	3151 /51/61, Settings	3161 /3164 Settings	Description
Operating mode	Echo	Echo	Echo	Data entered from the keyboard on the terminal is sent to the system unit for translation and then sent back to the display screen. Sometimes called conversational mode.
Line speed	9600 bps	9600 bps	9600 bps	Uses the 9600 bps (bits per second) line speed to communicate with the system unit.
Word length (bits)	8	8	8	Selects eight bits as a data word length (byte).
Parity	No	No	No	Does not add a parity bit, and is used together with the word length attribute to form the 8-bit data word (byte).
Stop bit	1	1	1	Places a bit after a data word (byte).
Turnaround character	CR	CR	CR	Selects the carriage return (CR) character as the line turnaround character.
Interface	EIA-232	EIA-232	EIA-232	Uses the EIA-232 interface protocol.
Line control	IPRTS	IPRTS	IPRTS	Uses the 'permanent request to send' (IPRTS) signal to communicate with system unit.
Break signal (ms)	500	500	500	The terminal sends a 'break signal' to the system unit within 500 ms after the Break key is pressed.
Send null suppress	On	On		Trailing null characters are not sent to the system unit.
Send null			On	Trailing null characters are sent to the system unit.
Response delay (ms)	100	100	100	The terminal waits for 100 ms for the system unit to respond.

Additional Keyboard Attributes

The following keyboard attributes are for the keyboard attached to the 3151, 3161, and 3164 terminals.

Keyboard Setup Attributes	3151/11 /31/41 Settings	3151 /51/61 Settings	3161 /3164 Settings	Description
Enter	Return	Return	Return	The Enter key functions as the Return key.
Return	New line	New line	New line	The cursor moves to the next line when the Return key is pressed.
New line	CR	CR	CR	The Return key generates the carriage return (CR) and the line feed (LF) characters. The line turnaround occurs after the CR and LF characters are generated.
Send	Page	Page	Page	The contents of the current page are sent to the system unit when the Send key is pressed.
Insert character	Space	Space	Space	A blank character is inserted when the Insert key is pressed.

Additional Printer Attributes

The following printer attributes are for a printer attached to the 3151, 3161, and 3164 terminals.

Printer Setup Attributes	3151/11 /31/41 Settings	3151 /51/61 Settings	3161 /3164 Settings	Description
Line speed	9600	9600	9600	Uses 19200 or 9600 bps (bits per second) line speed to communicate with the system unit.
Word length (bits)	8	8	8	Selects eight bits as a data word length (byte).
Parity	Even	Even	No	
Stop bit	1	1	1	Places a bit after a data word (byte).
Characters	ALL	ALL		
Line end			CR-LF	
Print			View- port	
Print EOL			Off	
Print null			Off	

Appendix E. CHRP Error Log Structure

CHRP Error Logs in AIX

On Common Hardware Reference Platform Architecture (CHRP) systems, detailed AIX error log entries are created for machine checks, check stops, environmental failures, boot failures, and Service Processor failures. This log data is provided by product-specific firmware known as Run-Time Abstraction Services (RTAS). The detail data in the logs are in a format common to all CHRP systems.

Note: These logs are analyzed automatically by AIX diagnostics and should not require manual analysis, however, a situation may arise making it useful to examine the detail manually, possibly supplying you with more information.

See Figure 1 for the general structure of the error log data.

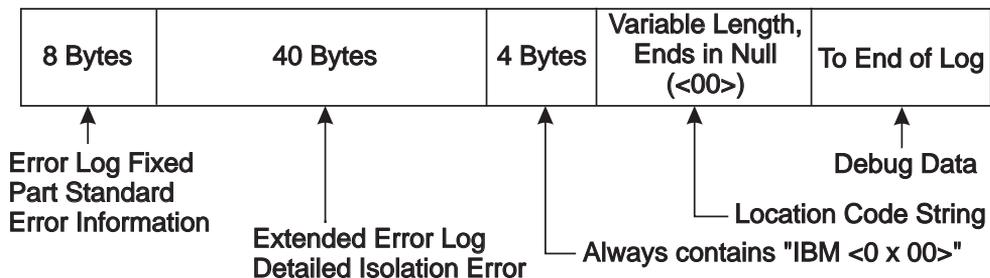


Figure 1. Standard IBM CHRP error log format

As shown in Figure 1:

- The Error Log Fixed Part is always present, and provides error information about the type of error, its severity, and how it was handled. The Error Log Fixed Part also indicates the presence and length of the extended error log information.
- The Extended Error Log portion provides more specific information about the cause, type, and location of the error.
- The next 4 bytes, containing the ASCII characters IBM and a null character, indicate that IBM-specific extensions to the standard CHRP log architecture follow.
- A variable length string follows, containing the physical locations of any Field Replaceable Units (FRUs) implicated by the failure.

Location codes are separated by blanks (0x20), and the string ends in a null character (0x00). Refer to "Location Codes for CHRP Model Architecture System Units" on page 230 for more information on CHRP Location Codes.

- Other data may follow after the location codes, but it is unarchitected engineering debug information that varies from system to system.

More detailed information on each portion of the log format is available in later sections of this chapter. Refer also to "Location Codes for CHRP Model Architecture System Units" on page 230 for more information on CHRP Location Codes.

Figure 2 illustrates how the Detail Data is decoded.

LABEL: SCAN_ERROR_CHRP
IDENTIFIER: BFE4C025

Date/Time: Thu Feb 20 18:14:38
Sequence Number: 140
Machine Id: 000000004C00
Node Id: localhost
Class: H
Type: PERM
Resource Name: sysplanar0
Resource Class: planar
Resource Type: sysplanar_rspc
Location: 00-00

Description
 UNDETERMINED ERROR

Failure Causes
 UNDETERMINED

Recommended Actions
 RUN SYSTEM DIAGNOSTICS

Detail Data
 PROBLEM DATA

Fixed Part (8 bytes)

Extended Error Log (40 bytes)

"IBM <0x00>" (4 bytes)

Location Codes (variable):
"P1-C1 P1<0x00>"

Debug Data Records

0144	1000	0000	006A	C600	9108	0014	3700	1997	0221	0200	0000	0000	0000	0000	0000
0000	0000	0000	0000	0000	0000	0000	0000	4942	4D00	5031	2D43	3120	5031	0000	0000
0008	5331	0000	0300	0008	5332	0000	007F	0008	4D31	1000	0000	0008	4831	0000	0000
0008	4832	0000	0000	0008	4833	0000	0000	0002	0000	0000	0000	0000	0000	0000	0000
0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000
0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000
0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000	0000

Figure 2. Example AIX error log with CHRP Detail Data

Versions of the Error Log Format

There are several versions of the error log formats. Use byte 0 to determine which error log format table to use.

RTAS Error Return Format Fixed Part (All Versions)

The summary portion of the error return is designed to fit into a single 32-bit integer. When used as a data return format in memory, an optional Length field and Extended Error Log data may follow the summary. The fixed part contains a Presence flag which identifies whether an extended report is present.

Note: In Table 3, the location of each field within the integer is included in parentheses after its name. Numerical field values are indicated in decimal unless noted otherwise.

Table 3. RTAS Error Return Format (Fixed Part, All Versions)

Bit Field Name (bit numbers)	Description, Values
Version (0:7)	A distinct value used to identify the architectural version of message. Current version = (1)
Severity (8:10)	Severity level of error/event being reported: <ul style="list-style-type: none">• FATAL (5)• ERROR (4)• ERROR_SYNC (3)• WARNING (2)• EVENT (1)• NO_ERROR (0)• reserved for future use (6-7)
RTAS Disposition (11:12)	Degree of recovery which RTAS has performed prior to return after an error (value is FULLY_RECOVERED if no error is being reported): <ul style="list-style-type: none">• FULLY_RECOVERED(0) Note: Cannot be used when Severity is FATAL.• LIMITED_RECOVERY(1)• NOT_RECOVERED(2)• reserved for future use (3)
Optional_Part_Presence (13)	Indicates if an Extended Error Log follows this 32-bit quantity in memory: <ul style="list-style-type: none">• PRESENT (1): The optional Extended Error Log is present.• NOT_PRESENT (0): The optional Extended Error Log is not present.
Reserved (14:15)	Reserved for future use (0:3)

Table 3. RTAS Error Return Format (Fixed Part, All Versions) (continued)

Bit Field Name (bit numbers)	Description, Values
Initiator (16:19)	<p>Abstract entity that initiated the event or the failed operation:</p> <ul style="list-style-type: none"> • UNKNOWN (0): Unknown or Not Applicable • CPU (1): A CPU failure (in an MP system, the specific CPU is not differentiated here) • PCI (2): PCI host bridge or PCI device • ISA (3): ISA bus bridge or ISA device • MEMORY (4): Memory subsystem, including any caches • POWER_MANAGEMENT (5): Power Management subsystem • Reserved for future use (6-15)
Target (20:23)	<p>Abstract entity that was apparent target of failed operation (UNKNOWN if Not Applicable): Same values as Initiator field</p>
Type (24:31)	<p>General event or error type being reported:</p> <p>Internal Errors:</p> <ul style="list-style-type: none"> • RETRY (1): too many tries failed, and a retry count expired • TCE_ERR (2): range or access type error in an access through a TCE • INTERN_DEV_FAIL (3): some RTAS-abstracted device has failed (for example, TODC) • TIMEOUT (4): intended target did not respond before a time-out occurred • DATA_PARITY (5): Parity error on data • ADDR_PARITY(6): Parity error on address • CACHE_PARITY (7): Parity error on external cache • ADDR_INVALID(8): access to reserved or undefined address, or access of an unacceptable type for an address • ECC_UNCORR (9): uncorrectable ECC error • ECC_CORR (10): corrected ECC error • RESERVED (11-63): Reserved for future use <p>Environmental and Power Warnings:</p> <ul style="list-style-type: none"> • EPOW(64): See Extended Error Log for sensor value • RESERVED (65-95): Reserved for future use <p>Power Management Events(96-159): power management event occurred - see base CHRP document for details.</p> <p>Reserved for future use (160-223) Vendor-specific events(224-255): Non-architected</p> <p>Other (0): none of the above</p>
Extended Error Log Length (32:63)	<p>Length in bytes of Extended Error Log information see "Extended Error Log Formats" on page 631</p>

Extended Error Log Formats

The following tables define an extended error log format by which the RTAS can optionally return detailed information to the software about a hardware error condition. For CHRP products, this extended data is usually provided.

Figure 3 and Table 4 on page 632 shows the general layout for the extended error log format, while Table 5 on page 634 through Table 11 on page 638 show the detailed layout of bytes 12 through 39. The detail area format is determined by bits 4:7 of byte 2, which indicate the error log type.

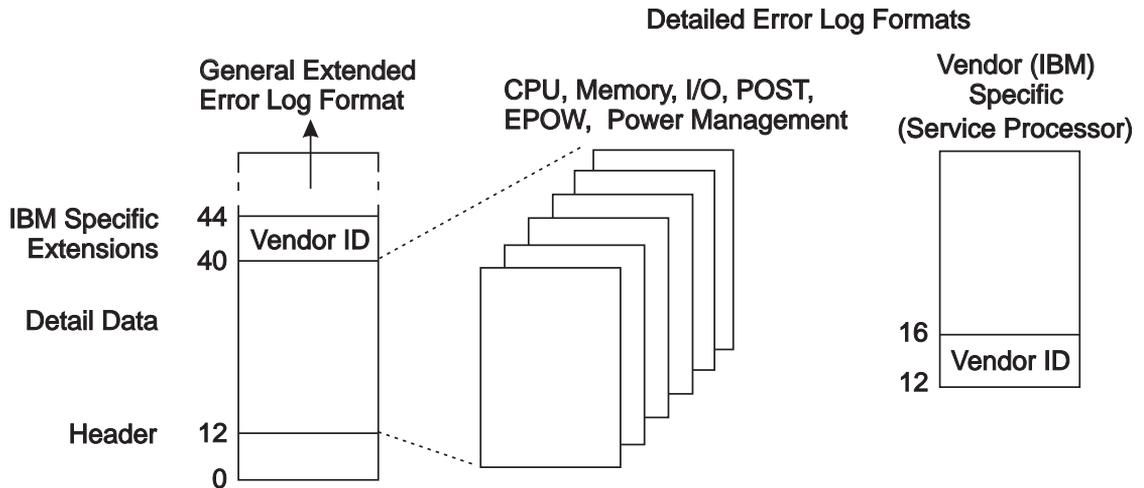


Figure 3. Layout of extended error log format from RTAS

Product-unique data (location codes and debug information) is added to the end of the extended error log buffer (starting at byte 40) for capture and logging.

Note: The following log formats are designed to support the representation of integer values in either the Big-Endian (AIX, Apple) or Little-Endian (Intel) formats. For AIX, this is always Big-Endian format, which means there is no byte swapping, and bits run from 0 (high-order, leftmost) to 7 (low-order, rightmost).

RTAS General Extended Error Log Format, Versions 1, 2

Table 4. RTAS General Extended Error Log Format, Versions 1, 2

Byte	Bit(s)	Description
0	0	1 = Log Valid
	1	1 = Unrecoverable Error
	2	1 = Recoverable (correctable or successfully retried) Error
	3	1 = Unrecoverable Error, Bypassed - Degraded operation (for example, Single CPU taken off-line, bad cache bypassed)
	4	1 = Predictive Error - Error is recoverable, but indicates a trend toward unrecoverable failure (for example, correctable ECC error threshold)
	5	1 = New Log (always 1 for data returned from RTAS)
	6	1 = Addresses/Numbers are Big-Endian format, 0 = Little-Endian Note: This bit is always set to the Endian mode in which RTAS was initialized.
	7	Reserved
1	0:7	Reserved
2	0	Set to 1 - (Indicates log is in PowerPC format)
	1:2	Reserved
	3	1 = No failing address was available for recording within the log's Detailed Log Data, so the address field is invalid
	4:7	Log format indicator, defines format used for bytes 12-39: <ul style="list-style-type: none"> • (0) Reserved • (1) CPU-detected failure, see Table 5 on page 634 • (2) Memory-detected failure, see Table 6 on page 634 • (3) I/O-detected failure, see Table 7 on page 635 or Table 13 on page 641 (V2) • (4) Power-On Self Test (POST) failure, see Table 8 on page 636 • (5) Environmental and Power Warning, see Table 9 on page 637 or Table 14 on page 643 (V2) • (6) Power Management Event (see base CHRP document for description) • (7-11) Reserved • (12-15) Reserved for Vendor-specific • (13) IBM Service Processor errors, see Table 11 on page 638

Table 4. RTAS General Extended Error Log Format, Versions 1, 2 (continued)

Byte	Bit(s)	Description
3	0:3	Reserved
	4	1 = Error is residual information from a failure which occurred prior to the last boot (for example, stored information about a machine check that crashed the system before RTAS could report it to the OS)
	5	1 = Error detected during IPL process (If neither bit 5 nor bit 7 is on, the error occurred after control was passed to the operating system)
	6	1 = Configuration changed since last boot.
	7	1 = Error detected prior to IPL (in POST or firmware extended diagnostics)
4-7	<p>Note: Time and Date are based upon the same values and time base as the RTAS Time-of-Day functions.</p> <p>Time of most recent error in BCD format: HHMMSS00, where HH=00-23, MM=00-59, SS=00-59</p>	
8-11	<p>Date of most recent error in BCD format: YYYYMMDD, where YYYY=1995-future, MM=01-12, DD=01-31</p>	
12-39	Detailed log data (See Detail log formats, Table 5 on page 634 through Table 11 on page 638)	

Note: Time and Date values included in the CHRP Extended Error Log format (bytes 4-11) are recorded in Universal Time Coordinated (UTC) which essentially is Greenwich Mean Time. UTC is also the way time is reported from the Time of Day clock hardware. Be aware that UTC time is NOT the same as local time that is usually presented by the operating system. The system has built-in functions to manage time differences and takes into account special cases such as Daylight Savings Time. For example, you may see an AIX error log with an AIX time stamp of 12:00 pm, containing a CHRP error log in the Detail Data where the encoded time stamp is 5:00 pm. This difference is actually the difference between local time and UTC time.

CPU-Detected Errors, Versions 1, 2

Table 5. Error Log Detail for CPU-Detected Errors, Versions 1, 2

Byte	Bit(s)	Description
12	0	1 = CPU internal Error, other than cache Note: If failure cannot be isolated, these bits may all be 0
	1	1 = CPU internal cache error
	2	1 = External (L2) cache parity or multi-bit ECC error
	3	1 = External (L2) cache ECC single-bit error
	4	1 = Time-out error, waiting for memory controller
	5	1 = Time-out error, waiting for I/O
	6	1 = Address/Data parity error on Processor Bus
	7	1 = Transfer error on Processor Bus
13	Physical CPU ID number	
14-15	Identifier number of sender of data/address parity error, or element which timed out	
16-23	64-bit Memory Address for cache error (High-order bytes =0 if 32-bit addressing)	
24-39	Reserved	

Memory Controller-Detected Errors, Versions 1,2

Table 6. Error Log Detail for Memory Controller-Detected Errors, Versions 1, 2

Byte	Bit(s)	Description
12	0	1 = Uncorrectable Memory Error (parity or multiple bit ECC) Note: If failure cannot be isolated, these bits may all be 0
	1	1 = ECC correctable error
	2	1 = Correctable error threshold exceeded
	3	1 = Memory Controller internal error
	4	1 = Memory Address (Bad address going to memory)
	5	1 = Memory Data error (Bad data going to memory)
	6	1 = Memory bus/switch internal error
	7	1 = Memory time-out error
13	0	1 = Processor Bus parity error, detected by Memory Controller
	1	1 = Processor time-out error, detected by Memory Controller
	2	1 = Processor bus Transfer error
	3	1 = I/O Host Bridge time-out error, detected by Memory Controller
	4	1 = I/O Host Bridge address/data parity error, detected by Memory Controller
	5:7	Reserved

Table 6. Error Log Detail for Memory Controller-Detected Errors, Versions 1, 2 (continued)

Byte	Bit(s)	Description
14		Physical Memory Controller number which detected error (0 if only one controller)
15		Physical Memory Controller number which caused error (0 if only single memory controller, or if the error source is in main memory, not another memory controller)
16-23		64-bit Memory Address (High-order bytes =0 if only 32-bit address)
24-25		Syndrome bits (included if single-bit correctable error)
26		Memory Card Number (0 if on system board)
27		Reserved
28-31	0:31	Memory sub-elements (for example, SIMMs/DIMMs) implicated on this card (or system board), 1 bit per sub-element
32-33		Identifier number of sender of data/address parity error, or element which timed out.
34-39		Reserved

I/O-Detected Errors, Version 1

Table 7. Error Log Detail for I/O-Detected Errors, Version 1

Byte	Bit(s)	Description
12	0	1 = I/O Bus Address Parity Error Note: If failure cannot be isolated, these bits may all be 0
	1	1 = I/O Bus Data Parity Error
	2	1 = I/O Bus Time-out Error
	3	1 = I/O Device Internal Error
	4	1 = Signaling device is a PCI to non-PCI bridge chip, indicating an error on the secondary bus, for example, ISA IOCHK#.
	5	1 = Mezzanine/Processor Bus Address Parity Error
	6	1 = Mezzanine/Processor Bus Data Parity Error
	7	1 = Mezzanine/Processor Bus Time-out Error
13	0	1 = Bridge is connected to Processor Bus
	1	1 = Bridge is connected to Memory Controller via Mezzanine Bus
	2:7	Reserved
14		PCI Bus ID of the device signaling the error
15	0:4	PCI Device ID of the device signaling the error
	5:7	PCI Function ID of the device signaling the error
16-17		PCI Device ID of the device signaling the error (from configuration register)
18-19		PCI Vendor ID of the device signaling the error (from configuration register)

Table 7. Error Log Detail for I/O-Detected Errors, Version 1 (continued)

Byte	Bit(s)	Description
20		PCI Revision ID of the device signaling the error (from configuration register)
21		Slot Identifier number of the device signaling the error <ul style="list-style-type: none"> • '00' if system board device • 'FF' if multiple devices signaling an error
22		PCI Bus ID of the sending device at the time of error
23	0:4	PCI Device ID of the sending device at the time of error
	5:7	PCI Function ID of the sending device at the time of error
24-25		PCI Device ID of the sending device at the time of error (from configuration register)
26-27		PCI Vendor ID of the sending device at the time of error (from configuration register)
28		PCI Revision ID of the sending device at the time of error (from configuration register)
29		Slot Identifier number of the sending device at the time of error <ul style="list-style-type: none"> • '00' if system board device • 'FF' if sender cannot be identified, or if no sender, for example, internal SERR#
30-39		Reserved

Power-On Self Test-Detected Errors, Versions 1, 2

Table 8. Error Log Detail for Power-On Self Test-Detected Errors, Versions 1, 2

Byte	Bit(s)	Description
12	0	1 = Firmware Error
	1	1 = Configuration Error
	2	1 = CPU POST Error
	3	1 = Memory POST Error
	4	1 = I/O Subsystem POST Error
	5	1 = Keyboard POST Error
	6	1 = Mouse POST Error
	7	1 = Graphic Adapter / Display POST Error

Table 8. Error Log Detail for Power-On Self Test-Detected Errors, Versions 1, 2 (continued)

Byte	Bit(s)	Description
13	0	1 = Diskette Initial Program Load (IPL) Error
	1	1 = Drive Controller IPL Error (SCSI, IDE, etc.)
	2	1 = CD-ROM IPL Error
	3	1 = Hard disk IPL Error
	4	1 = Network IPL Error
	5	1 = Other IPL Device Error (Tape, Flash Card, etc.)
	6	Reserved
	7	1 = Self-test error in firmware extended diagnostics
14-25	Device Name (Open Firmware Device for which self-test failed. Name truncated if longer than 12 bytes.)	
26-29	POST Error Code	
30-31	Firmware Revision Level	
32-39	Location Name (platform-specific identifier which points to specific instance of failing device)	

Environmental and Power Warnings Events, Version 1

Table 9. Event Log Detail for Environmental and Power Warnings Events, Version 1

Byte	Bit(s)	Description
12-15	EPOW Sensor Value (low-order 4 bits contain the action code)	
16-39	Reserved	

Power Management Events, Versions 1, 2

Table 10. Event Log Detail for Power Management Events, Versions 1, 2

Byte	Bit(s)	Description
12-15	Integer identifier of the source of the power management event (product specific)	
16-39	Reserved	

Service Processor Errors, Versions 1, 2

Table 11. IBM-specific Error Log Detail for Service Processor Errors, Versions 1, 2

Byte	Bit(s)	Description
12-15		Contains ASCII characters IBM<null> to indicate that this is an IBM-unique log format
16	0	1 = Time-out on communication response from service processor
	1	1 = I/O (I2C) general bus error
	2	1 = Secondary I/O (I2C) general bus error
	3	1 = Internal service processor memory error
	4	1 = Service processor error accessing special registers
	5	1 = Service processor reports unknown communication error
	6	1 = Internal service processor firmware error
	7	1 = Other internal service processor hardware error
17	0	1 = Service processor error accessing Vital Product Data EEPROM
	1	1 = Service processor error accessing Operator Panel
	2	1 = Service processor error accessing Power Controller
	3	1 = Service processor error accessing Fan Sensor
	4	1 = Service processor error accessing Thermal Sensor
	5	1 = Service processor error accessing Voltage Sensor
	6:7	Reserved
18	0	1 = Service processor error accessing serial port
	1	1 = Service processor error accessing NVRAM
	2	1 = Service processor error accessing Real-Time Clock / Time-of-day clock
	3	1 = Service processor error accessing JTAG/COP controller/hardware
	4	1 = Service processor or RTAS detects loss of voltage from the TOD backup battery
	5:6	Reserved
	7	1 = Service processor caused a reboot of the system due to surveillance time-out
19		Reserved
20:23		Sensor Token, if failing device is a sensor defined in the Open Firmware device tree (otherwise = 0) Note: If 64-bit system, only contains least significant 4 bytes
24:27		Sensor Index, if failing device is a sensor defined in the Open Firmware device tree (otherwise = 0) Note: If 64-bit system, only contains least significant 4 bytes
28-39		Reserved

RPA Service Processor Detected Error Log format version 4

Table 12. RPA Service Processor Detected Error Log format version 4

Byte	Bit(s)	Description
16	0	1 = Time-out on communication response from service processor
	1	1 = I/O (I ² C) general bus error
	2	1 = Secondary I/O (I ² C) general bus error
	3	1 = Internal service processor memory error
	4	1 = Service processor error accessing special registers
	5	1 = Service processor reports unknown communication error
	6	1 = Internal service processor firmware error or incorrect version
	7	1 = Other internal service processor hardware error
17	0	1 = Service processor error accessing Vital Product Data EEPROM
	1	1 = Service processor error accessing Operator Panel
	2	1 = Service processor error accessing Power Controller
	3	1 = Service processor error accessing Fan Sensor
	4	1 = Service processor error accessing Thermal Sensor
	5	1 = Service processor error accessing Voltage Sensor
	6:7	Reserved
18	0	1 = Service processor error accessing serial port
	1	1 = Service processor detected NVRAM error
	2	1 = Service processor error accessing Real-Time Clock / Time-of-day clock
	3	1 = Service processor error accessing Scan controller/hardware
	4	1 = Service processor or RTAS detects loss of voltage from the TOD backup battery
	5	Reserved
	6	1 = Loss of Heartbeat from Service Processor
	7	1 = Service processor detected a surveillance time-out
19	0	1 = Power Controller Network general connection failure
	1	1 = Power Controller Network node failure
	2:3	Reserved
	4	1 = Service processor error accessing Power Controller Network
	5	1 = Non-Supported Hardware
	6	1 = Error detected while handling an attention/interrupt from system hardware
	7	Reserved

Table 12. RPA Service Processor Detected Error Log format version 4 (continued)

Byte	Bit(s)	Description
22:23	Sensor Token	
24:27	Sensor Index	
28	0	1 = Array or Logic Built In Self Test Error
	1	1 = Wire Test Error
	2	1 = Mainstore or Cache IPL Diagnostic ErrorReserved
	3	1 = Other IPL Diagnostic Error
	4	1 = Clock or PLL Error
	5	1 = Hardware Scan or Initialization Error
	6	1 = Chip ID Verification Error
	7	FRU Presence/Detect Error (Mis-plugged)
29:39	Reserved	

Version 2 Extension of CHRP Error Log Format

Since the original definition of the CHRP error log format, most additional requirements for error reporting have been for new, unique types of errors that could be supported through vendor-specific log formats. However, there are also some areas covered by the original definition where it has become apparent that more information is needed. Examples of this include support of problem reporting for I/O expansion units, and extended reporting of the causes of EPOW conditions. The log format definition in CHRP provides a version number, which is the first byte in the returned buffer (byte 0 of the fixed-part information), and is defined in base CHRP to have a value of 1. The extension described here uses that version number to create a Version 2 of the error log format. This version defines new fields within certain log areas that were reserved in Version 1, but does not change the meaning of any of the existing fields from Version 1, so that backward compatibility is preserved.

I/O Detected Errors, Version 2

Table 13. Error Log Detail for I/O-Detected Errors, Version 2

Byte	Bit(s)	Description
12	0	1 = I/O Bus Address Parity Error Note: If failure cannot be isolated, these bits may all be 0
	1	1 = I/O Bus Data Parity Error
	2	1 = I/O Bus Time-out Error
	3	1 = I/O Device Internal Error
	4	1 = Signaling device is a PCI to non-PCI bridge chip, indicating an error on the secondary bus, for example, ISA IOCHK#
	5	1 = Mezzanine/Processor Bus Address Parity Error
	6	1 = Mezzanine/Processor Bus Data Parity Error
	7	1 = Mezzanine/Processor Bus Time-out Error
13	0	1 = Bridge is connected to Processor Bus
	1	1 = Bridge is connected to Memory Controller via Mezzanine Bus
	2	1 = Bridge is connected to I/O Expansion Bus
	3	1 = Error on Processor Bus detected by I/O Expansion Bus controller Note: When this bit = 1, bits 5:7 of byte 12 indicate the type of processor bus error.
	4	1 = I/O Expansion Bus Parity Error
	5	1 = I/O Expansion Bus Time-out Error
	6	1 = I/O Expansion Bus Connection Failure
	7	1 = I/O Expansion Unit not in an operating state (powered down, off-line)
14	PCI Bus ID of the device signaling the error	

Table 13. Error Log Detail for I/O-Detected Errors, Version 2 (continued)

Byte	Bit(s)	Description
15	0:4	PCI Device ID of the device signaling the error
	5:7	PCI Function ID of the device signaling the error
16-17	PCI Device ID of the device signaling the error (from configuration register)	
18-19	PCI Vendor ID of the device signaling the error (from configuration register)	
20	PCI Revision ID of the device signaling the error (from configuration register)	
21	Slot Identifier number of the device signaling the error <ul style="list-style-type: none"> • '00' if system board device • 'FF' if multiple devices signaling an error 	
22	PCI Bus ID of the sending device at the time of error	
23	0:4	PCI Device ID of the sending device at the time of error
	5:7	PCI Function ID of the sending device at the time of error
24-25	PCI Device ID of the sending device at the time of error (from configuration register)	
26-27	PCI Vendor ID of the sending device at the time of error (from configuration register)	
28	PCI Revision ID of the sending device at the time of error (from configuration register)	
29	Slot Identifier number of the sending device at the time of error <ul style="list-style-type: none"> • '00' if system board device • 'FF' if sender cannot be identified, or if no sender (for example, internal SERR#) 	
30-39	Reserved	

Environmental and Power Warnings Event Log, Version 2

Table 14. Detail for Environmental and Power Warnings Event Log, Version 2

Byte	Bit(s)	Description
12-15	EPOW Sensor Value (low-order 4 bits contain the action code)	
16	0	1 = EPOW detected by a defined sensor (see bytes 20-35)
	1	1 = EPOW caused by a power fault (see byte 17)
	2	1 = EPOW caused by fan failure
	3	1 = EPOW caused by over-temperature condition
	4	1 = EPOW warning due to loss of redundancy (For example, single failure in a group of N+1 power supplies, fans, etc.)
	5:7	Reserved
17	0	1 = General EPOW power fault due to an unspecified cause
	1	1 = EPOW power fault specifically due to loss of power source
	2	1 = EPOW power fault specifically due to internal power supply failure
	3	1 = EPOW power fault specifically due to manual activation of power-off switch
	4:7	Reserved
18-19	Reserved	
20-23	Token number of specific sensor causing the EPOW condition (If no CHRP-defined sensor caused the EPOW condition, this and the following values are set to 0. For example, a power loss condition currently does not have a defined CHRP sensor token.)	
24-27	Index number of specific sensor causing the EPOW condition	
28-31	Sensor value	
32-35	Sensor status (Status return value that would be returned from a get-sensor-state call)	
36-39	Reserved	

RTAS General Extended Error Log Format, Version 3

Table 15. RTAS General Extended Error Log Format, Version 3

Byte	Bit(s)	Description
0	0	1 = Log Valid
	1	1 = Unrecoverable Error
	2	1 = Recoverable (correctable or successfully retried) Error
	3	1 = Unrecoverable Error, Bypassed - Degraded operation (for example, Single CPU taken off-line, bad cache bypassed)
	4	1 = Predictive Error - Error is recoverable, but indicates a trend toward unrecoverable failure (for example, correctable ECC error threshold)
	5	1 = New Log (always 1 for data returned from RTAS)
	6	Always 1 on RPA implementations indicating Big-Endian
	7	Reserved
1	0	1=A platform-specific special error. Bits 4-7 contain encoded value for this platform
	1:3	Reserved
	4:7	Platform-specific value assigned for reporting unique errors
2	0	Set to 1 - (Indicates log is in PowerPC format)
	1:2	Reserved
	3	1 = No failing address was available for recording within the log's Detailed Log Data, so the address field is invalid
	4:7	Log format indicator, defines format used for bytes 12-39: <ul style="list-style-type: none"> • (0) Reserved • (1) CPU-detected failure, see Table 16 on page 645 • (2) Memory-detected failure, see Table 17 on page 646 • (3) I/O-detected failure, see Table 18 on page 647 • (4) Power-On Self Test (POST) failure, see Table 19 on page 648 • (5) Environmental and Power Warning, see Table 20 on page 649 • (6) Power Management Event, see Table 10 on page 637 • (7-11) Reserved • (12-15) Reserved for Vendor-specific • (12) IBM, Diagnostic Log, see diagnostic information manual • (13) IBM, Service Processor errors, see Table 22 on page 650

Table 15. RTAS General Extended Error Log Format, Version 3 (continued)

Byte	Bit(s)	Description
3	0	1 = Error may be caused by defect in software or firmware
	1	1 = Error is isolated to a failing unit which can be replaced concurrent with system operation
	2	1 = Error is isolated to a group of failing units that should be replaced as a group not in sequence
	3	Reserved
	4	1 = Error is residual information from a failure which occurred prior to the last boot (for example, stored information about a machine check that crashed the system before RTAS could report it to the OS)
	5	1 = Error detected during IPL process (If neither bit 5 nor bit 7 is on, the error occurred after control was passed to the operating system)
	6	1 = Configuration changed since last boot.
	7	1 = Error detected prior to IPL (in POST or firmware extended diagnostics)
4-7	<p>Note: Time and Date are based upon the same values and time base as the RTAS Time-of-Day functions.</p> <p>Time of most recent error in BCD format: HHMMSS00, where HH=00-23, MM=00-59, SS=00-59</p>	
8-11	<p>Date of most recent error in BCD format: YYYYMMDD, where YYYY=1995-future, MM=01-12, DD=01-31</p>	
12-39	Detailed log data (See Detail log formats, Table 16 through Table 22 on page 650)	

CPU-Detected Errors, Version 3

Table 16. Error Log Detail for CPU-Detected Errors, Version 3

Byte	Bit(s)	Description
12	0	1 = CPU internal Error, other than cache Note: If failure cannot be isolated, these bits may all be 0
	1	1 = CPU internal cache error
	2	1 = External (L2) cache parity or multi-bit ECC error
	3	1 = External (L2) cache ECC single-bit error
	4	1 = Time-out error, waiting for memory controller
	5	1 = Time-out error, waiting for I/O
	6	1 = System bus parity error
	7	1 = System bus protocol/transfer error
13	Physical CPU ID number	

Table 16. Error Log Detail for CPU-Detected Errors, Version 3 (continued)

Byte	Bit(s)	Description
14-15		Identifier number of sender of data/address parity error, or element which timed out
16-23		64-bit Memory Address for cache error (High-order bytes =0 if 32-bit addressing)
24-39		Reserved

Memory Controller- and System Core-Detected Errors, Version 3

Table 17. Error Log Detail for Memory Controller-Detected Errors, Version 3

Byte	Bit(s)	Description
12	0	1 = Uncorrectable Memory Error (parity or multiple bit ECC) Note: If failure cannot be isolated, these bits may all be 0
	1	1 = ECC correctable error
	2	1 = Correctable error threshold exceeded
	3	1 = Memory Controller internal error
	4	1 = Memory Address (Bad address going to memory)
	5	1 = Memory Data error (Bad data going to memory)
	6	1 = Memory bus/switch internal error
	7	1 = Memory time-out error
13	0	1 = System Bus parity error, detected by Memory Controller
	1	1 = System time-out error, detected by Memory Controller
	2	1 = System bus protocol/transfer error
	3	1 = I/O Host Bridge time-out error, detected by Memory Controller
	4	1 = I/O Host Bridge address/data parity error, detected by Memory Controller
	5	Reserved
	6	1 = System support function error
	7	1 = System bus internal hardware/switch error
14		Physical Memory Controller number which detected error (0 if only one controller)
15		Physical Memory Controller number which caused error (0 if only single memory controller, or if the error source is in main memory, not another memory controller)
16-23		64-bit Memory Address (High-order bytes =0 if only 32-bit address)
24-25		Syndrone bits (included if single-bit correctable error)
26		Memory Card Number (0 if on system board)
27		Reserved

Table 17. Error Log Detail for Memory Controller-Detected Errors, Version 3 (continued)

Byte	Bit(s)	Description
28-31	0:31	Memory sub-elements (for example, SIMMs/DIMMs) implicated on this card (or system board), 1 bit per sub-element
32-33		Identifier number of sender of data/address parity error, or element which timed out.
34-39		Reserved

I/O-Detected Errors, Version 3

Table 18. Error Log Detail for I/O-Detected Errors, Version 3

Byte	Bit(s)	Description
12	0	1 = I/O Bus Address Parity Error Note: If failure cannot be isolated, these bits may all be 0
	1	1 = I/O Bus Data Parity Error
	2	1 = I/O Bus Time-out Error
	3	1 = I/O Device Internal Error
	4	1 = Signaling device is a PCI to non-PCI bridge chip, indicating an error on the secondary bus, for example, ISA IOCHK#.
	5	1 = Mezzanine/System Bus Address Parity Error
	6	1 = Mezzanine/System Bus Data Parity Error
	7	1 = Mezzanine/System Bus Time-out Error
13	0	1 = Bridge is connected to System Bus
	1	1 = Bridge is connected to Memory Controller via Mezzanine Bus
	2	1 = Bridge is connected to I/O expansion bus
	3	1 = Error on system bus detected by I/O controller (Note: When this bit =1, bits 5:7 of byte 12 indicate the type of system bus error)
	4	1 = I/O expansion bus parity error
	5	1 = I/O expansion bus time-out, access, or other error
	6	1 = I/O expansion bus connection failure
	7	1 = I/O expansion unit not in an operating state (powered-down or off-line)
14		PCI Bus ID of the device signaling the error
15	0:4	PCI Device ID of the device signaling the error
	5:7	PCI Function ID of the device signaling the error
16-17		PCI Device ID of the device signaling the error (from configuration register)
18-19		PCI Vendor ID of the device signaling the error (from configuration register)
20		PCI Revision ID of the device signaling the error (from configuration register)

Table 18. Error Log Detail for I/O-Detected Errors, Version 3 (continued)

Byte	Bit(s)	Description
21		Slot Identifier number of the device signaling the error <ul style="list-style-type: none"> '00' if system board device 'FF' if multiple devices signaling an error
22		PCI Bus ID of the sending device at the time of error
23	0:4	PCI Device ID of the sending device at the time of error
	5:7	PCI Function ID of the sending device at the time of error
24-25		PCI Device ID of the sending device at the time of error (from configuration register)
26-27		PCI Vendor ID of the sending device at the time of error (from configuration register)
28		PCI Revision ID of the sending device at the time of error (from configuration register)
29		Slot Identifier number of the sending device at the time of error <ul style="list-style-type: none"> '00' if system board device 'FF' if sender cannot be identified, or if no sender, for example, internal SERR#
30-39		Reserved

Power-On Self Test-Detected Errors, Version 3

Table 19. Error Log Detail for Power-On Self Test-Detected Errors, Version 3

Byte	Bit(s)	Description
12	0	1 = Firmware Error
	1	1 = Configuration Error
	2	1 = CPU POST Error
	3	1 = Memory POST Error
	4	1 = I/O Subsystem POST Error
	5	1 = Keyboard POST Error
	6	1 = Mouse POST Error
	7	1 = Graphic Adapter / Display POST Error
13	0	1 = Diskette Initial Program Load (IPL) Error
	1	1 = Drive Controller IPL Error (SCSI, IDE, etc.)
	2	1 = CD-ROM IPL Error
	3	1 = Hard disk IPL Error
	4	1 = Network IPL Error
	5	1 = Other IPL Device Error (Tape, Flash Card, etc.)
	6	Reserved
	7	1 = Self-test error in firmware extended diagnostics

Table 19. Error Log Detail for Power-On Self Test-Detected Errors, Version 3 (continued)

Byte	Bit(s)	Description
14-25		Device Name (Open Firmware Device for which self-test failed. Name truncated if longer than 12 bytes.)
26-29		POST Error Code
30-31		Firmware Revision Level
32-39		Location Name (platform-specific identifier which points to specific instance of failing device)

Environmental and Power Warnings Events, Version 3

Table 20. Event Log Detail for Environmental and Power Warnings Events, Version 3

Byte	Bit(s)	Description
12-15		EPOW Sensor Value (low-order 4 bits contain the action code)
16	0	1 = EPOW detected by a defined sensor (see bytes 20:35)
	1	1 = EPOW caused by a power fault (see byte 17)
	2	1 = EPOW caused by fan failure
	3	1 = EPOW caused by over-temperature condition
	4	1 = EPOW warning due to loss of redundancy (For example, single failure in group of power supplies, fans, or such)
	5:7	Reserved
17	0	1 = General EPOW power fault due to an unspecified cause
	1	1 = EPOW power fault specifically due to loss of power source
	2	1 = EPOW power fault specifically due to internal power supply failure
	3	1 = EPOW power fault specifically due to manual power off
	4:7	Reserved
18-19		Reserved
20-23		Token number of the specific sensor causing the EPOW
24-27		Index number of the specific sensor causing the EPOW
28-31		Sensor value
32-35		Sensor status
36-39		Reserved

Power Management Events, Version 3

Table 21. Event Log Detail for Power Management Events, Version 3

Byte	Bit(s)	Description
12-15		Integer identifier of the source of the power management event (product specific)
16-39		Reserved

Service Processor Errors, Version 3

Table 22. IBM-specific Error Log Detail for Service Processor Errors, Version 3

Byte	Bit(s)	Description
12-15		Contains ASCII characters IBM<null> to indicate that this is an IBM-unique log format
16	0	1 = Time-out on communication response from service processor
	1	1 = I/O (I2C) general bus error
	2	1 = Secondary I/O (I2C) general bus error
	3	1 = Internal service processor memory error
	4	1 = Service processor error accessing special registers
	5	1 = Service processor reports unknown communication error
	6	1 = Internal service processor firmware error
	7	1 = Other internal service processor hardware error
17	0	1 = Service processor error accessing Vital Product Data EEPROM
	1	1 = Service processor error accessing Operator Panel
	2	1 = Service processor error accessing Power Controller
	3	1 = Service processor error accessing Fan Sensor
	4	1 = Service processor error accessing Thermal Sensor
	5	1 = Service processor error accessing Voltage Sensor
	6:7	Reserved
18	0	1 = Service processor error accessing serial port
	1	1 = Service processor error accessing NVRAM
	2	1 = Service processor error accessing Real-Time Clock / Time-of-day clock
	3	1 = Service processor error accessing JTAG/COP controller/hardware
	4	1 = Service processor or RTAS detects loss of voltage from the TOD backup battery
	5:6	Reserved
	7	1 = Service processor detected a surveillance time-out

Table 22. IBM-specific Error Log Detail for Service Processor Errors, Version 3 (continued)

Byte	Bit(s)	Description
19	0	1 = Power control network general connection failure
	1	1 = Power control network node failure
	2:3	Reserved
	4	1 = Service processor error accessing power control network
	5:7	Reserved
20:23	Sensor Token, if failing device is a sensor defined in the Open Firmware device tree (otherwise = 0) Note: If 64-bit system, only contains least significant 4 bytes	
24:27	Sensor Index, if failing device is a sensor defined in the Open Firmware device tree (otherwise = 0) Note: If 64-bit system, only contains least significant 4 bytes	
28-39	Reserved	

Extended Log Debug Data

The location code string for IBM error logs starts at byte 44 of the Extended Error Log Format, and ends in a NULL (00) character. The rest of the log area beyond that point contains product-specific debug data that is usually used for bring-up, test, and field debug situations. However, it helps to have some defined structure to the data to make it easier to read or, if needed, write programs to look for specific values. For this reason, the individual pieces of debug data are recorded in the extended log area in a series of one or more records, where each record contains a length and identifier field in addition to the actual data. Table 23 defines the general layout of these data records.

General Layout of Debug Data, All Versions

Table 23. General Format of Debug Data, All Versions

Byte	Bit(s)	Description
0-1		Total length (N) of debug data record, including length and identifier fields Note: Each record is aligned to start on a fullword boundary, padding previous records (or, in the case of the first record, the preceding location code string) with NULLs. The end of the list of debug data records is indicated by an empty record with a length = 0x0002, since the length itself takes two bytes.
2-3		Two character ASCII identifier of the data <ul style="list-style-type: none">• 00 - 99 are reserved for common registered data types• AA - ZZ and A0 - Z9 are for product-specific use at the discretion of the developer. Preferably, something mnemonic should be used.
4-(N-1)		Actual debug data

Appendix F. Notices

This information was developed for products and services offered in the U.S.A.

The manufacturer may not offer the products, services, or features discussed in this document in other countries. Consult the manufacturer's representative for information on the products and services currently available in your area. Any reference to the manufacturer's product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any intellectual property right of the manufacturer may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any product, program, or service.

The manufacturer may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to the manufacturer.

The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law: THIS MANUAL IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. The manufacturer may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Information concerning products made by other than the manufacturer was obtained from the suppliers of those products, their published announcements, or other publicly available sources. The manufacturer has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to products made by other than the manufacturer. Questions on the capabilities of products made by other than the manufacturer should be addressed to the suppliers of those products.

Index

Numerics

- 7135 RAIDiant array 209
- 7318 server service aid 210
- 888 sequence 61
 - dump progress indicators 225

A

- about this book ix
- AIX operating system message file 127
- alter/display bootlist 181
- attributes required for TTY terminal 623
- audience description ix
- automatic diagnostic tests 129

B

- boot problem resolution, MAP 0280 109

C

- CE login 129
- CEREADME file 128
- CHRP error log structure 627
- common system information 127
- configuration program 130
- configuration program indicators 211
- CPU tests 130
- crash codes 226
- CSU feature installation xi

D

- determining system architecture 152
- diagnostics
 - advanced diagnostics function 132
 - AIX location codes 233
 - applications descriptions 131
 - automatic error log analysis 134
 - CHRP location codes 230
 - command line options 155
 - controller description 131
 - high-availability systems 153
 - load progress indicators 224
 - location code examples 235
 - multiple systems 151
 - NIM standalone diagnostics 141
 - numbers and codes 211
 - online diagnostics modes of operation 146
 - online diagnostics service mode 146
 - operating considerations 139
 - periodic diagnostics 133
 - physical location codes 230
 - RSPC location codes 228
 - sources for programs 139
 - standalone 139

- diagnostics (*continued*)
 - standalone diagnostics 149
 - standard prefixes 231
 - system checkout option 133
 - task and service aid functions 132
 - tasks and resources 154
 - TTY terminal attributes 623
- display/alter bootlist 181
- dummy
 - crash codes 226
 - from CD-ROM 128
 - from source other than disk 128
- dump progress indicators 225

E

- error log analysis 130

F

- failing function codes
 - description of list 531
 - failing function code list 534
- fast path MAP 17
- feature installation xi
- fibre channel RAID service aids 188
- flash SK-NET FDDI firmware 189
- FRU cross reference
 - definition 607
 - list 607
 - using the list 607
- full machine partition standalone diagnostics 149

G

- general diagnostic information 127
- general problem resolution, MAP 0210 69

H

- high-availability system diagnostics 153
- hot swap FRU problem resolution, MAP 0220 79

I

- installation checkout procedure 123
- intermittent problem isolation, MAP 0040 49

L

- local area network service aid 196
- location code examples 235
- location code standard prefixes 231
- location codes 228, 230, 233
- log repair action service aid 196
- LPAR
 - standalone diagnostics 149

M

- machine types 532
- MAPs
 - fast path 17
 - MAP 0020, problem determination procedure 29
 - MAP 0025, SCSI RAID problem determination procedure 41
 - MAP 0030, additional problem determination 47
 - MAP 0040, intermittent problem isolation 49
 - MAP 0050, SCSI bus problems 53
 - MAP 0070, 888 sequence 61
 - MAP 0080, system bus problem isolation 65
 - MAP 0210, general problem resolution 69
 - MAP 0220, hot-swap FRU problem resolution 79
 - MAP 0230, platform error problem resolution 85
 - MAP 0240, memory problem resolution 91
 - MAP 0250, unexpected system halts during diagnostics 95
 - MAP 0260, system hangs during resource configuration 97
 - MAP 0270, SCSI RAID Problem Resolution and Verification 101
 - MAP 0280, boot problem resolution 109
 - MAP 0290, missing resource problem resolution 111
 - MAP 0291, missing device problem resolution 113
 - MAP 0410, repair checkout 115
 - MAP 0420, system checkout 121
 - service hints 1
 - Slow Boot 2
 - start of call 15
 - using the maintenance analysis procedures 1
- memory problem resolution, MAP 0240 91
- memory testing 130
- microcode 127
- missing device problem resolution, MAP 0291 113
- missing resource problem resolution, MAP 0290 111
- multiple systems diagnostics 151

N

- network service aid 196
- NIM standalone diagnostics 141

O

- online publications ix
- operator panel display numbers 211

P

- platform error problem resolution, MAP 0230 85
- printing
 - from disk 128
- problem determination procedure 47
- problem determination procedure, MAP 0020 29
- problem determination procedure, SCSI RAID , MAP 0025 41
- publications, online ix

R

- related publications x
- repair checkout, MAP 0410 115
- repair log service aid 196
- run exercisers 198

S

- SCSI
 - bus analyzer 202
 - configuration checks 3
 - high availability 3
 - high-availability diagnostics 153
 - multiple SCSI system checks 3
- SCSI bus problems, MAP 0050 53
- SCSI RAID Problem Resolution and Verification, MAP 0270 101
- service aids
 - 7135 RAIDiant array 209
 - 7318 service aid 210
 - add resource 165
 - analyze adapter internal log 165
 - backup/restore media 166
 - callin/out setup 176
 - CE login 129
 - certify media 167
 - change hardware VPD 170
 - configure dials and LPF Keys 171
 - configure ISA adapter 171
 - configure reboot policy 172
 - configure remote maintenance policy 173
 - configure ring indicate 175
 - configure service processor 175
 - configure surveillance policy 178
 - create customized configuration diskette 178
 - delete resource 179
 - disk-based diagnostic 206
 - disk to disk copy 179
 - display/alter bootlist 181
 - display/alter sector 180
 - display configuration and resource list 180
 - display firmware device node information 180
 - display hardware error report 180
 - display hardware VPD 181
 - display microcode level 186
 - display or change diagnostic run-time options 182
 - display previous diagnostic results 183
 - display resource attributes 183
 - display service hints 183
 - display software product data 184
 - display system environmental sensors 184
 - display test patterns 186
 - display USB Devices 186
 - download microcode 186
 - fibre channel RAID service aids 188
 - flash SK-NET FDDI firmware 189

- service aids (*continued*)
 - format media 189
 - generic microcode download 191
 - high availability 3
 - introduction 163
 - local area network 196
 - log repair action 196
 - machine check error log 181
 - modem configuration 176
 - multiple SCSI system checks 3
 - multiple SRNs or error codes 2
 - PCI RAID physical disk identify 197
 - periodic diagnostics 197
 - process supplemental media 197
 - ring indicate power on policy 175
 - run diagnostics 198
 - run error log analysis 198
 - run exercisers 198
 - save or restore hardware management policies 201
 - save or restore service processor configuration 201
 - SCSD tape drive 203
 - SCSI bus analyzer 202
 - spare sector availability 204
 - SSA service aid 204
 - surveillance setup 176
 - update system flash 209
 - update system or service processor flash 206
- service hints 1
- service request number (SRN)
 - 700-102 through 89c-302 357
 - 900-001 through xxxxxxx 439
 - description of SRN list 237
 - how to use the SRN list 238
 - multiple SRNs or error codes 2
 - SRN list 241
 - SRNs 101 through 699 253
 - SRNs 2520 through 2590 527
 - SRNs A01 through A1D 509
- Slow Boot 2
- Slow-Mode Boot 2
- source codes 237
- SRN codes 241
- SRN codes 101-000 thru 699-120 253
- SRN codes 2520-(x)xxx thru 2590-(x)xxx 527
- SRN codes 700-102 thru 89C-302 357
- SRN codes 900-001 thru xxxxxxx 439
- SRNs A01-(x)xxx through A1D-(x)xxx 509
- SSA service aid 204
- standalone diagnostics 139
 - full machine partition 149
 - LPAR considerations 149
- start of call MAP 15
- system architecture determination 152
- system bus problem isolation, MAP 0080 65
- system checkout, MAP 0420 121

- system configuration program 130
- system hangs during resource configuration, MAP 0260 97
- system memory reference 619

T

- test media 617
- testing the line printer 137
- trademarks x
- TTY terminal attributes required for diagnostics
 - general 623

U

- unexpected system halts during diagnostics, MAP 0250 95
- update system flash 209
- using online diagnostics 139

W

- wrap plugs 615

Readers' Comments — We'd Like to Hear from You

RS/6000

@server pSeries

Diagnostic Information for Multiple Bus Systems

Version 5.1.0.0

Publication No. SA38-0509-12

Overall, how satisfied are you with the information in this book?

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Overall satisfaction	<input type="checkbox"/>				

How satisfied are you that the information in this book is:

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Accurate	<input type="checkbox"/>				
Complete	<input type="checkbox"/>				
Easy to find	<input type="checkbox"/>				
Easy to understand	<input type="checkbox"/>				
Well organized	<input type="checkbox"/>				
Applicable to your tasks	<input type="checkbox"/>				

Please tell us how we can improve this book:

Thank you for your responses. May we contact you? Yes No

When you send comments to IBM, you grant IBM a nonexclusive right to use or distribute your comments in any way it believes appropriate without incurring any obligation to you.

Name

Address

Company or Organization

Phone No.

Readers' Comments — We'd Like to Hear from You
SA38-0509-12



Cut or Fold
Along Line

Fold and Tape

Please do not staple

Fold and Tape




NO POSTAGE
NECESSARY
IF MAILED IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

Information Development
Department H6DS-905-6C006
11400 Burnet Road
Austin, TX 78758-3493

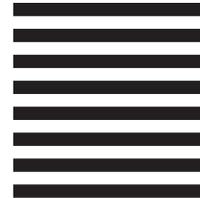

Fold and Tape

Please do not staple

Fold and Tape

SA38-0509-12

Cut or Fold
Along Line



Part Number: 09P5498



Printed in the United States of America
on recycled paper containing 10%
recovered post-consumer fiber.

December 2001

SA38-0509-12



(1P) P/N: 09P5498



Spine information:



RS/6000
@server pSeries

Diagnostic Information for Multiple Bus
Systems

Version 5.1.0.0

SA38-0509-12